S/MOT/SMCW6150/A/22/07/99 1W240020





# **Solid State Relays For Motor Control**

# INDUCTION MOTOR SOLID-STATE REDUCED VOLTAGE STARTER (SOFTSTARTER) WITH SOFTSTOP FEATURE (PRELIMINARY DATA)

**celduc relais** *SMCV* can be employed everywhere using a costly and relatively big variable speed controller is not required (pumps, fans, compressors, conveyors, ...).

Its <u>six thyristor</u> structure working like a full wave phase angle controller (both positive and negative cycles are controlled), allows to reduce efficiently the induction motor starting <u>current</u> as well as the motor starting torque. This <u>motor starting current reduction</u> allows to optimize the mains grid as well as its protections and <u>avoid having voltage fluctuations</u> leading to ambient light variations also called "flicker".

Built to help the user to get his assembly in compliance with the European directives and standards, this product easy fits in the existing application without any modification of the wiring field configuration. Thus, the *SMCV* can easily replace an electromechanical star-delta starter without changing the motor coupling! In a project including a three phase induction motor it can be implemented like a usual three phase electromechanical contactor. Furthermore, its ability to be installed inside the delta wiring allows this device to drive 1.73 times more current than a standard on line softstarter,

The *SMCV* also have <u>diagnostic and self-test functions</u> to inform people involved in the machine maintenance and <u>to reduce the cost and the delay to restart the production</u>.

## **SMCW6150**




Induction Motor Softstarter


200 - 480VAC

->15kW (Y)

->26kW (D)

 
	MAIN CHARACTERISTICS										
Max. Motor Power @40°C				IAC53a @40°C		Phase to Mains		Status	In/Out/Case	Operating	
Star (Y) Delta (D) 400VAC 230VAC 400VAC 230VAC		Max. EN60947-4-2		Phase Voltage	Frequency	Input	Outputs	Isolation	Tempera- ture		
15kW	8.6kW	26kW	15kW	30A	22.5A	200 to 480VAC	40 to 65Hz	10 to 24VDC	24V / 1A AC/DC	4kV	-40 to +100°C

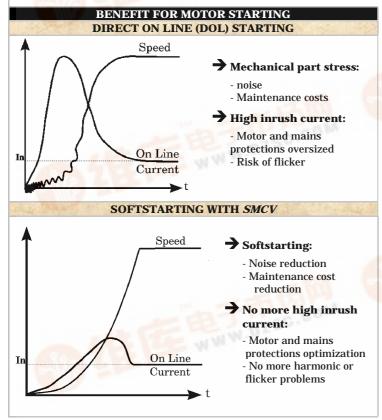

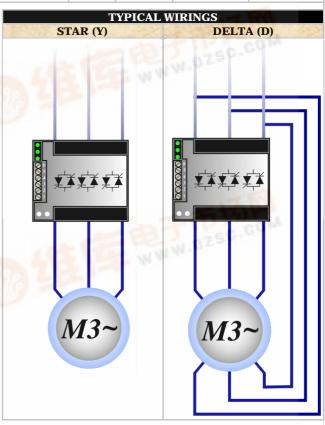












#### SETTINGS AND DIAGNOSTIC

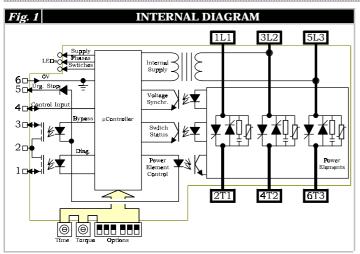

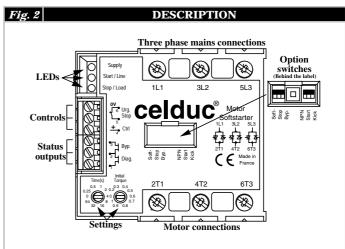

DESCRIPTION OF THE CONNECTIONS											
Terminals	1,2	2,3	4,6	5,6	1L1, 3L2, 5L3	2T1, 4T2, 6T3					
Function	Diagnostic	Bypass	Control	Urgent stop	Three phase mains (Obligatory)	Motor supply ( <u>Obligatory</u> )					
Input/Output	Output	Output	Input	Input	Input	Output					
Activated when	Closed	Closed	High (PNP) or Low (NPN)	Open	Since 3x200VAC	100ms after control					
Polarization	NO (AC or DC)	NO (AC or DC)	Yes (4+ / 6-)	Yes (5+ / 6-)	NO (AC)	NO (AC)					

		DESCRIPTION (	OF THE SETTINGS	S AND OPTIONS		
Setting / Option	Time	Initial Torque	Soft-stop	Вур.	NPN / START	Kick
Function	Increasing voltage ramp duration	Min. voltage applied to the motor at start	Decreasing voltage ramp duration	Bypass presence diagnostic option (if bypass used)	Softstarter type of control option	Motor shaft breakaway
Possibilities	Ts= 0 up to 64s	0 up to 100 %	0, 1/2, 1 or 2 x ts up to 64s max.	-	PNP, NPN or since the mains presence	0 up to 100ms depending on ts
Proceeding	Time(s) 0.5 1 0.25 4 64 32 16	Initial Torque 0.3 0.4 0.2 0.5 0.6 0.7 0.9 0.8	: 0xts : 0.5xts : ts : 2xts		: PNP : NPN : Mains	

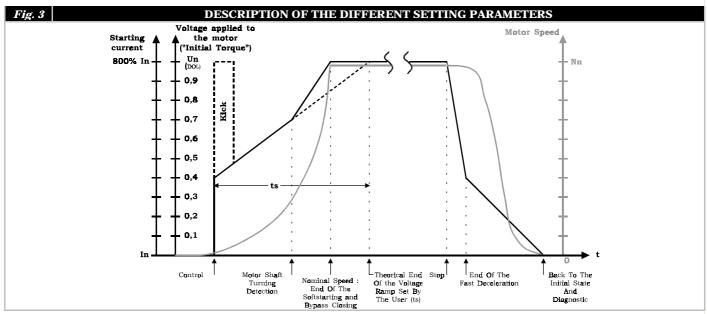



S/MOT/SMCW6150/A/22/07/99 1W240020



Page 3/16

#### SETTINGS AND DIAGNOSTIC

	DESCRIPTION OF THE DIAGNOSTIC INFORMATION IN NORMAL OPERATION										
Vis	Visualization Status Outputs		Motor	Cause probable							
Supply	Line	Load	Вур.	Diag.							
0	0	0	-/-	-/-	Stopped	No mains or device not correctly wired					
0	0	0		-/-	Stopped	Mains voltage and phases OK, Motor detected, No control					
	00	0	-/-	-/-	Starting	Mains voltage and phases OK, Motor detected, Control detected and beginning of the <b>softstarting</b> ramp					
0	0	0	12		Running to nominal speed	Mains voltage and phases OK, Motor detected, Control detected and end of the <b>softstarting</b> ramp					
	0	00	-/-	-/-	Decelerating	Mains voltage and phases OK, Motor detected, No control and beginning of the <b>softstopping</b> ramp					

DIAGNOSTICS IN CASE OF FAILURE									
Visualization Status Outputs				Possible Cause	Solution				
Supply	Line	Load	Вур.	Diag.					
	0		-,-	<u></u>	Stopped	Mains voltage too low	Check the phases 3L2 and 5L3		
0		0			Stopped	Phase(s) missing, Mains frequency out of range, Too much interference	Check the phases		
0		0		_	Running	Phase(s) missing	Check the phases		
0			-/-		Stopped	Load missing, Short-circuited thyristor	Check the motor connections and the solid state switches		
0			- )-	_	Stopped	Bypass missing (its checking is required by the corresponding option)	Check the bypass connections or if not used, cancel the checking option		
<b>O</b> O			-,-		Stopped	The solid state switches can not close	Check if the connection between 5 and 6 of the control terminal block is correctly done. Check as well if the load current is sufficient.		
					Stopped	Microcontroller malfunction	Disconnect the softstarter from the mains for a while		
00		0		-,-	Stopped	A problem occurred on the mains (no voltage or a phase missing,) then disappeared but the control voltage was applied	Remove the control for a while		
00				-,-	Stopped	A problem occurred on the load (temporary disconnection,) then disappeared but the control voltage was applied	Remove the control for a while		

		LEGEND		
Off	Green	Red	Flashing off/green	Flashing Off/red


### IMPORTANT INFORMATION ABOUT THE DIAGNOSTIC

- 1- The device makes a complete diagnostic (mains, load and itself) since it has enough supply voltage (On the mains or on the control side).
- 2- The device only checks the presence of the phases and the closing of the solid state switches during the voltage ramps (Softstart and softstop) and during the full on state period.
- 3- The control overrides the diagnostic.
  - If a problem occurs during the control period, the device will close all the solid state switches. If the problem goes on during the full on state period, the corresponding information will be given to the user according to the table above.
  - Likewise, if a problem occurs during the softstopping period, the device will stop immediately in order to reach the off state diagnostic period.
- On a hard stop (no softstop) and case of driving a large motor, the device may temporary display a problem concerning the mains. This is due to an important residual voltage across the motor windings (Back EMF generated by the motor rotation and the remaining magnetic field). This security allows the user to avoid connecting the motor to the mains in bad conditions. This phenomenon can be cancelled by using the softstop feature that slowly reduces the remanent magnetic field inside the motor. This allows as well to avoid overvoltage across the solid state switches (increasing the lifetime expectancy of the integrated varistors). Therefore, softstop is recommended even





### CONTROL

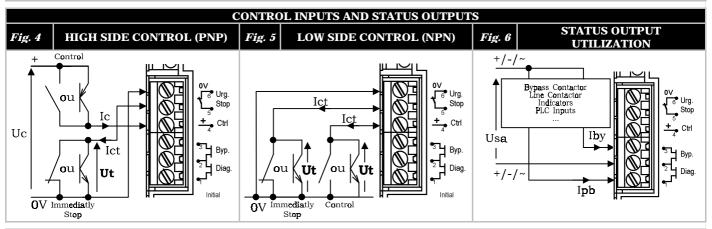

ELECTRICAL CHARACTERISTICS OF THE STARTING AND STOPPING INPUTS								
CHARACTERISTICS	LABELS	(Given at 20°C	VALUES (Given at 20°C ambient unless otherwise specified)					
Input		C	trl	Urg. Stop				
Function		Controlling the device		Immediately stop the device				
Control Type (Depending on the option switches)		High side control (PNP)	Low side control (NPN)	Opening the connection to zero volt				
Concerned Terminals		4 & 6	4 & 6	5 & 6				
Control Voltage Range (according to EN60947-4-2)	Uc	10->24VDC	-	-				
Min. Control Voltage	Ucmin.	8.5V	-	-				
Max. Voltage Drop	Ut	-	2.5VDC	1.5VDC				
Max. Input Voltage		Ucmax=28VDC	Utmax=28VDC	Utmax=6VDC				
Max. Reverse Voltage		-Ucmax=28VDC	-Utmax=28VDC	-Utmax=6VDC				
Release Voltage		Uc<1VDC	Ut>2.5VDC	Ut>1.5VDC				
Control Current	Ic	5->19mADC	-	-	See curve fig. 7 page 5			
Current To Switch	Ict	-	50->100μADC	20mADC	Depends on Ut			

	STATU	S OUTPUT CHARACTERIS	TICS	
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)		
Output		Diag.	Вур.	
Concerned Terminals	/	1 & 2	2 & 3	
Function		Environment problem detection or faulty device indication	Indicates the end of the starting period and can be used to control a bypass electromechanical contactor	
Nom. Operating Voltage	Usan	24VA	AC/DC	
Operating Voltage Range	Usa	0->28\	/AC/DC	
Non-repetitive Max. Peak Voltage	Usapmax	6	0V	
Protection Against Overvoltage		Yes 25V size 7 varistors integrated		See curves fig. 11 & 12 page 5
Min. Load Current	Ibymin Ipbmin		0	
Max. Permanent Current	Iby/Ipb	1A A	AC/DC	See curve fig. 8 page 5
Overload Current	Ibyp/Ipbp	2.4A	AC/DC	@100ms 10% of the cycle
<b>Protection Against Short-Circuits</b>		1	No	
On-state Resistance	Ron	500	lmΩ	See curve fig. 9 page 5
Off-state Resistance	Roff	100ΜΩ		
Off-state Capacitance	Coff	130pF		See curve fig. 10 page 5
Turn-on Time	Toff	0.5	óms	
Turn-off Time	Ton	2	ms	




S/MOT/SMCW6150/A/22/07/99 1W240020



Page 5/16

#### CONTROL

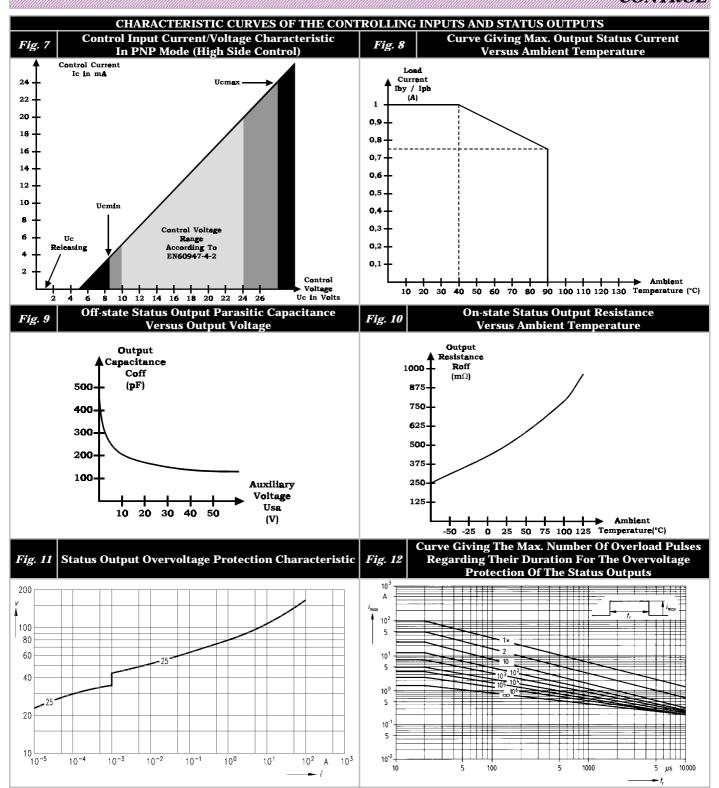





## POWER

INTERNAL SUPPLY ELECTRICAL CHARACTERISTICS									
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS						
Concerned Terminals		3L2 & 5L3							
Voltage Range	Ue	200->480VAC	See internal						
Consumption	Is	1mA typical	diagram fig. 1						
Frequency Range	f	40-65Hz	page 2						
Turn-on Time	tm	100ms							

POWER SIDE CHARACTERISTICS							
CHARACTERISTICS	LABELS	VALUES (Given at 40°C ambient unless otherwise specified)	REMARKS				
Concerned Terminals		1L1, 2T1, 3L2, 4T2, 5L3, 6T3					
Max Power Of The Motor @400VAC Star Wiring (Y)	Pn	15kW					
Max Power Of The Motor @230VAC Star Wiring (Y)	Pn	8.6kW					
Max Power Of The Motor @400VAC Delta Wiring (D)	Pn	26kW	Device wired inside the delta				
Max Power Of The Motor @230VAC Delta Wiring (D)	Pn	15kW	Device wired inside the delta				
Nom. Operating Voltage	Uen	230VAC & 400VAC					
Operating Voltage Range	Ue	200->480VAC					
Max. Non-repetitive Peak Voltage	Uep	1200V					
Integrated Overvoltage Protection		Yes 510V size 14 varistors	See curves fig. 16 & 17 page 7				
AC53a Nom. Current according to EN60947-4-2 (Induction Motor)	Ie (AC53a)	22.5A	Hard conditions See curve fig. 15 page 7				
AC53a Max. Permanent Current (Induction Motor)	Ie (AC53a)	30A	Normal conditions See curve fig. 15 page 7				
Max. AC1 Permanent Current (Resistive Loads)	Ith (AC1)	50A (65A if the wire cross-section is doubled for each power terminal)	E.g. softstarting lamps				
Non-repetitive Peak Overload Current (1 cycle of 10ms)	ITSM	2000A	See Curve fig. 14 page 7				
Fusing Limit Current For Choosing The Protecting Fuses	I²t	$20000{ m A}^2{ m s}$	@10ms				
Min. Load Current	Iemin	100mA					
Max. Leakage Current	Ilk	7mA	@400VAC50Hz				
Power Factor	Pf	0->1					
<b>Operating Mains Frequency Range</b>	F	40->65Hz					
Off-state Dv/Dt	dv/dt	500V/μs					
Integrated Transient Voltage		YES					
Protection	70/7-	RC network					
Max. Current Rising Time	di/dt	50Α/μs	07.1				
Direct Voltage Drop	Ud	1.4V	@Ith				
Resistive Part Of The Direct Voltage Drop	rt	2mΩ	@125°C				
Threshold Part Of The Direct Voltage Drop	Vto	0.9V	@125°C				
Max. Junction Temperature	Tjmax	125°C	<u> </u>				
Junction/Plate Thermal Resistance Per Power Element	Rthjc	0.25°K/W	Total = 3 power elements				
Plate/Heatsink Thermal Resistance	Rthcs	0.05°K/W					
Vertically Mounted Heatsink Thermal Resistance	Rthra	0.3°K/W	@∆Tra=60°C				
<b>Heatsink Thermal Time Constant</b>	Tthra	15min	@∆Tra=60°C				





S/MOT/SMCW6150/A/22/07/99 1W240020




Page 7/16

#### POWER

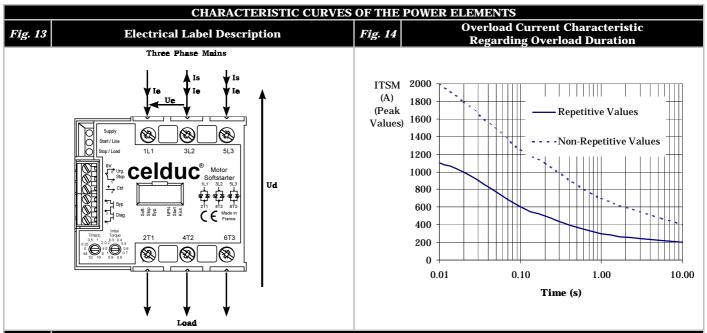

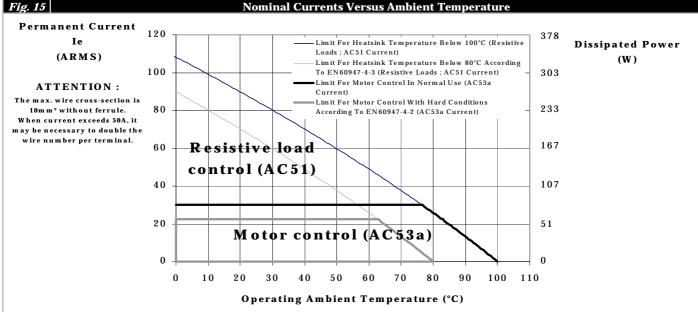

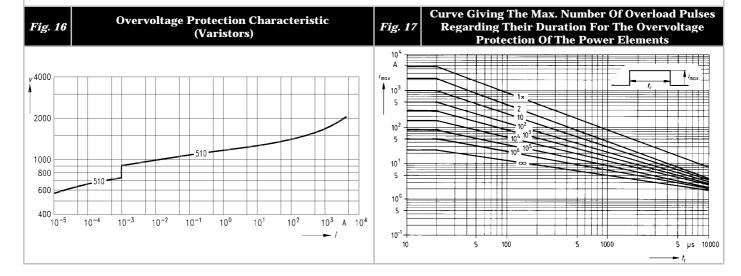





## GENERAL

INPUT/OUTPUT ISOLATION CHARACTERISTIC								
CHARACTERISTICS	REMARKS							
Power Output/Input Isolation	Uimp	4kV						
Status Outputs / Input Isolation	Uied	$2.5 \mathrm{kV}$						
Plate/Input Isolation	Uimp	4kV						
Status Output/Plate Isolation	Uimp	4kV						
Isolation Resistance	Rio	$1  ext{G} \Omega$						
Isolation Capacitance	Cio	<8pF						

	CLIMATIC OPERATING ENVIRONMENT								
CHARACTERISTICS	LABELS	LABELS VALUES (Given at 20°C ambient unless otherwise specified)							
Storage Ambient Temperature	Tstg	-40->+100°C							
<b>Ambient Operating Temperature</b>	Tamb	-40->+90°C							
Max. Heatsink Temperature	Tc	100°C							
Wet Heat Resistance (continuous)		According to I.E.C. 68 parts 2 & 3							
Wet Heat Resistance (cyclical)		According to I.E.C. 68 parts 2 & 30							

CONNEXIONS AND REQUIRED TOOLS ON THE CONTROLSIDE				
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS	
Connections		Screwed		
Screwdriver		0.8 x 2mm		
Wire Cross Section		2.5mm <sup>2</sup>		
Min. And Max. Tightening Torque				

CONNEXIONS AND REQUIRED TOOLS ON THE POWER SIDE				
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS	
Connections		Screwed		
Screwdriver		Posidriv 2 or 0.8 x 5.5mm		
Wire Cross Section		1,5->6mm <sup>2</sup> (10mm <sup>2</sup> without ferrule)		
Min. And Max. Tightening Torque		1.8->3N.m		
Possible Number Of Connected Wires For The Max. Cross Section		2		

CHARACTERISTICS AND REQUIRED TOOLS FOR THE SETTINGS				
CHARACTERISTICS	LABELS	VAL (Given at 20°C ambient u	UES nless otherwise specified)	REMARKS
Setting		"Time" and "Initial Torque"	Option Switches	
Screwdriver				
Number Of Positions		10	2 for each switch	
Changing Position Required Torque		>1.5N.cm +/- 50%	>3N.cm +/- 50%	Rotary switches : No rotation stop
Angle Between Each Position		36°	0°	

MISCELLANEOUS CHARACTERISTICS				
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS	
Housing		UL94V0		
Mounting		Omega DIN rail (DIN50022) or screwed		
Noise Level		Low audible vibration during the softstarting and softstopping periods		
Weight		2600g		




S/MOT/SMCW6150/A/22/07/99 1W240020



Page 9/16

## GENERAL

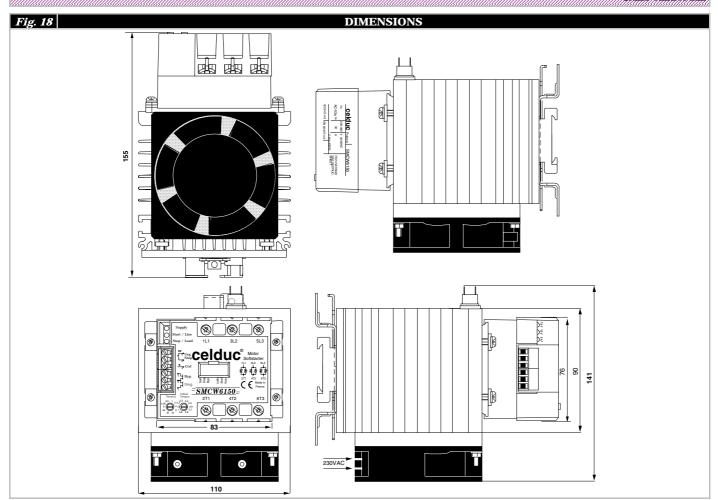

CHARACTERISTICS OF THE THERMAL PROTECTION				
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS	
Contact Type		Normally close		
Closing Temperature		90°C +/- 3°C		
Opening Temperature		80°C		
Nom. Voltage		250VAC/DC		
Nom. Current		6A		
Contact Resistance		$10 \mathrm{m}\Omega$		
<b>Isolation Between Opened Contacts</b>		$10 \mathrm{G}\Omega$		
Isolation Between Contacts and Housing		4kV		
Isolation Resistance		$10 \mathrm{G}\Omega$		
Connections		2,8mm flat tabs or welded wires		

	CHARACTERISTICS OF THE FAN			
CHARACTERISTICS	LABELS VALUES (Given at 20°C ambient unless otherwise specified)  REMA			
Motor		Shaded pole induction motor		
Supply Voltage		230VAC		
Consumption		9W 68mA		
Supply Frequency		50->60Hz		
Speed		2600 RPM		
Noise Level		35dbA		
Connections		2,8mm flat tabs		





## STANDARDS

IMMUNITY I	IMMUNITY LEVEL WITHIN ELECTROMAGNETIC COMPATIBILITY (E.M.C.)				
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS		
Electrostatic discharges	EN 61000-4-2	8kV in the air 4kV contact	No state changing or destruction		
Radiated Electromagnetic Fields	EN 61000-4-3	10V/m	No state changing or destruction		
Fast Transient Bursts	EN 61000-4-4	2kV direct coupling on the power side 2kV clamped coupling on the input side	No state changing or destruction		
Electric chocks	EN 61000-4-5	1kV direct coupling differential mode (Input and output sides) 2kV direct coupling common mode (Input and output sides)	No state changing or destruction		
Voltage Drop	EN 61000-4-11				

EMISSION LEVEL WITHIN ELECTROMAGNETIC COMPATIBILITY (E.M.C.)			
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS
Conducted Disturbances	EN55011	In compliance with the standards for industrial field In compliance with the standards for domestic field with an external bypass contactor	
Radiated Disturbances	EN55011	<30dbμV for the frequency range 30->230MHz <37dbμV for the frequency range 230->1000MHz	
Remarks Concerning Filtering		The conducted or radiated disturbances generated by solid state relays depend on the wiring and load configuration.  The test method recommended by the European standards and concerning electromagnetic compatibility leading to results far from reality, we decided to advise our customer in order to adapt their filtering scheme to their application.  The European standard EN60947-4-2 requires the measurement to be done at full on state (end of the softstarting period). Therefore, our products are below the industrial field required levels on inductive load like the induction motor and no additional filter is needed.  The starting period that may last several minutes generates enough interference to disturb sensitive devices located near the softstarter. If any, please contact us so that we can help you to choose the right filter.	

LOW VOLTAGE DIRECTIVE				
CHARACTERISTICS LABELS VALUES (Given at 20°C ambient unless otherwise specified) REMARI				
Standard		EN60947-4-2		
Protection Level	IP	2L0		
Protection For Direct Touch		According to V.D.E. 160 part 100 : Back hand and finger safety		

APPROVALS			
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS
CE Marking	EN 60947-4-2	Yes	
c UL US	UL508	Pending	
VDE 0805	EN60950	Pending	Office environment





Page 11/16

 
#### INSTALLATION

#### IMPORTANT

The installation of this product must be done by <u>qualified people</u>, informed about electric hazards (electrocution risks linked to the voltage levels in the circuit).

Any intervention on the installation must be operated the circuit disconnected from the electric grid by an electromechanical mean insuring a sufficient galvanic isolation.

The device concerned by this document is composed of silicon based solid state switches. They never ensure a safe function when they are not controlled (Important leakage current and untimely closing). Therefore, we advise you to use an electromechanical device in series with the softstarter, which can ensure a safe operation in the disconnected circuit.



In order to operate in the circuit in safe condition, the control part of the softstarter will have to be disconnected from the control or auxiliary supplies as well.





- 1- The SMCV does not correctly operate on three phase mains with the motor neutral connected to the neutral of the mains. If any, please contact us.
- 2- The overload relay must be adapted to the motor.
- 2 Please take care not to make short-circuits while installing the by-pass contactor or the backward wires for delta wiring.
- 4- In case of devices planned to be used connected to a by-pass contactor (SMCW...1 reference), the control voltage will have to be held sufficiently to allow the by-pass to close. Take care not to remove the by-pass checking option "byp.".
- 5- In case of fast softstarting and softstopping controls without waiting for the end of the ramps, the motor may heat up. Please contact your motor supplier to choose an adapted model.

ENVIRONMENT OF THE SOFTSTARTER			
DEVICES	LABELS	DESCRIPTION	REMARKS
On Line Fuses (Hard conditions according to EN60947-4-2)		FERRAZ 14 x 51 am 50/500V	
On Line Fuses (Normal conditions)		To be determine by the user	
Overload Relay (Hard conditions according to EN60947-4-2)		Moeller Z00-24 class 10A	
Overload Relay (Normal conditions)		To be determine by the user	
Breaking Capability Of The By-pass Contactor	KM1	30A AC1	
By-pass Contactor Coil	A1/A2	15VAmax. / 15W max.	
Thermal Protection	T°C	Not available	
Wiring / Settings		Comply with the characteristics given in general information	







## Page 12/16



 
#### INSTALLATION

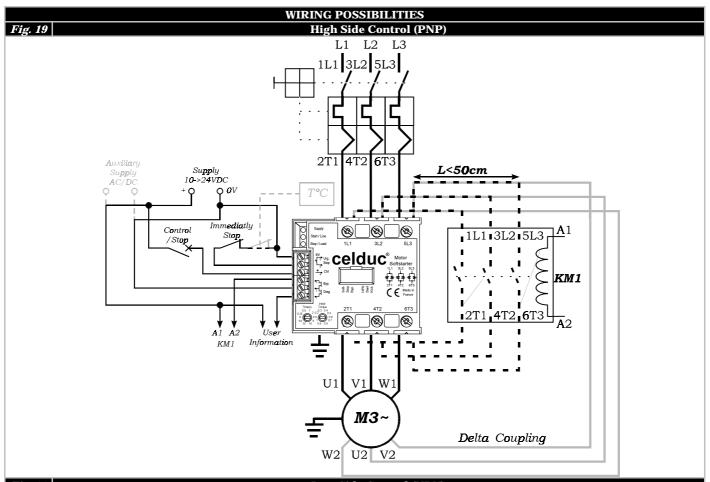

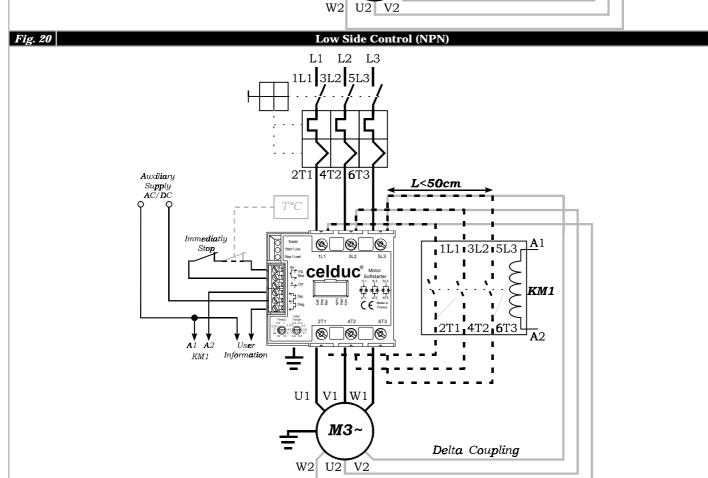










Page 13/16

#### INSTALLATION

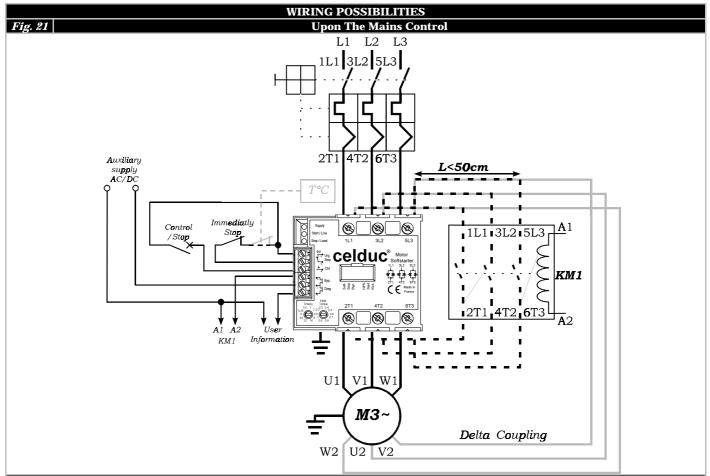

## OTHER LOAD POSSIBILITIES Softstarting Incandescent Or Infrared Lamps Softstarting Three Phase Loade

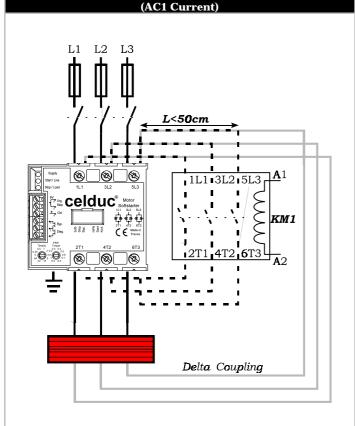

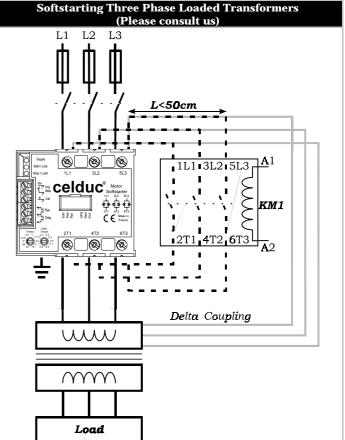









### INSTALLATION

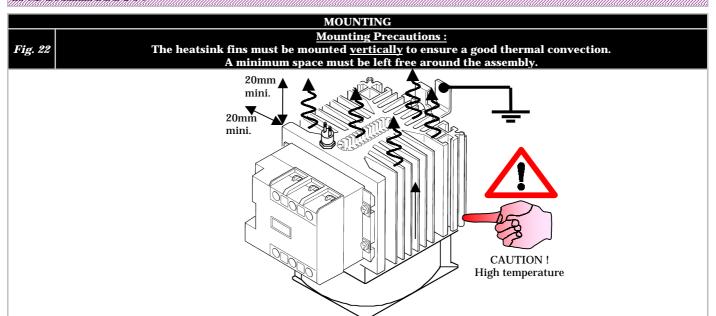

# Mounting With Screws 9 5,5 mm 25 mm 25 mm

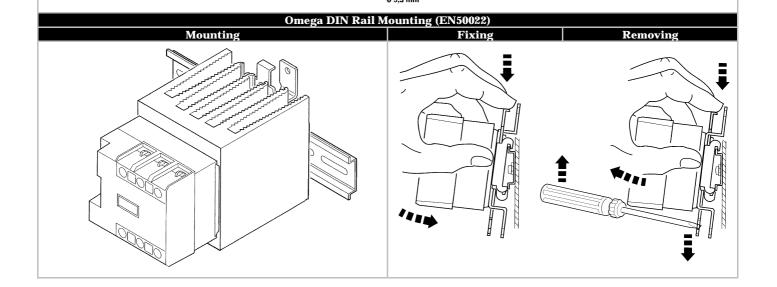



S/MOT/SMCW6150/A/22/07/99 1W240020



Page 15/16

#### INSTALLATION

#### ADVISES FOR THE SETTINGS

#### ATTENTION

Obtaining a particular starting time value is only a consequence of the motor torque reduction and can not be guaranteed or easily repeatable. The rotary switch « Time (s) » setting values only give the duration of the voltage ramp applied to the motor but not necessarily its starting time. The main *SMCV* function is to obtain a motor torque reduction to take care of the motor load and the electric grid. The motor starting time is only a consequence and completely depends on the motor itself, its load and the settings done by the user.

The SMCV can not break a motor driving a load that has much inertia. The user can only obtain a stop time equal or longer than a simple disconnection from the electric grid. Using the softstop feature can only be justified when the motor load tends to break the motor (pumps, ...) or when the products treated by the machine need to be stop slowly (conveyors,...). In the case of load with high inertia, the softstop feature can help to reduce slowly the magnetic field inside the motor to avoid long time overvoltage in the circuit.

Setting Examples
Long Starting Time For lamps,

