

MAXIM

MAX1642 Evaluation Kit

General Description

The MAX1642 evaluation kit (EV kit) is a step-up switching regulator for one-cell, battery-powered systems. It accepts a positive input between 0.9V and 1.65V and converts it to a 3.3V preset output for currents up to 20mA. The MAX1642 EV kit provides ultra-low quiescent current and high efficiency for maximum battery life. Operation up to 50kHz allows the use of a tiny surface-mount inductor while minimizing interference with sensitive intermediate frequencies in pagers and other RF applications.

This EV kit is a fully assembled and tested surface-mount circuit board. Additional pads on the bottom of the board accommodate the external feedback resistors for setting different output voltages. It can also be used to evaluate the MAX1643.

Component List

DESIGNATION	QTY	DESCRIPTION
C1, C2	2	22 μ F, 6.3V tantalum capacitors Sprague 595D226X06R3B2T
C3	1	0.1 μ F ceramic capacitor
C4	0	Open
JU1	1	3-pin header
L1	1	100 μ H, 520mA inductor Sumida CD54-101
R1, R2, R4	0	Open
R3, R5	2	100k Ω , 5% resistors
U1	1	MAX1642EUA (8-pin μ MAX)
None	1	Shunt
None	1	MAX1642/MAX1643 PC board

Component Suppliers

SUPPLIER*	PHONE	FAX
AVX	(803) 946-0690	(803) 626-3123
Coilcraft	(847) 639-6400	(847) 639-1469
Coiltronics	(561) 241-7876	(561) 241-9339
Dale-Vishay	(402) 564-3131	(402) 563-6418
Sprague	(603) 224-1961	(603) 224-1430
Sumida	(847) 956-0666	(847) 956-0702
Vishay/Vitramon	(203) 268-6261	(203) 452-5670

Please indicate that you are using the MAX1642 when you contact these suppliers.

Features

- ◆ 0.9V to 1.65V Input Voltage Range
- ◆ 3.3V $\pm$ 4% Output Voltage
- ◆ Adjustable Output Voltage (2V to 5.2V)
- ◆ 80% Efficiency ($V_{IN} = 1.2V$, $I_{LOAD} = 20mA$)
- ◆ Internal 500mA Synchronous Rectifier
- ◆ 2 μ A Shutdown Mode (MAX1642)
- ◆ Low-Battery Detector (MAX1643)
- ◆ Ultra-Small, 8-Pin μ MAX Package
- ◆ Power-Fail Output
- ◆ Surface-Mount Components
- ◆ Fully Assembled and Tested

Ordering Information

PART	TEMP. RANGE	BOARD TYPE
MAX1642EVKIT	0°C to +70°C	Surface Mount

Note: To evaluate the MAX1643, request a MAX1643EUA free sample with the MAX1642 EV kit.

Quick Start

The MAX1642 EV kit is fully assembled and tested. Follow these steps to verify board operation. **Do not turn on the power supply until all connections are completed.**

- 1) Connect a 1V supply voltage to the VIN pad. The ground connects to the GND pad.
- 2) Connect a voltmeter and load, if any, to the VOUT pad.
- 3) For normal operation, place the shunt on JU1 across pins 1 and 2.
- 4) Turn on the power supply to the board and verify that the output voltage is 3.3V.



MAX1642 Evaluation Kit

Detailed Description

The MAX1642 EV kit provides a 3.3V output from a 0.9V to 1.65V input voltage. It delivers up to 20mA with 80% typical conversion efficiency.

Jumper Selection

The 3-pin header JU1 selects shutdown mode. Table 1 lists the selectable jumper options. In shutdown, the internal switching MOSFET turns off, $\overline{\text{PFO}}$ goes into a high-impedance state, and the synchronous rectifier turns off to prevent reverse current from flowing through the output back to the input. However, there is still a forward current path through the synchronous-rectifier body diode from the input to the output. Thus, the output doesn't drop lower than a diode drop below the battery voltage. Connect the $\overline{\text{SHDN}}$ pin to VIN for normal operation.

Table 1. Jumper JU1 Functions

SHUNT LOCATION	$\overline{\text{SHDN}}$ PIN	MAX1642 OUTPUT
1 and 2	Connected to VIN	MAX1642 enabled, $V_{\text{OUT}} = 3.3\text{V}$
2 and 3	Connected to GND	Shutdown mode, $V_{\text{OUT}} = V_{\text{IN}} - V_{\text{DIODE}}$

Evaluating Other Output Voltages

The MAX1642 is preset for a 3.3V output voltage. However, its output can be adjusted via an external voltage divider formed by R1 and R2 (located on the bottom of the board). The only other modification required is to cut the trace across R2. Since FB leakage is 10nA max, select feedback resistor R2 in the 100k Ω to 1M Ω range. R1 is given by the following equation:

$$R1 = R2 \left(\frac{V_{\text{OUT}}}{V_{\text{REF}}} - 1 \right)$$

where $V_{\text{REF}} = 1.23\text{V}$ (the internal reference voltage).

Power-Fail Output

The MAX1642 has an on-chip comparator for power-fail detection. This comparator can be used to detect loss of power at the input or output. The MAX1642 EV kit detects power loss at the input. If the voltage at PFI falls below 614mV $\pm 3\%$, the $\overline{\text{PFO}}$ output sinks current to GND.

The power-fail monitor's threshold is set by two resistors: R3 and R4. Refer to the *Power-Fail Detection* section in the MAX1642 data sheet for instructions on selecting resistors R3 and R4.

Evaluating the MAX1643

The MAX1642 EV kit can also be used to evaluate the MAX1643. The only modifications required are to replace the MAX1642 with the MAX1643 and remove the shunt from JU1. Refer to the *Detailed Description* and *Pin Description* sections of the data sheets for the differences between the MAX1642 and MAX1643.

MAX1642 Evaluation Kit


 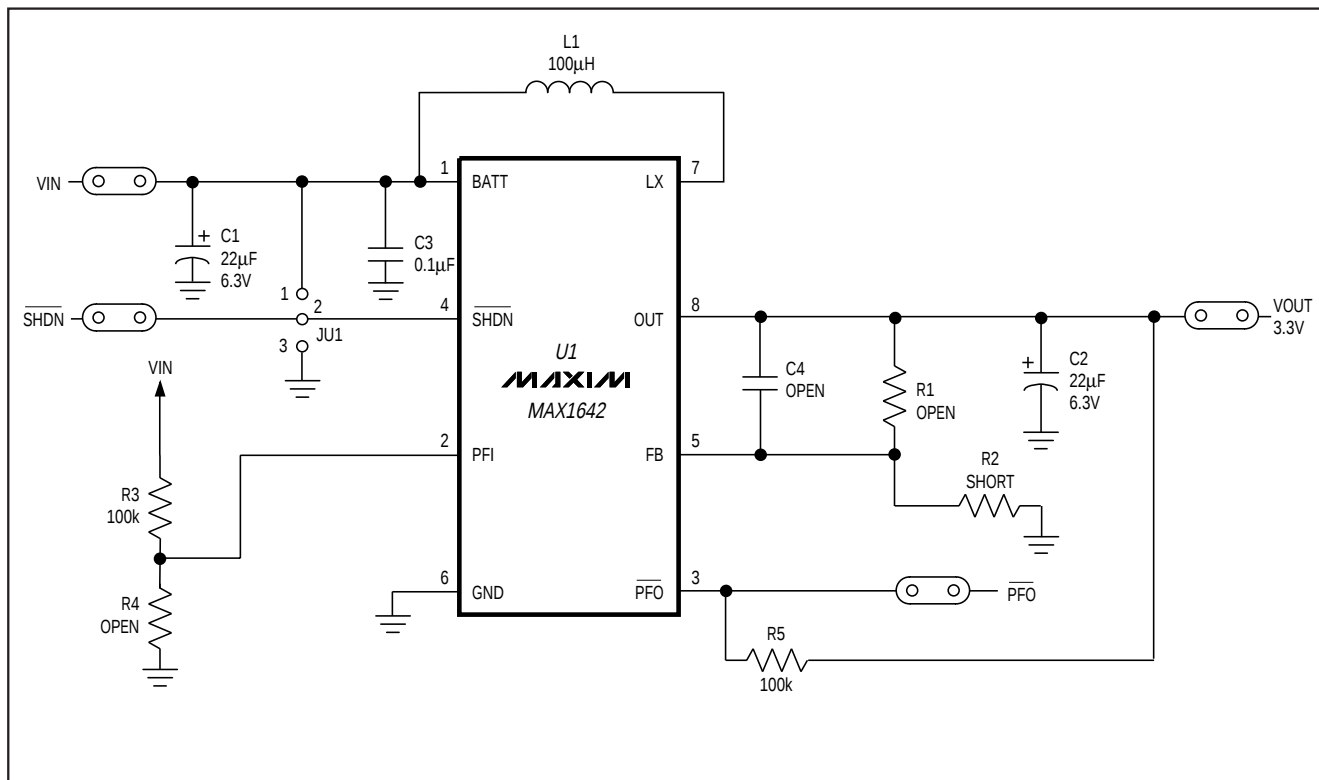


Figure 1. MAX1642 EV Kit Schematic



MAX1642 Evaluation Kit

Evaluates: MAX1642/MAX1643

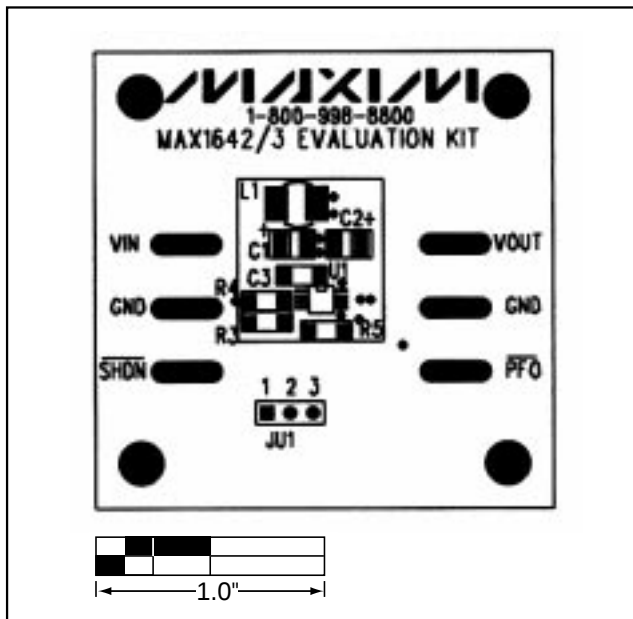


Figure 2. MAX1642 EV Kit Component Placement Guide—Component Side

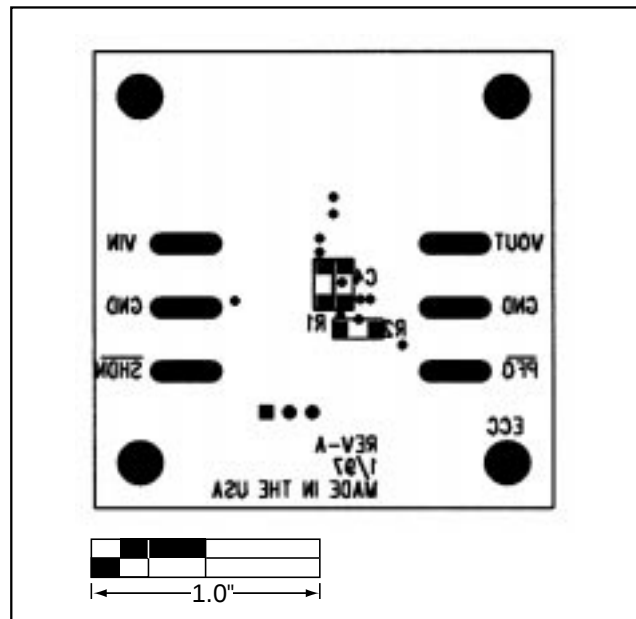


Figure 3. MAX1642 EV Kit Component Placement Guide—Solder Side

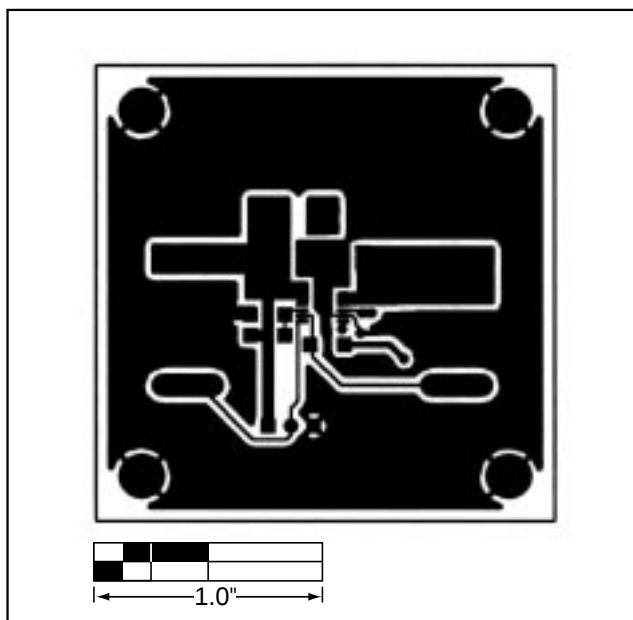


Figure 4. MAX1642 EV Kit PC Board Layout—Component Side

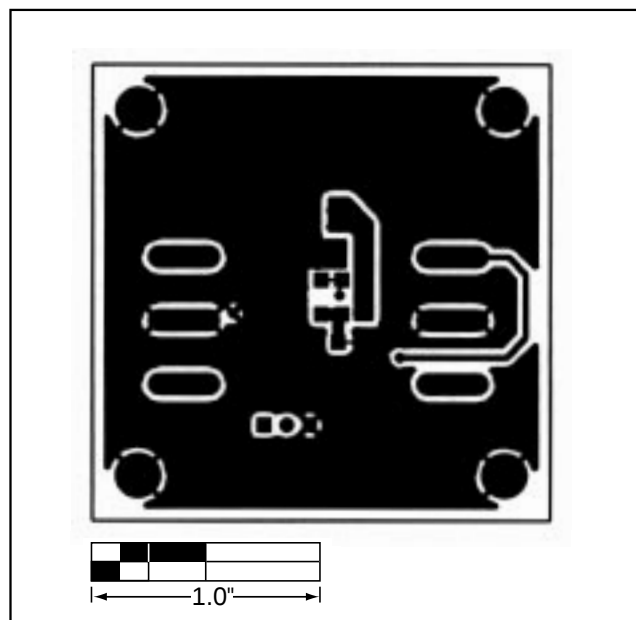


Figure 5. MAX1642 EV Kit PC Board Layout—Solder Side