



PS810

Data Sheet

Li Ion Single Cell Fuel Gauge

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip's products as critical components in life support systems is not authorized except with express written approval by Microchip. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks


The Microchip name and logo, the Microchip logo, Accuron, KEELOQ, MPLAB, PIC, PICmicro, PowerSmart and SmartShunt are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SmartSensor and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

PowerCal, PowerInfo, PowerMate, PowerTool, Select Mode, Smart Serial, SmartTel and WiperLock are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2005, Microchip Technology Incorporated. Printed in the U.S.A., All Rights Reserved.

 Printed on recycled paper.

Li Ion Single Cell Fuel Gauge

Hardware Features

- Highly accurate fuel gauge for single cell Li Ion applications
- Algorithms are implemented using an embedded PIC18 low-power microcontroller with 16-bit instruction set
- Reports current, voltage and temperature utilizing a programmable 8 to 15-bit + sign, sigma-delta A/D
- Host communication accomplished through an industry standard SMBus interface or an alternative single pin serial interface
- I/O pins are available to provide functions such as digital GPIO, coin cell voltage measurement and thermistor input
- Integrated thermistor and regulator minimize external components
- Embedded fuel gauge algorithms and application specific parameters are stored in a 4K x 16 Flash memory
- 512 bytes of RAM are available for temporary storage of battery parameters

Software Features


- Provides battery status, such as average time to empty, relative State-Of-Charge and battery State-Of-Health
- In-system offset calibration compensates for offset error in current measurement

Package Features


- 16-pin QFN package or 14-pin TSSOP package
- -20°C to +85°C operating temperature range

Pin Description

16-pin QFN (4 mm x 4 mm)

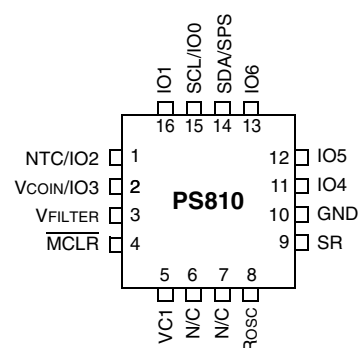

14-pin TSSOP

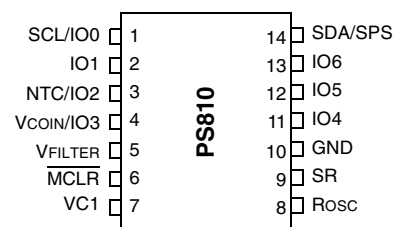

1.0 PRODUCT OVERVIEW

The PS810 is a fuel gauge for one-cell Li Ion or Li Polymer applications. The device provides the host and the system user with critical battery information, such as voltage, current, temperature, run time, State-Of-Charge and State-Of-Health. This information is available through an industry standard SMBus or an alternative Single Pin Serial interface. Advanced fuel gauge algorithms are stored in on-board Flash memory and executed by the industry recognized PIC18 microcontroller. These algorithms include compensation factors which optimize the performance of the battery for a specific application and operating environment. Compensation is included for the effects of temperature, discharge rate, charge rate and battery aging.

To provide precise measurements of current, voltage and temperature, the PS810 integrates a highly accurate 15-bit + sign, sigma-delta converter. Based upon operating conditions, this programmable converter can be configured to measure specific battery parameters with a resolution of 8 to 15 bits + sign. Precision measurements combined with advanced algorithms provide accurate indications of capacity, run time, State-Of-Health and safety and charge/discharge conditions.

The ability to operate directly from a single Li Ion or Li Polymer cell minimizes the need for external components, such as a voltage regulator and voltage divider. To further limit external circuitry and enhance accuracy, the PS810 provides an integrated temperature sensor and oscillator.

PS810


TABLE 1-1: PS810 QFN PIN SUMMARY

| Pin# | Pin Name | Description |
|------|-----------|---------------------------------|
| 1 | NTC/IO2 | External NTC input or GPIO |
| 2 | VCOIN/IO3 | Coin cell monitor input or GPIO |
| 3 | VFILTER | Power supply filter cap |
| 4 | MCLR | Master Clear |
| 5 | VC1 | Cell voltage input |
| 6 | N/C | No connect |
| 7 | N/C | No connect |
| 8 | Rosc | Oscillator bias resistor |
| 9 | SR | Sense resistor input |
| 10 | GND | Power supply ground |
| 11 | IO4 | General purpose IO |
| 12 | IO5 | General purpose IO |
| 13 | IO6 | General purpose IO |
| 14 | SDA/SPS | SMBus data/one-wire serial line |
| 15 | SCL/IO0 | SMBus clock or GPIO0 |
| 16 | IO1 | General purpose IO |

TABLE 1-2: PS810 TSSOP PIN SUMMARY


| Pin# | Pin Name | Description |
|------|-----------|---------------------------------|
| 1 | SCL/IO0 | SMBus clock or GPIO |
| 2 | IO1 | General purpose IO |
| 3 | NTC/IO2 | External NTC input or GPIO |
| 4 | VCOIN/IO3 | Coin cell monitor input or GPIO |
| 5 | VFILTER | Power supply filter cap |
| 6 | MCLR | Master Clear |
| 7 | VC1 | Cell voltage input |
| 8 | Rosc | Oscillator bias resistor |
| 9 | SR | Sense resistor input |
| 10 | GND | Power supply ground |
| 11 | IO4 | General purpose IO |
| 12 | IO5 | General purpose IO |
| 13 | IO6 | General purpose IO |
| 14 | SDA/SPS | SMBus data/one-wire serial line |

FIGURE 1-1: PS810 INTERNAL BLOCK DIAGRAM

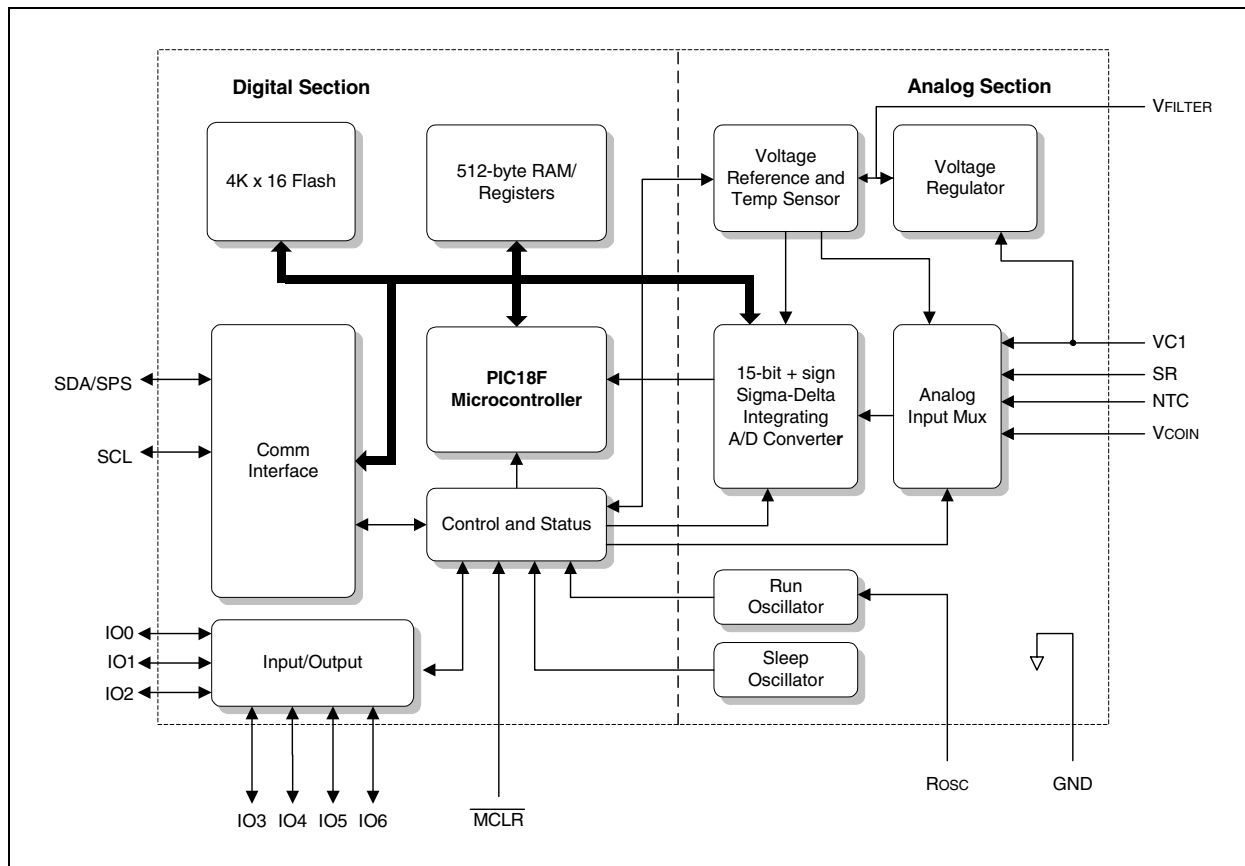

1.1 Schematic

FIGURE 1-2: PS810 APPLICATION SCHEMATIC – PS810-BASED BATTERY PACK

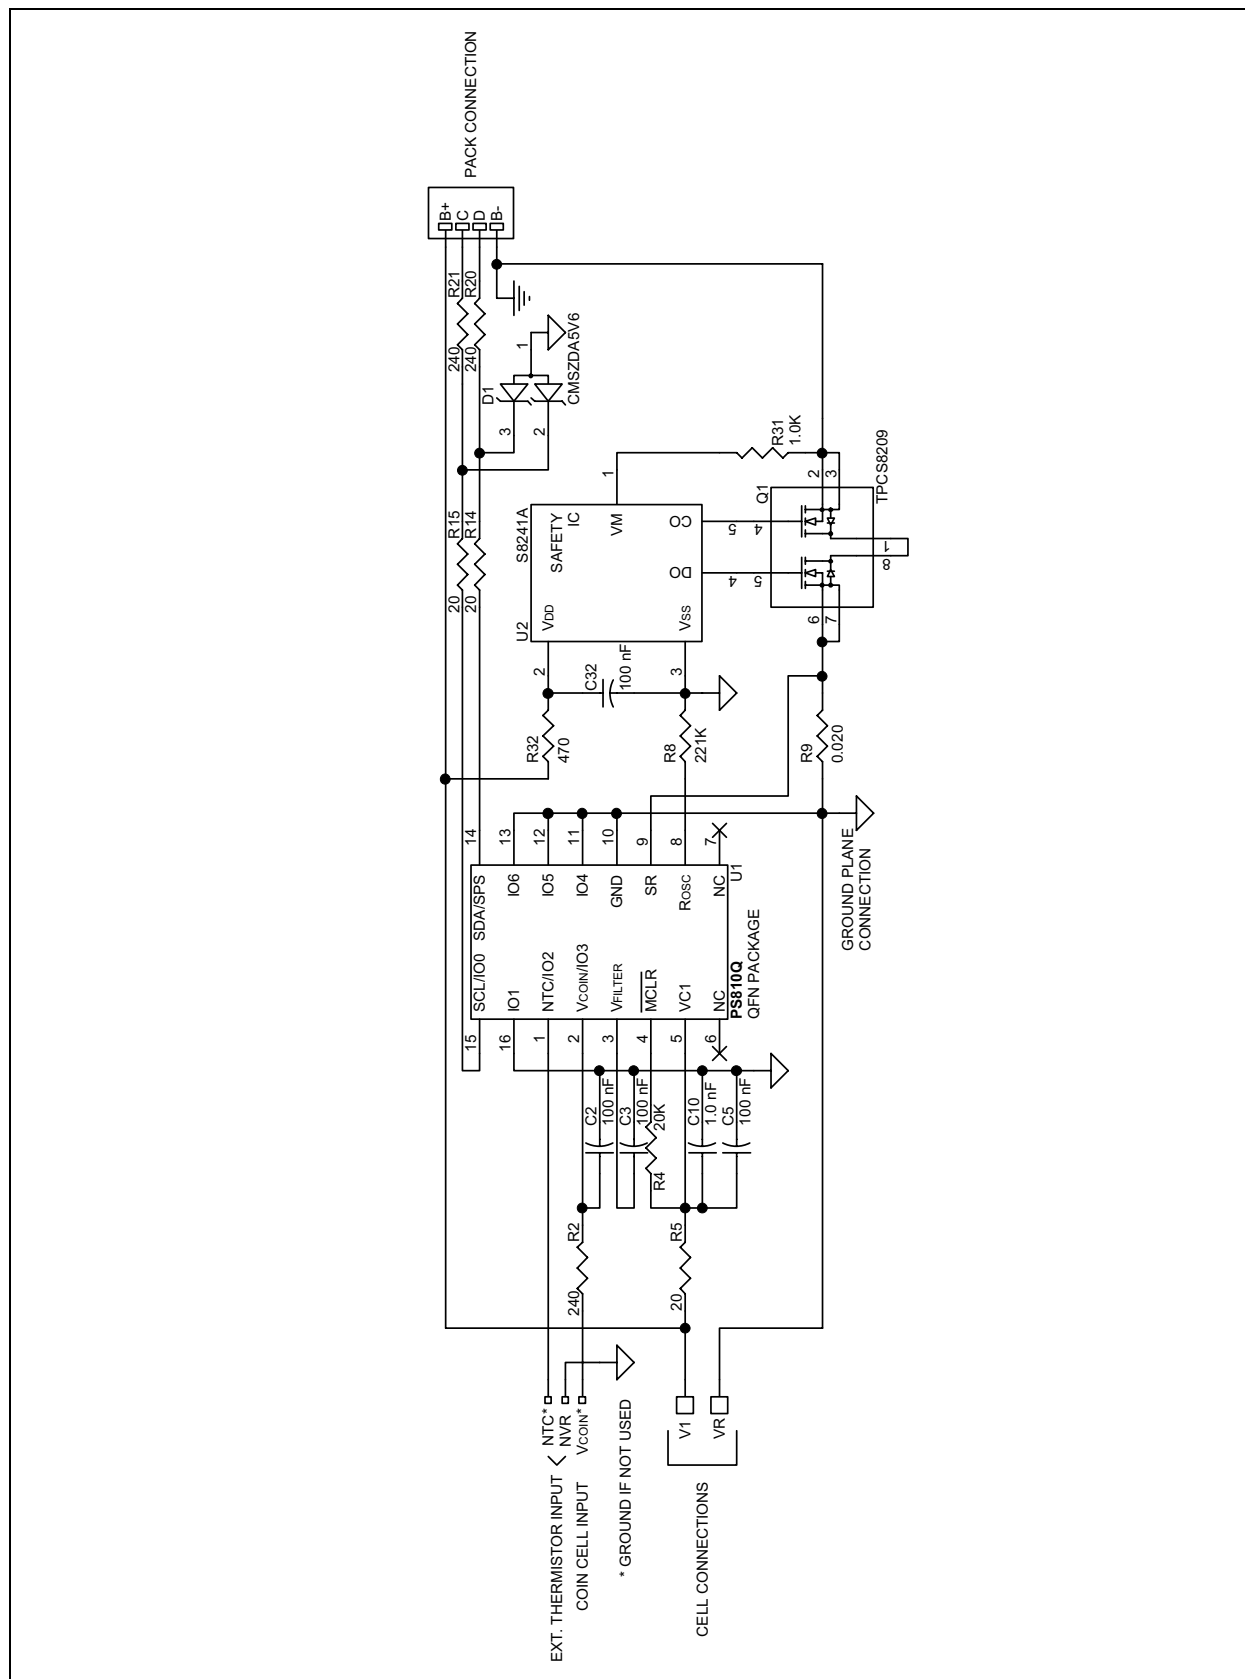

PS810

1.2 Bill of Materials

TABLE 1-3: PS810 BILL OF MATERIALS

| ID | Part Number | Symbol | Description | Mfr. | Mfr. PN | Supplier | Supplier PN | Qty |
|----|-----------------------------------|-----------------|---|---------------------------|-----------------------------|---------------------------|-----------------------------|-----|
| 1 | 04-826197 Rev. 1.1 | | Raw PCB, PS8110 | Microchip | 04-826197 Rev. 1.1 | Microchip | 04-826197 Rev. 1.1 | 1 |
| 2 | CC-0402-10X7R25-1.0NF-01 | C10 | Capacitor, Ceramic, 1.0 nF, 25V, +/-10%, X7R dielectric, 0402 | Panasonic | ECJ-0EB1E102K | Digikey | PCC102BQCT-ND | 1 |
| 3 | CC-0603-10X7R16-100NF-01 | C2, C3, C5, C32 | Capacitor, Ceramic, 100 nF, 16V, +/-10%, X7R dielectric, 0603 | Panasonic | ECJ-1VB1C104K | Digikey | PCC1762CT-ND | 4 |
| 4 | DZ-SOT323-10D-CMSZDA5V6-01 | D1 | Dual Zener Diode, 5.6V, +/-10%, 200 mW, common anode, SOT-323 | Central Semi. Diodes Inc. | CMSZDA5V6 AZ23C5V6W-7 | Central Semi. Diodes Inc. | CMSZDA5V6 AZ23C5V6W-7 | 1 |
| 5 | QM-TSSOP844-DN-TPCS8209-01 | Q1 | MOSFET, dual N-channel Enhancement mode, 20V, 5A, TSSOP-8/4.4 mm body width package | Toshiba | TPCS8209(TE12L) | Digikey | TPCS8209CT-ND | 1 |
| 6 | RF-0402-5-20-01 (Note 1) | R14, R15 | Resistor, film, 0402, 5%, 20 ohms | Panasonic | ERJ-2GEJ200X | Digikey | P20JCT-ND | 2 |
| 7 | RF-0402-5-20K-01 (Note 1) | R4 | Resistor, film, 0402, 5%, 20 kOhms | Panasonic | ERJ-2GEJ203X | Digikey | P20KJCT-ND | 1 |
| 8 | RF-0603-ITC25-221K-01 (Note 1) | R8 | Resistor, film, 0603, 1%, 221 kOhms, 25 ppm TC | Susumu Co. Ltd. | RR0816P-2213-D-34D | Digikey | RR08P221KDCT-ND | 1 |
| 9 | RF-0603-5-1.0K-01 (Note 1) | R31 | Resistor, film, 0603, 5%, 1.0 kOhms | Panasonic | ERJ-3GEYJ102V | Digikey | P1.0KGCT-ND | 1 |
| 10 | RF-0603-5-470-01 (Note 1) | R32 | Resistor, film, 0603, 5%, 470 ohms | Panasonic | ERJ-3GEYJ471V | Digikey | P470GCT-ND | 1 |
| 11 | RF-0805-5-20-01 (Note 1) | R5 | Resistor, film, 0805, 5%, 20 ohms | Panasonic | ERJ-6GEYJ200V | Digikey | P20ACT-ND | 1 |
| 12 | RF-0805-5-240-01 (Note 1) | R2, R20, R21 | Resistor, film, 0805, 5%, 240 ohms | Panasonic | ERJ-6GEYJ241V | Digikey | P240ACT-ND | 3 |
| 13 | RF-1206-1-0.029-01 (Note 1) | R9 | Resistor, metal strip, 1206, 1%, 0.020 ohms | Vishay | WSL1206-0.020-1%-R86 | Vishay | WSL1206-0.020-1%-R86 | 1 |
| 14 | UM-SOT235-4085-S8241ABPMCGBPT2-01 | U2 | IC, Battery Protection Circuit, Li Ion, 1-cell, -40°C to +85°C, SOT23-5 package | Seiko Instruments | S-8241ABPMC-GBP-T2 (Note 2) | Seiko Instruments | S-8241ABPMC-GBP-T2 (Note 2) | 1 |
| 15 | UM-QFN164X4-2085-PS810-01 | U1 | IC, Low-Voltage Fuel Gauge, -20°C to +85°C, QFN-16/4.0x4.0 mm package | Microchip | PS810 | Microchip | PS810 | 1 |

- Note 1:** Resistor sizes shown are minimum recommended sizes for the application.
Note 2: Other variants of the S-8241A series, with different trip points, are also available. Consult the S-8241A series data sheet.

2.0 ARCHITECTURAL OVERVIEW

The PS810 contains a complete analog “front-end” for battery monitoring as well as an embedded microcontroller, with supporting memory, for control, measurement accumulation, calculation and communications. Major functions within the PS810 include:

- Voltage Regulator
- Precision Time Base
- Temperature Sensor
- 4K x 16 Flash Memory
- 512-byte RAM Memory
- 15-bit plus sign Analog-to-Digital (A/D) Converter
- SMBus/I²C™ or Single Pin Serial Communications Interface
- PIC18 Microcontroller

Figure 1-1 is a block diagram of the internal circuitry of the PS810. Figure 1-2 is a schematic diagram that depicts the PS810 in a typical single cell lithium ion application. The function of each of the blocks listed above is summarized in the following sections.

2.1 Internal Voltage Regulator

The PS810 incorporates an internal voltage regulator that supports 1-cell lithium pack configurations. The internal regulator draws power directly from the VC1 input. No other external components are required to regulate circuit voltage.

2.2 Precision Time Base

The integrated precision time base is a highly accurate RC oscillator that provides precise timing for the sigma-delta A/D and for the on-chip elapsed time counters without the need for an external crystal. This time base is trimmed during manufacturing to a nominal frequency of 512 kHz.

2.3 Temperature Sensor

An integrated temperature sensor is provided that can eliminate the need for an external thermistor. As an option, a connection is provided for an external thermistor for applications where the battery cell is physically separated from the PS810.

2.4 Flash Memory

4K x 16 of Flash memory is incorporated for storage of nonvolatile parameters, such as PowerSmart® 3D cell models, fuel gauge algorithms and application specific data.

2.5 RAM Memory

512 bytes of general purpose RAM memory is provided for storage of temporary parameters.

2.6 A/D Converter

The PS810 incorporates an integrating sigma-delta A/D converter together with an analog that has inputs for charge and discharge current, cell voltage, coin cell voltage, the on-chip temperature sensor and an off-chip thermistor. The converter can be programmed to perform a conversion with resolutions of 8 to 15 bits + sign, while utilizing either a single-ended +300 mV or a differential ± 150 mV reference.

2.7 SMBus/I²C™ or Single Pin Serial Communications Interface

This communications port for the PS810 is selectable as a 2-pin industry standard SMBus/I²C or a single pin interface. All commands, status and data are read or written from the host system via this interface.

2.7.1 SMBus/I²C

The two pin communication interface uses one clock pin and one data pin and is compatible with the industry standard System Management Bus (SMBus) and the Inter IC Communication Bus (I²C).

2.7.2 SINGLE PIN SERIAL INTERFACE

The Single Pin Serial (SPS) interface consists of one pin only: the SDA/SPS pin (pin 14). This communication is an asynchronous return-to-one protocol. The timing of the driven low pulses defines the communication.

2.8 PIC18 Microcontroller

The PIC18 is a high-performance, CMOS, fully static 8-bit microcontroller. The PIC18 employs an advanced RISC architecture. This device has enhanced core features, such as 31 level deep stack and multiple internal and external interrupt sources. The separate instruction and data buses of the Harvard architecture allow a 16-bit wide instruction word with a separate 8-bit wide data bus. The two-stage instruction pipeline allows all instructions to execute in a single cycle, except for program branches, which require two cycles. A total of 75 instructions are available.

PS810

NOTES:

3.0 OPERATIONAL DESCRIPTION

3.1 A/D Operation

The PS810 A/D converter measures current, voltage and temperature and integrates the current over time to calculate State-Of-Charge. Cell voltage is measured with a direct connection to the battery cell without requiring an external voltage divider. Using an external sense resistor, current is monitored during both charge and discharge and is integrated over time using the on-chip oscillator as the time base. Temperature is measured from the on-chip temperature sensor or an optional external thermistor. Voltage, current and temperature can be calibrated for accuracy over the operational range. The A/D converter performs sampling using a 32 kHz clock.

3.1.1 CURRENT MEASUREMENT

The A/D input channels for current measurement are the SR and GND pins. The voltage drop across the sense resistor is measured and converted mathematically into a current measurement. The current is also integrated over time to get the amount of charge entering or leaving the battery.

A sense resistor is connected to SR and GND. The maximum input voltage that can be measured at SR is +/-150 mV. The sense resistor should be properly sized to accommodate the lowest and highest expected charge and discharge currents, including suspend and/or standby currents.

The parameter **NullCurr** represents the zero-zone current of the battery. This is provided as a calibration guardband for reading zero current. Currents below +/- **NullCurr** (in mA) limit are read as zero and not included in the capacity algorithm calculations. A typical value for **NullCurr** is 3 mA, therefore, currents between -3 mA and +3 mA will be reported as zero and not included in the capacity calculations. This feature is provided so that electrical noise on the battery module current path is not interpreted as actual charge entering or leaving the battery.

3.1.1.1 Sense Resistor Selection and Current Measurement Range

The current resolution is based on the smallest amount of voltage the A/D converter can measure across the sense resistor. Since this measurement uses 13 bits (plus sign) and the reference used is the internal 150 mV reference, the smallest voltage across the sense resistor that can be measured is:

EQUATION 3-1:

$$150 \text{ mV} / (2^{13} - 1) = 150 \text{ mV} / 32767 = 18.3 \text{ } \mu\text{V}$$

Thus, the smallest current that can be measured is:
 $18.3 \text{ } \mu\text{V} / R_{\text{SENSE}} (\text{m}\Omega)$

The largest current that can be measured is:
 $150 \text{ mV} / R_{\text{SENSE}} (\text{m}\Omega)$

Example: a 20 milliohm sense resistor will measure from:

$$18.3 \text{ } \mu\text{V} / 20 \text{ m}\Omega = 0.915 \text{ mA}$$

(though will be recorded as zero if < **NullCurr**)

up to:

$$150 \text{ mV} / 20 \text{ m}\Omega = 7.5 \text{ Amps}$$

3.1.1.2 Current Calibration

In-circuit calibration of the current is done using the communication interface (SMBus/I²C or SPS) at time of manufacture to obtain optimal accuracy. A correction is calculated and stored for both offset and slope.


COCurr is the "Correction Offset for Current" which compensates for any offset error in current measurement. It is subtracted from the raw A/D measurement.

CFCurr is the "Correction Factor for Current" which compensates the A/D gain and any variances in the actual sense resistance over varying currents. It is multiplied against the raw A/D measurement.

CoCurr is the "Correction Offset Deviation" which is updated in real time by the A/D shorting the inputs and comparing any result to zero. This is added to **COD** and compensates for any offset that varies over time, such as temperature dependent offsets.

Figure 3-1 shows the relationship of the **COCurr** and **CFCurr** values.

FIGURE 3-1: COCurr AND CFCurr VALUE RELATIONSHIP

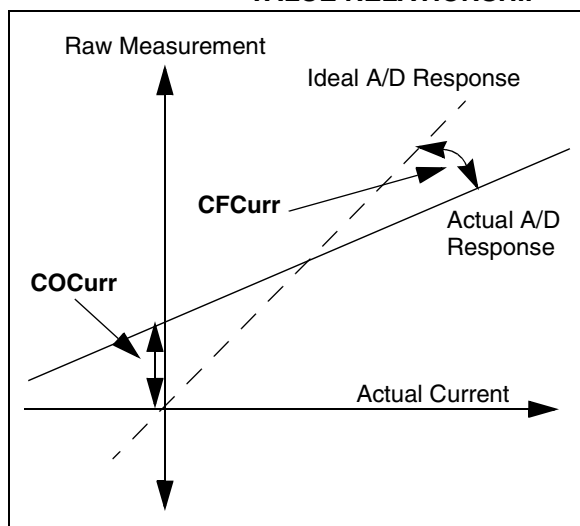

3.1.2 AUTO-OFFSET COMPENSATION

Accuracy drift is prevented using an automatic auto-zero self-calibration method which zeros the current measurement circuit periodically at a programmable rate. This feature can correct for drift in temperature during operation. The Auto-Offset Compensation circuit works internally by disconnecting the RS input and internally shorting it to GND to measure the zero input offset. Furthermore, the calibration factor, **COD**, contains the offset factor external to the IC, offset due to the circuit board, system, etc. **COD** is added to the internal offset calculated by the auto-offset cycle to determine the full offset.

3.1.3 VOLTAGE MEASUREMENTS

The A/D input channel for cell voltage measurement is the VC1 pin. Measurements are taken each measurement period when the A/D is active. The maximum voltage at the VC1 pin is 5.5V, but voltages above 4.5V are not suggested since this will saturate the A/D. The cell voltage is measured with an integration method to reduce any sudden spikes or fluctuations. The A/D uses a default of 11-bit plus sign resolution for these measurements.

The VC1 input circuit contains an internal resistive divider to reduce the external voltage input to a range that the internal A/D circuit can accommodate (300 mV maximum). The divider is 15 to 1 based on a maximum cell voltage of 4.5 volts. The voltage divider is only connected to ground when the actual voltage measurement is occurring.

CFVPack is the "Correction Factor for Pack Voltage" which compensates for any variance in the actual A/D response versus an ideal A/D response over varying voltage inputs. In-circuit calibration of the voltage is done at the time of manufacture to obtain accuracy in addition to high resolution. Cell voltage measurements can be accurate to within ± 20 mV.

3.1.4 TEMPERATURE MEASUREMENTS

The A/D can measure temperature from the internal temperature sensor or an external thermistor connected to the NTC pin. The A/D uses a default of 11-bit plus sign resolution for the temperature measurements.

A standard 10 kOhms at 25°C Negative-Temperature-Coefficient (NTC) device of the 103ETB type is suggested for the optional external thermistor. One leg of the NTC should be connected to the NTC pin and the other to ground.

A linearization algorithm is used to convert the voltage measurement seen at the NTC pin to a temperature value. The external thermistor should be placed as close as possible to the battery cells and should be isolated from any other sources of heat that may affect its operation.

Calibration of the temperature measurements involves a correction factor and an offset exactly like the current measurement. The internal temperature measurement makes use of correction factor, **CFTempI** and offset, **COTempl**, while the NTC pin for the optional external thermistor makes use of correction factor, **CFTempE**.

TABLE 3-1: A/D OPERATION PARAMETERS

| Parameter Name | # of Bytes | Units | Typical Value | Operational Description |
|--------------------|------------|---------------|---------------|--|
| NullCurr | 1 | mA | 3 | Zero zone control is built into the PS810 so that electrical noise doesn't actually drain the gas gauge, when in fact the current is zero. For this reason, current less than NullCurr mA in either direction will be measured as zero. |
| CFCurr | 2 | unsigned word | 6844 | Correction Factor for Current. Adjusts the scaling of the sense resistor current measurements. |
| COCurr | 1 | signed byte | 0 | Correction Offset for Current. This is the value the A/D reads when zero current is flowing through the sense resistor. |
| COD | 1 | signed byte | 0 | Correction Offset Deviation. Offset value for the auto-zero calibration of the current readings. |
| AOMInterval | 1 | op cycles | 60 | Interval of time between auto-offset calibrations. |
| AVGIScale | 1 | coded | b00100000 | Time period over which current is averaged to calculate average current: $I_{AVG} = I_{AVG} + (I - I_{AVG}) / (AVGIScale * 2)$. Note: Only Most Significant set bit is used, others are ignored. |
| CFVPack | 2 | integer | 2250 | Correction Factor for Pack Voltage. Adjusts the scaling of the VC1 pin measurement. |
| CFVCoin | 2 | integer | 2250 | Correction Factor for Coin Cell Measurement. Adjusts the scaling of the VCOIN pin measurement. |
| CFTempE | 2 | integer | 326 | Correction Factor for Temperature. Adjusts the scaling of temperature measured across an external thermistor at the NTC input pin. |
| CFTempl | 2 | integer | 2038 | Correction Factor for Temperature. Adjusts the scaling of temperature measured from the internal temperature sensor. |
| COTempl | 2 | signed word | 21298 | Correction Offset for Temperature. Used for temperature measurement using internal temperature sensor. |

3.2 Operational Modes

The PS810 operates on a continuous cycle, measuring current, voltage and temperature, then performing fuel gauge calculations. There are four power modes: Run mode, in which the measuring and calculating loop constantly repeats; Bus Inactive Low-Power mode, in which only self-discharge is calculated; Low-Voltage Sleep mode, in which there are no measurements and only wake-up circuitry is powered; and Shelf-Sleep mode, in which only communication line sensors are powered.

3.2.1 RUN MODE

Run mode is the highest power consuming mode. During Run mode, all measurements and calculations occur. Current, voltage and temperature measurements are each made sequentially. Run mode is active until voltage drops below the Sleep voltage, the bus goes inactive or the Shelf-Sleep command is executed.

3.2.2 BUS INACTIVE LOW-POWER MODE

The PS810 enters Low-Power mode when all of the following conditions are true:

- Current is zero (optional)
- The communication pins are low for at least 8 periods
- There is no communication attempt for at least 8 periods

To enter this mode, typically, there must be no load or charger present and no communication host. The pack is out of the system. In this mode, the PS810 will draw less current from the battery, approximately 25 μA and will only track self-discharge. Alternatively, if self-discharge tracking is not required, Ultra Low-Power mode can be used and the PS810 will draw less than 1 microamp.

3.2.3 LOW-VOLTAGE SLEEP MODE

Entry to Low-Voltage Sleep mode can only occur when the measured pack voltage at VC1 input is below a preset limit set by the parameter **SleepV_{Pack}** (in mV) and the current is zero (less than **NullCurr**). Sleep mode may be exited to Run mode when the voltage at VC1 is greater than the wake-up voltage, which is 3.2 volts, +/- 5%.

While in Sleep mode, no measurements occur and no calculations are made. The fuel gauge display is not operational, no communications are recognized and only a wake-up condition will permit an exit from Sleep mode. Sleep mode is one of the lowest power consuming modes and is used to conserve battery energy following a complete discharge.

There are two power levels that can be chosen for Low-Voltage Sleep mode. Low-Power mode draws approximately 20 μA and will wake-up automatically when the voltage rises above the wake-up voltage, which is a constant 3.2 volts, +/-5%. Ultra Low-Power mode draws less than 1 μA and requires an external source to drive the communication line high to wake-up, since the voltage wake-up comparator is powered down.

3.2.4 SHELF-SLEEP MODE

Shelf-Sleep mode can be entered by a battery data command on the communication bus for conserving energy while shipping battery packs. It can be exited only by an external source driving the communication data line high. This mode uses the Ultra Low-Power Sleep mode, resulting in current draw less than 1 microamp. This mode is entered by writing a password to SMBus command code, 0x43. A word write protocol is used to write the password, 0x5A7A.

TABLE 3-2: OPERATIONAL MODES

| Mode | Entry | Exit | Notes |
|------------------------|---|--|---|
| Run | Voltage > Wake-up voltage or data line driven high | Voltage less than SleepV_{Pack} , bus Idle or Shelf-Sleep command issued | Highest power consumption and accuracy. |
| Bus Inactive Low-Power | Current < NullCurr , communication lines low and no communication attempts | Activity on communication lines | Only self-discharge calculated. |
| Low-Voltage Sleep | VC(1) < SleepV_{Pack} , Current < NullCurr | Voltage > Wake-up voltage (Low-Power mode), Data line driven high (Ultra Low-Power mode) | No measurements made. |
| Shelf-Sleep | Can be entered by SMBus command | Data line driven high | No measurements made. |

TABLE 3-3: OPERATIONAL MODE PARAMETERS

| Parameter Name | # Bytes | Units | Typical Value | Operational Description |
|-----------------------|---------|----------|---------------|---|
| SleepVPack | 2 | mV | 2700 | The pack voltage at which the PS810 will enter Low-Voltage Sleep mode. |
| PwrConsumSleep | 1 | 1/256 mA | 7 | The average current that the battery module typically draws from the battery while in Low-Power mode. |
| PowerModes | 1 | bitmap | b00000011 | bit 4: 1 = Enable Bus Inactive Low-Power mode 0 = Disable Bus Inactive Low-Power mode bit 3: 1 = Use Ultra Low-Power mode as Bus Inactive Low-Power mode (no self-discharge calculations) 0 = Use Low-Power mode with self-discharge calculations as Bus Inactive Low-Power mode bit 2: 1 = Require NullCurr for Bus Inactive Low-Power mode and Low-Voltage Sleep mode 0 = No NullCurr requirement for Sleep modes bit 1: 1 = Use Ultra Low-Power mode as Low-Voltage Sleep mode 0 = Use Low-Power mode as Low-Voltage Sleep mode bit 0: 1 = Set remcap to zero when entering Low-Voltage Sleep mode 0 = Do not change remcap when entering Low-Voltage Sleep mode |

NOTES:

4.0 CAPACITY MONITORING

The PS810 uses the voltage, current and temperature data from the A/D converter, along with battery algorithms and cell models, to determine the state of the battery and to process the battery data instruction set.

By integrating measured current, monitoring voltages and temperature, adjusting for self-discharge and checking for End-Of-Charge and End-Of-Discharge conditions, the PS810 creates an accurate fuel gauge under all battery conditions.

4.1 Capacity Calculations

The PS810 calculates State-Of-Charge and fuel gauging functions using a 'coulomb counting' method, with additional inputs from battery voltage and temperature measurements. By continuously and accurately measuring the current into and out of the battery cells, along with accurate three-dimensional cell models, the PS810 is able to provide accurate predictions of SOC and run time.

The capacity calculations consider two separate states: charge or Capacity Increasing (CI) and discharge or Capacity Decreasing (CD). The CI state only occurs when a charge current larger than the parameter **NullCurr** value is measured. Otherwise, while at rest and/or while being discharged, the state is CD. Conditions must persist for at least **NChangeState** measurement periods for a valid state change between CD and CI. A minimum value of 2 is suggested for **NChangeState**.

Regardless of the CI or CD state, self-discharge is also calculated and subtracted from the integrated capacity values. Even when charging, there is still a self-discharge occurring in the battery. Self-discharge is modelled internally in the PS810 and is a factor of temperature and State-Of-Charge.

Since the PS810 electronics also drain current from the battery system, another parameter value allows even this minor drain to be included in the capacity calculations. The **PwrConsumption** value represents the drain of the IC and associated circuitry, including additional safety monitoring electronics, if present. A typical value of 31 represents the modules nominal power consumption, including PS810 typical consumption of 85 μ A.

The total capacity added or subtracted from the battery (change in charge) per measurement period is expressed by the following formula:

EQUATION 4-1:

$$\Delta\text{Charge} = \Sigma i \Delta t \text{ (the current integrated over time)}$$

- **PwrConsumption** * Δt
- Self-discharge percentage * FCC

The battery current will be precisely measured and integrated in order to calculate total charge removed from or added to the battery. Based on look-up table values, the capacity is adjusted relative to discharge rate and temperature.

4.2 Discharge Termination

Remaining capacity is determined based on the End-Of-Discharge (EOD) voltage point. The voltage level at which this point occurs will change depending on the temperature and discharge rate, since these factors affect the voltage curve and total capacity of the battery. The EOD voltage look-up table predicts the voltage point at which this EOD will be reached based on discharge rate and temperature.

The PS810 will monitor temperature and discharge rate continuously and update the EOD voltage from the look-up table in real time. When the voltage measured on the cell is below the EOD voltage for the duration of **EODRecheck** x periods (500 ms), a valid EOD has occurred. When a valid EOD has been reached, the FULLY_DISCHARGED bit in **BatteryStatus** will be set.

4.3 Capacity Relearn

To maintain accurate capacity prediction ability, the **FullCapacity** value is relearned on each discharge, which has reached a valid EOD after a previous valid fully charged EOC. If a partial charge occurs before reaching a valid EOD, then no relearn will occur. The difference between the old FCC and the new learned FCC will be limited to 256 mAh, except when cycles are less than **RLCycles**.

4.4 EOD Voltage Look-up Table

4.4.1 NEAR EMPTY RESERVE CAPACITY POINT

Available capacity in the battery varies with temperature and discharge rate. Since the remaining capacity will vary with temperature and discharge rate, a shutdown point, or End-Of-Discharge voltage, will also vary with temperature and discharge rate in order to leave enough reserve energy in the battery to allow a system to perform a shutdown procedure under all conditions.

The End-Of-Discharge voltage look-up table allows for entry of 64 different voltages as a function of 8 different temperature regions and 8 different discharge rate regions. Linear interpolation is used to determine the End-Of-Discharge voltage within the regions.

It is recommended to use the table in one of three ways:

1. Constant Shutdown Voltage

If the system does not require any reserve energy, then the same voltage can be used in all table entries. This should be the lowest voltage the battery can safely discharge to, or the lowest voltage that will support system operation, whichever is higher.

2. Constant Remaining Capacity

To give a warning of a certain amount of capacity left, the voltage that represents this capacity for a certain temperature and discharge rate is used in each entry. Plotting voltage versus capacity for different temperatures and discharge rates will identify these points

3. Constant Reserve Energy for System Shutdown

If the system needs a certain amount of energy for a system shutdown procedure that will require a certain discharge rate and a certain amount of time, then the discharge rate could change suddenly as soon as the End-Of-Discharge voltage point is hit. The voltage entries should then represent a remaining capacity that exists at the future discharge rate of the shutdown procedure.

Plotting voltage versus capacity at various temperatures and discharge rates, along with the voltage versus capacity at the shutdown procedure discharge rate, will identify the voltage point at which shutdown should occur assuming a switch from the first discharge rate to the shutdown discharge rate.

The residual capacity entries represent the difference between the ideal capacity of the battery and the capacity available at the specific temperature and discharge rate. To compensate remaining capacity, the residual capacity will be subtracted from remaining capacity. The compensation adjustment will happen in real time to avoid sudden drops or jumps. Every time the temperature decreases by one degree, a new interpolated value will be subtracted from the remaining capacity. Every time the temperature increases by one degree, the remaining capacity will be held constant until the discharged capacity equals the interpolated value that should have been added to the remaining capacity (to avoid capacity increases during discharge). This compensation will not begin until after the fully charged status is reset, allowing the remaining capacity to be 100% when the battery is full.

TABLE 4-1: V_EOD LOOK-UP TABLE EXAMPLE

| | <-10° | <0° | <10° | <20° | <30° | <40° | <50° | >50° |
|-------------------|---------|---------|---------|------|------|------|------|------|
| < 0.2C | 3200 mV | 3100 mV | 3050 mV | — | | | | |
| < 0.5C | 3125 mV | — | — | | | | | |
| < 0.8C | 3075 mV | — | | | | | | |
| < 1.1C | — | | | | | | | |
| < 1.4C | | | | | | | | |
| < 1.7C | | | | | | | | |
| < 2.0C | | | | | | | | |
| > 2.0C | | | | | | | | |
| Residual Capacity | 20% | 10% | 5% | 3% | 0% | 0% | 0% | 0% |

Table 4-1 is an example of the various voltage values that will signal the shutdown points as a function of temperature and discharge rate.

Table 4-2 shows the actual names of the values in the memory. Table 4-3 shows the value definitions.

TABLE 4-2: VALUE NAMES IN THE MEMORY

| | TEOD(1) | TEOD(2) | TEOD(3) | TEOD(4) | TEOD(5) | TEOD(6) | TEOD(7) | TEOD(7) |
|---------|----------|----------|----------|----------|----------|----------|----------|----------|
| CEOD(1) | VEOD1(1) | VEOD1(2) | VEOD1(3) | VEOD1(4) | VEOD1(5) | VEOD1(6) | VEOD1(7) | VEOD1(8) |
| CEOD(2) | VEOD2(1) | VEOD2(2) | VEOD2(3) | VEOD2(4) | VEOD2(5) | VEOD2(6) | VEOD2(7) | VEOD2(8) |
| CEOD(3) | VEOD3(1) | VEOD3(2) | VEOD3(3) | VEOD3(4) | VEOD3(5) | VEOD3(6) | VEOD3(7) | VEOD3(8) |
| CEOD(4) | VEOD4(1) | VEOD4(2) | VEOD4(3) | VEOD4(4) | VEOD4(5) | VEOD4(6) | VEOD4(7) | VEOD4(8) |
| CEOD(5) | VEOD5(1) | VEOD5(2) | VEOD5(3) | VEOD5(4) | VEOD5(5) | VEOD5(6) | VEOD5(7) | VEOD5(8) |
| CEOD(6) | VEOD6(1) | VEOD6(2) | VEOD6(3) | VEOD6(4) | VEOD6(5) | VEOD6(6) | VEOD6(7) | VEOD6(8) |
| CEOD(7) | VEOD7(1) | VEOD7(2) | VEOD7(3) | VEOD7(4) | VEOD7(5) | VEOD7(6) | VEOD7(7) | VEOD7(8) |
| CEOD(7) | VEOD8(1) | VEOD8(2) | VEOD8(3) | VEOD8(4) | VEOD8(5) | VEOD8(6) | VEOD8(7) | VEOD8(8) |
| | FCCP(1) | FCCP(2) | FCCP(3) | FCCP(4) | FCCP(5) | FCCP(6) | FCCP(7) | FCCP(8) |

4.4.2 COMPENSATING FOR CELL AGING

As lithium ion cells age, the voltage versus capacity curves become depressed. That is, the battery cell can no longer deliver as high of a voltage as it once could for a given capacity. The overall capacity loss is adjusted for by the relearning of full charge capacity. The End-Of-Discharge voltage points, which are voltage points at which a certain capacity remains, are adjusted using a scaling factor.

The End-Of-Discharge voltage points will become lower with each cycle. A cycle is defined as a total amount of discharge capacity equal to full charge capacity. Cycle count is used to determine the age of the cells and the

parameter, **AgeFactor**, determines the number of millivolts that the voltage becomes depressed per cycle. **AgeFactor** is subtracted from the End-Of-Discharge voltage for every cycle the battery has been through. **AgeFactor** units are in eighths of millivolts. Thus, with the effect of aging, the actual End-Of-Discharge voltage becomes:

EQUATION 4-2:

$$VEOD_{aged} = VEOD - (CycleCount * AgeFactor * 0.125) \text{ mV}$$

TABLE 4-3: CAPACITY MONITORING PARAMETERS

| Parameter Name | # of Bytes | Units | Typical Value | Operational Description |
|-----------------------|------------|----------|---------------|--|
| DesignCapacity | 2 | mAh | 2200 | Battery data value for <u>DesignCapacity</u> . This is the first capacity loaded into the <u>FullChargeCapacity</u> upon power-up. |
| InitialCap | 2 | mAh | 440 | The initial capacity of the battery. When the PS810 is first powered up and initialized, before a learning cycle takes place to learn the full capacity, the full capacity will take the value programmed into InitialCap to compute relative State-Of-Charge percentage. |
| NullCurr | 1 | mA | 3 | A zero zone control is built into the PS810 so that any electrical noise doesn't actually drain the gas gauge, when in fact, the current is zero. For this reason, current less than NullCurr mA in either direction will be measured as zero. |
| PwrConsumption | 1 | 1/256 mA | 31 | Current consumption of the battery module. This is the average current that the battery module typically draws from the battery (255 = 1 mA). |
| ClrFullyChrg | 1 | % | 90 | Reset FULLY_CHARGED bit at this level, 100 = 100%. When discharging begins, the FULLY_CHARGED bit must remain set until the cell voltages are below EOCVolt , so that a small current will not trigger a false End-Of-Charge trigger. Thus, ClrFullyChrg is set at about 90%. FULLY_CHARGED bit will be on until the battery has discharged to less than 90%. |
| ConfigCAP | 1 | bitmap | 11100100 | <p>bit 7: Compensate remaining capacity – the displayed remaining capacity actually equals FCC minus capacity used minus residual capacity.</p> <p>bit 6: Remaining capacity decrease only – when compensating, if temperature changed causing a decrease in residual capacity, do not let remaining capacity rise to reflect this. Instead, hold it steady until discharge catches up.</p> <p>bit 5: Only compensate on discharge.</p> <p>bit 4: Compensate on null current.</p> <p>bit 3: Unused.</p> <p>bit 2: Set capacity to positive immediately upon charging. If discharged below zero, this allows capacity to count up immediately upon charging.</p> <p>bit 1: Learn unconditionally – relearn FCC under any conditions. Typically used for testing only.</p> <p>bit 0: Disable self-discharge.</p> |

TABLE 4-3: CAPACITY MONITORING PARAMETERS (CONTINUED)

| Parameter Name | # of Bytes | Units | Typical Value | Operational Description | | | | | | | | | | | | | | | | | | |
|-----------------|----------------------------------|--------------------------------|-----------------------------|--|-----|----------|---|--------|---|--------|---|---------------------|---|----------------------------------|---|--------|---|---------------------|---|--------|---|--------|
| FLAGS1 | 1 | bitmap | b00100110 | Bit coded as follows: <table><tr><th>Bit</th><th>Function</th></tr><tr><td>7</td><td>Unused</td></tr><tr><td>6</td><td>Unused</td></tr><tr><td>5</td><td>Int/Ext temperature</td></tr><tr><td>4</td><td>Disable Sleep in main Idle mode.</td></tr><tr><td>3</td><td>Unused</td></tr><tr><td>2</td><td>Disable safety GPIO</td></tr><tr><td>1</td><td>Unused</td></tr><tr><td>0</td><td>Unused</td></tr></table> | Bit | Function | 7 | Unused | 6 | Unused | 5 | Int/Ext temperature | 4 | Disable Sleep in main Idle mode. | 3 | Unused | 2 | Disable safety GPIO | 1 | Unused | 0 | Unused |
| Bit | Function | | | | | | | | | | | | | | | | | | | | | |
| 7 | Unused | | | | | | | | | | | | | | | | | | | | | |
| 6 | Unused | | | | | | | | | | | | | | | | | | | | | |
| 5 | Int/Ext temperature | | | | | | | | | | | | | | | | | | | | | |
| 4 | Disable Sleep in main Idle mode. | | | | | | | | | | | | | | | | | | | | | |
| 3 | Unused | | | | | | | | | | | | | | | | | | | | | |
| 2 | Disable safety GPIO | | | | | | | | | | | | | | | | | | | | | |
| 1 | Unused | | | | | | | | | | | | | | | | | | | | | |
| 0 | Unused | | | | | | | | | | | | | | | | | | | | | |
| RemCapDelta | 1 | 1/4 mAh | 2 | Maximum change in remaining capacity per measurement period. | | | | | | | | | | | | | | | | | | |
| EODRecheck | 1 | integer | 8 | Recheck period for EOD. Voltage must be below VEOD for this many measurement periods. | | | | | | | | | | | | | | | | | | |
| ClrFullyDischrg | 1 | % | 10 | Reset FULLY_DISCHARGED bit, 100 = 100%. Once fully discharged bit is set, it will stay set until capacity rises above this value, typically 10%. | | | | | | | | | | | | | | | | | | |
| EODCap | 2 | mAh | 100 | Capacity remaining in battery at EOD. Remaining capacity is loaded with EODCap at EOD. | | | | | | | | | | | | | | | | | | |
| FullCapacity | 2 | mAh | 2200 | Learned value of battery capacity. Used for battery data value of <u>FullChargeCapacity</u> . This is a learned parameter, which is the equivalent of all charge counted from fully charged to fully discharged, including self-discharge and error terms. This is reset after a learning cycle and used for remaining capacity and relative State-Of-Charge calculations. | | | | | | | | | | | | | | | | | | |
| RLCycles | 1 | integer | 2 | The number of initial cycles without a relearn limit. Normally, full charge capacity will change by a maximum of 256 mAh when relearned. Since FullCapacity can vary greatly with the first learning cycle, the initial capacity may not be correct; thus, this should be set to at least 2. | | | | | | | | | | | | | | | | | | |
| TEOD | 7 | (°Celsius * 10 + 200)/4 | 5, 20, 35, 50, 80, 113, 150 | EOD temperature boundaries – 8 increasing values of temperature coded as: TEODx = (°Celsius * 10 + 200)/4. | | | | | | | | | | | | | | | | | | |
| CEOD | 7 | 1/64 C | 19, 32, 48, 64, 77, 90, 109 | EOD C-rate boundaries – 8 increasing values of C-rates coded as: CEODx = C-rate * 64. | | | | | | | | | | | | | | | | | | |
| FCCP | 8 | 255 = 100% | 50, 25, 12, 8, 0, 0, 0, 0 | Unusable residual capacity before save to disk, corresponding to temperature, 255 = 100%. | | | | | | | | | | | | | | | | | | |
| VEODOffset | 2 | mV | 2700 | Baseline for VEOD formula. | | | | | | | | | | | | | | | | | | |
| VEOD | 64 | voltage – VEODOffset /4 | 75 | End-Of-Discharge voltage, voltage = VEODOffset + 4 * VEOD . Cell voltage at which save to disk is signaled. | | | | | | | | | | | | | | | | | | |
| AgeFactor | 1 | 0.125 mV | 1 | Scale factor for EOD voltages due to aging (in units of .125 mV), VEOD_{aged} = VEOD – (CycleCount * .125 * AgeFactor). | | | | | | | | | | | | | | | | | | |
| VEODCoin | 2 | mV | 2500 | Voltage at which coin cell is determined to be empty. | | | | | | | | | | | | | | | | | | |

NOTES:

5.0 CHARGE CONTROL

5.1 Full Charge Detection Methods

For a typical lithium ion constant-current/constant-voltage charge system, the PS810 will monitor the taper current that enters the battery. Once the battery has reached the final voltage level of the charger, when VC1 is greater than **EOCVolt**, taper monitoring will begin. Once the taper current falls between **TaperCRate** and **TaperLow**, indicating that the battery is full, the End-Of-Charge (EOC) will be triggered. For pulse charging, the average current will be monitored. When average current falls below **EOCCurAvg**, the EOC will be triggered. So that a sudden drop or removal of charge current doesn't trigger a false EOC when using taper current, the current and the average current must be within **StableCurr** of each other.

Thus, the conditions to trigger EOC are:

1. Cell Voltage > **EOCVolt** and
2. **TaperCRate** > Current > **TaperLow** and
3. Average Current – Current < **StableCurr**

For pulse charging, replace condition 2 with Average Current < **EOCCurAvg** and remove condition 3.

When a valid, fully charged EOC condition is detected, the following actions occur:

- The FULLY_CHARGED status bit in **BatteryStatus** is set to '1' to indicate a full condition. (This will remain set until **RelativeStateOfCharge** drops below the **ClrFullyChrg** value in memory.)
- Remaining capacity is set to FCC and thus, **RelativeStateOfCharge** is set to 100%.

5.2 Temperature Algorithms

The PS810 provides a temperature alarm set point.

HighTempAI: When the measured temperature is greater than **HighTempAI**, the OVER_TEMP_ALARM bit is set.

TABLE 5-1: CHARGE CONTROL PARAMETERS

| Parameter Name | # Bytes | Units | Typical Value | Operational Description | | | | | | | | | | | | | | | | | | |
|----------------|--|-------------------------|---------------|--|-----|----------|---|---------------------|---|--------|---|--------------------------------|---|------------------------------|---|------------------------|---|---|---|--|---|--------------------------|
| HighTempAI | 1 | (°Celsius * 10 + 200)/4 | 200 | OVER_TEMP_ALARM threshold bit in <u>AlarmWarning</u> register, coded value = (°Celsius * 10 + 200)/4. When the temperature exceeds HighTempAI , the OVER_TEMP_ALARM becomes active. | | | | | | | | | | | | | | | | | | |
| EOCCurAvg | 2 | mA | 200 | EOC trigger for pulse charging. If the average current during pulse charging has dropped below the EOCCurAvg threshold for a pass count equal to the parameter value, EOCRecheck , the End-Of-Charge state will be reached. | | | | | | | | | | | | | | | | | | |
| EOCRecheck | 1 | integer | 6 | Number of checks before EOC trigger. The End-Of-Charge conditions must remain for at least this number of periods, before being considered true, to help filter out false full conditions due to spikes. | | | | | | | | | | | | | | | | | | |
| EOCVolt | 2 | mV | 4150 | EOC trigger cell voltage. When a cell reaches this voltage, the End-Of-Charge determination will start monitoring the current to determine when the battery is full. When the current is in the proper range and the cell voltage is greater than EOCVolt , then FULLY_CHARGED bit in <u>BatteryStatus</u> will be set. | | | | | | | | | | | | | | | | | | |
| StableCurr | 1 | mA | 50 | EOC trigger current deviation level. In order to prevent current spikes from causing a premature taper current trigger, the average current and the instantaneous current must be within StableCurr of each other. | | | | | | | | | | | | | | | | | | |
| TaperCRate | 1 | 1/64 C | 3 | Upper limit EOC taper current based on temperature, 64 = 1°C. | | | | | | | | | | | | | | | | | | |
| TaperLow | 1 | 1/64 C | 1 | Lower limit EOC taper current, 64 = 1°C. | | | | | | | | | | | | | | | | | | |
| ConfigEOCD | 1 | bitmap | 10011111 | Bit coded as follows: <table><tr><th>Bit</th><th>Function</th></tr><tr><td>7</td><td>Limit remcap to FCC</td></tr><tr><td>6</td><td>Unused</td></tr><tr><td>5</td><td>Trigger EOC on average current</td></tr><tr><td>4</td><td>Trigger EOC on taper current</td></tr><tr><td>3</td><td>Disallow multiple EODs</td></tr><tr><td>2</td><td>Limit capacity to EODCap until EOD</td></tr><tr><td>1</td><td>Set capacity to residual capacity at VEOD</td></tr><tr><td>0</td><td>Learn FCC at VEOD</td></tr></table> | Bit | Function | 7 | Limit remcap to FCC | 6 | Unused | 5 | Trigger EOC on average current | 4 | Trigger EOC on taper current | 3 | Disallow multiple EODs | 2 | Limit capacity to EODCap until EOD | 1 | Set capacity to residual capacity at VEOD | 0 | Learn FCC at VEOD |
| Bit | Function | | | | | | | | | | | | | | | | | | | | | |
| 7 | Limit remcap to FCC | | | | | | | | | | | | | | | | | | | | | |
| 6 | Unused | | | | | | | | | | | | | | | | | | | | | |
| 5 | Trigger EOC on average current | | | | | | | | | | | | | | | | | | | | | |
| 4 | Trigger EOC on taper current | | | | | | | | | | | | | | | | | | | | | |
| 3 | Disallow multiple EODs | | | | | | | | | | | | | | | | | | | | | |
| 2 | Limit capacity to EODCap until EOD | | | | | | | | | | | | | | | | | | | | | |
| 1 | Set capacity to residual capacity at VEOD | | | | | | | | | | | | | | | | | | | | | |
| 0 | Learn FCC at VEOD | | | | | | | | | | | | | | | | | | | | | |

NOTES:

6.0 GPIO CONFIGURATION

6.1 Configuring Inputs and Outputs

GPIOs can be set up to act as inputs or outputs that are based on conditions involving battery data parameters, or GPIO levels, compared to constants. This powerful programming model allows for customizing GPIO to set on any possible fuel gauge conditions and reset on any other possible fuel gauge conditions in any groupings.

Four parameters define the global behavior of each pin as follows:

- **GPIOSTATE:** defines the state, high or low, the GPIO is in during initialization of the fuel gauge.
- **GPIODIRECTION:** Defines whether the GPIO is an input or an output.
- **GPIOCONFIG:** enables analog functions NTC and VCOIN vs. GPIO (high byte), enables pull-up or pull-down on inputs (low byte).
- **GPIOPOLARITY:** defines active and inactive polarities. All GPIOs will drive high to VBAT, except for IO0 and IO3, which will drive high to VBAT – 1 volt. All GPIOs have pull-ups and pull-downs when configured as inputs, except IO0 and IO3, which only have pull-downs. IO0 is only available in SPS mode and IO3 is only available when not using VCOIN.

TABLE 6-1: GPIO PARAMETERS

| Name | Definition | Bit Description |
|-----------------------------|--------------------------------|--|
| GPIOSTATE | Reset State of GPIO | Bit number corresponds to GPIO number bit setting: bit (x) = 1: GPIO defaults to high bit (x) = 0: GPIO defaults to low |
| GPIODIRECTION | GPIO Input or Output | Bit number corresponds to GPIO number bit setting: bit (x) = 1: GPIO is an input bit (x) = 0: GPIO is an output |
| GPIOCONFIG High Byte | Analog or GPIO | bit (5) = 1: Pin 1 is NTC thermistor input bit (5) = 0: Pin 1 is GPIO bit (4) = 1: Pin 2 is VCOIN coin cell input bit (4) = 0: Pin 2 is GPIO bit (0) = 1: Disable pull-up and pull-down resistors on inputs bit (0) = 0: Enable pull-up and pull-down resistors on inputs |
| GPIOCONFIG Low Byte | Pull-up or Pull-down on Inputs | If GPIO is configured as input, then (bit number corresponds to GPIO number bit setting): bit (x) = 1: GPIO is pulled down bit (x) = 0: GPIO is pulled up |
| GPIOPOLARITY | Default and Active Polarity | Bit number corresponds to GPIO number bit setting: bit (x) = 1: GPIO is default high, active-low bit (x) = 0: GPIO is default low, active-high |

TABLE 6-2: PARAMETER NUMBER/GPIO NUMBER CORRESPONDENCE

| Parameter Bit # | GPIO # |
|-----------------|--------|
| 0 | 0 |
| 1 | — |
| 2 | 6 |
| 3 | 5 |
| 4 | 4 |
| 5 | 3 |
| 6 | 2 |
| 7 | 1 |

6.2 Configuring Output Functions

Powerful and flexible programming protocols allow GPIO configured as outputs to be defined with complex functions based on battery data. Virtually all information about the battery can be used in a multiple level trigger function or Reset function. This programming is accomplished using Microchip programming development tool, PowerTool™ 800.

GPIO output functions can be based on the following information functions:

- All battery data functions, such as voltage, current, battery status, etc.
- The high or low level of any other GPIO
- The miscellaneous flags byte which contains the following information:
 - bit 0: Charge started
 - bit 1: Discharge started
 - bit 2: Charge increasing
 - bit 3: POR detected
 - bit 4: Unused
 - bit 5: Wake from Sleep
 - bit 6: In Low-Voltage Sleep mode
 - bit 7: In Shelf-Sleep mode
 - bit 8: In Bus Sleep mode

Once an argument is selected from above, an operator is selected to compare it to a constant. The operators are >, <, =, AND and NOR. The latter two are used to compare individual bits in a bit map. For example, AND a bit map against the operand 00000000 00000010 will be true if bit one is a '1'. NOR a bit map against the operand 11111111 11111101 will be true if bit one is a '0'.

An example of a condition is :

Voltage < 3200

This condition is true if the battery data of voltage is less than 3200 mV.

Condition groups can be created by ANDing and ORing individual conditions together. An example condition group is:

(Voltage < 3200) AND (Current > 100) OR
(Temperature > 60) AND (Current > 200)

Because of precedence the equation would be interpreted:

((Voltage < 3200) AND (Current > 100)) OR
((Temperature > 60) AND (Current > 200))

This entire condition group can be programmed to activate a single GPIO. A Reset condition can then be assigned to reset the GPIO if it had triggered as a result of its trigger condition group.

Example Reset condition group:

(Voltage > 3200) OR (Current = 0)

Furthermore, multiple trigger condition groups, each with their own individual Reset condition groups, can be assigned to a single GPIO. This is all accomplished by programming with PowerTool™ 800.

7.0 KEELOQ® SECURITY

The PS810 will employ KEELOQ security coding which can ensure only proprietary batteries can be used with the host device. Since the batteries are tailored to the system requirements, an incompatible battery may cause poor performance or even non-performance. A verification challenge will be issued to the battery from the host. The battery will encrypt the challenge data and return it to the host. The host will encrypt the challenge data also and verify that the battery's encrypted response matches. For technical KEELOQ specifications, see Microchip application note AN827, *"Using KEELOQ® to Validate Subsystem Compatibility"* (DS00827).

The host issues a "challenge" (i.e., a 32-bit random number) by writing it to the KEELOQ bus function on the PS810. The PS810 firmware contains the KEELOQ encryption algorithm and a 64-bit key. The PS810 runs the 32-bit challenge data along with its 64-bit key through the KEELOQ decrypt algorithm to create a 32-bit response. The host then reads the response from the PS810 using the KEELOQ bus function. The host verifies the response by also running the challenge through the decrypt algorithm using the same key. If the results are the same, authentication is successful.

When a challenge is written to the battery, it takes time to generate the encrypted response. Battery status bit 1 is set to one ('1') when a challenge is written and reset to zero ('0') when the response is ready and may be read from the PS810.

The security of authentication relies not on the secrecy of the algorithm, but on secrecy and management of the key. The key, the function that stores the key and the KEELOQ decrypt algorithm that uses it are located in memory that is protected from reads and writes. This prevents the key from being read except by code in the boot block and prevents the boot block from being altered without being first erased. The key is stored in an encoded form and during normal execution, never appears in its entirety in RAM.

A battery pack's key is stored at time of manufacture. Each pack can have a unique key, further improving security, which is a function of a master key and the pack's serial number. A host would use the master key, the pack serial number and a key generation algorithm to determine an individual pack's key.

PS810

NOTES:

8.0 COMMUNICATION

8.1 SMBus/I²C Battery Data Interface


The PS810 uses a two-pin communication protocol compatible with the System Management Bus (SMBus) and the Inter IC Communication (I²C™) protocols to communicate to the host. One pin is the clock and one is the data. The SMBus/I²C port responds to all battery data commands listed in Table 8-1. To receive information about the battery, the host sends the appropriate commands to the SMBus/I²C port. The battery data command set is summarized in Table 8-1.

The PS810 SMBus/I²C communications port is fully compliant with the System Management Bus specification, version 1.1 and supports all previous and new

requirements, including bus time-outs and PEC (CRC-8) error checking. The SMBus port serves as a slave for both read and write functions. SMBus slave protocols supported include Read Word, Write Word, Read Block and Write Block, all with or without PEC (CRC-8) error correction.

The SMBus protocol used for PS810 is for the host to master the SMBus. PS810 operates only in Slave mode. The master will send the PS810 device's SMBus write address (0x16 for write) followed by the command code. The host will then send the PS810 device's read address (0x17 for read) and await data. As a response to the read request, the PS810 will send all the data bytes required.

FIGURE 8-1: SMBus TIMING

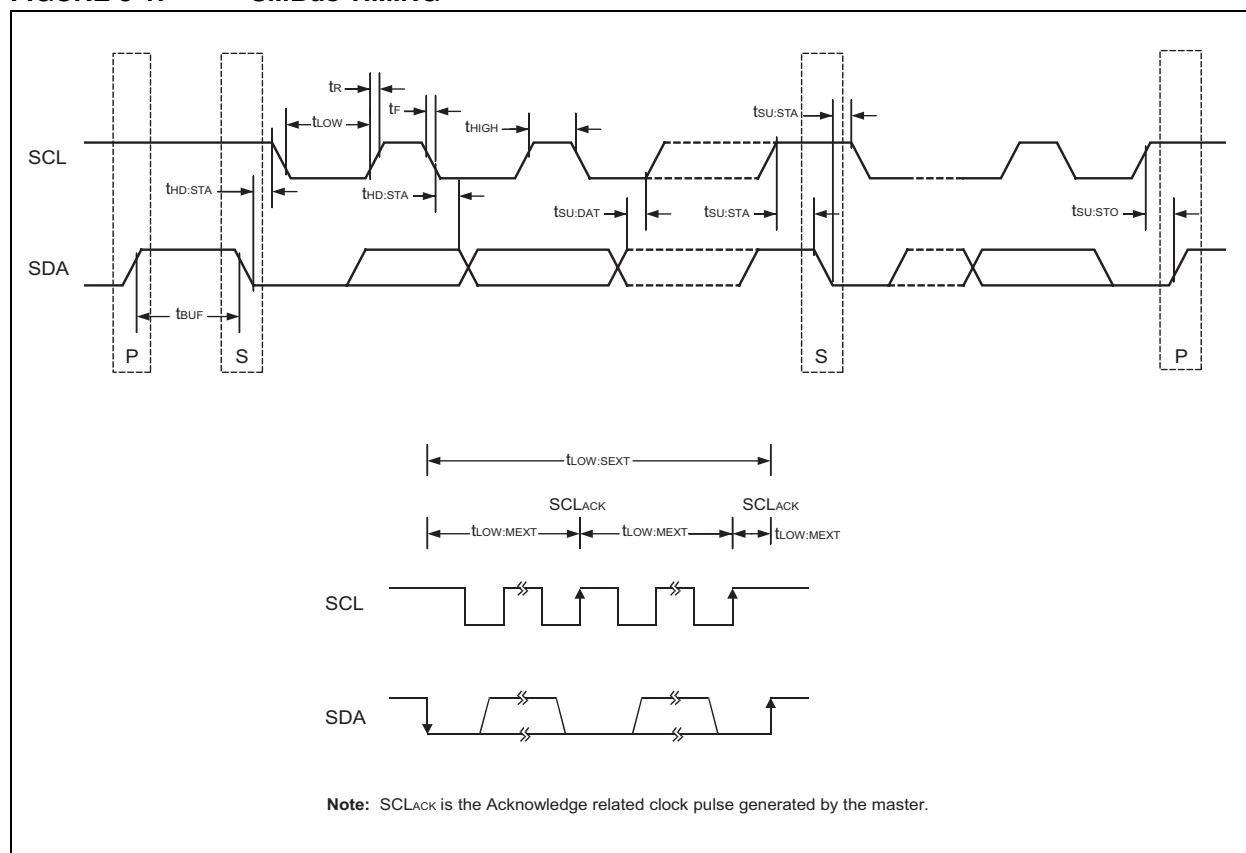

8.2 SPS Single Pin Serial Battery Data Interface

The PS810 can also communicate using one pin, the SDA pin with the Single Pin Serial protocol (SPS). The single pin serial interface communication is an asynchronous return-to-one protocol. The signal requires an external pull-up resistor. The timing of the driven low pulses defines the communication.

A Break cycle starts a command from the host to the battery. The command is eight bits long. After this, eight data bits are either sent to the battery or received from the battery. The Least Significant bits are sent first.

The Break cycle is defined by a low period for a time equal to or greater than t_B , then returned high for a time greater than or equal to t_{BR} .


The data bits consist of three sections each:

1. Start: a logic low for at least time t_{STR} .
2. Data: data high or low valid by time t_{DS} and held until time $t_{DH/V}$.
3. Stop: logic high by time t_{SSU} and held until time T_{CYC} .

The SPS protocol only allows one byte to be read per command code. Thus, commands that receive two-byte pieces of data must be executed one byte at a time. To get a two-byte data, the command code for the high byte must be sent, the high data byte received and then, the command code for the low data byte must be sent to receive the low data byte.

Furthermore, it is possible that the piece of data has changed in between the time it took to get the high byte and the low byte if the host system is communicating slowly. Therefore, it is recommended to always verify the data hasn't changed. This is done by reading the high byte, then reading the low byte, then rereading the high byte and comparing it to the first read to make sure it is the same. If it is not the same, then the low byte can be reread and matched with the new high byte.

FIGURE 8-2: SINGLE PIN SERIAL TIMING

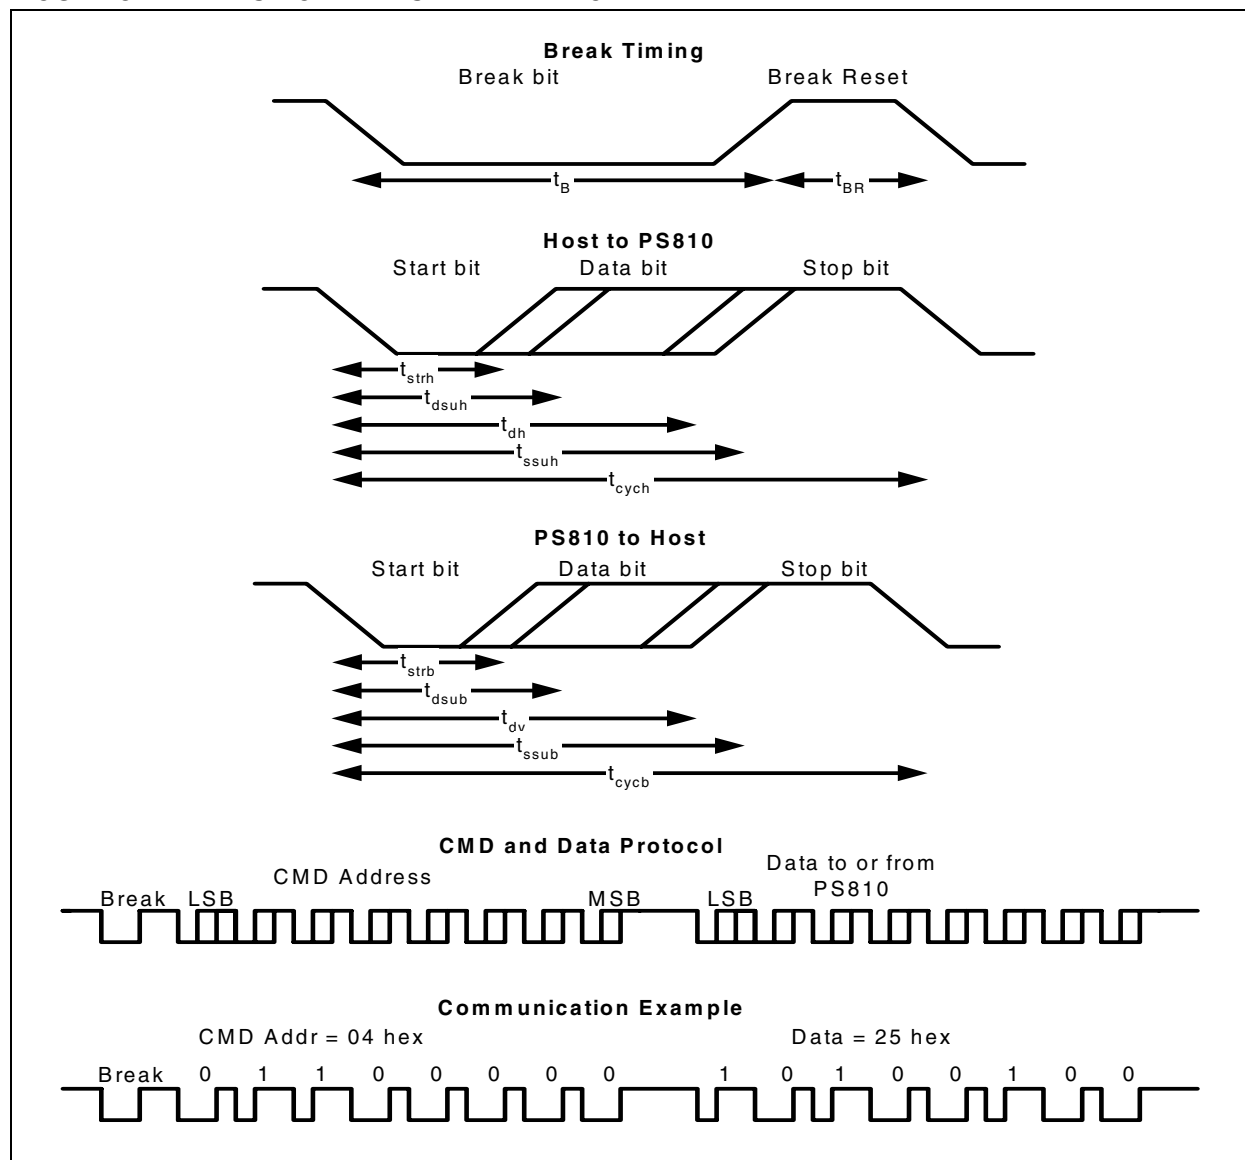

8.3 Battery Data Function Description

The following subsections document the detailed operation of all of the individual battery data commands.

TABLE 8-1: PS810 SMBus DATA FUNCTIONS

| Battery Data Function Name | SMBus Command Code | Access | Parameter Reference | Units |
|------------------------------|--------------------|------------|-----------------------|--------------|
| <u>Temperature</u> | 0x00 | Read | | 0.1° Celsius |
| <u>Voltage</u> | 0x01 | Read | | mV |
| <u>Current</u> | 0x02 | Read | | mA |
| <u>AverageCurrent</u> | 0x03 | Read | | mA |
| <u>RelativeStateOfCharge</u> | 0x04 | Read | | % |
| <u>AbsoluteStateOfCharge</u> | 0x05 | Read | | % |
| <u>RemainingCapacity</u> | 0x06 | Read | | mAh |
| <u>FullChargeCapacity</u> | 0x07 | Read | | mAh |
| <u>AverageTimeToEmpty</u> | 0x08 | Read | | Minutes |
| <u>BatteryStatus</u> | 0x09 | Read | BatStatus | Bit Code |
| <u>CycleCount</u> | 0x0A | Read | Cycles | Integer |
| <u>DesignCapacity</u> | 0x0B | Read | DesignCapacity | mAh |
| <u>CoinVoltage</u> | 0x0C | Read | | mV |
| <u>ManufactureDate</u> | 0x0D | Read | Date | Coded |
| <u>SerialNumber</u> | 0x0E | Read | SerialNumber | Hex Word |
| <u>ManufacturerID</u> | 0x0F | Read | MFGID | Hex Word |
| <u>DeviceID</u> | 0x10 | Read | DeviceID | Hex Word |
| <u>KEELOQ</u> | 0x17 | Read/Write | | Block Data |
| <u>UserData</u> | 0x16 | Read/Write | | |

TABLE 8-2: PS810 SINGLE PIN SERIAL DATA FUNCTIONS

| Battery Data Function Name | SPS Command Code | Access | Parameter Reference | Units |
|---------------------------------------|------------------|------------|-----------------------|-----------------|
| <u>Temperature</u> (low byte) | 0x00 | Read | | 0.1° Celsius |
| <u>Temperature</u> (high byte) | 0x01 | Read | | |
| <u>Voltage</u> (low byte) | 0x02 | Read | | mV |
| <u>Voltage</u> (high byte) | 0x03 | Read | | |
| <u>Current</u> (low byte) | 0x04 | Read | | mA |
| <u>Current</u> (high byte) | 0x05 | Read | | |
| <u>AverageCurrent</u> (low byte) | 0x06 | Read | | mA |
| <u>AverageCurrent</u> (high byte) | 0x07 | Read | | |
| <u>RelativeStateOfCharge</u> | 0x08 | Read | | % |
| reserved | 0x09 | — | | |
| <u>AbsoluteStateOfCharge</u> | 0x0A | Read | | % |
| reserved | 0x0B | — | | |
| <u>RemainingCapacity</u> (low byte) | 0x0C | Read | | mAh |
| <u>RemainingCapacity</u> (high byte) | 0x0D | Read | | |
| <u>FullChargeCapacity</u> (low byte) | 0x0E | Read | | mAh |
| <u>FullChargeCapacity</u> (high byte) | 0x0F | Read | | |
| <u>AverageTimeToEmpty</u> (low byte) | 0x10 | Read | | MInutes |
| <u>AverageTimeToEmpty</u> (high byte) | 0x11 | Read | | |
| <u>BatteryStatus</u> | 0x12 | Read | BatStatus | Bit Code |
| reserved | 0x13 | — | | |
| <u>CycleCount</u> (low byte) | 0x14 | Read | Cycles | Integer |
| <u>CycleCount</u> (high byte) | 0x15 | Read | Cycles | |
| <u>DesignCapacity</u> (low byte) | 0x16 | Read | DesignCapacity | mAh |
| <u>DesignCapacity</u> (high byte) | 0x17 | Read | DesignCapacity | |
| <u>CoinVoltage</u> (low byte) | 0x18 | Read | DesignVPack | mV |
| <u>CoinVoltage</u> (high byte) | 0x19 | Read | DesignVPack | |
| <u>ManufactureDate</u> (low byte) | 0x1A | Read | Date | Coded |
| <u>ManufactureDate</u> (high byte) | 0x1B | Read | Date | |
| <u>SerialNumber</u> (low byte) | 0x1C | Read | SerialNumber | Hex Word |
| <u>SerialNumber</u> (high byte) | 0x1D | Read | SerialNumber | |
| <u>ManufacturerID</u> (low byte) | 0x1E | Read | MFGID | Hex Word |
| <u>ManufacturerID</u> (high byte) | 0x1F | Read | MFGID | |
| <u>DeviceID</u> (low byte) | 0x20 | Read | DeviceID | Hex Word |
| <u>DeviceID</u> (high byte) | 0x21 | Read | DeviceID | |
| <u>KEELOQ</u> (low byte) | 0x28 | Read/Write | MFGData | Hex Double Word |
| <u>KEELOQ</u> (second byte) | 0x29 | Read/Write | MFGData | |
| <u>KEELOQ</u> (third byte) | 0x2A | Read/Write | MFGData | |
| <u>KEELOQ</u> (high byte) | 0x2B | Read/Write | MFGData | |

8.3.1 Temperature (0.1° CELSIUS)

Returns the cell pack's internal temperature.

8.3.2 Voltage (mV)

Returns the pack voltage.

8.3.3 Current (mA)

Returns the current being supplied (or accepted) through the battery's terminals.

8.3.4 AverageCurrent (mA)

Returns a rolling average of the current being supplied (or accepted) through the battery's terminals. The time period over which current is averaged is adjustable.

8.3.5 RelativeStateOfCharge (%)

Returns the predicted remaining battery capacity expressed as a percentage of FullChargeCapacity.

8.3.6 AbsoluteStateOfCharge (%)

Returns the predicted remaining battery capacity expressed as a percentage of DesignCapacity. Note that AbsoluteStateOfCharge can return values greater than 100%.

8.3.7 RemainingCapacity (mAh)

Returns the predicted remaining battery capacity. The RemainingCapacity value is expressed as: Current x Time.

8.3.8 FullChargeCapacity (mAh)

Returns the predicted pack capacity when it is fully charged.

8.3.9 AverageTimeToEmpty (MINUTES)

Returns a rolling average of the predicted remaining battery life. The time period over which it is averaged is the same as AverageCurrent.

8.3.10 BatteryStatus (FLAGS)

Returns the Smart Battery's status word. The BatteryStatus function is used by the power management system to get alarm and status bits.

Battery Status Bits:

- bit 7: INITIALIZED
- bit 6: DISCHARGING
- bit 5: FULLY_CHARGED
- bit 4: FULLY_DISCHARGED
- bit 3: OVER_TEMP_ALARM
- bit 2: Unused
- bit 1: KEELOQ response processing
- bit 0: COIN_CELL_EMPTY

8.3.11 CycleCount (INTEGER)

CycleCount is updated to keep track of the total usage of the battery. CycleCount is increased whenever an amount of charge has been removed from the battery equivalent to the full capacity.

8.3.12 DesignCapacity (mAh)

Returns the theoretical capacity of a new pack.

8.3.13 CoinCellVoltage (mV)

Returns the voltage of the coin cell.

8.3.14 ManufactureDate (CODE)

This function returns the date the pack was manufactured in a coded integer. The date is packed in the following fashion: (year-1980) * 512 + month * 32 + day.

8.3.15 SerialNumber (HEX WORD)

This function is used to return a serial number. This number, when combined with the ManufacturerID, the DeviceID and the ManufactureDate, will uniquely identify the battery.

8.3.16 ManufacturerID (HEX WORD)

This function returns a hex word containing the battery manufacturer's ID.

8.3.17 DeviceID (HEX WORD)

This function returns a hex word that contains the battery's ID.

8.3.18 KEELOQ (BLOCK DATA)

This function is used for identification of the battery to the system. The host system writes a 4-byte challenge of random data to the battery. The PS810 runs the challenge data through the KEELOQ algorithm using a safe key entered at time of manufacture. (An option is to have this key based on a manufacturer's key and the serial number.) The host then reads the 4-byte response and compares it with an internally generated response using the same key. The responses must match for validation.

8.3.19 UserData (BLOCK DATA)

Reads 1 to 32 bytes from the UserData block in Flash. The number of bytes read is determined by parameter **F_USER_DATA_LENGTH**. This is a general purpose storage of any information a user may want to read.

| |
|--|
| Note: This command is only available in SMBus mode, not SPS mode. |
|--|

9.0 PARAMETER SETUP

This section documents all of the programmable parameters that are resident in the memory.

TABLE 9-1: ALPHABETICAL LISTING OF PARAMETERS

| Parameter Name | # Bytes | Units | Typical Value | Operational Description | | | | | | | | | | | | |
|-----------------|----------|-------------|---------------|--|-----|----------|---|-------|---|------|---|---------|---|-----|---|-------|
| AgeFactor | 1 | 0.125 mV | 0 | Scale factor for EOD voltages due to aging. In units of .125 mV, $VEOD_{aged} = VEOD - (CycleCount * AgeFactor)$. | | | | | | | | | | | | |
| AOMInterval | 1 | op cycles | 60 | Interval between auto-offset calibrations. | | | | | | | | | | | | |
| AVGIScale | 1 | coded | b00100000 | Time period over which current is averaged to calculate average current, $I_{AVG} = I_{AVG} + (I - I_{AVG})/AVGIScale$. Note: Only Most Significant set bit is used, others are ignored. 1xxxxxxx: $I_{AVG} = I_{AVG} + (I - I_{AVG})/256$ 01xxxxxx: $I_{AVG} = I_{AVG} + (I - I_{AVG})/128$ 001xxxxx: $I_{AVG} = I_{AVG} + (I - I_{AVG})/64$ 0001xxxx: $I_{AVG} = I_{AVG} + (I - I_{AVG})/32$ 00001xxx: $I_{AVG} = I_{AVG} + (I - I_{AVG})/16$ 000001xx: $I_{AVG} = I_{AVG} + (I - I_{AVG})/8$ 0000001x: $I_{AVG} = I_{AVG} + (I - I_{AVG})/4$ 00000001: $I_{AVG} = I_{AVG} + (I - I_{AVG})/2$ | | | | | | | | | | | | |
| BGCal | 1 | integer | 14 | Band gap voltage calibration factor. | | | | | | | | | | | | |
| CalStatus | 1 | bitmap | b11111111 | Bit coded as follows: <table><tr><th>Bit</th><th>Function</th></tr><tr><td>7</td><td>RCOSC</td></tr><tr><td>6</td><td>TEMP</td></tr><tr><td>5</td><td>CURRENT</td></tr><tr><td>4</td><td>VC1</td></tr><tr><td>3</td><td>VCOIN</td></tr></table> 0 = Not calibrated 1 = Calibrated | Bit | Function | 7 | RCOSC | 6 | TEMP | 5 | CURRENT | 4 | VC1 | 3 | VCOIN |
| Bit | Function | | | | | | | | | | | | | | | |
| 7 | RCOSC | | | | | | | | | | | | | | | |
| 6 | TEMP | | | | | | | | | | | | | | | |
| 5 | CURRENT | | | | | | | | | | | | | | | |
| 4 | VC1 | | | | | | | | | | | | | | | |
| 3 | VCOIN | | | | | | | | | | | | | | | |
| CFCurr | 2 | integer | 4200 | Correction Factor for Current. Adjusts the scaling of the sense resistor current measurements. | | | | | | | | | | | | |
| CFTempE | 2 | integer | 326 | Correction Factor for Temperature. Adjusts the scaling of temperature measured across an external thermistor at the NTC input pin. | | | | | | | | | | | | |
| CFTempl | 2 | integer | 2038 | Correction Factor for Temperature. Adjusts the scaling of temperature measured from the internal temperature sensor. | | | | | | | | | | | | |
| CFVCoin | 2 | integer | 2250 | Correction Factor for Coin Cell Voltage. | | | | | | | | | | | | |
| CFVPack | 2 | integer | 2250 | Correction Factor for Pack Voltage. Adjusts the scaling of the pack voltage measurements. Used to calibrate the measurement of pack voltage between VC1 input pin and ground. | | | | | | | | | | | | |
| ClrFullyChrg | 1 | % | 90 | Reset FULLY_CHARGED bit at this level, 100 = 100%. When discharging begins, the FULLY_CHARGED bit should remain set until the cell voltages are below EOCVolt , so that a small current will not trigger a false End-Of-Charge trigger. | | | | | | | | | | | | |
| ClrFullyDischrg | 1 | % | 10 | Reset FULLY_DISCHARGED bit, 100 = 100%. Once fully discharged bit is set, it will stay set until capacity rises above this value, typically 10%. | | | | | | | | | | | | |
| COCurr | 1 | signed byte | 0 | Correction Offset for Current. This is the value the A/D reads when zero current is flowing through the sense resistor. | | | | | | | | | | | | |

TABLE 9-1: ALPHABETICAL LISTING OF PARAMETERS (CONTINUED)

| Parameter Name | # Bytes | Units | Typical Value | Operational Description | | | | | | | | | | | | | | | | | | |
|----------------|--|-------------|---------------|--|-----|----------|---|---------------------------------|---|--------|---|--------------------------------|---|------------------------------|---|------------------------|---|---|---|--|---|--------------------------|
| COD | 1 | signed byte | 0 | Correction Offset Deviation. Offset value for the module effect on the current readings. | | | | | | | | | | | | | | | | | | |
| Config1 | 1 | bitmap | b00010000 | bit 7: Internal use only. bit 6: 1 = FG overrides bootloader high priority interrupt service bit 5: 1 = Bootloader write commands disabled until locked bit 4: 1 = Start in SMBus mode 0 = SPS mode bit 3-0: Unused. | | | | | | | | | | | | | | | | | | |
| ConfigCAP | 1 | bitmap | 11100100 | bit 7: Compensate remaining capacity – the displayed remaining capacity actually equals FCC minus capacity used minus residual capacity. bit 6: Remaining capacity decrease only – when compensating, if temperature change causes a decrease in residual capacity, do not let remaining capacity rise to reflect this. Instead, hold it steady until discharge catches up. bit 5: Only compensate remaining capacity on discharge. bit 4: Enable compensation during null current. bit 3: Unused bit 2: Set capacity to positive immediately upon charging. If discharged below zero, this allows capacity to count up immediately upon charging. bit 1: Learn unconditionally – relearn FCC under any conditions. Typically used for testing only. bit 0: Disable self-discharge. | | | | | | | | | | | | | | | | | | |
| ConfigEOCD | 1 | bitmap | 10011111 | Bit coded as follows: <table><tr><th>Bit</th><th>Function</th></tr><tr><td>7</td><td>Limit remaining capacity to FCC</td></tr><tr><td>6</td><td>Unused</td></tr><tr><td>5</td><td>Trigger EOC on average current</td></tr><tr><td>4</td><td>Trigger EOC on taper current</td></tr><tr><td>3</td><td>Disallow multiple EODs</td></tr><tr><td>2</td><td>Limit capacity to EODCap until EOD</td></tr><tr><td>1</td><td>Set capacity to residual capacity at VEOD</td></tr><tr><td>0</td><td>Learn FCC at VEOD</td></tr></table> | Bit | Function | 7 | Limit remaining capacity to FCC | 6 | Unused | 5 | Trigger EOC on average current | 4 | Trigger EOC on taper current | 3 | Disallow multiple EODs | 2 | Limit capacity to EODCap until EOD | 1 | Set capacity to residual capacity at VEOD | 0 | Learn FCC at VEOD |
| Bit | Function | | | | | | | | | | | | | | | | | | | | | |
| 7 | Limit remaining capacity to FCC | | | | | | | | | | | | | | | | | | | | | |
| 6 | Unused | | | | | | | | | | | | | | | | | | | | | |
| 5 | Trigger EOC on average current | | | | | | | | | | | | | | | | | | | | | |
| 4 | Trigger EOC on taper current | | | | | | | | | | | | | | | | | | | | | |
| 3 | Disallow multiple EODs | | | | | | | | | | | | | | | | | | | | | |
| 2 | Limit capacity to EODCap until EOD | | | | | | | | | | | | | | | | | | | | | |
| 1 | Set capacity to residual capacity at VEOD | | | | | | | | | | | | | | | | | | | | | |
| 0 | Learn FCC at VEOD | | | | | | | | | | | | | | | | | | | | | |
| COTempl | 2 | signed word | 21198 | Correction offset for internal temperature. | | | | | | | | | | | | | | | | | | |
| Cycles | 2 | integer | 0 | Battery data register for <u>CycleCount</u> . Cycles is updated to keep track of the total usage of the battery. Cycles is increased whenever an amount of charge has been removed from the battery, equivalent to the full capacity. | | | | | | | | | | | | | | | | | | |

TABLE 9-1: ALPHABETICAL LISTING OF PARAMETERS (CONTINUED)

| Parameter Name | # Bytes | Units | Typical Value | Operational Description | | | | | | | | | | | | | | | | | | |
|--------------------|---------------------------------|----------------|---------------|---|-----|----------|---|--------|---|--------|---|---------------------|---|---------------------------------|---|--------|---|---------------------|---|--------|---|--------|
| Date | 2 | coded hex word | 0x3246 | Battery data value for <u>ManufactureDate</u> . The date of manufacture of the battery pack can be programmed here and retrieved with the battery data <u>ManufactureDate</u> command, Coding: Date = (Year-1980) x 512 + Month x 32 + Day. | | | | | | | | | | | | | | | | | | |
| DesignCapacity | 2 | mAh | 2200 | Battery data value for <u>DesignCapacity</u> . This is the first capacity loaded into the <u>FullChargeCapacity</u> upon initial power-up. | | | | | | | | | | | | | | | | | | |
| DeviceID | 2 | hex word | AAAA | Battery data value for <u>DeviceID</u> (2-byte hex word). | | | | | | | | | | | | | | | | | | |
| EOCCurAvg | 2 | mA | 200 | EOC trigger for pulse charging. If the average current during charging has dropped below the threshold for a pass count equal to EOCRecheck , the End-Of-Charge state will be reached. | | | | | | | | | | | | | | | | | | |
| EOCRecheck | 1 | op cycles | 6 | Number of checks before EOC trigger. The End-Of-Charge conditions must remain for at least this number of periods before being considered true. | | | | | | | | | | | | | | | | | | |
| EOCVolt | 2 | mV | 4150 | EOC trigger cell voltage. When the cell reaches this voltage, the PS810 will start monitoring the current to determine when the battery is full. When the current is in the proper range and the cell voltage is greater than EOCVolt , then the FULLY_CHARGED bit in <u>BatteryStatus</u> will be set. | | | | | | | | | | | | | | | | | | |
| EODCap | 2 | mAh | 100 | Reserve remaining capacity at EOD. | | | | | | | | | | | | | | | | | | |
| EODRecheck | 1 | op cycles | 8 | Recheck period for EOD. Voltage must be below VEOD for this many measurement periods. | | | | | | | | | | | | | | | | | | |
| FLAGS1 | 1 | bitmap | 00100000 | Bit coded as follows: <table><tr><th>Bit</th><th>Function</th></tr><tr><td>7</td><td>Unused</td></tr><tr><td>6</td><td>Unused</td></tr><tr><td>5</td><td>Int/Ext temperature</td></tr><tr><td>4</td><td>Disable Sleep in main Idle mode</td></tr><tr><td>3</td><td>Unused</td></tr><tr><td>2</td><td>Disable safety GPIO</td></tr><tr><td>1</td><td>Unused</td></tr><tr><td>0</td><td>Unused</td></tr></table> | Bit | Function | 7 | Unused | 6 | Unused | 5 | Int/Ext temperature | 4 | Disable Sleep in main Idle mode | 3 | Unused | 2 | Disable safety GPIO | 1 | Unused | 0 | Unused |
| Bit | Function | | | | | | | | | | | | | | | | | | | | | |
| 7 | Unused | | | | | | | | | | | | | | | | | | | | | |
| 6 | Unused | | | | | | | | | | | | | | | | | | | | | |
| 5 | Int/Ext temperature | | | | | | | | | | | | | | | | | | | | | |
| 4 | Disable Sleep in main Idle mode | | | | | | | | | | | | | | | | | | | | | |
| 3 | Unused | | | | | | | | | | | | | | | | | | | | | |
| 2 | Disable safety GPIO | | | | | | | | | | | | | | | | | | | | | |
| 1 | Unused | | | | | | | | | | | | | | | | | | | | | |
| 0 | Unused | | | | | | | | | | | | | | | | | | | | | |
| FullCapacity | 2 | mAh | 2200 | Learned value of battery capacity. Used for battery data value of <u>FullChargeCapacity</u> . This is a learned parameter which is the equivalent of all charge counted from fully charged to fully discharged, including self-discharge and error terms. This is reset after a learning cycle and used for remaining capacity and relative State-Of-Charge calculations. | | | | | | | | | | | | | | | | | | |
| F_USER_DATA_LENGTH | 1 | bytes | 2 | Number of bytes read by <u>UserData</u> SMBus command. | | | | | | | | | | | | | | | | | | |
| HighTempAI | 1 | coded byte | 200 | OVER_TEMP_ALARM bit threshold, Coded Value = (°Celsius * 10 + 200)/4. | | | | | | | | | | | | | | | | | | |
| InitialCap | 2 | mAh | 440 | The initial capacity of the battery. When the PS810 is first powered up and initialized, before a learning cycle takes place to learn the full capacity, the full capacity will take the value programmed into InitialCap to compute relative State-Of-Charge percentage. | | | | | | | | | | | | | | | | | | |
| MFGID | 2 | hex word | — | Value for <u>ManufacturerID</u> (2-byte hex word). | | | | | | | | | | | | | | | | | | |

TABLE 9-1: ALPHABETICAL LISTING OF PARAMETERS (CONTINUED)

| Parameter Name | # Bytes | Units | Typical Value | Operational Description |
|-----------------------|---------|-----------|---------------|---|
| NChangeState | 1 | op cycles | 2 | State change delay filter. Delays the change between "charge increasing" state and "charge decreasing" state based on current direction. To avoid problems with current spikes in opposite directions, a delay filter is built in to control when to change from charging status to discharging status. The current must change directions and stay in the new direction for NChangeState periods before the status is changed and capacity is increased or decreased as a result of the new current direction. |
| NullCurr | 1 | mA | 3 | A zero zone control is built into the PS810 so that any electrical noise doesn't actually drain the gas gauge, when in fact, the current is zero. For this reason, current less than NullCurr mA in either direction will be measured as zero. |
| OSCTrim | 1 | integer | 206 | RC oscillator trimming. |
| PowerModes | 1 | bitmap | b00000011 | bit 4: 1 = Enable Bus Inactive Low-Power mode 0 = Disable Bus Inactive Low-Power mode bit 3: 1 = Use Ultra Low-Power mode as Bus Inactive Low-Power mode (no self-discharge calculations) 0 = Use Low-Power mode with self-discharge calculations as Bus Inactive Low-Power mode bit 2: 1 = Require NullCurr for Bus Inactive Low-Power mode and Low-Voltage Sleep mode 0 = No NullCurr requirement for Sleep modes bit 1: 1 = Use Ultra Low-Power mode as Low-Voltage Sleep mode 0 = Use Low-Power mode as Low-Voltage Sleep mode bit 0: 1 = Set remcap to zero when entering Low-Voltage Sleep mode 0 = Do not change remcap when entering Low-Voltage Sleep mode |
| PW1 | 2 | integer | – | First password for the battery pack lock. |
| PW2 | 2 | integer | – | Second password for the battery pack lock. |
| PwrConsumption | 1 | 1/256 mA | 31 | Current consumption of the battery module. This is the average current that the battery module typically draws from the battery (255 = 1 mA). |
| PwrConsumSleep | 1 | 1/256 mA | 7 | Current consumption of battery module when in Sleep mode. |
| RefCal | 1 | integer | 0 | Reference voltage calibration factor. |
| RemCapDelta | 1 | 1/4 mAh | 2 | Maximum change in remaining capacity per measurement period. |
| RLCycles | 1 | integer | 2 | The number of initial cycles without a relearn limit. The initial number of cycles where the relearn limit is not active. Normally, full charge capacity will change by a maximum of 256 mAh when relearned. Since FullCapacity can vary greatly with the first learning cycle, the initial capacity may not be correct; thus, this should be set to at least 2. |

TABLE 9-1: ALPHABETICAL LISTING OF PARAMETERS (CONTINUED)

| Parameter Name | # Bytes | Units | Typical Value | Operational Description |
|---------------------|---------|---------|---------------|---|
| SerialNumber | 2 | integer | – | Battery data value for <u>SerialNumber</u> . The serial number of the battery pack can be programmed here and retrieved with the battery data <u>SerialNumber</u> command. |
| SleepVPack | 2 | mV | 2700 | The pack voltage at which the PS810 will enter Low-Voltage Sleep mode. |
| StableCurr | 1 | mA | 50 | EOC trigger current deviation level. In order to prevent current spikes from causing a premature taper current trigger, the average current and the instantaneous current must be within StableCurr of each other for the End-Of-Charge to trigger on the taper current. |
| TaperCRate | 1 | 1/64 C | 3 | Upper limit EOC taper current, 64 = 1°C. |
| TaperLow | 1 | 1/64 C | 1 | Lower limit EOC taper current, 64 = 1°C. |
| VEODCoin | 2 | mV | 2500 | Empty voltage of coin cell. |
| VEODOffset | 2 | mV | 2700 | Base voltage for VEOD look-up table. |

PS810

NOTES:

10.0 ELECTRICAL CHARACTERISTICS

TABLE 10-1: ABSOLUTE MAXIMUM RATINGS

| Symbol | Description | Min. | Max. | Units |
|----------------------|---|------|------|-------|
| V _{PIN} | Voltage Directly at any pin | -0.5 | 7.0 | V |
| T _{BIAS} | Temperature under Bias | -20 | 85 | °C |
| T _{STORAGE} | Storage Temperature (package dependent) | -35 | 120 | °C |

Note: These are stress ratings only. Stress greater than the listed ratings may cause permanent damage to the device. Exposure to absolute maximum ratings for an extended period may affect device reliability. Functional operation is implied only at the listed operating conditions below.

TABLE 10-2: DC CHARACTERISTICS (T_A = -20°C TO +85°C; V_{DD} (INTERNAL) = +3.0V ±10%)

| Symbol | Description | Min. | Typ. | Max. | Units | Condition |
|-------------------------|---|-----------------------|------|-----------------------|-------|------------------------------|
| V _{C1} | Supply Voltage | 2.5 | — | 5.5 | V | (Note 3) |
| V _{DD} | Internal Regulated Supply Voltage | — | 3.0 | — | V | |
| I _{DD} | Supply Current – Run mode | — | 85 | 100 | μA | A/D active (Note 1) |
| I _{DDSLP} | Supply Current – Sleep mode | — | 22 | 25 | μA | Sleep mode (Note 1) |
| I _{DDSSLP} | Supply Current – Shelf-Sleep mode | — | 600 | 1000 | nA | Shelf-Sleep mode (Note 1) |
| V _{IL} | Input Low Voltage – GPIO | — | — | 0.2 * V _{DD} | V | |
| V _{IH} | Input High Voltage – GPIO | 0.8 * V _{DD} | — | — | V | |
| I _{IL-IO0PU} | GPIO Input Low Current – Pull-up mode | — | 7 | — | μA | |
| I _{L-IO} | Leakage Current – IO pins Programmed as Outputs or Inputs without Pull-up | — | 1 | 2 | μA | |
| V _{OL-IO} | Output Low Voltage for GPIO | — | — | 0.4 | V | I _{OL} = 0.5 mA |
| V _{OH-IO} | Output High Voltage for GPIO Configured as Push-Pull | 2.0 | — | — | V | I _{OH} = 100 μA |
| V _{SR} | Sense Resistor Input Voltage Range | -152 | — | 152 | mV | |
| I _{NTC} | Thermistor Output Current | — | 6 | — | μA | |
| V _{IL-SMB} | Input Low Voltage for SMBus pins | -0.5 | — | 0.8 | V | |
| V _{IH-SMB} | Input High Voltage for SMBus pins | 2.0 | — | 5.5 | V | |
| V _{OL-SMB} | Output Low Voltage for SMBus pins | — | — | 0.4 | V | I _{PULLUP} = 350 μA |
| V _{OH-SMB} | Output High Voltage for SMBus pins | 2.1 | — | 5.5 | V | |
| I _{PULLUP-SMB} | Current through Pull-up Resistor or Current Source for SMBus pins | 100 | — | 350 | μA | |
| I _{LEAK-SMB} | Input Leakage Current – SMBus pins | — | — | ±8 | μA | |

Note 1: Does not include current consumption due to external loading on pins.

2: Sample mode current is specified during an A/D inactive cycle. Sample mode average current can be calculated using the formula: Average Sample Mode Supply Current = (I_{DDRUN} + (n – 1) * I_{DDINS})/n; where “n” is the programmed sample rate.

3: A/D accuracy is maintained between 2.7 volts and 4.5 volts.

TABLE 10-3: AC CHARACTERISTICS (TA = -20°C TO +85°C; VDD (INTERNAL) = +3.0V ±10%)

| Symbol | Description | Min. | Typ. | Max. | Units | Condition |
|--------|------------------------------------|---------|-------|---------|-------|--|
| fRC | Internal RC Oscillator Frequency | 509.952 | 512 | 514.048 | kHz | |
| fA/D | Internal A/D Operating Clock | — | fRC/4 | — | kHz | |
| tPOR | Power-on Reset Delay | — | 2 | 10 | ms | Delay from time when VC1 voltage exceeds 2.7V |
| tSHELF | Delay to Entry of Shelf-Sleep mode | 1 | — | — | ms | (Shent = 1 or VPACK < VPTRIP) and (SDA and SCL go low) |
| tWAKE | Delay to Exit of Shelf-Sleep mode | 1 | — | — | ms | SDA and SCL go high |

TABLE 10-4: AC CHARACTERISTICS – SMBus/I²C™ (TA = -20°C TO +85°C; VDD (INTERNAL) = +3.0V ±10%)

| Symbol | Description | Min. | Typ. | Max. | Units | Condition |
|------------|--------------------------------------|------|------|------|-------|--------------|
| fSMB | SMBus Clock Operating Frequency | 10 | — | 100 | kHz | Slave mode |
| tBUF | Bus Free Time between Start and Stop | 4.7 | — | — | μs | |
| tSHLD | Bus Hold Time after Repeated Start | 4.0 | — | — | μs | |
| tSU:STA | Setup Time before Repeated Start | 4.7 | — | — | μs | |
| tSU:STOP | Stop Setup Time | 4.0 | — | — | μs | |
| tHLD | Data Hold Time | 0 | — | — | ns | |
| tSETUP | Data Setup Time | 250 | — | — | ns | |
| tLOW | Clock Low Period | 4.7 | — | — | μs | |
| tHIGH | Clock High Period | 4.0 | — | 50 | μs | (Note 2) |
| tLOW:SEXT | Message Buffering Time | — | — | 10 | ms | (Notes 1, 3) |
| tHIGH:MEXT | Message Buffering Time | — | — | 10 | ms | (Notes 1, 4) |
| tF | Clock/Data Fall Time | — | — | 300 | ns | (Note 5) |
| tR | Clock/Data Rise Time | — | — | 1000 | ns | (Note 5) |

- Note 1:** The PS810 will time-out when the cumulative message time defined from Start-to-Ack, Ack-to-Ack or Ack-to-Stop exceeds the value of TTIMEOUT, min. of 25 ms. The PS810 will reset the communication no later than TTIMEOUT, max. of 35 ms.
- 2:** tHIGH max. provides a simple, ensured method for devices to detect bus Idle conditions.
- 3:** tLOW:SEXT is the cumulative time a slave device is allowed to extend the clock cycles in one message from the initial start to the stop.
- 4:** tHIGH:MEXT is the cumulative time a master device is allowed to extend its clock cycles within each byte of a message as defined from Start-to-Ack, Ack-to-Ack or Ack-to-Stop.
- 5:** Rise and fall time is defined as follows: $t_R = (V_{ILMAX} - 0.15) \text{ to } (V_{IHMIN} + 0.15)$
 $t_F = 0.9 V_{DD} \text{ to } (V_{ILMAX} - 0.15)$

**TABLE 10-5: AC CHARACTERISTICS: SPS INTERFACE (T_A = -20°C TO +85°C;
V_{DD} (INTERNAL) = +3.0V ±10%)**

| Symbol | Description | Min. | Typ. | Max. | Units | Condition |
|-------------------|----------------------------------|------|------|------|-------|-----------|
| t _{CYCH} | Cycle Time, Host to Battery | 190 | — | — | μs | |
| t _{CYCB} | Cycle Time, Battery to Host | 190 | 205 | 250 | μs | |
| t _{STRH} | Start Time, Host to Battery | 5 | — | — | ns | |
| t _{STRB} | Start Time, Battery to Host | 32 | — | — | μs | |
| t _{DSUH} | Data Setup Time, Host to Battery | — | — | 50 | μs | |
| t _{DSUB} | Data Setup Time, Battery to Host | — | — | 50 | μs | |
| t _{DH} | Data Hold Time, Host to Battery | 90 | — | — | μs | |
| t _{DV} | Data Valid Time, Battery to Host | — | — | 80 | μs | |
| t _{SSUH} | Stop Setup, Host to Battery | — | — | 145 | μs | |
| t _{SSUB} | Stop Setup Time, Battery to Host | — | — | 145 | μs | |
| t _{RSPS} | Response Time of Battery to Host | 190 | — | 320 | μs | |
| t _B | Break Time | 190 | — | — | μs | |
| t _{BR} | Break Recovery Time | 40 | — | — | μs | |

**TABLE 10-6: A/D CONVERTER CHARACTERISTICS (T_A = -20°C TO +85°C;
V_{REG} (INTERNAL) = +3.0V ±10%)**

| Symbol | Description | Min. | Typ. | Max. | Units | Condition |
|----------------------|---|------|----------------------------------|-------|-------|--------------------------|
| ADRES | A/D Converter Resolution | 9 | — | 15 | bits | |
| t _{CONV} | A/D Conversion Measurement Time, n-bit + sign | — | 2 ⁿ /f _{A/D} | — | s | |
| V _{DIN} | A/D Converter Input Voltage Range (internal) | -150 | — | 150 | mV | Differential (Note 1) |
| | | 0 | — | 300 | mV | Single-Ended |
| EV _{GAIN} | Supply Voltage Gain Error | — | — | 0.100 | % | |
| EV _{OFFSET} | Compensated Offset Error | — | — | 0.100 | % | |
| ET _{EMP} | Temperature Gain Error | — | — | 0.100 | % | |
| E _{INL} | Integrated Nonlinearity Error | — | — | 0.004 | % | |

Note 1: Voltage is internal at A/D converter inputs. SR and NTC are measured directly. VC1 input is measured using internal level translation circuitry that scales the input voltage range appropriately for the converter.

**TABLE 10-7: SILICON TIME BASE CHARACTERISTICS (T_A = -20°C TO +85°C;
V_{REG} (INTERNAL) = +3.0V ±10%)**

| Symbol | Description | Min. | Typ. | Max. | Units | Condition |
|-------------------|-------------------------|------|------|------|-------|---|
| E _{TIME} | Silicon Time Base Error | — | — | 0.4 | % | Bias Resistor R _{OSC} Tolerance = 1% T _L = ±25 ppm |

**TABLE 10-8: TEMPERATURE MEASUREMENT ACCURACY (T_A = -20°C TO +85°C;
V_{REG} (INTERNAL) = +3.0V ±10%)**


| Symbol | Description | Min. | Typ. | Max. | Units | Condition |
|--------------------|---------------------------------|------|------|------|-------|-------------------------|
| T _{RES} | Reported Temperature Resolution | — | 1 | — | °C | |
| T _{ACC} | Reported Temperature Accuracy | -3 | — | 3 | °C | V _{REG} = 3.6V |
| T _{DRIFT} | Reported Temperature Drift | — | -2 | — | °C/V | |

NOTES:


11.0 PACKAGING INFORMATION

11.1 Packaging Marking Information


14-Lead TSSOP

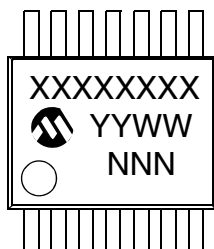


Example

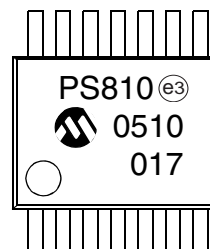

16-Lead QFN

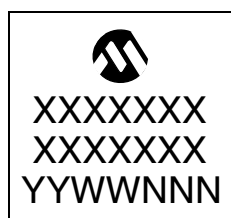

Example

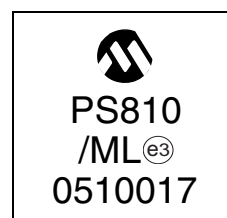


| | | |
|--|--------|--|
| Legend: | XX...X | Customer-specific information |
| | Y | Year code (last digit of calendar year) |
| | YY | Year code (last 2 digits of calendar year) |
| | WW | Week code (week of January 1 is week '01') |
| | NNN | Alphanumeric traceability code |
| | (e3) | Pb-free JEDEC designator for Matte Tin (Sn) |
| | * | This package is Pb-free. The Pb-free JEDEC designator (e3) can be found on the outer packaging for this package. |
| Note: In the event the full Microchip part number cannot be marked on one line, it will be carried over to the next line, thus limiting the number of available characters for customer-specific information. | | |

11.2 Package Details

The following sections give the technical details of the packages.

14-Lead Plastic Thin Shrink Small Outline (ST) – 4.4 mm Body (TSSOP)

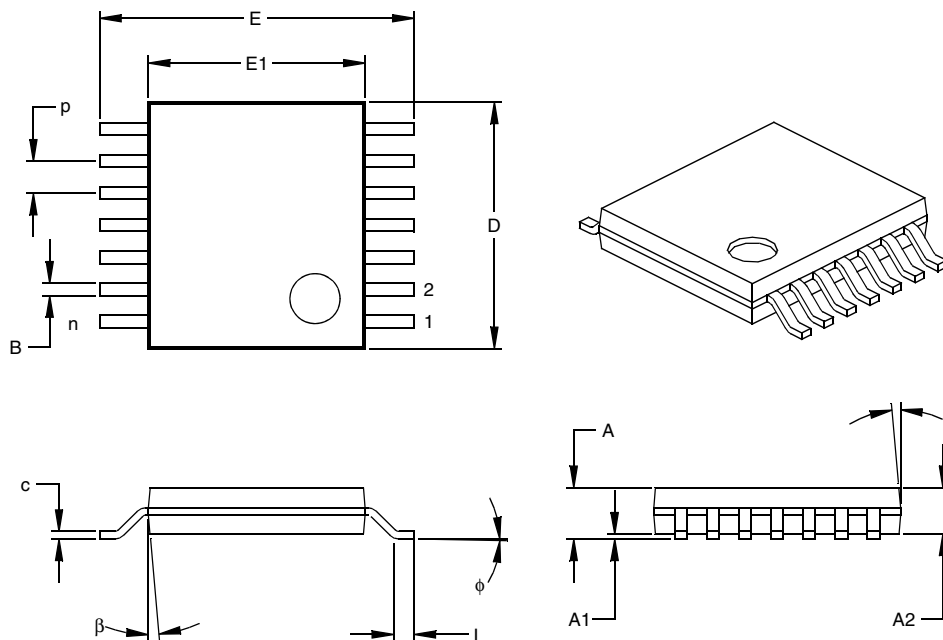

| Dimension Limits | Units | INCHES | | | MILLIMETERS* | | |
|--------------------------|-------|--------|------|------|--------------|------|------|
| | | MIN | NOM | MAX | MIN | NOM | MAX |
| Number of Pins | n | 14 | | | 14 | | |
| Pitch | p | | .026 | | | 0.65 | |
| Overall Height | A | | | .043 | | | 1.10 |
| Molded Package Thickness | A2 | .033 | .035 | .037 | 0.85 | 0.90 | 0.95 |
| Standoff § | A1 | .002 | .004 | .006 | 0.05 | 0.10 | 0.15 |
| Overall Width | E | .246 | .251 | .256 | 6.25 | 6.38 | 6.50 |
| Molded Package Width | E1 | .169 | .173 | .177 | 4.30 | 4.40 | 4.50 |
| Molded Package Length | D | .193 | .197 | .201 | 4.90 | 5.00 | 5.10 |
| Foot Length | L | .020 | .024 | .028 | 0.50 | 0.60 | 0.70 |
| Foot Angle | φ | 0 | 4 | 8 | 0 | 4 | 8 |
| Lead Thickness | c | .004 | .006 | .008 | 0.09 | 0.15 | 0.20 |
| Lead Width | B | .007 | .010 | .012 | 0.19 | 0.25 | 0.30 |
| Mold Draft Angle Top | α | 0 | 5 | 10 | 0 | 5 | 10 |
| Mold Draft Angle Bottom | β | 0 | 5 | 10 | 0 | 5 | 10 |

* Controlling Parameter

§ Significant Characteristic


Notes:

Dimensions D and E1 do not include mold flash or protrusions. Mold flash or protrusions shall not exceed .005" (0.127mm) per side.

JEDEC Equivalent: MO-153

Drawing No. C04-087

16-Lead Plastic Quad Flat No Lead Package (ML) 4x4x0.9 mm Body (QFN) – Saw Singulated

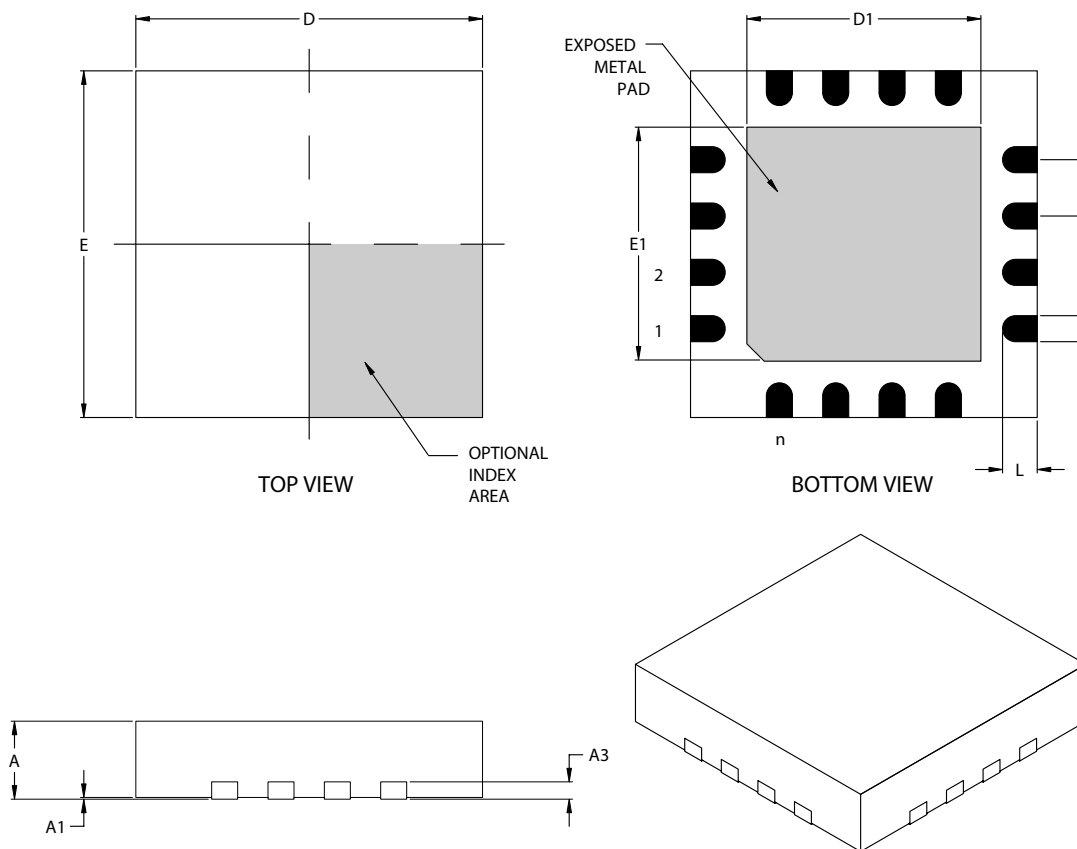

| Units | | INCHES | | | MILLIMETERS* | | |
|--------------------|----|----------|------|------|--------------|------|------|
| Dimension Limits | | MIN | NOM | MAX | MIN | NOM | MAX |
| Number of Pins | n | 16 | | | 16 | | |
| Pitch | e | .026 BSC | | | 0.65 BSC | | |
| Overall Height | A | .031 | .035 | .039 | 0.80 | 0.90 | 1.00 |
| Standoff | A1 | .000 | .001 | .002 | 0.00 | 0.02 | 0.05 |
| Contact Thickness | A3 | .008 REF | | | 0.20 REF | | |
| Overall Width | E | .152 | .157 | .163 | 3.85 | 4.00 | 4.15 |
| Exposed Pad Width | E2 | .100 | .106 | .110 | 2.55 | 2.70 | 2.80 |
| Overall Length | D | .152 | .157 | .163 | 3.85 | 4.00 | 4.15 |
| Exposed Pad Length | D2 | .100 | .106 | .110 | 2.55 | 2.70 | 2.80 |
| Contact Width | b | .010 | .012 | .014 | 0.25 | 0.30 | 0.35 |
| Contact Length | L | .012 | .016 | .020 | 0.30 | 0.40 | 0.50 |

*Controlling Parameter

Notes:

JEDEC equivalent: MO-220

Drawing No. C04-127

Revised 04-24-05

NOTES:

THE MICROCHIP WEB SITE

Microchip provides online support via our WWW site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com, click on Customer Change Notification and follow the registration instructions.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support
- Development Systems Information Line

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: <http://support.microchip.com>

In addition, there is a Development Systems Information Line which lists the latest versions of Microchip's development systems software products. This line also provides information on how customers can receive currently available upgrade kits.

The Development Systems Information Line numbers are:

1-800-755-2345 – United States and most of Canada

1-480-792-7302 – Other International Locations

READER RESPONSE

It is our intention to provide you with the best documentation possible to ensure successful use of your Microchip product. If you wish to provide your comments on organization, clarity, subject matter, and ways in which our documentation can better serve you, please FAX your comments to the Technical Publications Manager at (480) 792-4150.

Please list the following information, and use this outline to provide us with your comments about this document.

To: Technical Publications Manager
RE: Reader Response
Total Pages Sent _____
From: Name _____
Company _____
Address _____
City / State / ZIP / Country _____
Telephone: (_____) _____ - _____ FAX: (_____) _____ - _____

Application (optional):

Would you like a reply? ___Y ___N

Device: PS810

Literature Number: DS21904B

Questions:

1. What are the best features of this document?

2. How does this document meet your hardware and software development needs?

3. Do you find the organization of this document easy to follow? If not, why?

4. What additions to the document do you think would enhance the structure and subject?

5. What deletions from the document could be made without affecting the overall usefulness?

6. Is there any incorrect or misleading information (what and where)?

7. How would you improve this document?

PRODUCT IDENTIFICATION SYSTEM

To order or obtain information, e.g., on pricing or delivery, refer to the factory or the listed sales office.

| <u>PART NO.</u> | <u>X</u> | <u>/XX</u> | <u>XXX</u> |
|-------------------|--|------------|------------|
| Device | Temperature Range | Package | Pattern |
| Device | PS810 | | |
| Temperature Range | I = -20°C to +85°C (Industrial) | | |
| Package | ML = QFN ST = TSSOP | | |
| Pattern | QTP, SQTP, Code or Special Requirements (blank otherwise) | | |

Examples:

a) PS810/ML = QFN package.

b) PS810/ST = TSSOP package.



WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office

2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://support.microchip.com>
Web Address:
www.microchip.com

Atlanta

Alpharetta, GA
Tel: 770-640-0034
Fax: 770-640-0307

Boston

Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago

Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Dallas

Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit

Farmington Hills, MI
Tel: 248-538-2250
Fax: 248-538-2260

Kokomo

Kokomo, IN
Tel: 765-864-8360
Fax: 765-864-8387

Los Angeles

Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608

San Jose

Mountain View, CA
Tel: 650-215-1444
Fax: 650-961-0286

Toronto

Mississauga, Ontario,
Canada
Tel: 905-673-0699
Fax: 905-673-6509

ASIA/PACIFIC

Australia - Sydney

Tel: 61-2-9868-6733
Fax: 61-2-9868-6755

China - Beijing

Tel: 86-10-8528-2100
Fax: 86-10-8528-2104

China - Chengdu

Tel: 86-28-8676-6200
Fax: 86-28-8676-6599

China - Fuzhou

Tel: 86-591-8750-3506
Fax: 86-591-8750-3521

China - Hong Kong SAR

Tel: 852-2401-1200
Fax: 852-2401-3431

China - Shanghai

Tel: 86-21-5407-5533
Fax: 86-21-5407-5066

China - Shenyang

Tel: 86-24-2334-2829
Fax: 86-24-2334-2393

China - Shenzhen

Tel: 86-755-8203-2660
Fax: 86-755-8203-1760

China - Shunde

Tel: 86-757-2839-5507
Fax: 86-757-2839-5571

China - Qingdao

Tel: 86-532-502-7355
Fax: 86-532-502-7205

ASIA/PACIFIC

India - Bangalore

Tel: 91-80-2229-0061
Fax: 91-80-2229-0062

India - New Delhi

Tel: 91-11-5160-8631
Fax: 91-11-5160-8632

Japan - Kanagawa

Tel: 81-45-471- 6166
Fax: 81-45-471-6122

Korea - Seoul

Tel: 82-2-554-7200
Fax: 82-2-558-5932 or
82-2-558-5934

Singapore

Tel: 65-6334-8870
Fax: 65-6334-8850

Taiwan - Kaohsiung

Tel: 886-7-536-4818
Fax: 886-7-536-4803

Taiwan - Taipei

Tel: 886-2-2500-6610
Fax: 886-2-2508-0102

Taiwan - Hsinchu

Tel: 886-3-572-9526
Fax: 886-3-572-6459

EUROPE

Austria - Weis

Tel: 43-7242-2244-399
Fax: 43-7242-2244-393

Denmark - Ballerup

Tel: 45-4450-2828
Fax: 45-4485-2829

France - Massy

Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Ismaning

Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Italy - Milan

Tel: 39-0331-742611
Fax: 39-0331-466781

Netherlands - Drunen

Tel: 31-416-690399
Fax: 31-416-690340

England - Berkshire

Tel: 44-118-921-5869
Fax: 44-118-921-5820