User's Guide

Model DV30



Safety Precautions

- 1. Imprese like in his one to this one to the second secon
- 2. Secure any covers or battery doors before use.
- 3. Inspect the condition of the meter for any damage before use.
- 4. Remove the batteries from the meter if the meter is to be stored for long periods.
- 5. For Indoor use

International Safety Symbols

À

Refer to the user's guide for information.

Hazardous voltages may be present

Double insulation

Operation


WARNING: Risk of Electrocution. Before use, always test the Detector on a known live circuit to verify proper operation.

NOTE on RF Interference: RF signals in close proximity to the detector may cause the voltage light and beeper to latch into a constant tone and light indication. Wait until the RF signal has disappeared before proceeding with voltage detection.

- 1. Turn the On/Off-Sensitivity switch (2) clockwise to turn the unit on.
- 2. Set the Sensitivity adjustment (2) to the high (counterclockwise) position
- If the detector begins to beep/flash (1), slowly reduce the sensitivity (clockwise) until the beep stops.

 Move the detector voltage sensor (1) near the conductor until the tip flashes and beeper sounds.

 Slowly adjust the sensitivity (2) and reduce the distance between the sensor and conductor to pinpoint and identify the conductor.

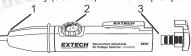

Battery Replacement

- Turn power OFF and release the end cap latch from the pocket clip and slide out the battery compartment (3).
- 2. Replace the four LR44 batteries and replace the battery compartment.

Specifications

Voltage Sensitivity Operating Temperature/Humidity

Storage Temperature
Relative Humidity

Operating Altitude Safety Battery

Dimensions/Weight IEC 1010

12V to 600VAC (50 to 500Hz) 14 to 122°F (-10°C to 50°C)

-4 to 140°F (-20 to 60°C)

<80%

7000 ft. (2000 meters) maximum.
This meter is intended for indoor use

4 LR44 batteries 6.3x0.75x1" / 2oz Category III 600V

Warranty

EXTECH INSTRUMENTS CORPORATION warrants this instrument to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies on sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department at (781) 890-7440 ext. 210 for authorization or visit our website at www.extech.com (click on 'Contact Extech' and go to 'Service Department' to request an RA number). A Return Authorization (RA) number must be issued before any product is returned to Extech. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. Extech specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. Extech's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Copyright © 2008 Extech Instruments Corporation.

All rights reserved including the right of reproduction in whole or in part in any form.

Website: www.extech.com Email: support@extech.com V2.1 5/08

