# Honeywell

# Installation Instructions for the

# **4AV Series Vane Sensors**

PK 87605

# **A** WARNING

# **PERSONAL INJURY**

DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

# **GENERAL INFORMATION**

4AV Hall effect vane sensors include a Hall effect sensor and a magnet in a common package. They are operated by passing a ferrous vane through the gap between the magnet and the sensor.

With no vane in the gap, the output is Operated (conducting). With the vane in the gap, the output is Released (non-conducting). The vane actuator is annealed low carbon cold rolled steel, type AISI 1018 or lower in carbon. Minimum recommended vane dimensions are required to ensure operating characteristics will be met.

 
#### **ELECTRICAL CHARACTERISTICS**

Catalog Listing	Termination	Lead Length	Supply Voltage All Listings	Supply Current All Listings	Output Voltage All listings	Output Sink Current All listings
4AV15F	24 AWG Wire	$5.50 \pm 0.25$		18.5 mA Max	0.4 V Max	
4AV16F	24 AWG Wire	$7.45 \pm 0.25$	4.5 VDC	@ -40 °C	@125 °C	40 mA Max
4AV17F	24 AWG Wire	$13.15 \pm 0.50$	through 26.5 VDC	15.25 mA typical	0.1 typical	Dual output
4AV18F	24 AWG Wire	$18.15 \pm 0.50$	26.5 VDC			Dual output sink currents
4AV19F	24 AWG Wire	$22.00 \pm 0.50$		11.75 mA	0.075 V	are summed
4AV20F	.015 X .025 PCB	0.140		@25 °C	@25 °C typical	to reach total.
4AV20F-T1*	.025 X .025 Connector	AMP Terminal Block 103323-4		typical		
4AV20F-T2**	.025 X .025 Connector	Molex Terminal Block 22-05-3041				

<sup>\*</sup>Will mate with AMP Connector Housing 87499-8, not supplied

# VANE DIMENSIONS (mm/in)

Thickness	Min. Window	Min. Tooth	Min. Tooth Depth
1,0/0.4	10,2/.40	10,2/.40	9,27/.365
1,6/.06	10,2/.40	6,3/.25	9,27/.365




<sup>\*\*</sup>Will mate with Molex Connector Housing 2695/6471, not supplied

# **4AV Series Vane Sensors**

## MECHANICAL CHARACTERISTICS (mm/in)

Series	Left Operate a	Left Release b	Left Diff.	Right Operate d	Right Release c	Right Diff	L-R Diff.
4AV*	5,4/.213	6,0/.237	0,6/.024	8,6/.337	7,9/.313	0,6/.024	2,5/.100

\*Operating characteristics of the 4AV are adjusted to produce a .100 ± .010 dimension between the Operate point on one side of the package to the Release point on the other side. The actuator can be designed to produce a specific pulse width for timing or sequencing operations.

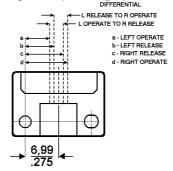


# **MOUNTING DIMENSIONS** (for reference only)


## CAUTION


#### PRODUCT DAMAGE

- Do not exceed electrical specifications.
- Do not mis-wire the output connection.
- Do not reverse supply voltage polarity.
- Handle terminals with care.

Failure to comply with these instructions may result in product damage.

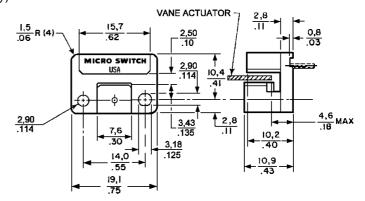

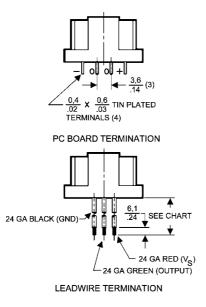

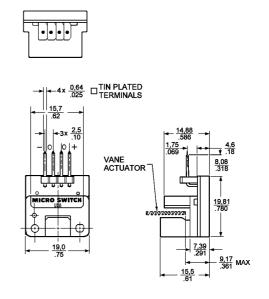

Mates with AMP housing 87499-8

# **4AV Series Vane Sensors**

#### **SOLDERING**

# CAUTION

#### PRODUCT DAMAGE

· Ensure iron tip is clean when soldering. Failure to comply with these instructions may result in product damage.

#### **Hand Soldering**

The following is recommended:

- 1. Flux: Rosin Base
- 2. Solder: Kester #44 60-40 rosin core, or equivalent.
- 3. Soldering Iron: Type; Weller, Model TC-552, 55 watt or equivalent.
- 4. Tip Size: 3mm (.118 in.) Diameter x 30mm (1.182 in.) long
- 5. Tip Temperature: 288°C (550°F) max
- 6. Terminal Contact Time: 6 seconds max.

### **Wave Soldering**

The following is recommended:

- 1. Flux: London Chemical Co. Loncoflux 106A35 or equivalent
- 2. Preheat: Preheaters should be set to give 95 °C (200 °F) on the top (component side) of printed circuit board just prior to board entering the wave. (May have to be adjusted depending upon board thickness.)
- 3. Solder Temperature: 260 °C (500 °F) max.; preferably 252 °C to 260 °C (485 °F to 500 °F).
- 4. Speed: Set conveyor speed to approximately 4.5 feet/minute (1,37 meters/minute).
- 5. Printed circuit board requires rigid support during wave soldering.

#### **CLEANING**

## **Hand Cleaning**

Clean areas with a 50-50 mixture of isopropyl alcohol and clean tap water. Dry in a 71 °C (160 °F) oven for 10-15 minutes, preferably in a noncirculating oven. This will remove all moisture from the assembly, which must be done before electrical testing, or application.

# Machine Cleaning \*

**Detergent: London Chemical Company** Loncoterge 444-NRT6 or equivalent. Equipment: Dee Electric Aqueous Cleaner or equivalent. The following is reccommended:

- Wash Section: 55 °C (130 °F) maximum water temperature, 5 to 10% maximum solution soft water, low pressure nozzles (60 psi) on top spray and high pressure nozzles (120 psi) on bottom spray, conveyor speed 3 feet/minute minimum. Recirculating tank.
- 2. Rinse Section #1: Clean tap water up to 25 grains hard, salt free (to minimize possibility of corrosion), unheated, non-recirculating, with high pressure nozzles (120 psi).
- Rinse Section #2: Clean deionized water only, high pressure nozzles (120 psi), unheated and non-recirculating.
- 4. Air Knife Section: To remove excessive amounts of water.
- 5. Drying Section: 71°C (160 °F) drying for 10-15 minutes, preferably in a non-circulating conveyor oven.
- \* In this cleaning system, the detergent in the wash section removes the non-polar contaminants, the first rinse removes the detergent solution, and the deionized water rinse removes the polar contaminants. The air knife and dryer remove all the moisture from the assembly, which must be done before electrical testing or application.

# CAUTION


#### PRODUCT DAMAGE

• Ensure cleaner does not come in contact with sensor If other cleaning methods are selected for removal of flux residue.

Failure to comply with these instructions may result in product damage.

# **4AV Series Vane Sensors**

#### **EXAMPLE WIRING DIAGRAMS**

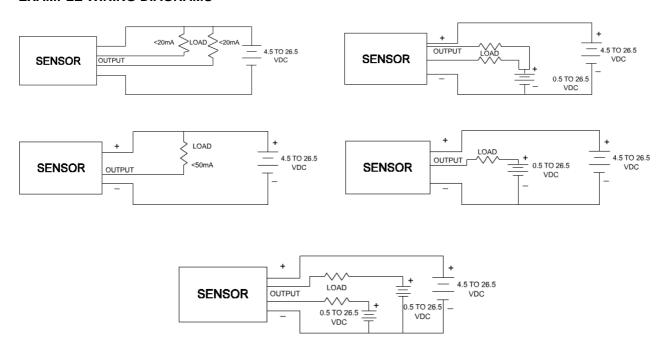

## WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Contact your local sales office for warranty information. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace without charge those items it finds defective. The foregoing is Buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

For application assistance, current specifications, or name of the nearest Authorized Distributor, contact a nearby sales office. Or call:

1-800-537-6945 USA

1-800-737-3360 Canada

1-815-235-6847 International

#### **FAX**

1-815-235-6545 USA

# **INTERNET**

www.honeywell.com/sensing info.sc@honeywell.com

Honeywell

# Sensing and Control

Honeywell Inc. 11 West Spring Street Freeport, Illinois 61032

