

## LM25066

# System Power Management and Protection IC with PMBus™

## General Description

The LM25066 combines a high performance hot-swap controller with a PMBus™ compliant SMBus/I<sup>2</sup>C interface to accurately measure, protect and control the electrical operating conditions of computing and storage blades connected to a backplane power bus. The LM25066 continuously supplies real-time power, voltage, current, temperature and fault data to the system management host via the SMBus interface.

The LM25066 control block includes a unique hot-swap architecture that provides current and power limiting to protect sensitive circuitry during insertion of boards into a live system backplane, or any other "hot" power source. A fast acting circuit breaker prevents damage in the event of a short circuit on the output. The input under-voltage and over-voltage levels and hysteresis are configurable, as well as the insertion delay time and fault detection time. A temperature monitoring block on the LM25066 interfaces with a low-cost external diode for monitoring the temperature of the external MOSFET or other thermally sensitive components. The POWER GOOD output provides a fast indicator when the input and/or output voltages are outside their programmed range. LM25066 current measurement accuracy is  $\pm 2.4\%$  over the temperature range.

The LM25066 monitoring block computes both the real-time and average values of subsystem operating parameters ( $V_{IN}$ ,  $I_{IN}$ ,  $P_{IN}$ ,  $V_{OUT}$ ) as well as the peak power. Accurate power averaging is accomplished by averaging the product of the input voltage and current. A black box (Telemetry/Fault Snapshot) function captures and stores telemetry data and device status in the event of a warning or a fault.

## Features

- Input voltage range: +2.9V to +17V
- I<sup>2</sup>C/SMBus interface and PMBus compliant command structure
- Programmable 25mV or 46mV Current Limit Threshold with Power Limiting (MOSFET Power Dissipation Limiting)
- Configurable Circuit Breaker protection for hard shorts
- Configurable Under-Voltage and Over-Voltage protection with hysteresis
- Remote temperature sensing with programmable warning and shutdown thresholds
- Detection and notification of damaged MOSFET condition
- Real time monitoring of  $V_{IN}$ ,  $V_{OUT}$ ,  $I_{IN}$ ,  $P_{IN}$ ,  $V_{AUX}$  with 12 bit resolution and 1 kHz sampling rate
- Current measurement accuracy:  $\pm 2.4\%$  over temperature
- Power measurement accuracy:  $\pm 3.0\%$  over temperature
- True Input Power accurately averages dynamic power readings
- Averaging of  $V_{IN}$ ,  $I_{IN}$ ,  $P_{IN}$ , and  $V_{OUT}$  over programmable interval ranging from 0.001 to 4 seconds
- Programmable WARN and FAULT thresholds with SMBALERT notification
- Black box capture of telemetry measurements and device status triggered by WARN or FAULT condition
- Full featured application design and development software

## Applications


- Server Backplane Systems
- Base Station Power Distribution Systems
- Solid State Circuit Breaker

## Package

24-Lead LLP Package

## Typical Application Schematic


[查询"LM25066"供应商](#)

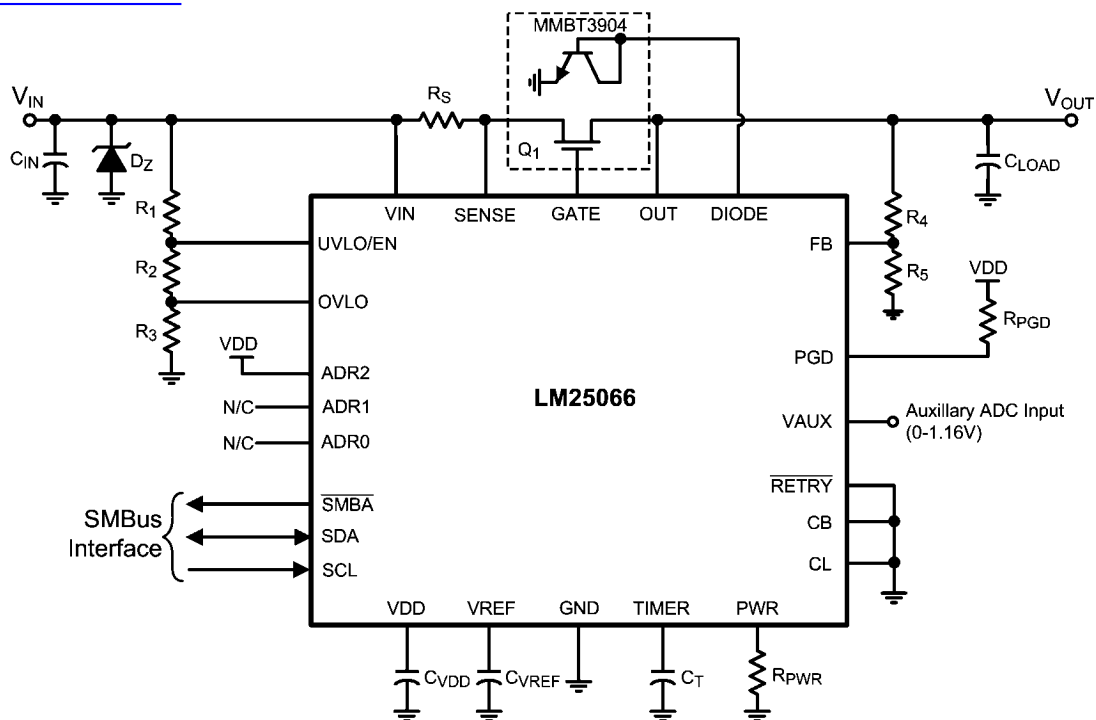

30115811

## Connection Diagram

Exposed pad on the bottom can be connected to either ground, or left floating.

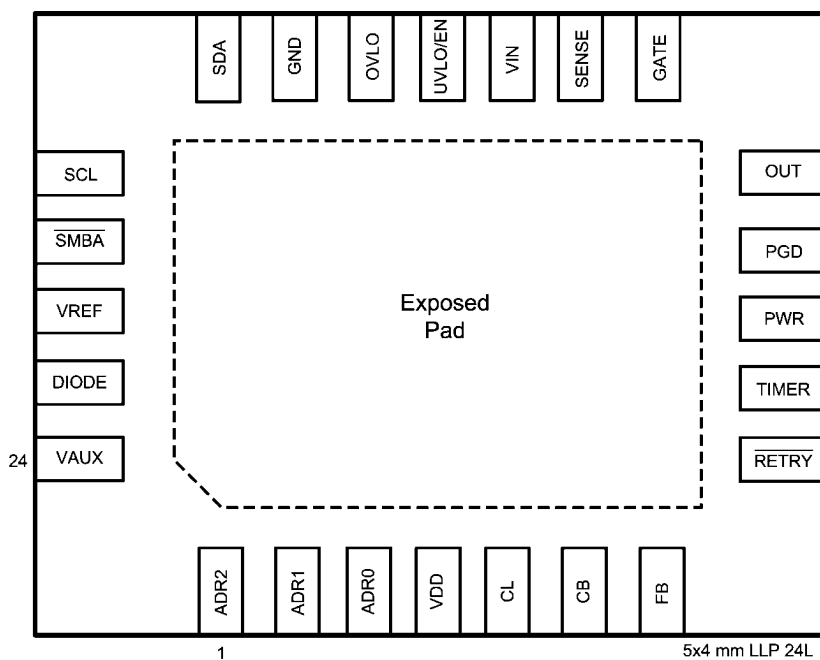

Top View  
LLP-24

30115802

## Ordering Information

查询“LM25066”供应商

Order Number	Package Type	Package Drawing	Supplied As
LM25066PSQ	LLP-24	SQA24B	1,000 units in tape and reel
LM25066PSQE	LLP-24	SQA24B	250 units in tape and reel
LM25066PSQX	LLP-24	SQA24B	4,500 units in tape and reel

## Pin Descriptions

Pin No.	Name	Description	Applications Information
Pad	Exposed Pad	Exposed pad of LLP package.	No internal electrical connections. Solder to the ground plane to reduce thermal resistance
1	ADR2	SMBUS address line 2	3 - state address line. Should be connected to GND, VDD, or left floating.
2	ADR1	SMBUS address line 1	3 - state address line. Should be connected to GND, VDD, or left floating.
3	ADR0	SMBUS address line 0	3 - state address line. Should be connected to GND, VDD, or left floating.
4	VDD	Internal sub-regulator output	Internally sub-regulated 4.5V bias supply. Connect a 1 $\mu$ F capacitor on this pin to ground for bypassing.
5	CL	Current limit range	Connect this pin to GND to set the nominal over-current threshold at 25mV. Connecting CL to VDD will set the over-current threshold to be 46mV.
6	CB	Circuit breaker range	This pin sets the circuit breaker protection point in relation to the over current trip point. When connected to GND, this pin will set the circuit breaker point to be 1.8 times the over current threshold. Connecting this pin to VDD sets the circuit breaker trip point to be 3.6 times the over current threshold.
7	FB	Power Good feedback	An external resistor divider from the output sets the output voltage at which the PGD pin switches. The threshold at the pin is 1.167V. An internal 24 $\mu$ A current source provides hysteresis.
8	RETRY	Fault retry input	This pin configures the power up fault retry behavior. When this pin is grounded the device will continually try to engage power during a fault. If the pin is connected to VDD the device will latch off during a fault.
9	TIMER	Timing capacitor	An external capacitor connected to this pin sets the insertion time delay, Fault Timeout Period and restart timing.
10	PWR	Power limit set	An external resistor connected to this pin, in conjunction with the current sense resistor ( $R_S$ ), sets the maximum power dissipation allowed in the external series pass MOSFET.
11	PGD	Power Good indicator	An open drain output. This output is high when the voltage at the FB pin is above 1.167V and the input supply is within its under voltage and over voltage thresholds. Connect to the output rail (external MOSFET source). $V_{DS}$ voltage for power limiting and to monitor the output voltage.
12	OUT	Output feedback	Connect to the output rail (external MOSFET source). Internally used to determine the MOSFET $V_{DS}$ voltage for power limiting, and to monitor the output voltage.
13	GATE	Gate drive output	Connect to the external MOSFET's gate.
14	SENSE	Current sense input	The voltage across the current sense resistor ( $R_S$ ) is measured from VIN to this pin. If the voltage across $R_S$ reaches over current threshold the load current is limited and the fault timer activates.
15	VIN	Positive supply input	A small ceramic bypass capacitor close to this pin is recommended to suppress transients which occur when the load current is switched off.
16	UVLO/EN	Under-voltage lockout	An external resistor divider from the system input voltage sets the under-voltage turn-on threshold. An internal 23 $\mu$ A current source provides hysteresis. The enable threshold at the pin is 1.16V. This pin can also be used for remote shutdown control.
17	OVLO	Over-voltage lockout	An external resistor divider from the system input voltage sets the over-voltage turn-off threshold. An internal 23 $\mu$ A current source provides hysteresis. The disable threshold at the pin is 1.16V.
18	GND	Circuit ground	
19	SDA	SMBus data pin	Data pin for SMBus.
20	SCL	SMBus clock	Clock pin for SMBus.

Pin No.	Name	Description	Applications Information
21	SMBA	SMBus alert line	Alert pin for SMBus.
22	VREF	Internal Reference	Internally generated precision 2.73V reference used for analog to digital conversion. Connect a 1 $\mu$ F capacitor on this pin to ground for bypassing.
23	DIODE	External diode	Connect this to a diode-configured MMBT3904 NPN transistor for temperature monitoring.
24	VAUX	Auxiliary voltage input	Auxiliary pin allows voltage telemetry from an external source. Full scale input of 1.16V.

**Absolute Maximum Ratings** (Note 1)

查询"LM25066"供应商  
If Military/Aerospace specified devices are required, please contact the National Semiconductor Sales Office/Distributors for availability and specifications.

VIN, GATE, FB, UVLO, OVLO, SENSE, PGD to GND (Note 6)	-0.3V to 20V
SCL, SDA, SMBA, CL, CB, ADR0, ADR1, ADR2, VDD, VAUX, DIODE, RETRY to GND	-0.3V to 6V
VIN to SENSE	-0.3V to +0.3V

ESD Rating (Note 2)

2kV

Human Body Model

Storage Temperature

-65°C to +150°C

Junction Temperature

+150°C

**Operating Ratings**

VIN, SENSE, OUT voltage	+2.9V to 17V
VDD	2.9V to +5.5V
Junction Temperature	-40°C to +125°C

**Electrical Characteristics**

Limits in standard type are for  $T_J = 25^\circ\text{C}$  only; limits in boldface type apply over the junction temperature ( $T_J$ ) range of  $-40^\circ\text{C}$  to  $+85^\circ\text{C}$ . Minimum and Maximum limits are guaranteed through test, design, or statistical correlation. Typical values represent the most likely parametric norm at  $T_J = 25^\circ\text{C}$ , and are provided for reference purposes only. Unless otherwise stated the following conditions apply: VIN = 12V. See (Note 3) and (Note 7).

Symbol	Parameter	Conditions	Min.	Typ.	Max.	Units
<b>Input (VIN Pin)</b>						
$I_{IN-EN}$	Input Current, enabled	UVLO = 2V and OVLO = 0.7V		5.8	<b>8</b>	mA
POR	Power On Reset threshold at VIN	VIN Increasing		2.6	<b>2.8</b>	V
$POR_{HYS}$	$POR_{EN}$ Hysteresis	VIN decreasing		150		mV
<b>VDD Regulator (VDD pin)</b>						
$V_{DD}$		$I_{VDD} = 5\text{mA}$ , VIN = 12V	<b>4.3</b>	4.5	<b>4.7</b>	V
$V_{DO}$	VDD Dropout	$I_{VDD} = 5\text{mA}$ , VIN = 4.5V	<b>3.5</b>	3.9	<b>4.3</b>	V
$V_{DDILIM}$	VDD Current Limit		<b>25</b>	45		mA
<b>UVLO/EN, OVLO Pins</b>						
$UVLO_{TH}$	UVLO threshold		<b>1.147</b>	1.16	<b>1.173</b>	V
$UVLO_{HYS}$	UVLO hysteresis current	UVLO = 1V	<b>18</b>	23	<b>28</b>	$\mu\text{A}$
$UVLO_{DEL}$	UVLO delay	Delay to GATE high		8		$\mu\text{s}$
		Delay to GATE low		20		
$UVLO_{BIAS}$	UVLO bias current	UVLO = 3V			<b>1</b>	$\mu\text{A}$
$OVLO_{TH}$	OVLO threshold		<b>1.141</b>	1.16	<b>1.185</b>	V
$OVLO_{HYS}$	OVLO hysteresis current	OVLO = 1V	<b>-28</b>	-23	<b>-18</b>	$\mu\text{A}$
$OVLO_{DEL}$	OVLO delay	Delay to GATE high		19		$\mu\text{s}$
		Delay to GATE low		9		
$OVLO_{BIAS}$	OVLO bias current	OVLO = 1V			<b>1</b>	$\mu\text{A}$
<b>Power Good (PGD pin)</b>						
$PGD_{VOL}$	Output low voltage	$I_{SINK} = 2\text{mA}$		25	<b>60</b>	mV
$PGD_{IOH}$	Off leakage current	$V_{PGD} = 17\text{V}$			<b>1</b>	$\mu\text{A}$
$PGD_{DELAY}$	Power Good Delay	$V_{FB}$ to $V_{PG}$		115		ns
<b>FB Pin</b>						
$FB_{TH}$	FB Threshold		<b>1.141</b>	1.167	<b>1.19</b>	V
$FB_{HYS}$	FB Hysteresis		<b>-31</b>	-24	<b>-18</b>	$\mu\text{A}$
$FB_{LEAK}$	Off Leakage Current	$V_{FB} = 1\text{V}$			<b>1</b>	$\mu\text{A}$
<b>Power Limit (PWR Pin)</b>						
$PWR_{LIM}$	Power limit sense voltage (VIN-SENSE)	SENSE-OUT = 12V, $R_{PWR} = 25\text{k}\Omega$	<b>9</b>	12.5	<b>15</b>	mV
$I_{PWR}$	PWR pin current	$V_{PWR} = 2.5\text{V}$		-10		$\mu\text{A}$
$R_{SAT(PWR)}$	PWR pin impedance when disabled	UVLO = 0.7V		180		$\Omega$



Symbol	Parameter	Conditions	Min.	Typ.	Max.	Units
<b>Telemetry Accuracy</b>						
$IIN_{FSR}$	Current input full scale range	CL = GND		30.2		mV
		CL = VDD		60.4		mV
$IIN_{LSB}$	Current input LSB	CL = GND		7.32		$\mu$ V
		CL = VDD		14.64		$\mu$ V
$VAUX_{FSR}$	VAUX input full scale range			1.16		V
$VAUX_{LSB}$	VAUX input LSB			283.2		$\mu$ V
$VIN_{FSR}$	Input voltage full scale range			18.7		V
$VIN_{LSB}$	Input voltage LSB			4.54		mV
$IIN_{ACC}$	Input Current Accuracy	$VIN - SENSE = 25mV$ , CL = GND	<b>-2.7</b>		<b>+2.4</b>	%
		$VIN - SENSE = 25mV$ , CL = GND $T_J = 10^\circ C$ to $85^\circ C$	<b>-2.4</b>		<b>+2.4</b>	
$V_{ACC}$	VAUX, VIN, VOUT	$VIN$ , VOUT = 12V VAUX = 1V	<b>-1.6</b>		<b>+1.4</b>	%
		$VIN$ , VOUT = 12V VAUX = 1V $T_J = 10^\circ C$ to $85^\circ C$	<b>-1.4</b>		<b>+1.4</b>	
$PIN_{ACC}$	Input Power Accuracy	$VIN = 12V$ , $VIN - SENSE = 25mV$ , CL = GND	<b>-3.0</b>		<b>+3.0</b>	%
<b>Remote Diode Temperature Sensor</b>						
$T_{ACC}$	Temperature Accuracy Using Local Diode	$T_A = 10^\circ C$ to $85^\circ C$		2	<b>10</b>	$^\circ C$
	Remote Diode Resolution			9		bits
$I_{DIODE}$	External Diode Current Source	High Level		250	<b>300</b>	$\mu A$
		Low Level		9.4		$\mu A$
	Diode Current Ratio			26		
<b>PMBus Pin Thresholds (SMB<math>\overline{A}</math>, SDA, SCL)</b>						
$V_{IL}$	Data, Clock Input Low Voltage				<b>0.8</b>	V
$V_{IH}$	Data, Clock Input High Voltage		<b>2.1</b>		<b>5.5</b>	V
$V_{OL}$	Data Output Low Voltage	$I_{PULLUP} = 500 \mu A$	<b>0</b>		<b>0.4</b>	V
$I_{LEAK}$	Input Leakage Current	SDA, SMB $\overline{A}$ , SCL = 5V			<b>1</b>	$\mu A$
<b>Configuration Pin Thresholds (CB, CL, RETRY)</b>						
$V_{IH}$	Threshold Voltage		<b>3</b>			V
$I_{LEAK}$	Input Leakage Current	CI, CB, RETRY = 5V			<b>1</b>	mA
<b>Thermal (Note 5)</b>						
$\theta_{JA}$	Junction to Ambient			42.3		$^\circ C/W$
$\theta_{JC}$	Junction to Case			9.5		$^\circ C/W$

**Note 1:** Absolute Maximum Ratings indicate limits beyond which damage to the device may occur. Operating Ratings indicate conditions for which the device is intended to be functional, but do not guarantee specific performance limits. For guaranteed specifications and conditions see the Electrical Characteristics.

**Note 2:** The human body model is a 100 pF capacitor discharged through a 1.5 k $\Omega$  resistor into each pin.

**Note 3:** Current out of a pin is indicated as a negative value.

**Note 4:** OUT bias current (disabled) due to leakage current through an internal 0.9 M $\Omega$  resistance from SENSE to VOUT.

**Note 5:** Junction to ambient thermal resistance is highly application and board layout dependent. Specified thermal resistance values for the package specified is based on a 4-layer, 4"x3", 2/1/1/2 oz. Cu board as per JEDEC standards is used.


**Note 6:** The GATE pin voltage is typically 7.5V above VIN when the LM25066 is enabled. Therefore the Absolute Maximum Rating for VIN applies only when the LM25066 is disabled, or for a momentary surge to that voltage since the Absolute Maximum Rating for the GATE pin is also 20V.

**Note 7:** All limits are guaranteed. All electrical characteristics having room temperature limits are tested during production at  $T_A = 25^\circ C$ . All hot and cold limits are guaranteed by correlating the electrical characteristics to process and temperature variations and applying statistical process control.


# Typical Performance Characteristics

查询“LM25066”供应商


Unless otherwise specified the following conditions apply:  $T_J =$

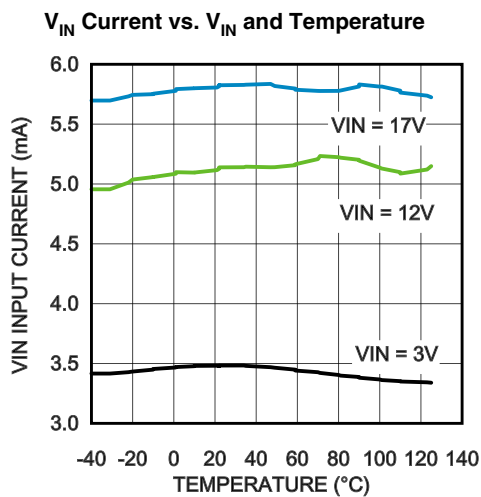


30115871

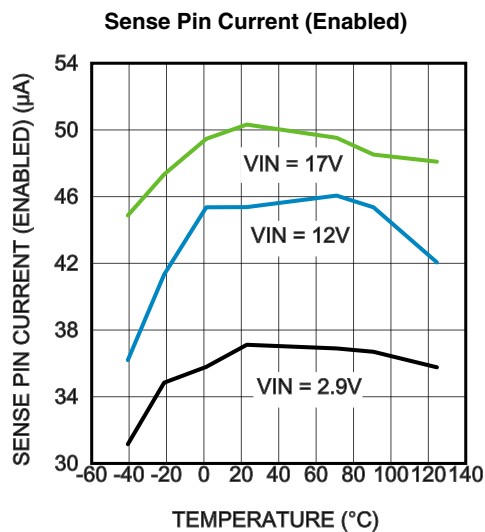


30115876

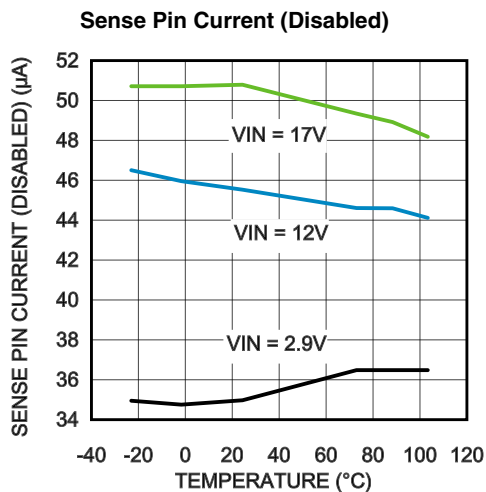


30115875

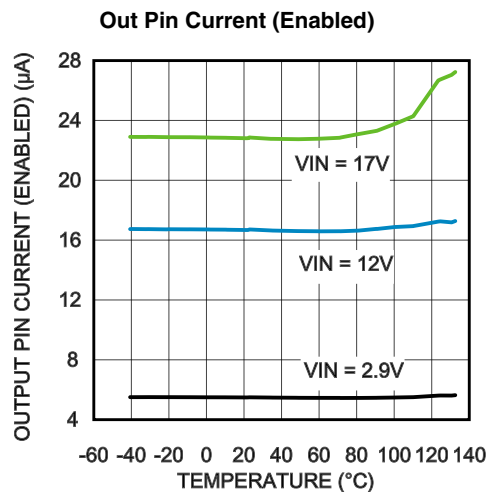

30115874

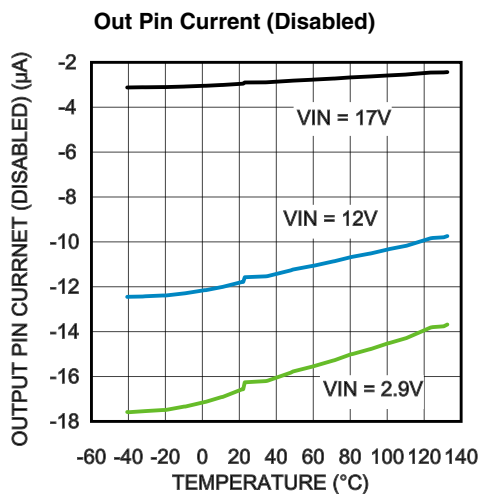


30115873

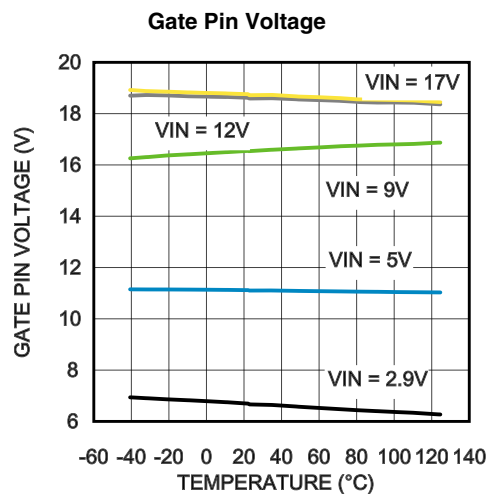

30115872




Gate Pin Source Current  
[查询"LM25066"供应商](#)

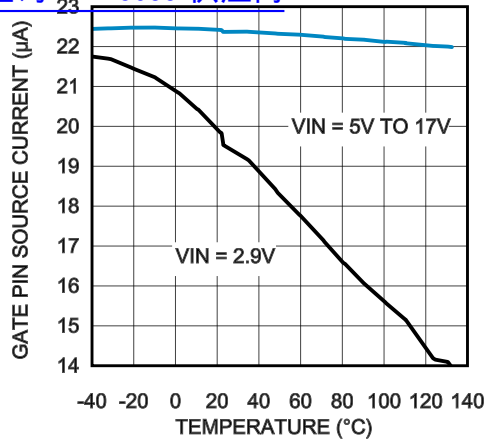


30115877

Power Limit Threshold vs Temperature

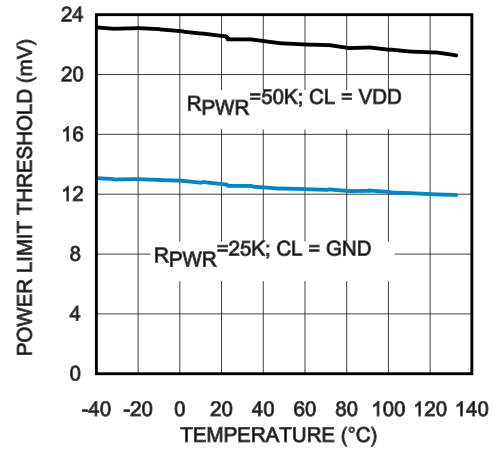


30115889

PGD Low Voltage vs Temperature

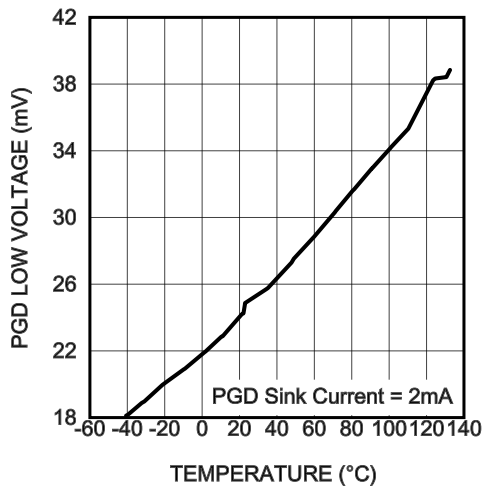


30115878

UVLO Threshold vs Temperature

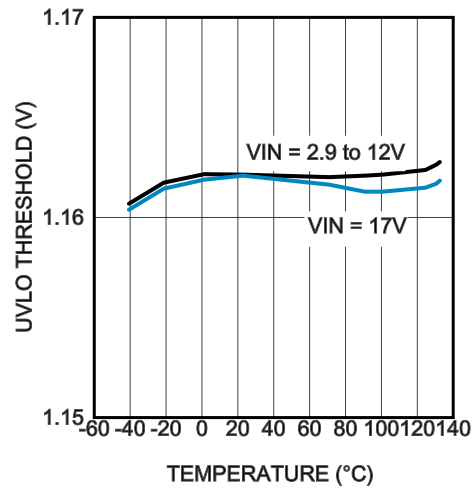


30115881

UVLO Hysteresis Current vs Temperature

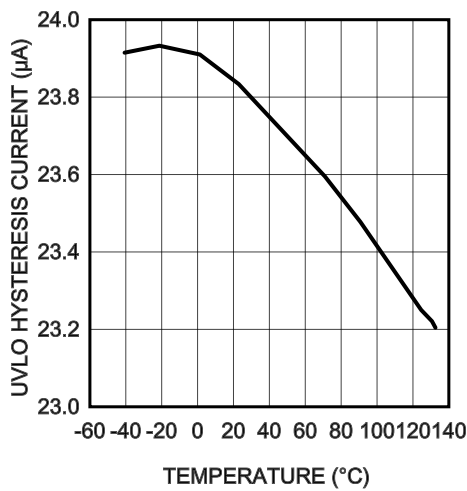


30115882

FB Threshold vs Temperature

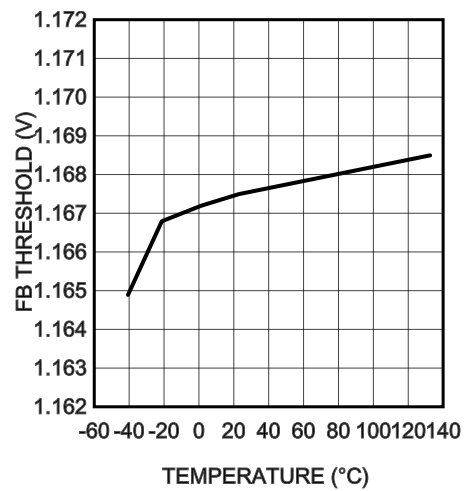


30115879

OVLO Threshold vs Temperature  
[查询"LM25066"供应商](#)

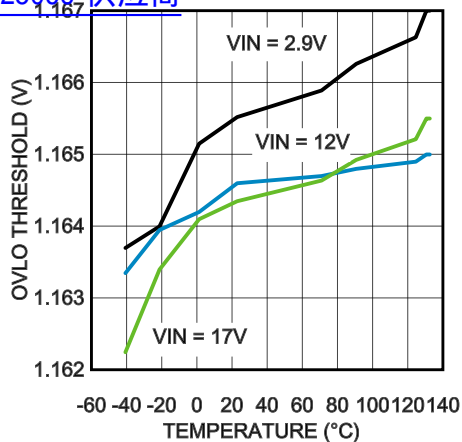


30115883

OVLO Hysteresis vs Temperature

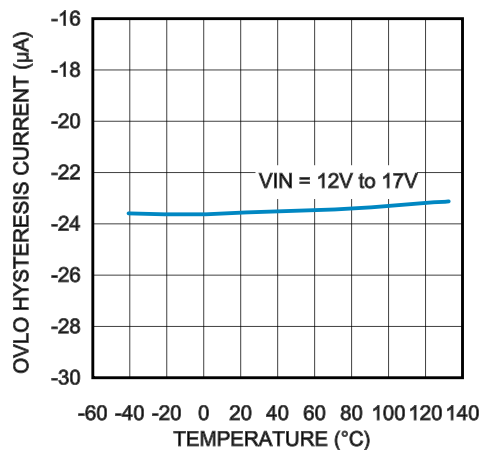


30115884

FB Hysteresis vs Temperature

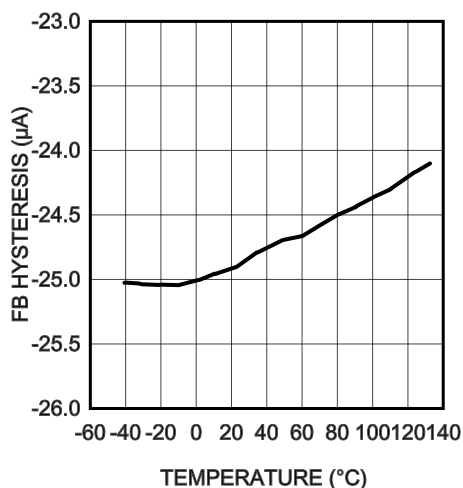


30115880

Current Limit Threshold vs Temperature (CL = GND)

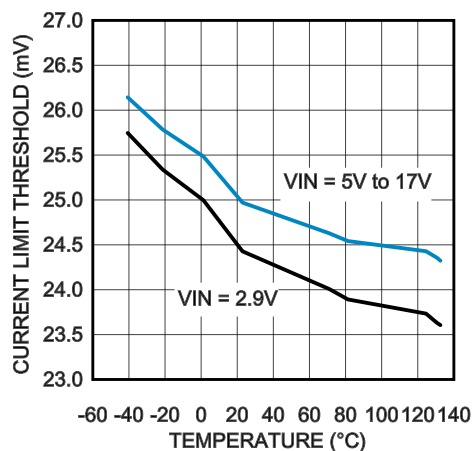


30115886

Current Limit Threshold vs Temperature (CL = VDD)

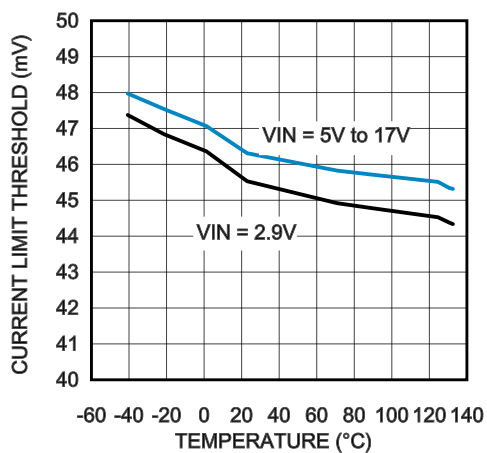


30115887

Circuit Breaker Threshold vs Temperature (CL = VDD)

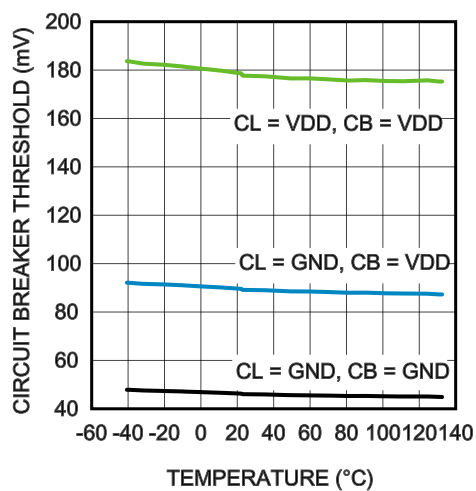


30115888

$V_{REF}$  vs Temperature  
[查询"LM25066"供应商](#)

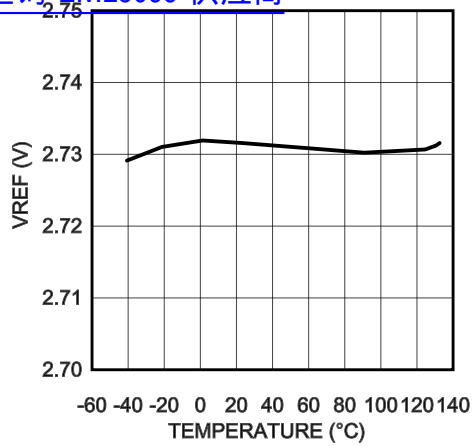


30115890

Startup (Insertion Delay)

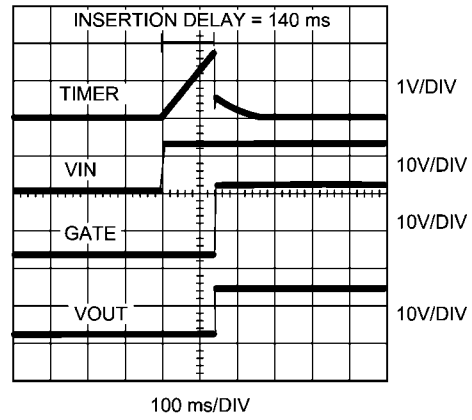


30115891

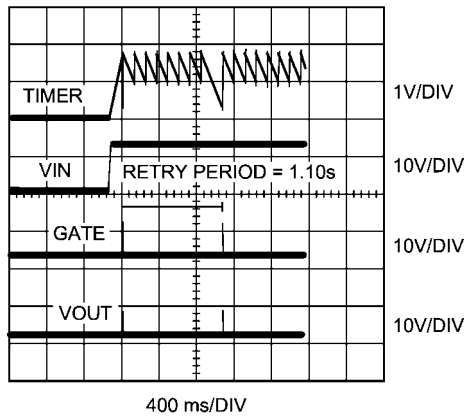Startup (Short circuit  $V_{OUT}$ )


30115892

Startup (5A Load)

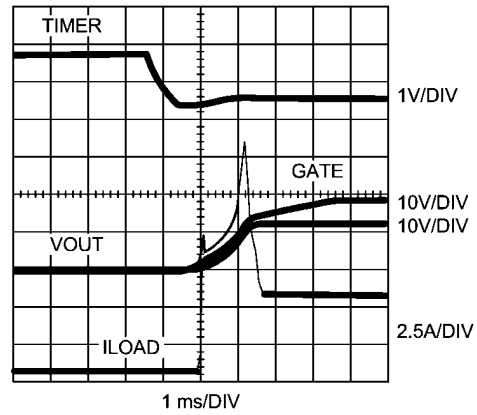


30115893

Startup (UVLO, OVLO)

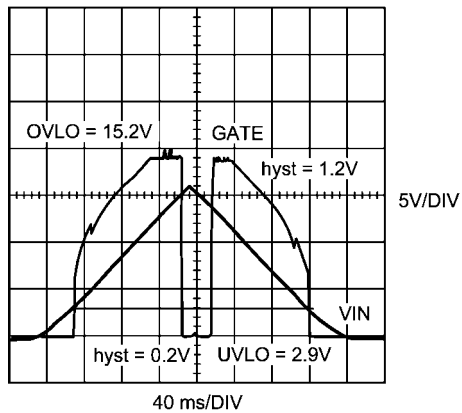


30115894

Startup (PGOOD)

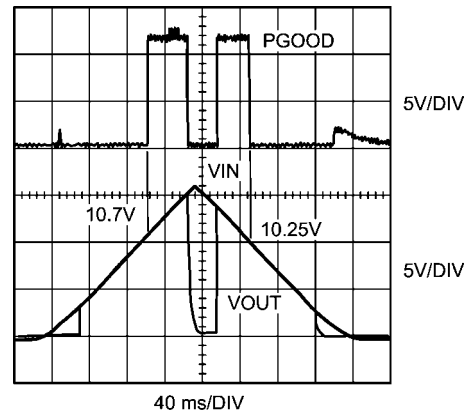


30115895

Current Limit Event (CL = GND)  
[查询"LM25066"供应商](#)

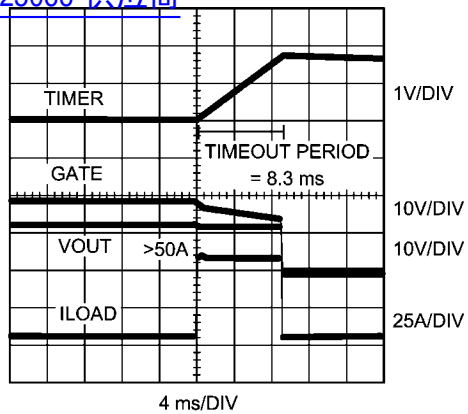


30115896

Circuit Breaker Event (CL = CB = GND)

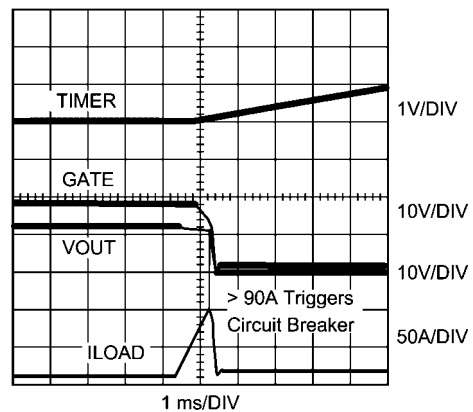


30115897

Retry Event (Retry = GND)

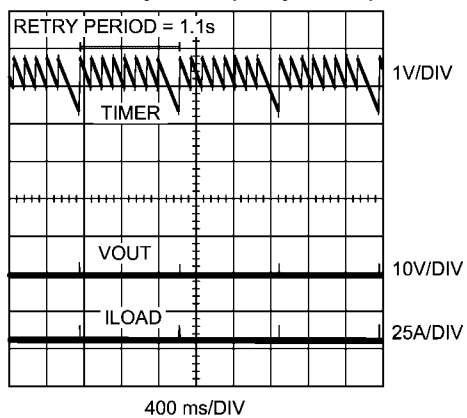


30115898


Latch Off (Retry = VDD)

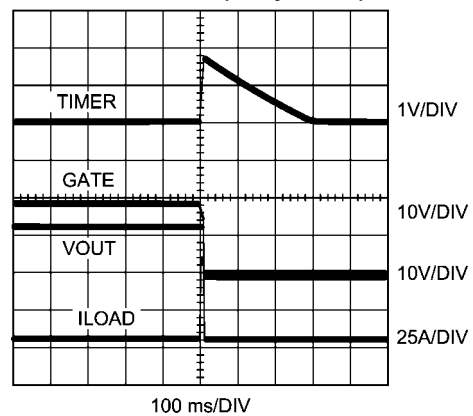

30115899

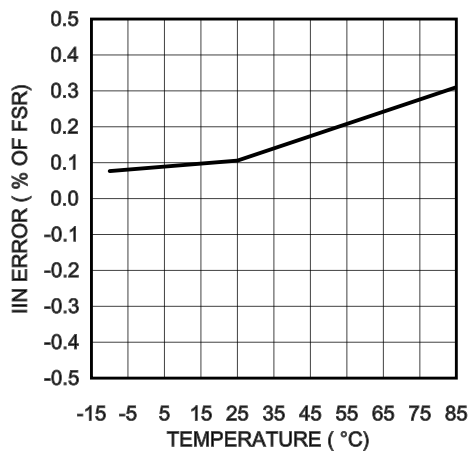


301158a8

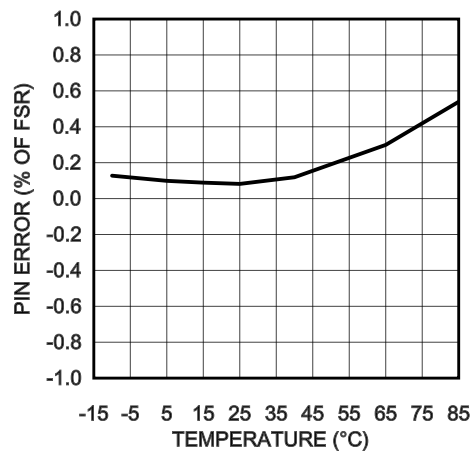

301158a9

## Block Diagram

查询"LM25066"供应商

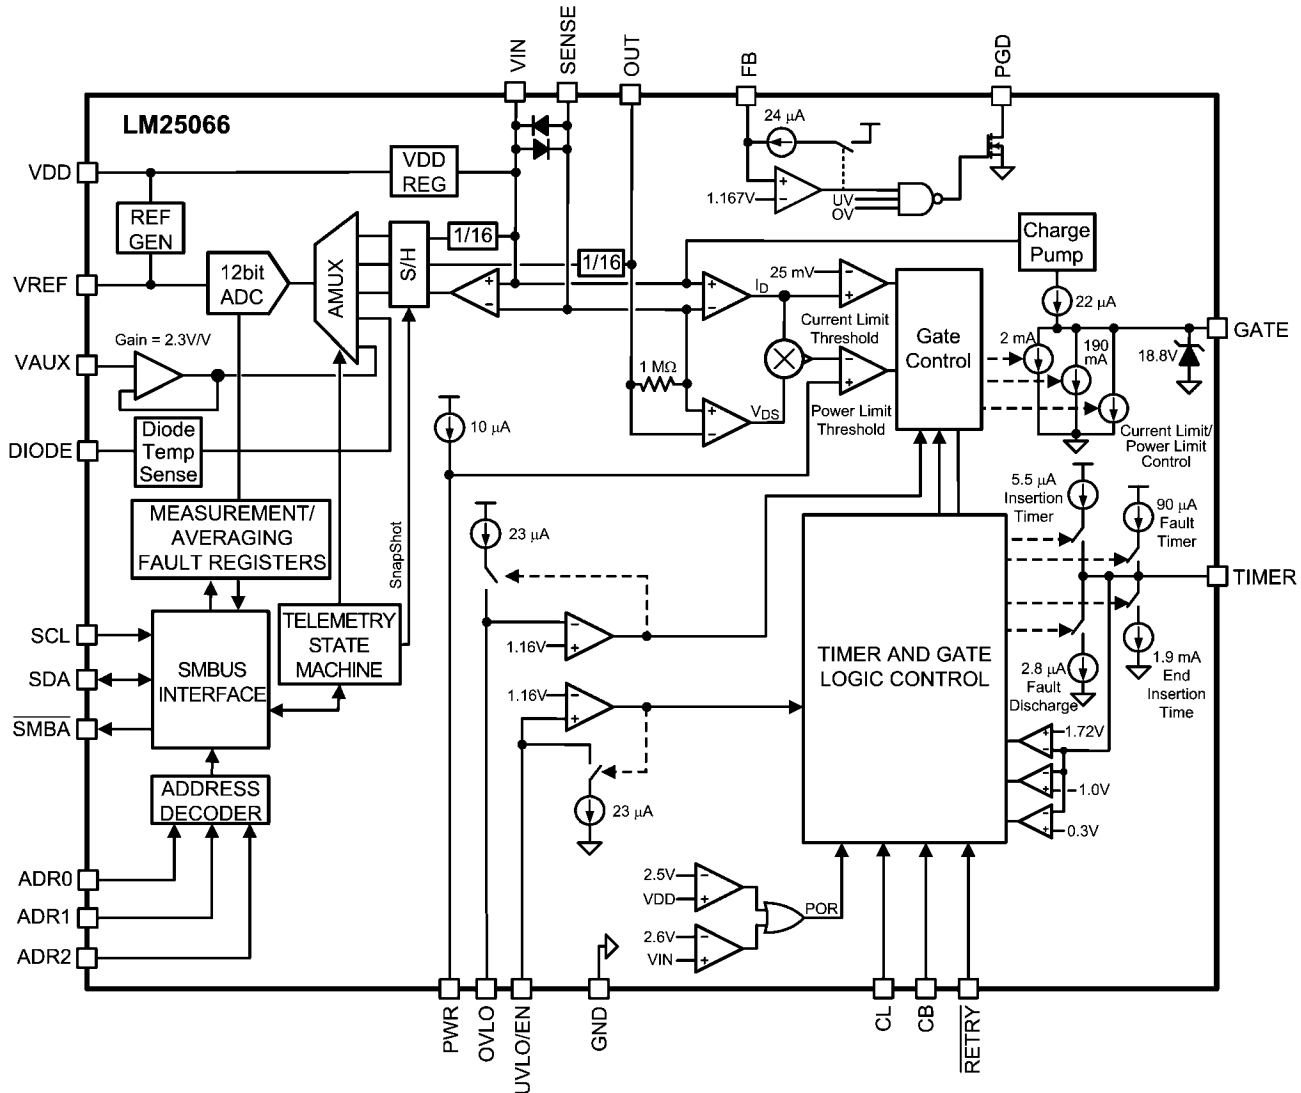

## Functional Description


The inline protection functionality of the LM25066 is designed to control the in-rush current to the load upon insertion of a circuit card into a live backplane or other "hot" power source, thereby limiting the voltage sag on the backplane's supply voltage, and the  $dV/dt$  of the voltage applied to the load. Effects on other circuits in the system are minimized, preventing possible unintended resets. A controlled shutdown when the circuit card is removed can also be implemented using the LM25066.

In addition to a programmable current limit, the LM25066 monitors and limits the maximum power dissipation in the series pass device to maintain operation within the device Safe Operating Area (SOA). Either current limiting or power limiting for an extended period of time results in the shutdown of the series pass device. In this event, the LM25066 can latch off or repetitively retry based on the hardware setting of the

RETRY pin. Once started, the number of retries can be set to none, 1, 2, 4, 8, 16, or infinite. The circuit breaker function quickly switches off the series pass device upon detection of a severe over-current condition. Programmable under-voltage lock-out (UVLO) and over-voltage lock-out (OVLO) circuits shut down the LM25066 when the system input voltage is outside the desired operating range.

The telemetry capability of the LM25066 provides intelligent monitoring of the input voltage, output voltage, input current, input power, temperature, and an auxiliary input. The LM25066 also provides a peak capture of the input power and programmable hardware averaging of the input voltage, current, power, and output voltage. Warning thresholds which trigger the SMBA pin may be programmed for input and output voltage, current, power and temperature via the PMBus interface. Additionally, the LM25066 is capable of detecting damage to the external MOSFET,  $Q_1$ .

30115810

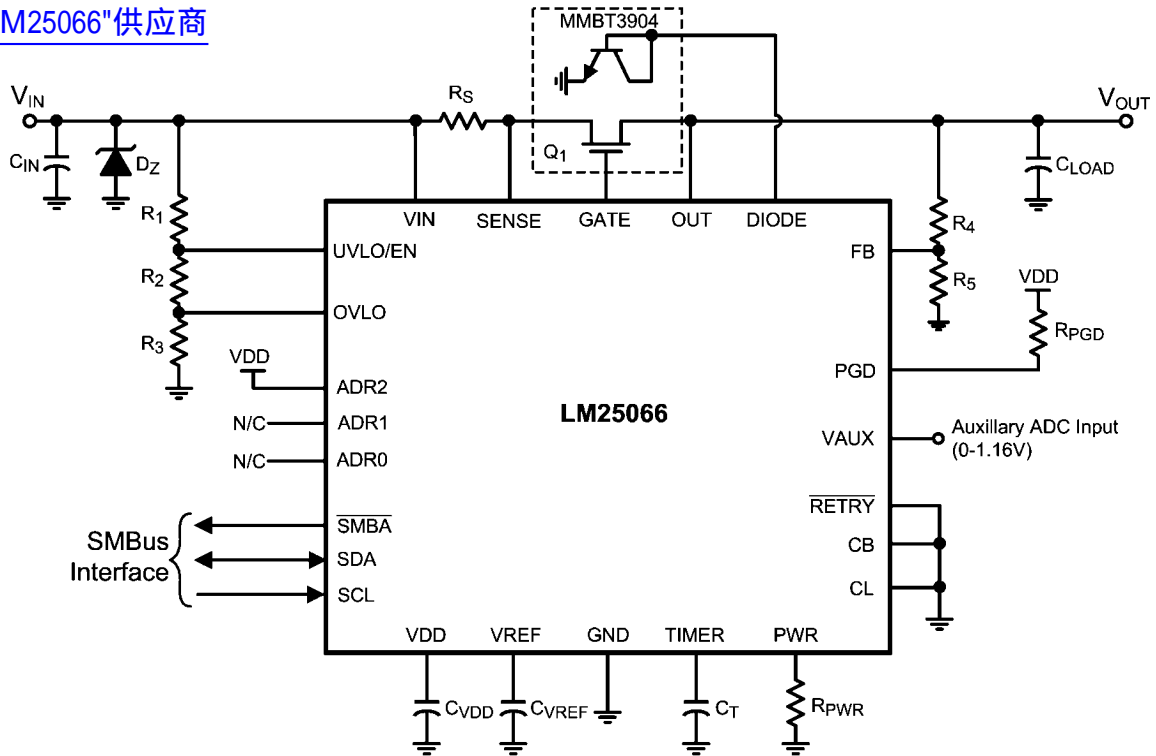[查询"LM25066"供应商](#)


30115811

FIGURE 1. Typical Application Circuit


## Power Up Sequence

The VIN operating range of the LM25066 is +2.9V to +17V, with a transient capability to +20V. Referring to [Figure 1](#), and [Figure 2](#), as the voltage at VIN initially increases, the external N-channel MOSFET ( $Q_1$ ) is held off by an internal 190 mA pull-down current at the GATE pin. The strong pull-down current at the GATE pin prevents an inadvertent turn-on as the MOSFET's gate-to-drain (Miller) capacitance is charged. Additionally, the TIMER pin is initially held at ground. When the VIN voltage reaches the POR threshold the insertion time begins. During the insertion time, the capacitor at the TIMER pin ( $C_T$ ) is charged by a 5.5  $\mu$ A current source, and  $Q_1$  is held off by a 2 mA pull-down current at the GATE pin regardless of the input voltage. The insertion time delay allows ringing and transients at VIN to settle before  $Q_1$  is enabled. The insertion time ends when the TIMER pin voltage reaches 1.7V.  $C_T$  is then quickly discharged by an internal 2 mA pull-down current. The GATE pin then switches on  $Q_1$  when  $V_{SYS}$  exceeds the UVLO threshold. If  $V_{SYS}$  is above the UVLO threshold at the end of the insertion time,  $Q_1$  switches on at that time. The GATE pin charge pump sources 22  $\mu$ A to charge the gate capacitance of  $Q_1$ . The maximum voltage at the GATE pin, with respect to ground, is limited by an internal 18.8V zener diode.

As the voltage at the OUT pin increases, the LM25066 monitors the drain current and power dissipation of MOSFET  $Q_1$ . In-rush current limiting and/or power limiting circuits actively control the current delivered to the load. During the in-rush limiting interval ( $t_2$  in [Figure 2](#)) an internal 90  $\mu$ A fault timer current source charges  $C_T$ . If  $Q_1$ 's power dissipation and the input current reduce below their respective limiting thresholds before the TIMER pin reaches 1.7V the 90  $\mu$ A current source is switched off, and  $C_T$  is discharged by the internal 2.8  $\mu$ A current sink ( $t_3$  in [Figure 2](#)). The in-rush limiting interval is complete when the voltage at the OUT pin increases to within 1.3V of the input voltage and the PGD pin switches high.

If the TIMER pin voltage reaches 1.7V before in-rush current limiting or power limiting ceases during  $t_2$ , a fault is declared and  $Q_1$  is turned off. See the Fault Timer & Restart section for a complete description of the fault mode.

The LM25066 will pull the SMBA pin low after the input voltage has exceeded its POR threshold to indicate that the volatile memory and device settings are in their default state. The CONFIG\_PRESET bit within the STATUS\_MFR\_SPECIFIC register (80h) indicates default configuration of warning thresholds and device operation and will remain high until a CLEAR\_FAULTS command is received.

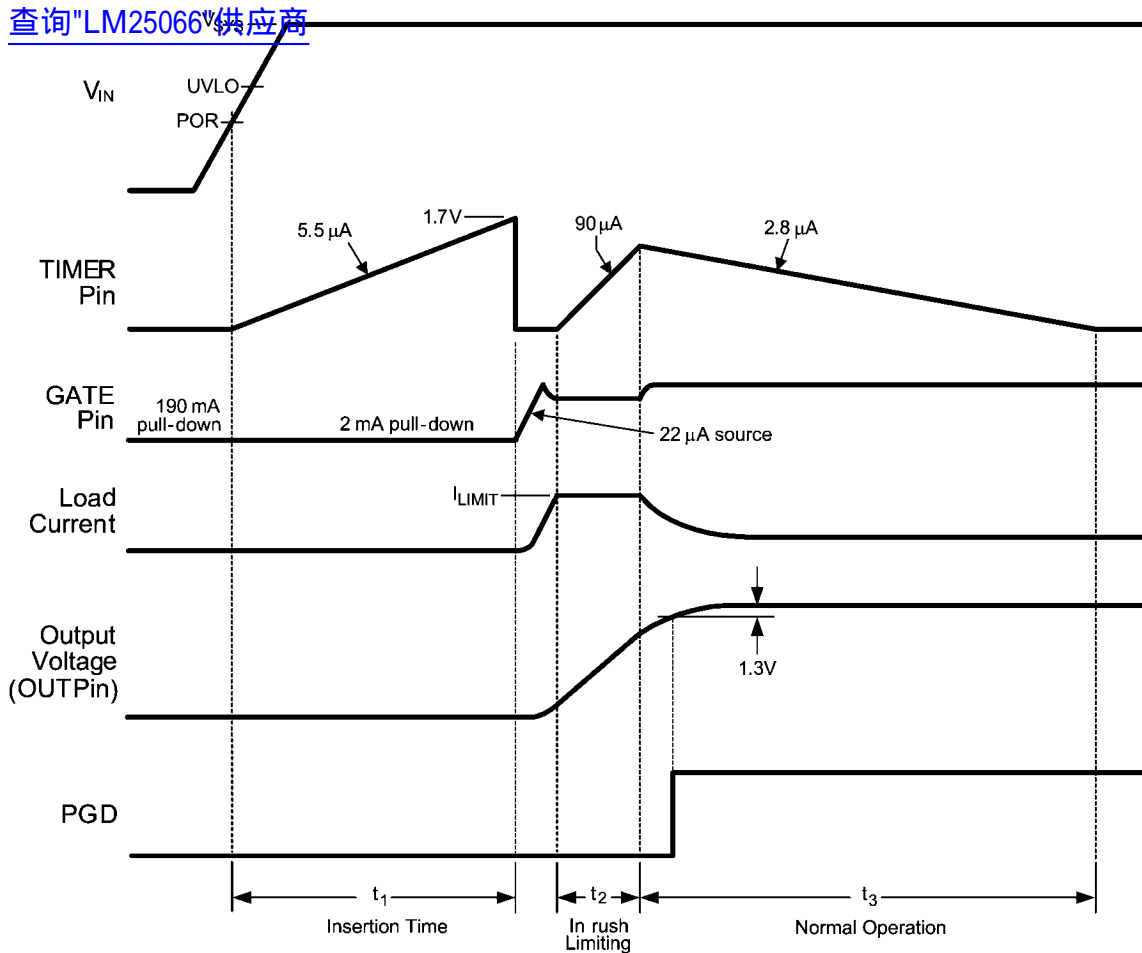[查询"LM25066"供应商](#)


30115813

FIGURE 2. Power Up Sequence (Current Limit Only)

## Gate Control

A charge pump provides the voltage at the GATE pin to enhance the N-Channel MOSFET's gate. During normal operating conditions ( $t_3$  in Figure 2) the gate of  $Q_1$  is held charged by an internal  $22\ \mu\text{A}$  current source. The voltage at the GATE pin (with respect to ground) is limited by an internal  $18.8\ \text{V}$  zener diode. See the graph "GATE Pin voltage vs.  $V_{IN}$ ". Since the gate-to-source voltage applied to  $Q_1$  could be as high as  $18.8\ \text{V}$  during various conditions, a zener diode with the appropriate voltage rating must be added between the GATE and OUT pins if the maximum  $V_{GS}$  rating of the selected MOSFET is less than  $18.8\ \text{V}$ . The external zener diode must have a forward current rating of at least  $190\ \text{mA}$ . When the system voltage is initially applied, the GATE pin is held low by a  $190\ \text{mA}$  pull-down current. This helps prevent an inadvertent turn-on of the MOSFET through its drain-gate capacitance as the applied system voltage increases.

During the insertion time ( $t_1$  in Figure 2) the GATE pin is held low by a  $2\ \text{mA}$  pull-down current. This maintains  $Q_1$  in the off-state until the end of  $t_1$ , regardless of the voltage at  $V_{IN}$  or UVLO. Following the insertion time, during  $t_2$  in Figure 2 the gate voltage of  $Q_1$  is modulated to keep the current or power dissipation level from exceeding the programmed levels. While in the current or power limiting mode, the TIMER pin capacitor is charging. If the current and power limiting cease

before the TIMER pin reaches  $1.7\ \text{V}$  the TIMER pin capacitor then discharges, and the circuit begins normal operation. If the in-rush limiting condition persists such that the TIMER pin reached  $1.7\ \text{V}$  during  $t_2$ , the GATE pin is then pulled low by the  $190\ \text{mA}$  pull-down current. The GATE pin is then held low until either a power up sequence is initiated (RETRY pin to VDD), or an automatic retry is attempted (RETRY pin to GROUND). See the Fault Timer & Restart section. If the system input voltage falls below the UVLO threshold, or rises above the OVLO threshold, the GATE pin is pulled low by the  $2\ \text{mA}$  pull-down current to switch off  $Q_1$ .

## Current Limit

The current limit threshold is reached when the voltage across the sense resistor  $R_S$  ( $V_{IN}$  to SENSE) exceeds the internal voltage limit of  $25\ \text{mV}$  or  $46\ \text{mV}$  depending on whether the CL pin is connected to GND or VDD, respectively. In the current limiting condition, the GATE voltage is controlled to limit the current in MOSFET  $Q_1$ . While the current limit circuit is active, the fault timer is active as described in the Fault Timer & Restart section. If the load current falls below the current limit threshold before the end of the Fault Timeout Period, the LM25066 resumes normal operation. If the current limit condition persists for longer than the Fault Timeout Period set by the timer capacitor,  $C_T$ , the IIN/PIN\_FAULT bit in the

STATUS\_INPUT (7Ch), and DIAGNOSTIC\_WORD (E1h) registers will be toggled high and  $\overline{\text{SMBA}}$  pin will be pulled low unless this feature is disabled using the ALERT\_MASK (D8h) register. For proper operation, the  $R_S$  resistor value should be no higher than 200 m $\Omega$ . Higher values may create instability in the current limit control loop. The current limit threshold pin value may be over-ridden by setting appropriate bits in the DEVICE\_SETUP register (D9h).

## Circuit Breaker

If the load current increases rapidly (e.g., the load is short circuited) the current in the sense resistor ( $R_S$ ) may exceed the current limit threshold before the current limit control loop is able to respond. If the current exceeds 1.8x or 3.6x (user settable) the current limit threshold,  $Q_1$  is quickly switched off by the 190 mA pull-down current at the GATE pin, and a Fault Timeout Period begins. When the voltage across  $R_S$  falls below the threshold the 190 mA pull-down current at the GATE pin is switched off, and the gate voltage of  $Q_1$  is then determined by the current limit or the power limit functions. If the TIMER pin reaches 1.7V before the current limiting or power limiting condition ceases,  $Q_1$  is switched off by the 2 mA pull-down current at the GATE pin as described in the Fault Timer & Restart section. A circuit breaker event will cause the CB\_FAULT bit in the STATUS\_MFR\_SPECIFIC (80h) and DIAGNOSTIC\_WORD (E1h) registers to be toggled high and  $\overline{\text{SMBA}}$  pin will be pulled low unless this feature is disabled using the ALERT\_MASK (D8h) register. The circuit breaker pin configuration may be over-ridden by setting appropriate bits in the DEVICE\_SETUP (D9h) register.


## Power Limit

An important feature of the LM25066 is the MOSFET power limiting. The Power Limit function can be used to maintain the maximum power dissipation of MOSFET  $Q_1$  within the device SOA rating. The LM25066 determines the power dissipation in  $Q_1$  by monitoring its drain-source voltage (SENSE to OUT), and the drain current through the  $R_S$  (VIN to SENSE). The product of the current and voltage is compared to the power limit threshold programmed by the resistor at the PWR pin. If the power dissipation reaches the limiting threshold, the GATE voltage is modulated to regulate the current in  $Q_1$ . While the power limiting circuit is active, the fault timer is active as described in the Fault Timer & Restart section. If the power limit condition persists for longer than the Fault Timeout Period set by the timer capacitor,  $C_T$ , the IIN/PIN\_FAULT bit in the STATUS\_INPUT (7Ch), and DIAGNOSTIC\_WORD (E1h) registers will be toggled high and  $\overline{\text{SMBA}}$  pin will be pulled low unless this feature is disabled using the ALERT\_MASK (D8h) register.

## Fault Timer & Restart

When the current limit or power limit threshold is reached during turn-on, or as a result of a fault condition, the gate-to-source voltage of  $Q_1$  is modulated to regulate the load current and power dissipation in  $Q_1$ . When either limiting function is active, an 90  $\mu\text{A}$  fault timer current source charges the external capacitor ( $C_T$ ) at the TIMER pin as shown in Figure 4 (Fault Timeout Period). If the fault condition subsides during the Fault Timeout Period before the TIMER pin reaches 1.7V, the LM25066 returns to the normal operating mode and  $C_T$  is discharged by the 1.9 mA current sink. If the TIMER pin reaches 1.7V during the Fault Timeout Period,  $Q_1$  is switched off by a 2 mA pull-down current at the GATE pin. The subsequent restart procedure then depends on the selected retry configuration.

If the RETRY pin is high, the LM25066 latches the GATE pin low at the end of the Fault Timeout Period.  $C_T$  is then discharged to ground by the 2.8  $\mu\text{A}$  fault current sink. The GATE pin is held low by the 2 mA pull-down current until a power up sequence is externally initiated by cycling the input voltage ( $V_{\text{SYS}}$ ), or momentarily pulling the UVLO/EN pin below its threshold with an open-collector or open-drain device as shown in Figure 2. The voltage at the TIMER pin must be <0.3V for the restart procedure to be effective. The TIMER\_LATCHED\_OFF bit in the DIAGNOSTIC\_WORD (E1h) register will remain high while the latched off condition persists.

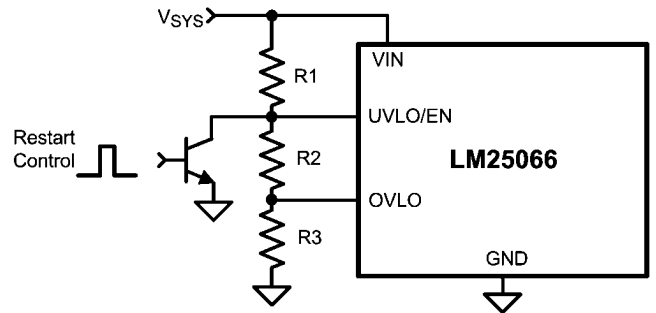

30115815

FIGURE 3. Latched Fault Restart Control

The LM25066 provides an automatic restart sequence which consists of the TIMER pin cycling between 1.7V and 1V seven times after the Fault Timeout Period, as shown in Figure 3. The period of each cycle is determined by the 90  $\mu\text{A}$  charging current, and the 2.8  $\mu\text{A}$  discharge current, and the value of the capacitor  $C_T$ . When the TIMER pin reaches 0.3V during the eighth high-to-low ramp, the 22  $\mu\text{A}$  current source at the GATE pin turns on  $Q_1$ . If the fault condition is still present, the Fault Timeout Period and the restart sequence repeat. The RETRY pin allows selecting no retries or infinite retries. Finer control of the retry behavior can be achieved through the DEVICE\_SETUP (D9h) register. Retry counts of 0, 1, 2, 4, 8, 16 or infinite may be selected by setting the appropriate bits in the DEVICE\_SETUP (D9h) register.



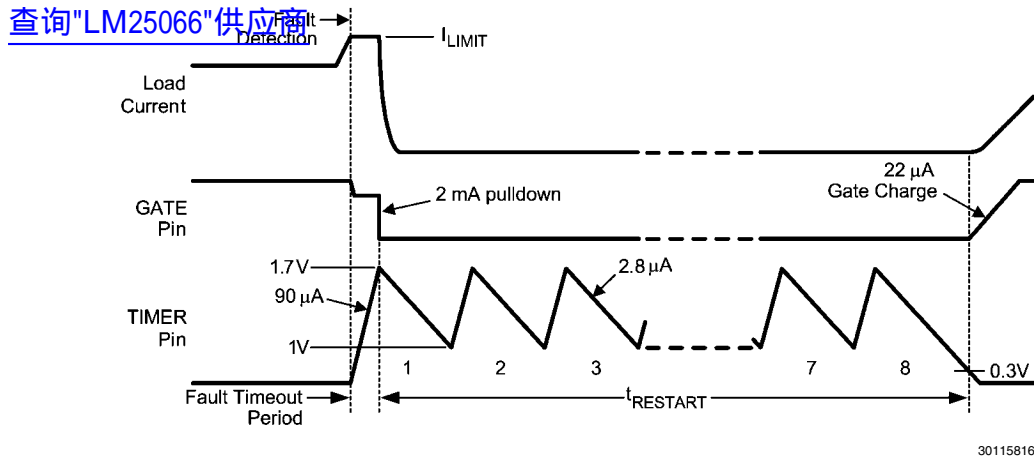


FIGURE 4. Restart Sequence

## Under-Voltage Lock-Out (UVLO)

The series pass MOSFET ( $Q_1$ ) is enabled when the input supply voltage ( $V_{SYS}$ ) is within the operating range defined by the programmable under-voltage lockout (UVLO) and over-voltage lock-out (OVLO) levels. Typically the UVLO level at  $V_{SYS}$  is set with a resistor divider (R1-R3) as shown in Figure 4. Referring to the Block Diagram when  $V_{SYS}$  is below the UVLO level, the internal 23  $\mu A$  current source at UVLO is enabled, the current source at OVLO is off, and  $Q_1$  is held off by the 2 mA pull-down current at the GATE pin. As  $V_{SYS}$  is increased, raising the voltage at UVLO above its threshold the 23  $\mu A$  current source at UVLO is switched off, increasing the voltage at UVLO, providing hysteresis for this threshold. With the UVLO/EN pin above its threshold,  $Q_1$  is switched on by the 22  $\mu A$  current source at the GATE pin if the insertion time delay has expired.

See the Applications Section for a procedure to calculate the values of the threshold setting resistors (R1-R3). The minimum possible UVLO level at  $V_{SYS}$  can be set by connecting the UVLO/EN pin to VIN. In this case  $Q_1$  is enabled after the insertion time when the voltage at VIN reaches the POR threshold. After power up an UVLO condition will cause the INPUT\_UNDER\_VOLTAGE\_FAULT bit in the STATUS\_INPUT (7Ch), and DIAGNOSTIC\_WORD (E1h) registers to be toggled high and SMBA pin will be pulled low unless this feature is disabled using the ALERT\_MASK (D8h) register.

## Over-Voltage Lock-Out (OVLO)

The series pass MOSFET ( $Q_1$ ) is enabled when the input supply voltage ( $V_{SYS}$ ) is within the operating range defined by the programmable under-voltage lockout (UVLO) and over-voltage lock-out (OVLO) levels. If  $V_{SYS}$  raises the OVLO pin voltage above its threshold  $Q_1$  is switched off by the 2 mA pull-down current at the GATE pin, denying power to the load. When the OVLO pin is above its threshold, the internal 23  $\mu A$  current source at OVLO is switched on, raising the voltage at OVLO to provide threshold hysteresis. When  $V_{SYS}$  is reduced below the OVLO level  $Q_1$  is re-enabled. An OVLO condition will cause the toggle the INPUT\_OVER\_VOLTAGE\_FAULT bit high in the STATUS\_INPUT (7Ch) and DIAGNOSTIC\_WORD (E1h) registers and the SMBA pin will be pulled low unless this feature is disabled using the ALERT\_MASK (D8h) register.

See the Applications Section for a procedure to calculate the threshold setting resistor values.

## Shutdown Control

The load current can be remotely switched off by taking the UVLO/EN pin below its threshold with an open collector or open drain device, as shown in Figure 5. Upon releasing the UVLO/EN pin the LM25066 switches on the load current with in-rush current and power limiting.

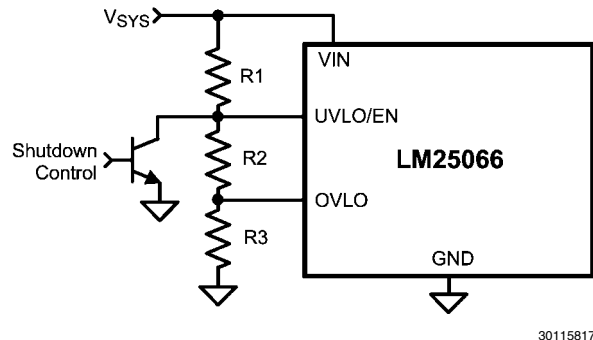


FIGURE 5. Shutdown Control

## Power Good Pin

The Power Good indicator pin (PGD) is connected to the drain of an internal N-channel MOSFET capable of sustaining 17V in the off-state, and transients up to 20V. An external pull-up resistor is required at PGD to an appropriate voltage to indicate the status to downstream circuitry. The off-state voltage at the PGD pin can be higher or lower than the voltages at VIN and OUT. PGD is switched high when the voltage at the FB pin exceeds the PGD threshold voltage. Typically the output voltage threshold is set with a resistor divider from output to feedback, although the monitored voltage need not be the output voltage. Any other voltage can be monitored as long as the voltage at the FB pin does not exceed its maximum rating. Referring to the Block Diagram, when the voltage at the FB pin is below its threshold, the 24  $\mu A$  current source at FB is disabled. As the output voltage increases, taking FB above its threshold, the current source is enabled, sourcing current out of the pin, raising the voltage at FB to provide

threshold hysteresis. The PGD output is forced low when either the UVLO/EN pin is below its threshold or the OVLO pin is above its threshold. The status of the PGD pin can be read via the PMBus interface in either the STATUS\_WORD (79h), DIAGNOSTIC\_WORD (E1h) registers.

## VDD Sub-Regulator

The LM25066 contains an internal linear sub-regulator which steps down the input voltage to generate a 4.5V rail used for powering low voltage circuitry. When the input voltage is below 4.5V, VDD will track VIN. For input voltages 3.3V and below, VDD should be tied directly to VIN to avoid the dropout of the sub-regulator. The VDD sub-regulator should be used as the pull-up supply for the CL, CB, RETRY, ADR2, ADR1, ADR0 pins if they are to be tied high. It may also be used as the pull-up supply for the PGD and the SMBus signals (SDA, SCL, SMBA). The VDD sub-regulator is not designed to drive high currents and should not be loaded with other integrated circuits. The VDD pin is current limited to 45mA in order to protect the LM25066 in the event of a short. The sub-regulator requires a bypass capacitance having a value of 1  $\mu$ F or greater to be placed as close to the VDD pin as the PCB layout allows.

## Remote Temperature Sensing

The LM25066 is designed to measure temperature remotely using an MMBT3904 NPN transistor. The base and collector of the MMBT3904 should be connected to the DIODE pin and can be placed in the area or near the device of interest. If the temperature of the hot-swap pass MOSFET,  $Q_1$ , is to be measured, the MMBT3904 should be placed as close to  $Q_1$  as the layout allows. The temperature is measured by means of a change in the diode voltage in response to a step in current supplied by the DIODE pin. The DIODE pin sources a constant 9.4  $\mu$ A but pulses 250  $\mu$ A once every millisecond in order to measure the diode temperature. Care must be taken in the PCB layout to keep the parasitic resistance between the DIODE pin and the MMBT3904 low so as not to degrade the measurement. Additionally, a small 100 pF bypass capacitor should be placed in parallel with the MMBT3904 to reduce the effects of noise. The temperature can be read using the READ\_TEMPERATURE\_1 PMBus command (8Dh). The default limits of the LM25066 will cause SMBA pin to be pulled low if the measured temperature exceeds 125°C and will disable the hot-swap pass MOSFET if the temperature exceeds 150°C. These thresholds can be reprogrammed via the PMBus interface using the OT\_WARN\_LIMIT (51h) and

OT\_FAULT\_LIMIT (4Fh) commands. If the temperature measurement and protection capability of the LM25066 is not used the DIODE pin should be grounded.


## Damaged MOSFET Detection

The LM25066 is able to detect whether the external MOSFET,  $Q_1$ , is damaged under certain conditions. If the voltage across the sense resistor exceeds 4mV while the GATE voltage is low or the internal logic indicates that the GATE should be low, the EXT\_MOSFET\_SHORTED bit in the STATUS\_MFR\_SPECIFIC (80h) and DIAGNOSTIC\_WORD (E1h) registers will be toggled high and the SMBA pin will be pulled low unless this feature is disabled using the ALERT\_MASK register (D8h). This method effectively determines whether  $Q_1$  is shorted due to damage present between the drain and gate and/or drain and source of the external MOSFET.

## Enabling/Disabling and Resetting

The output can be disabled at any time during normal operation by either pulling the UVLO/EN pin to below its threshold or the OVLO pin above its threshold, causing the GATE voltage to be forced low with a pull down strength of 2mA. Toggling the UVLO/EN pin will also reset the LM25066 from a latched-off state due to an over-current or over-power limit condition which has caused the maximum allowed number of retries to be exceeded. While the UVLO/EN or OVLO pins can be used to disable the output they have no effect on the volatile memory or address location of the LM25066. User stored values for address, device operation, and warning and fault levels programmed via the SMBus are preserved while the LM25066 is powered regardless of the state of the UVLO/EN and OVLO pins.

The SMBus address of the LM25066 is captured based on the states of the ADR0, ADR1, and ADR2 pins (GND, NC, VDD) during turn on and is latched into a volatile register once VDD has exceeded its POR threshold of 2.6V. Reassigning or postponing the address capture is accomplished by holding the VREF pin to ground. Pulling the VREF pin low will also reset the logic and erase the volatile memory of the LM25066. Once released, the VREF pin will charge up to its final value and the address will be latched into a volatile register once the voltage at the VREF exceeds 2.4V. The output may also be enabled or disabled by writing 80h or 0h to the OPERATION (03h) register. To re-enable after a fault, the fault condition should be cleared and the OPERATION (03h) register should be written to 0h and then 80h.

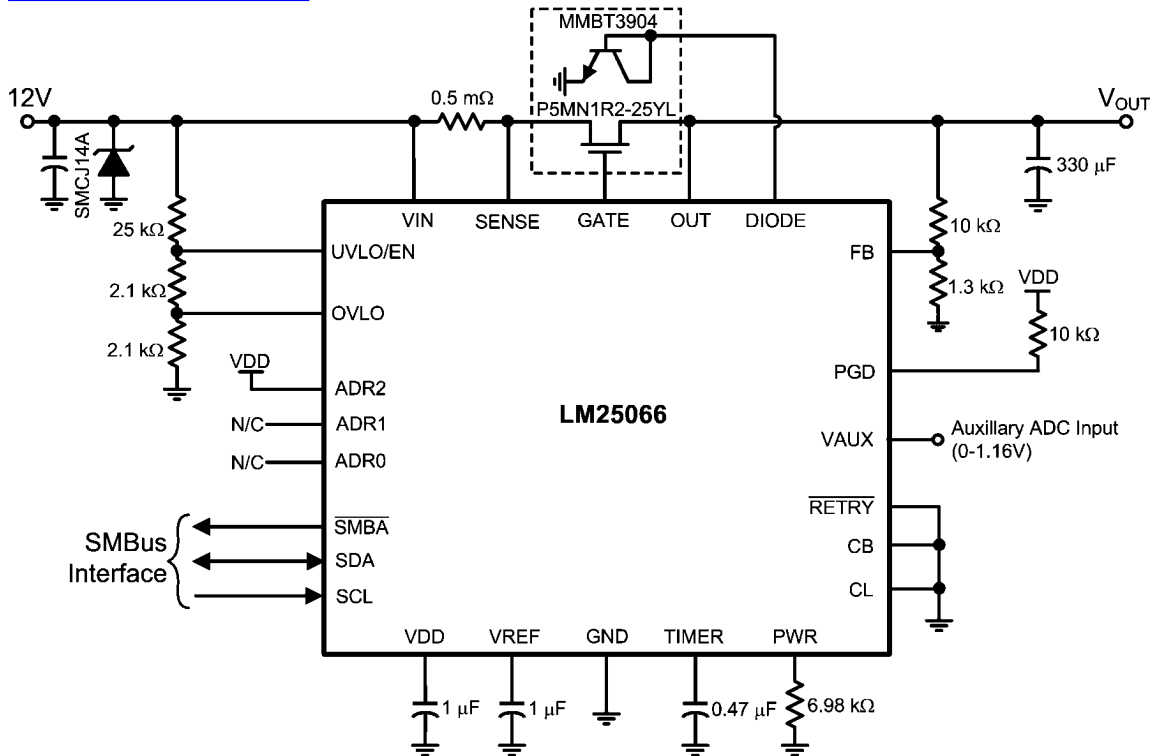

30115801

FIGURE 6. Typical Application Circuit

## DESIGN-IN PROCEDURE

(Refer to [Figure 6](#) for Typical Application Circuit) Shown here is the step-by-step procedure for hardware design of the LM25066. This procedure refers to section numbers that provide detailed information on the following design steps. The recommended design-in procedure is as follows:

**MOSFET Selection:** Determine MOSFET value based on breakdown voltage, current and power ratings.

**Current Limit,  $R_S$ :** Determine the current limit threshold ( $I_{LIM}$ ). This threshold must be higher than the normal maximum load current, allowing for tolerances in the current sense resistor value and the LM25066 Current Limit threshold voltage. Use equation 1 to determine the value for  $R_S$ .

**Power Limit Threshold:** Determine the maximum allowable power dissipation for the series pass MOSFET ( $Q_1$ ), using the device's SOA information. Use equation 2 to determine the value for  $R_{PWR}$ .

**Turn-on Time and TIMER Capacitor,  $C_T$ :** Determine the value for the timing capacitor at the TIMER pin ( $C_T$ ) using equation 3. The fault timeout period ( $t_{FAULT}$ ) **MUST** be longer than the circuit's turn-on-time. The turn-on time can be estimated using the equations in the TURN-ON TIME section of this data sheet, but should be verified experimentally. Review the resulting insertion time, and the restart timing if retry is enabled.

**UVLO, OVLO:** Choose option A, B, C, or D from the UVLO, OVLO section of the Application Information to set the UVLO and OVLO thresholds and hysteresis. Use the procedure for the appropriate option to determine the resistor values at the UVLO/EN and OVLO pins.

**Power Good:** Choose the appropriate output voltage and calculate the required resistor divider from the output voltage to the FB pin. Choose either VDD or OUT to connect properly sized pull-up resistor for the Power Good output (PGD).

**Refer to Programming Guide section:** After all hardware design is complete, refer to the programming guide for a step by step procedure regarding software.

## MOSFET SELECTION

It is recommended that the external MOSFET ( $Q_1$ ) selection be based on the following criteria:

- The  $BV_{DSS}$  rating should be greater than the maximum system voltage ( $V_{SYS}$ ), plus ringing and transients which can occur at  $V_{SYS}$  when the circuit card, or adjacent cards, are inserted or removed.
- The maximum continuous current rating should be based on the current limit threshold (e.g., 25 mV/ $R_S$ ), not the maximum load current, since the circuit can operate near the current limit threshold continuously.
- The Pulsed Drain Current spec ( $I_{DM}$ ) must be greater than the current threshold for the circuit breaker function (45 mV/ $R_S$  when  $CL = CB = GND$ ).
- The SOA (Safe Operating Area) chart of the device, and the thermal properties, should be used to determine the maximum power dissipation threshold set by the  $R_{PWR}$  resistor. The programmed maximum power dissipation should have a reasonable margin from the maximum power defined by the MOSFET's SOA curve if the device is set to infinitely retry the MOSFET will be repeatedly stressed during fault restart cycles. The MOSFET manufacturer should be consulted for guidelines.

-  $R_{DS(on)}$  should be sufficiently low that the power dissipation at maximum load current ( $I_{L(max)}^2 \times R_{DS(on)}$ ) does not raise its junction temperature above the manufacturer's recommendation.

- The gate-to-source voltage provided by the LM25066 can be as high as 18.8V at turn-on when the output voltage is zero. At turn-off the reverse gate-to-source voltage will be equal to the output voltage at the instant the GATE pin is pulled low. If the device chosen for  $Q_1$  is not rated for these voltages, an external zener diode must be added from its gate to source, with the zener voltage less than the device maximum  $V_{GS}$  rating. The zener diode's working voltage protects the MOSFET during turn-on, and its forward voltage protects the MOSFET during shutoff. The zener diode's forward current rating must be at least 190 mA to conduct the GATE pull-down current when a circuit breaker condition is detected.

### CURRENT LIMIT, ( $R_S$ )

The LM25066 monitors the current in the external MOSFET  $Q_1$  by measuring the voltage across the sense resistor ( $R_S$ ), connected from VIN to SENSE. The required resistor value is calculated from:

$$R_S = \frac{V_{CL}}{I_{LIM}} \quad (1)$$


where  $I_{LIM}$  is the desired current limit threshold. If the voltage across  $R_S$  reaches  $V_{CL}$ , the current limit circuit modulates the

gate of  $Q_1$  to regulate the current at  $I_{LIM}$ . While the current limiting circuit is active, the fault timer is active as described in the Fault Timer & Restart section. For proper operation,  $R_S$  must be no larger than 200 mΩ.

$V_{CL}$  can be set to either 25mV or 46mV via hardware and/or software. This setting defaults to use of CL pin which when grounded is 25mV, or high is 46mV. The value when powered can be set via the PMBus with the MFR\_SPECIFIC\_DEVICE\_SETUP command, which defaults to the 25mV setting.

Once the desired setting is known, calculate the shunt based on that input voltage and maximum current. While the maximum load current in normal operation can be used to determine the required power rating for resistor  $R_S$ , basing it on the current limit value provides a more reliable design since the circuit can operate near the current limit threshold continuously. The resistor's surge capability must also be considered since the circuit breaker threshold is 1.8 or 3.6 times the current limit threshold.

Connections from  $R_S$  to the LM25066 should be made using Kelvin techniques. In the suggested layout of Figure 7 the small pads at the lower corners of the sense resistor connect only to the sense resistor terminals, and not to the traces carrying the high current. With this technique, only the voltage across the sense resistor is applied to VIN and SENSE, eliminating the voltage drop across the high current solder connections.

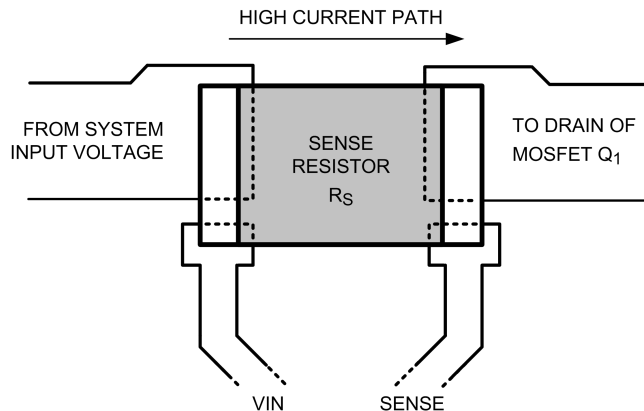

30115819

FIGURE 7. Sense Resistor Connections

### POWER LIMIT THRESHOLD

The LM25066 determines the power dissipation in the external MOSFET ( $Q_1$ ) by monitoring the drain current (the current in  $R_S$ ), and the  $V_{DS}$  of  $Q_1$  (SENSE to OUT pins). The resistor at the PWR pin ( $R_{PWR}$ ) sets the maximum power dissipation for  $Q_1$ , and is calculated from the following equation:

$$R_{PWR} = 1.71 \times 10^5 \times R_S \times P_{MOSFET(LIM)} \quad (2)$$

where  $P_{MOSFET(LIM)}$  is the desired power limit threshold for  $Q_1$ , and  $R_S$  is the current sense resistor described in the Current Limit section. For example, if  $R_S$  is 10 mΩ, and the desired power limit threshold is 20W,  $R_{PWR}$  calculates to 34.2 kΩ. If  $Q_1$ 's power dissipation reaches the threshold  $Q_1$ 's gate is modulated to regulate the load current, keeping  $Q_1$ 's power from exceeding the threshold. For proper operation of the power limiting feature,  $R_{PWR}$  must be  $\leq 150$  kΩ. While the power limiting circuit is active, the fault timer is active as described in the Fault Timer & Restart section. Typically, power

limit is reached during startup, or if the output voltage falls due to a severe overload or short circuit. The programmed maximum power dissipation should have a reasonable margin from the maximum power defined by the SOA chart if retry is enabled since the MOSFET will be repeatedly stressed during fault restart cycles. The MOSFET manufacturer should be consulted for guidelines. If the application does not require use of the power limit function the PWR pin can be left open. The accuracy of the power limit function at turn-on may degrade if a very low value power dissipation limit is set. The reason for this caution is that the voltage across the sense resistor, which is monitored and regulated by the power limit circuit, is lowest at turn-on when the regulated current is at minimum. The voltage across the sense resistor during power limit can be expressed as follows:


$$V_{\text{SENSE}} = \frac{R_{\text{PWR}}}{1.17 \times 10^6 \times V_{\text{DS}}} = \frac{R_{\text{S}} \times P_{\text{FET(LIM)}}}{V_{\text{DS}}} \quad (3)$$

where  $I_{\text{L}}$  is the current in  $R_{\text{S}}$ , and  $V_{\text{DS}}$  is the voltage across Q1. For example, if the power limit is set at 20W with  $R_{\text{S}} = 10 \text{ m}\Omega$ , and  $V_{\text{DS}} = 15\text{V}$  the sense resistor voltage calculates to 13.3 mV, which is comfortably regulated by the LM25066. However, if a lower power limit is set lower (e.g., 2W), the sense resistor voltage calculates to 1.33 mV. At this low level noise and offsets within the LM25066 may degrade the power limit accuracy. To maintain accuracy, the sense resistor voltage should not be less than 5 mV.


#### TURN-ON TIME

The output turn-on time depends on whether the LM25066 operates in current limit, or in both power limit and current limit, during turn-on.

**A) Turn-on with current limit only:** The current limit threshold ( $I_{\text{LIM}}$ ) is determined by the current sense resistor ( $R_{\text{S}}$ ). If the current limit threshold is less than the current defined by the power limit threshold at maximum  $V_{\text{DS}}$  the circuit operates at the current limit threshold only during turn-on. Referring to Figure 8A, as the load current reaches  $I_{\text{LIM}}$ , the gate-to-source voltage is controlled at  $V_{\text{GSL}}$  to maintain the current at  $I_{\text{LIM}}$ . As the output voltage reaches its final value ( $V_{\text{DS}} \approx 0\text{V}$ ) the drain current reduces to its normal operating value. The time for the

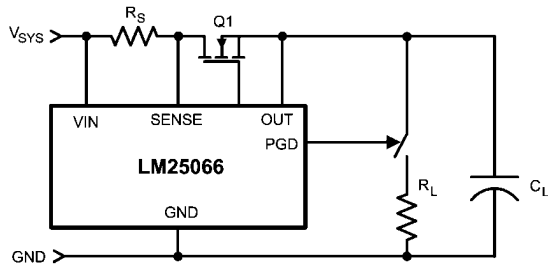

A. No Load Current During Turn-On

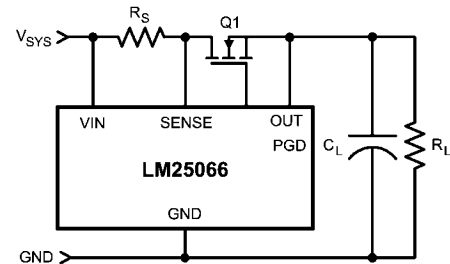

B. Load Draws Current During Turn-On

FIGURE 8.

**B) Turn-On with Power Limit and Current Limit:** The maximum allowed power dissipation in Q1 ( $P_{\text{MOSFET(LIM)}}$ ) is defined by the resistor at the PWR pin, and the current sense resistor  $R_{\text{S}}$ . See the Power Limit Threshold section. If the current limit threshold ( $I_{\text{LIM}}$ ) is higher than the current defined by the power limit threshold at maximum  $V_{\text{DS}}$  ( $P_{\text{MOSFET(LIM)}/V_{\text{SYS}}}$ ) the circuit operates initially in the power limit mode when the  $V_{\text{DS}}$  of Q1 is high, and then transitions to current limit mode as the current increases to  $I_{\text{LIM}}$  and  $V_{\text{DS}}$  decreases. Assuming the load ( $R_{\text{L}}$ ) is not connected during turn-on, the time

OUT pin voltage to transition from zero volts to  $V_{\text{SYS}}$  is equal to:

$$t_{\text{ON}} = \frac{V_{\text{SYS}} \times C_{\text{L}}}{I_{\text{LIM}}} \quad (4)$$

Where  $C_{\text{L}}$  is the load capacitance. For example, if  $V_{\text{SYS}} = 12\text{V}$ ,  $C_{\text{L}} = 1000 \mu\text{F}$ , and  $I_{\text{LIM}} = 1\text{A}$ ,  $t_{\text{ON}}$  calculates to 12 ms. The maximum instantaneous power dissipated in the MOSFET is 12W. This calculation assumes the time from  $t_1$  to  $t_2$  in Figure 9(a) is small compared to  $t_{\text{ON}}$ , and the load does not draw any current until after the output voltage has reached its final value, and PGD switches high (Figure 8A). The Fault Timeout Period must be set longer than  $t_{\text{ON}}$  to prevent a fault shutdown before the turn-on sequence is complete.

If the load draws current during the turn-on sequence (Figure 8B), the turn-on time is longer than the above calculation, and is approximately equal to:

$$t_{\text{ON}} = -(R_{\text{L}} \times C_{\text{L}}) \times \ln \left[ \frac{(I_{\text{LIM}} \times R_{\text{L}}) - V_{\text{SYS}}}{(I_{\text{LIM}} \times R_{\text{L}})} \right] \quad (5)$$

where  $R_{\text{L}}$  is the load resistance. The Fault Timeout Period must be set longer than  $t_{\text{ON}}$  to prevent a fault shutdown before the turn-on sequence is complete.


for the output voltage to reach its final value is approximately equal to:

$$t_{\text{ON}} = \frac{C_{\text{L}} \times V_{\text{SYS}}^2}{2 \times P_{\text{MOSFET(LIM)}}} + \frac{C_{\text{L}} \times P_{\text{MOSFET(LIM)}}}{2 \times I_{\text{LIM}}^2} \quad (6)$$

For example, if  $V_{\text{SYS}} = 12\text{V}$ ,  $C_{\text{L}} = 1000 \mu\text{F}$ ,  $I_{\text{LIM}} = 1\text{A}$ , and  $P_{\text{MOSFET(LIM)}} = 10\text{W}$ ,  $t_{\text{ON}}$  calculates to  $\approx 12.2 \text{ ms}$ , and the initial current level ( $I_{\text{P}}$ ) is approximately 0.83A. The Fault Timeout Period must be set longer than  $t_{\text{ON}}$ .



查询"LM25066"供应商

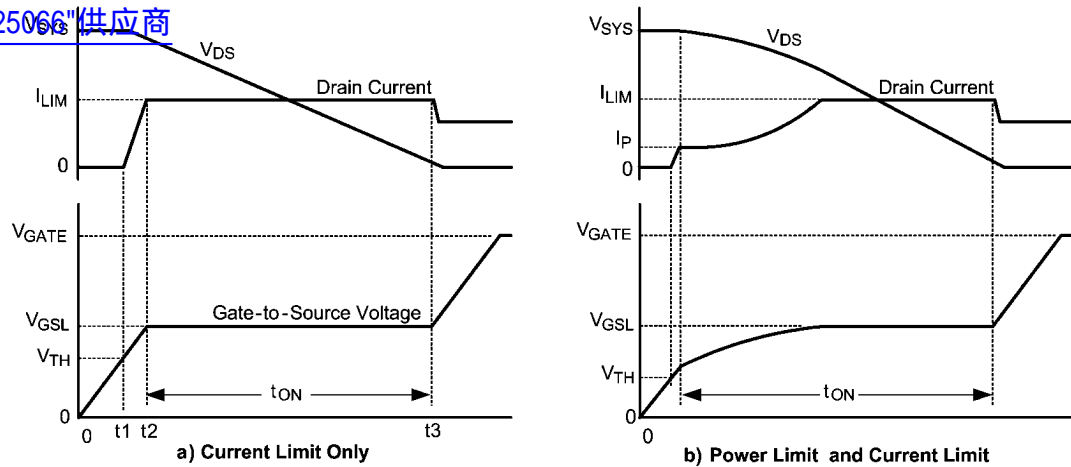

30115825

FIGURE 9. MOSFET Power Up Waveforms

**TIMER CAPACITOR,  $C_T$** 

The TIMER pin capacitor ( $C_T$ ) sets the timing for the insertion time delay, fault timeout period, and the restart timing of the LM25066.

**A) Insertion Delay** - Upon applying the system voltage ( $V_{SYS}$ ) to the circuit, the external MOSFET ( $Q_1$ ) is held off during the insertion time ( $t_i$  in Figure 2) to allow ringing and transients at  $V_{SYS}$  to settle. Since each backplane's response to a circuit card plug-in is unique, the worst case settling time must be determined for each application. The insertion time starts when VIN reaches the POR threshold, at which time the internal 5.5  $\mu A$  current source charges  $C_T$  from 0V to 1.7V. The required capacitor value is calculated from:

$$C_T = \frac{t_i \times 5.5 \mu A}{1.7V} = t_i \times 3.2 \times 10^{-6} \quad (7)$$

For example, if the desired insertion delay is 250 ms,  $C_T$  calculates to 0.8  $\mu F$ . At the end of the insertion delay,  $C_T$  is quickly discharged by a 1.9 mA current sink.

**B) Fault Timeout Period** - During in-rush current limiting or upon detection of a fault condition where the current limit and/or power limit circuits regulate the current through  $Q_1$ , the fault timer current source (90  $\mu A$ ) is switched on to charge  $C_T$ . The Fault Timeout Period is the time required for the TIMER pin voltage to reach 1.7V, at which time  $Q_1$  is switched off. The required capacitor value for the desired Fault Timeout Period  $t_{FAULT}$  is calculated from:

$$C_T = \frac{t_{FAULT} \times 90 \mu A}{1.7V} = t_{FAULT} \times 5.3 \times 10^{-5} \quad (8)$$

For example, if the desired Fault Timeout Period is 15 ms,  $C_T$  calculates to 0.8  $\mu F$ .  $C_T$  is discharged by the 2.8  $\mu A$  current sink at the end of the Fault Timeout Period. After the Fault Timeout Period, if retry is disabled, the LM25066 latches the GATE pin low until a power up sequence is initiated by external circuitry. When the Fault Timeout Period of the LM25066

expires, a restart sequence starts as described below (Restart Timing). During consecutive cycles of the restart sequence, the fault timeout period is shorter than the initial fault timeout period described above by approximately 20% since the voltage at the TIMER pin starts ramping up from 0.3V rather than ground.

Since the LM25066 normally operates in power limit and/or current limit during a power up sequence, the Fault Timeout Period **MUST** be longer than the time required for the output voltage to reach its final value. See the Turn-On Time section.

**C) Restart Timing** For the LM25066, after the Fault Timeout Period described above,  $C_T$  is discharged by the 2.8  $\mu A$  current sink to 1V. The TIMER pin then cycles through seven additional charge/discharge cycles between 1V and 1.7V as shown in Figure 3. The restart time ends when the TIMER pin voltage reaches 0.3V during the final high-to-low ramp. The restart time, after the Fault Timeout Period, is equal to:

$$t_{RESTART} = C_T \times \left[ \frac{7 \times 0.7V}{2.8 \mu A} + \frac{7 \times 0.7V}{90 \mu A} + \frac{1.4V}{2.8 \mu A} \right] \quad (9)$$


$$= C_T \times 2.3 \times 10^6 \quad (10)$$

For example, if  $C_T = 0.8 \mu F$ ,  $t_{RESTART} = 2$  seconds. At the end of the restart time,  $Q_1$  is switched on. If the fault is still present, the fault timeout and restart sequence repeats. The on-time duty cycle of  $Q_1$  is approximately 0.67% in this mode.

**UVLO, OVLO**

By programming the UVLO and OVLO thresholds the LM25066 enables the series pass device ( $Q_1$ ) when the input supply voltage ( $V_{SYS}$ ) is within the desired operational range. If  $V_{SYS}$  is below the UVLO threshold, or above the OVLO threshold,  $Q_1$  is switched off, denying power to the load. Hysteresis is provided for each threshold.

**Option A:** The configuration shown in Figure 10 requires three resistors (R1-R3) to set the thresholds.

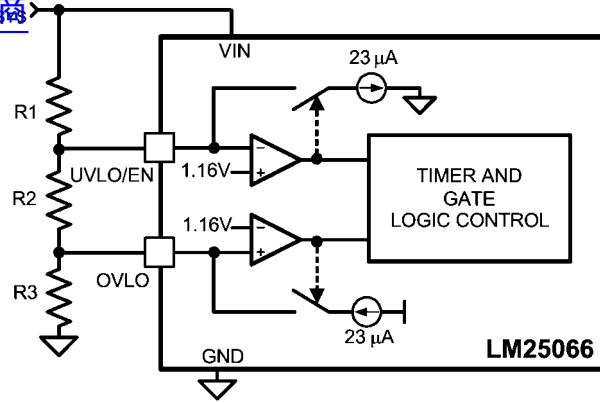[查询"LM25066"供应商](#)


30115829

FIGURE 10. UVLO and OVLO Thresholds Set By R1-R3

The procedure to calculate the resistor values is as follows:

- Choose the upper UVLO threshold ( $V_{UVH}$ ), and the lower UVLO threshold ( $V_{UVL}$ ).
- Choose the upper OVLO threshold ( $V_{OVH}$ ).
- The lower OVLO threshold ( $V_{OVL}$ ) cannot be chosen in advance in this case, but is determined after the values for R1-R3 are determined. If  $V_{OVL}$  must be accurately defined in addition to the other three thresholds, see Option B below. The resistors are calculated as follows:

$$R1 = \frac{V_{UVH} - V_{UVL}}{23 \mu A} = \frac{V_{UV(HYS)}}{23 \mu A} \quad (11)$$

$$R3 = \frac{1.16V \times R1 \times V_{UVL}}{V_{OVH} \times (V_{UVL} - 1.16V)} \quad (12)$$

$$R2 = \frac{1.16V \times R1}{V_{UVL} - 1.16V} - R3 \quad (13)$$

The lower OVLO threshold is calculated from:

$$V_{OVL} = \frac{[(R1 + R2) \times ((1.16V) - 23 \mu A)] + 1.16V}{R3} \quad (14)$$

As an example, assume the application requires the following thresholds:  $V_{UVH} = 8V$ ,  $V_{UVL} = 7V$ ,  $V_{OVH} = 15V$ .

$$R1 = \frac{8V - 7V}{23 \mu A} = \frac{1V}{23 \mu A} = 43.5 \text{ k}\Omega \quad (15)$$

$$R3 = \frac{1.16V \times R1 \times 7V}{15V \times (7V - 1.16V)} = 4.03 \text{ k}\Omega \quad (16)$$

$$R2 = \frac{1.16V \times R1}{(7V - 1.16V)} - R3 = 4.61 \text{ k}\Omega \quad (17)$$

The lower OVLO threshold calculates to 12.03V, and the OVLO hysteresis is 2.97V. Note that the OVLO hysteresis is always slightly greater than the UVLO hysteresis in this configuration. When the R1-R3 resistor values are known, the threshold voltages and hysteresis are calculated from the following:

$$V_{UVH} = 1.16V + [R1 \times (23 \mu A + \frac{1.16V}{(R2 + R3)})] \quad (18)$$

$$V_{UVL} = \frac{1.16V \times (R1 + R2 + R3)}{R2 + R3} \quad (19)$$

$$V_{UV(HYS)} = R1 \times 23 \mu A$$

$$V_{OVH} = \frac{1.16V \times (R1 + R2 + R3)}{R3} \quad (20)$$

$$V_{OVL} = \frac{[(R1 + R2) \times ((1.16V) - 23 \mu A)] + 1.16V}{R3} \quad (21)$$

$$V_{OV(HYS)} = (R1 + R2) \times 23 \mu A$$

**Option B:** If all four thresholds must be accurately defined, the configuration in [Figure 11](#) can be used.

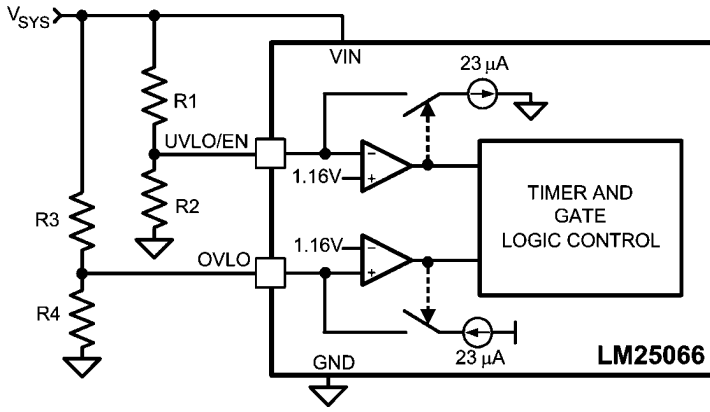
[查询"LM25066"供应商](#)


FIGURE 11. Programming the Four Thresholds

The four resistor values are calculated as follows: - Choose the upper and lower UVLO thresholds ( $V_{UVH}$ ) and ( $V_{UVL}$ ).

$$R1 = \frac{V_{UVH} - V_{UVL}}{23 \mu A} = \frac{V_{UV(HYS)}}{23 \mu A} \quad (22)$$

$$R2 = \frac{1.16V \times R1}{(V_{UVL} - 1.16V)} \quad (23)$$

- Choose the upper and lower OVLO threshold ( $V_{OVH}$ ) and ( $V_{OVL}$ ).

$$R3 = \frac{V_{OVH} - V_{OVL}}{23 \mu A} = \frac{V_{OV(HYS)}}{23 \mu A} \quad (24)$$

$$R4 = \frac{1.16V \times R3}{(V_{OVH} - 1.16V)} \quad (25)$$

As an example, assume the application requires the following thresholds:  $V_{UVH} = 8V$ ,  $V_{UVL} = 7V$ ,  $V_{OVH} = 15.5V$ , and  $V_{OVL} = 14V$ . Therefore  $V_{UV(HYS)} = 1V$ , and  $V_{OV(HYS)} = 1.5V$ . The resistor values are:

$R1 = 43.5 \text{ k}\Omega$ ,  $R2 = 8.64 \text{ k}\Omega$

$R3 = 65.2 \text{ k}\Omega$ ,  $R4 = 5.27 \text{ k}\Omega$

Where the R1-R4 resistor values are known, the threshold voltages and hysteresis are calculated from the following:

$$V_{UVH} = 1.16V + [R1 \times \frac{(1.16V + 23 \mu A)}{R2}] \quad (26)$$

$$V_{UVL} = \frac{1.16V \times (R1 + R2)}{R2} \quad (27)$$

$$V_{UV(HYS)} = R1 \times 23 \mu A$$

$$V_{OVH} = \frac{1.16V \times (R3 + R4)}{R4} \quad (28)$$

$$V_{OVL} = 1.16V + [R3 \times \frac{(1.16V - 23 \mu A)}{R4}] \quad (29)$$

$$V_{OV(HYS)} = R3 \times 23 \mu A$$

**Option C:** The minimum UVLO level is obtained by connecting the UVLO/EN pin to VIN as shown in Figure 12. Q1 is switched on when the VIN voltage reaches the POR threshold ( $\approx 2.6V$ ). The OVLO thresholds are set using R3, R4. Their values are calculated using the procedure in Option B.

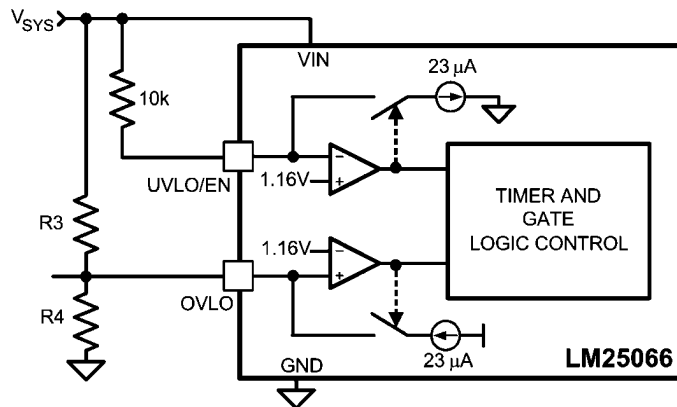


FIGURE 12. UVLO = POR




**Option D:** The OVLO function can be disabled by grounding the OVLO pin. The LMLO thresholds are set as described in Option B or Option C.

### POWER GOOD PIN


When the voltage at the FB pin increases above its threshold the internal pull down acting on the PGD pin is disabled allowing PGD to rise to  $V_{PGD}$  through the pull-up resistor,  $R_{PG}$ , as shown in Figure 13. The pull-up voltage ( $V_{PGD}$ ) can be as high as 17V, and can be higher or lower than the voltages at VIN and OUT. VDD is a convenient choice for  $V_{PGD}$  as it allows interface to low voltage logic and avoids glitching on PGD during power-up. If a delay is required at PGD, suggested circuits are shown in Figure 14. In Figure 14A, capacitor CPG adds delay to the rising edge, but not to the falling edge. In Figure 14B, the rising edge is delayed by  $R_{PG1} + R_{PG2}$  and  $C_{PG}$ , while the falling edge is delayed a lesser amount by  $R_{PG2}$  and  $C_{PG}$ . Adding a diode across  $R_{PG2}$  (Figure 14C) al-

lows for equal delays at the two edges, or a short delay at the rising edge and a long delay at the falling edge.

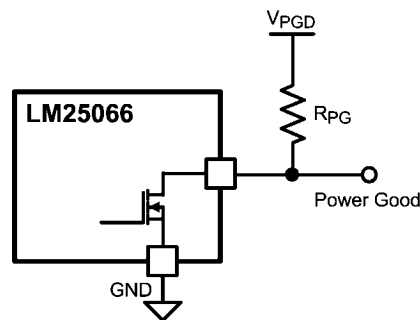

30115851

FIGURE 13. Power Good Output

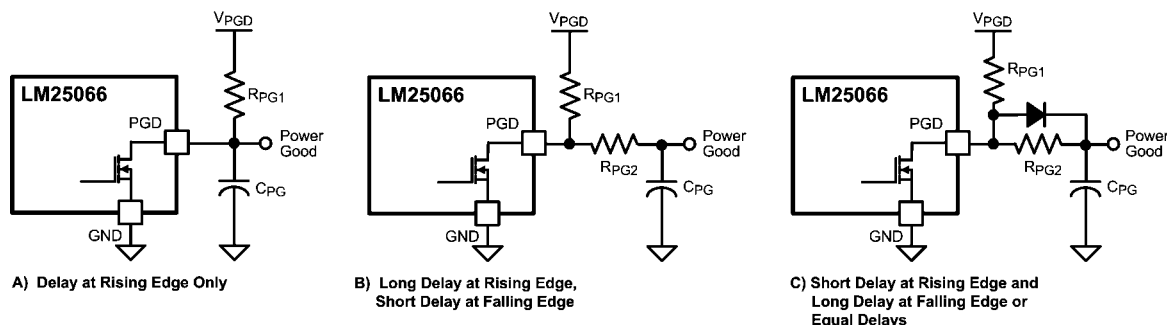


30115852

FIGURE 14. Adding Delay to the Power Good Output Pin

### SYSTEM CONSIDERATIONS

A) Continued proper operation of the LM25066 hot swap circuit requires capacitance be present on the supply side of the connector into which the hot swap circuit is plugged in, as depicted in Figure 15. The capacitor in the "LIVE POWER SOURCE" section is necessary to absorb the transient generated whenever the hot swap circuit shuts off the load current. If the capacitance is not present, inductance in the supply lines will generate a voltage transient at shut-off which can exceed the absolute maximum rating of the LM25066, resulting in its destruction.

B) If the load powered by the LM25066 hot swap circuit has inductive characteristics, a Schottky diode is required across the LM25066's output, along with some load capacitance. The capacitance and the diode are necessary to limit the negative excursion at the OUT pin when the load current is shut off. If the OUT pin transitions more than 0.3V negative the LM25066 will internally reset, erasing the volatile setting for retries and warning thresholds. See Figure 15.

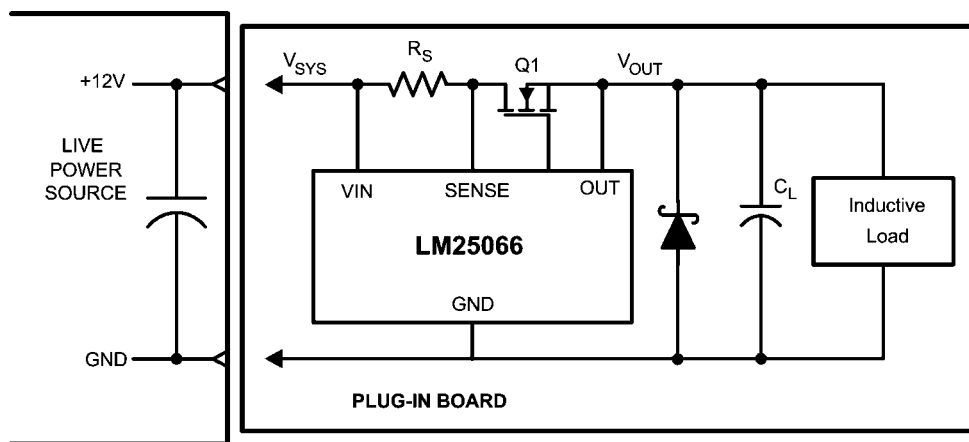

30115854


FIGURE 15. Output Diode Required for Inductive Loads

## PC BOARD GUIDELINES

The following guidelines should be followed when designing the PC board for the LM25066:

- Place the LM25066 close to the board's input connector to minimize trace inductance from the connector to the MOSFET.
- Place a small capacitor,  $C_{IN}$ , (1nF) directly adjacent to the VIN and GND pins of the LM25066 to help minimize transients which may occur on the input supply line. Transients of several volts can easily occur when the load current is shut off.
- Place a 1  $\mu$ F capacitor as close as possible to VREF pin.
- Place a 1  $\mu$ F capacitor as close as possible to VDD pin.
- The sense resistor ( $R_S$ ) should be placed close to the LM25066. In particular, the trace to the VIN pin should be made as low resistance as practical to ensure maximum current and power measurement accuracy. Connect  $R_S$  using the Kelvin techniques shown in [Figure 7](#).
- The high current path from the board's input to the load (via  $Q_1$ ), and the return path, should be parallel and close to each other to minimize loop inductance.

- The ground connections for the various components around the LM25066 should be connected directly to each other, and to the LM25066's GND pin, and then connected to the system ground at one point. Do not connect the various component grounds to each other through the high current ground line.
- Provide adequate heat sinking for the series pass device ( $Q_1$ ) to help reduce stresses during turn-on and turn-off.
- The board's edge connector can be designed such that the LM25066 detects via the UVLO/EN pin that the board is being removed, and responds by turning off the load before the supply voltage is disconnected. For example, in [Figure 16](#), the voltage at the UVLO/EN pin goes to ground before VSYS is removed from the LM25066 due to the shorter edge connector pin. When the board is inserted into the edge connector, the system voltage is applied to the LM25066's VIN pin before the UVLO voltage is taken high, thereby allowing the LM25066 to turn on the output in a controlled fashion.

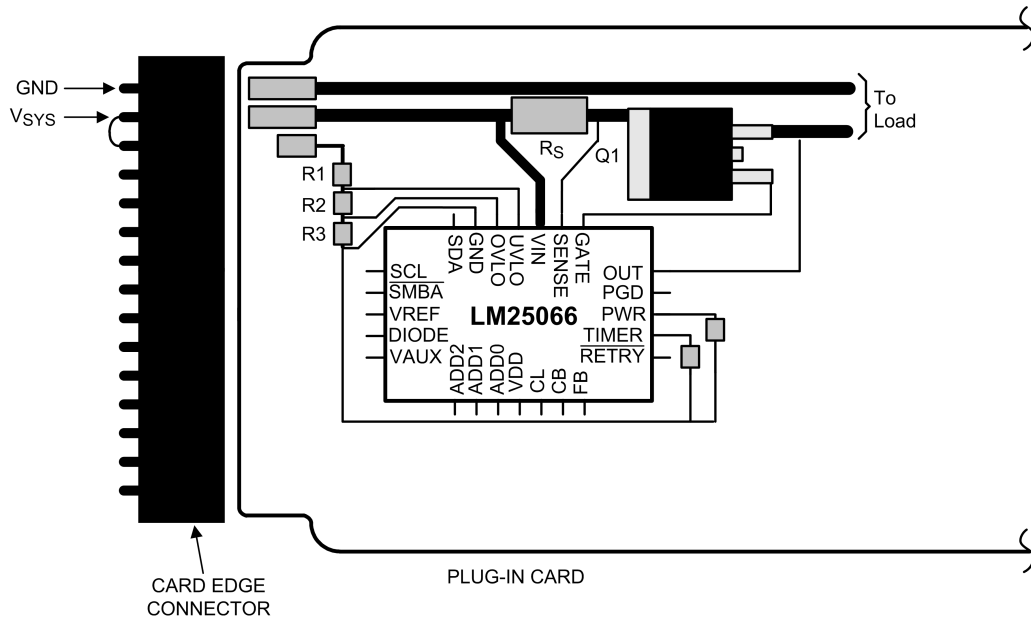

30115853

FIGURE 16. Recommended Board Connector Design

## PMBus™ Command Support

The device features an SMBus interface that allows the use of PMBus™ commands to set warn levels, error masks, and

get telemetry on  $V_{IN}$ ,  $V_{OUT}$ ,  $I_{IN}$ ,  $V_{AUX}$ , and  $P_{IN}$ . The supported PMBus™ commands are shown in Table 1.

**TABLE 1. Supported PMBus™ Commands**

Code	Name	Function	R/W	Number Of Data Bytes	Default Value
01h	OPERATION	Retrieves or stores the operation status.	R/W	1	80h
03h	CLEAR_FAULTS	Clears the status registers.	Send Byte	0	
19h	CAPABILITY	Retrieves the device capability.	R	1	B0h
43h	VOUT_UV_WARN_LIMIT	Retrieves or stores output under-voltage warn limit threshold.	R/W	2	0000h
4Fh	OT_FAULT_LIMIT	Retrieves or stores over temperature fault limit threshold.	R/W	2	0960h (150°C)
51h	OT_WARN_LIMIT	Retrieves or stores over temperature warn limit threshold.	R/W	2	07D0h (125°C)
57h	VIN_OV_WARN_LIMIT	Retrieves or stores input over-voltage warn limit threshold.	R/W	2	0FFFh
58h	VIN_UV_WARN_LIMIT	Retrieves or stores input under-voltage warn limit threshold.	R/W	2	0000h
78h	STATUS_BYTE	Retrieves information about the parts operating status.	R	1	49h
79h	STATUS_WORD	Retrieves information about the parts operating status.	R	2	3849h
7Ah	STATUS_VOUT	Retrieves information about output voltage status.	R	1	00h
7Ch	STATUS_INPUT	Retrieves information about input status.	R	1	10h
7Dh	STATUS_TEMPERATURE	Retrieves information about temperature status.	R	1	00h
7Eh	STATUS_CML	Retrieves information about communications status.	R	1	00h
80h	STATUS_MFR_SPECIFIC	Retrieves information about circuit breaker and MOSFET shorted status.	R	1	10h
88h	READ_VIN	Retrieves input voltage measurement.	R	2	0000h
8Bh	READ_VOUT	Retrieves output voltage measurement.	R	2	0000h
8Dh	READ_TEMPERATURE_1	Retrieves temperature measurement.	R	2	0190h
99h	MFR_ID	Retrieves manufacturer ID in ASCII characters (NSC).	R	3	4Eh 53h 43h
9Ah	MFR_MODEL	Retrieves Part number in ASCII characters. (LM25066).	R	8	4Ch 4Dh 32h 35h 30h 36h 36h 0h
9Bh	MFR_REVISION	Retrieves part revision letter/number in ASCII (e.g., AA).	R	2	41h 41h
D0h	MFR_SPECIFIC_00 READ_AUX	Retrieves auxiliary voltage measurement.	R	2	0000h
D1h	MFR_SPECIFIC_01 MFR_READ_IIN	Retrieves input current measurement.	R	2	0000h
D2h	MFR_SPECIFIC_02 MFR_READ_PIN	Retrieves input power measurement.	R	2	0000h
D3h	MFR_SPECIFIC_03 MFR_IIN_OC_WARN_LIMIT	Retrieves or stores input current limit warn threshold.	R/W	2	0FFFh
D4h	MFR_SPECIFIC_04 MFR_PIN_OP_WARN_LIMIT	Retrieves or stores input power limit warn threshold.	R/W	2	0FFFh

Code	Name	Function	R/W	Number Of Data Bytes	Default Value
D5h	MFR_SPECIFIC_05 READ_PIN_PEAK	Retrieves maximum input power measurement.	R	2	0000h
D6h	MFR_SPECIFIC_06 CLEAR_PIN_PEAK	Resets the contents of the peak input power register to zero.	Send Byte	0	
D7h	MFR_SPECIFIC_07 GATE_MASK	Disables ext. MOSFET gate control for FAULTs	R/W	1	0000h
D8h	MFR_SPECIFIC_08	Retrieves or stores user $\overline{\text{SMBALERT}}$ fault mask.	R/W	2	0820h
D9h	MFR_SPECIFIC_09 DEVICE_SETUP	Retrieves or stores information about number of retry attempts.	R/W	1	0000h
DAh	MFR_SPECIFIC_10 BLOCK_READ	Retrieves most recent diagnostic and telemetry information in a single transaction.	R	12	0460h 0000h 0000h 0000h 0000h
DBh	MFR_SPECIFIC_11 SAMPLES_FOR_AVG	$2^N$ number of samples to be averaged, range = 00h to 0Ch .	R/W	1	00h
DCh	MFR_SPECIFIC_12 READ_AVG_VIN	Retrieves averaged input voltage measurement.	R	2	0000h
DDh	MFR_SPECIFIC_13 READ_AVG_VOUT	Retrieves averaged output voltage measurement.	R	2	0000h
DEh	MFR_SPECIFIC_14 READ_AVG_IIN	Retrieves averaged input current measurement.	R	2	0000h
DFh	MFR_SPECIFIC_15 READ_AVG_PIN	Retrieves averaged input power measurement.	R	2	0000h
E0h	MFR_SPECIFIC_16 BLACK_BOX_READ	Captures diagnostic and telemetry information which are latched when an $\overline{\text{SMBALERT}}$ occurs.	R	12	0000h 0000h 0000h 0000h 0000h
E1h	MFR_SPECIFIC_17 DIAGNOSTIC_WORD_READ	Manufacturer-specific parallel of the STATUS_WORD to convey all FAULT/WARN data in a single transaction.	R	2	0460h
E2h	MFR_SPECIFIC_18 AVG_BLOCK_READ	Retrieves most recent average telemetry and diagnostic information in a single transaction.	R	12	0460h 0000h 0000h 0000h 0000h

## OPERATION Register

查询"LM25066"供应商

The OPERATION command is a standard PMBus™ command that controls the MOSFET switch. This command may be used to switch the MOSFET ON and OFF under host control. It is also used to re-enable the MOSFET after a fault triggered shutdown. The host must clear the fault condition prior to re-enabling the MOSFET in this situation. The OPERATION command is issued with the write byte protocol.

**TABLE 2. Recognized OPERATION Command Values**

Value	Meaning	Default
80h	Switch ON	80h
00h	Switch OFF	n/a

### CLEAR FAULTS

The CLEAR FAULTS command is a standard PMBus™ command that resets all stored warning and fault flags and the SMBALERT signal. If a fault or warning condition still exists when the CLEAR\_FAULTS command is issued, the SMBALERT signal may not clear or will re-assert almost immediately. Issuing a CLEAR\_FAULTS command will not cause the MOSFET to switch back on in the event of a fault turnoff; that must be done by issuing an OPERATE command after the fault condition is cleared. This command uses the PMBus™ send byte protocol.

### CAPABILITY

The CAPABILITY command is a standard PMBus™ command that returns information about the PMBus™ functions supported by the LM25066. This command is read with the PMBus™ read byte protocol.

**TABLE 3. CAPABILITY Register**

Value	Meaning	Default
B0h	Supports Packet Error Check, 400Kbits/sec, Supports / SMBALERT	B0h

### VOUT\_UV\_WARN\_LIMIT

The VOUT UNDERVOLTAGE WARN LIMIT is a standard PMBus™ command that allows configuring or reading the threshold for the VOUT Undervoltage Warning detection. Reading and writing to this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table. Accesses to this command should use the PMBus™ read or write word protocol. If the measured value of VOUT falls below the value in this register, VOUT UV Warn flags are set and the SMBALERT signal is set.

**TABLE 4. VOUT Undervoltage Warn Limit Register**

Value	Meaning	Default
1h – 0FFFh	VOUT Undervoltage Warning detection threshold	0000h (disabled)
0000h	VOUT Undervoltage Warning disabled	n/a

### OT\_FAULT\_LIMIT

The OVERTEMPERATURE FAULT LIMIT is a standard PMBus™ command that allows configuring or reading the threshold for the Overtemperature Fault detection. Reading and writing to this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table. Accesses to this command should use the PMBus™ read or write word protocol. If the measured temperature exceeds this value, an Overtemperature fault is triggered and the MOSFET is switched off, OT Fault flags set and the SMBALERT signal set. After the measured temperature falls below the value in this register, the MOSFET may be switched back on with the OPERATE command.

**TABLE 5. Overtemperature Fault Limit Register**

Value	Meaning	Default
0h – 0FFEh	Overtemperature Fault Threshold Value	0960h (150°C)
0FFFh	Overtemperature Fault detection disabled	n/a

### OT\_WARN\_LIMIT

The OVERTEMPERATURE WARN LIMIT is a standard PMBus™ command that allows configuring or reading the threshold for the Overtemperature Warning detection. Reading and writing to this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table. Accesses to this command should use the PMBus™ read or write word protocol. If the measured temperature exceeds this value, an Overtemperature warning is triggered and the OT Warning flags set and the SMBALERT signal set.

**TABLE 6. Overtemperature Warn Limit Register**

Value	Meaning	Default
0h – 0FFEh	Overtemperature Warn Threshold Value	07D0h (125°C)
0FFFh	Overtemperature Warn detection disabled	n/a

**VIN\_OV\_WARN\_LIMIT**

[查询LM25066VOT价格](#)  
The VIN OVERVOLTAGE WARN LIMIT is a standard PMBus™ command that allows configuring or reading the threshold for the VIN Overvoltage Warning detection. Reading and writing to this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table. Accesses to this command should use the PMBus™ read or write word protocol. If the measured value of VIN rises above the value in this register, VIN OV Warn flags are set and the SMBALERT signal is set.

**TABLE 7. VIN Overvoltage Warning Limit Register**

Value	Meaning	Default
0h – 0FFh	VIN Overvoltage Warning detection threshold	0FFh (disabled)
0FFh	VIN Overvoltage Warning disabled	n/a

**VIN\_UV\_WARN\_LIMIT**

The VIN UNDERVOLTAGE WARN LIMIT is a standard PMBus™ command that allows configuring or reading the threshold for the VIN Undervoltage Warning detection. Reading and

writing to this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table. Accesses to this command should use the PMBus™ read or write word protocol. If the measured value of VIN falls below the value in this register, VIN UV Warn flags are set and the SMBALERT signal is set.

**VIN Undervoltage Warning Limit Register**

Value	Meaning	Default
1h – 0FFFh	VIN Undervoltage Warning detection threshold	0000h (disabled)
0000h	VIN Undervoltage Warning disabled	n/a

**STATUS\_BYTE**

The STATUS BYTE is a standard PMBus™ command that returns the value of a number of flags indicating the state of the LM25066. Accesses to this command should use the PMBus™ read byte protocol. To clear bits in this register, the underlying fault should be cleared and a CLEAR FAULTS command issued.

**TABLE 8. STATUS Byte Definitions**

Bit	NAME	Meaning	Default
7	Busy	Not Supported, always 0	0
6	OFF	this bit is asserted if the MOSFET is not switched on for any reason.	1
5	VOUT OV	Not Supported, always 0	0
4	IOUT OC	Not Supported, always 0	0
3	VIN UV	A VIN Undervoltage Fault has occurred	1
2	TEMPERATURE	A Temperature Fault or Warning has occurred	0
1	CML	A Communication Fault has occurred	0
0	None of the Above	A fault or warning not listed in bits [7:1] has occurred	1

**STATUS\_WORD**

The STATUS\_WORD is a standard PMBus™ command that returns the value of a number of flags indicating the state of the LM25066. Accesses to this command should use the PM-

Bus™ read word protocol. To clear bits in this register, the underlying fault should be cleared and a CLEAR FAULTS command issued.

**TABLE 9. STATUS WORD Definitions**

Bit	NAME	Meaning	Default
15	VOUT	An output voltage fault or warning has occurred	0
14	IOUT/POUT	Not Supported, always 0	0
13	INPUT	An input voltage or current fault has occurred	1
12	MFR	A Manufacturer Specific Fault or Warning has occurred	1
11	PWR GOOD#	The Power Good signal has been negated	1
10	FANS	Not Supported, always 0	0
9	OTHER	Not Supported, always 0	0
8	UNKNOWN	Not Supported, always 0	0
7	Busy	Not Supported, always 0	0
6	OFF	This bit is asserted if the MOSFET is not switched on for any reason.	1
5	VOUT OV	Not Supported, always 0	0
4	IOUT OC	Not Supported, always 0	0
3	VIN UV	A VIN Undervoltage Fault has occurred	1
2	TEMPERATURE	A Temperature Fault or Warning has occurred	0
1	CML	A Communication Fault has occurred	0
0	None of the Above	A fault or warning not listed in bits [7:1] has occurred	1

**STATUS\_VOUT**

The STATUS VOUT is a standard PMBus™ command that returns the value of the VOUT UV Warning flag. Accesses to

this command should use the PMBus™ read byte protocol. To clear bits in this register, the underlying fault should be cleared and a CLEAR FAULTS command issued.

**TABLE 10. STATUS VOUT Definitions**

Bit	NAME	Meaning	Default
7	VOUT OV Fault	Not Supported, always 0	0
6	VOUT OV Warn	Not Supported, always 0	0
5	VOUT UV Warn	A VOUT Undervoltage Warning has occurred	0
4	VOUT UV Fault	Not Supported, always 0	0
3	VOUT Max	Not Supported, always 0	0
2	TON Max Fault	Not Supported, always 0	0
1	TOFF Max Fault	Not Supported, always 0	0
0	VOUT Tracking Error	Not Supported, always 0	0

**STATUS\_INPUT**

The STATUS INPUT is a standard PMBus™ command that returns the value of the of a number of flags related to input voltage, current, and power. Accesses to this command

should use the PMBus™ read byte protocol. To clear bits in this register, the underlying fault should be cleared and a CLEAR FAULTS command issued.

**TABLE 11. STATUS INPUT Definitions**

Bit	NAME	Meaning	Default
7	VIN OV Fault	A VIN Overvoltage Fault has occurred	0
6	VIN OV Warn	A VIN Overvoltage Warning has occurred	0
5	VIN UV Warn	A VIN Undervoltage Warning has occurred	1
4	VIN UV Fault	A VIN Undervoltage Fault has occurred	0
3	Insufficient Voltage	Not Supported, always 0	0
2	IIN OC Fault	An IIN Overcurrent Fault has occurred	0
1	IIN OC Warn	An IIN Overcurrent Warning has occurred	0
0	PIN OP Warn	A PIN Overpower Warning has occurred	0

**STATUS\_TEMPERATURE**

查询“LM25066”供应商  
The STATUS\_TEMPERATURE is a standard PMBus™ command that returns the value of the of a number of flags related to the temperature telemetry value. Accesses to this com-

mand should use the PMBus™ read byte protocol. To clear bits in this register, the underlying fault should be cleared and a CLEAR FAULTS command issued.

**TABLE 12. STATUS TEMPERATURE Definitions**

Bit	NAME	Meaning	Default
7	Overtemp Fault	An Overtemperature Fault has occurred	0
6	Overtemp Warn	An Overtemperature Warning has occurred	0
5	Undertemp Warn	Not Supported, always 0	0
4	Undertemp Fault	Not Supported, always 0	0
3	reserved	Not Supported, always 0	0
2	reserved	Not Supported, always 0	0
1	reserved	Not Supported, always 0	0
0	reserved	Not Supported, always 0	0

**STATUS\_CML**

The STATUS CML is a standard PMBus™ command that returns the value of a number of flags related to communication

faults. Accesses to this command should use the PMBus™ read byte protocol. To clear bits in this register, a CLEAR FAULTS command should be issued.

**TABLE 13. STATUS CML Definitions**

Bit	NAME	Default
7	Invalid or unsupported command received	0
6	Invalid or unsupported data received	0
5	Packet Error Check failed	0
4	Memory Fault Detected Not supported, always 0	0
3	Processor Fault Detected Not supported, always 0	0
2	Reserved Not supported, always 0	0
1	Miscellaneous communications fault has occurred	0
0	Other memory or logic fault detected Not supported, always 0	0

**STATUS\_MFR\_SPECIFIC**

The STATUS\_MFR\_SPECIFIC command, is a standard PMBus™ command that contains manufacturer specific status information. Accesses to this command should use the PMBus™ read byte protocol. To clear bits in this register, the underlying fault should be cleared and a CLEAR FAULTS command should be issued.

**TABLE 15. Read VIN Register**

Value	Meaning	Default
0h – 0FFFh	Measured value for VIN	0000h

**TABLE 14. STATUS\_MFR\_SPECIFIC Definitions**

Bit	Meaning	Default
7	Circuit breaker fault	0
6	Ext. MOSFET shorted fault	0
5	Not Supported, Always 0	0
4	Defaults loaded	1
3	Not supported: Always 0	0
2	Not supported: Always 0	0
1	Not supported: Always 0	0
0	Not supported: Always 0	0

**READ\_VIN**

The READ VIN is a standard PMBus™ command that returns the 12 bit measured value of the input voltage. Reading this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table. Accesses to this command should use the PMBus™ read word protocol. This value is also used internally for the Vin Over and Under Voltage Warning detection.



**READ\_VOUT**

The **READ\_VOUT** is a standard PMBus™ command that returns the 12-bit measured value of the output voltage. Reading this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table. Accesses to this command should use the PMBus™ read word protocol. This value is also used internally for the VOUT Under Voltage Warning detection.

**TABLE 16. Read VOUT Register**

Value	Meaning	Default
0h – 0FFFh	Measured value for VOUT	0000h

**READ\_TEMPERATURE\_1**

The **READ TEMPERATURE** is a standard PMBus™ command that returns the signed value of the temperature measured by the external temperature sense diode. Reading this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table. Accesses to this command should use the PMBus™ read word protocol. This value is also used internally for the Over Temperature Fault and Warning detection. This data has a range of -256 to +255 degrees C after the coefficients are applied.

**TABLE 17. Read Temperature Register**

Value	Meaning	Default
0h – 0FFFh	Measured value for TEMPERATURE	0000h

**MFR\_ID**

The **MANUFACTURER ID** is a standard PMBus™ command that returns the identification of the manufacturer. To read the **MANUFACTURER ID**, use the PMBus™ block read protocol.

**TABLE 18. MANUFACTURER ID Register**

Byte	Name	Value
0	Number of bytes	03h
1	MFR ID-1	4Eh 'N'
2	MFR ID-2	53h 'S'
3	MFR ID-3	4Ch 'C'

**MFR\_MODEL**

The **MANUFACTURER MODEL** is a standard PMBus™ command that returns the part number of the chip. To read the **MANUFACTURER MODEL**, use the PMBus™ block read protocol.

**TABLE 19. MANUFACTURER MODEL Register**

Byte	Name	Value
0	Number of bytes	08h
1	MFR ID-1	4Ch 'L'
2	MFR ID-2	4Dh 'M'
3	MFR ID-3	32h '2'
4	MFR ID-4	35h '5'
5	MFR ID-5	30h '0'
6	MFR ID-6	36h '6'
7	MFR ID-7	36h '6'
8	MFR ID-8	00h

**MFR\_REVISION**

The **MANUFACTURER REVISION** is a standard PMBus™ command that returns the revision level of the part. To read the **MANUFACTURER REVISION**, use the PMBus™ block read protocol.

**TABLE 20. MANUFACTURER REVISION Register**

Byte	Name	Value
0	Number of bytes	02h
1	MFR ID-1	41h 'A'
2	MFR ID-2	41h 'A'

## Manufacturer Specific PMBus™ Commands

**MFR\_SPECIFIC\_00: READ\_AUX**

The **READ AUX** command will report the 12-bit ADC measured auxiliary voltage. Voltages greater than or equal to 1.17V to ground will be reported at plus full scale (0FFFh). Voltages less than or equal to 0V referenced to ground will be reported as 0 (0000h). Coefficients for the AUX value are dependant on the value of the external divider (if used). To read data from the MFR READ AUX command, use the PMBus™ Read Word protocol.

**TABLE 21. MFR READ AUX Register**

Value	Meaning	Default
0h – 0FFFh	Measured value for AUX input	0000h

**MFR\_SPECIFIC\_01: MFR\_READ\_IIN**

查询"LM25066"供应商

The MFR\_READ\_IIN command will report the 12-bit ADC measured current sense voltage. To read data from the MFR\_READ\_IIN command, use the PMBus™ Read Word protocol. Reading this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table. Please see the section on coefficient calculations to calculate the values to use.

**TABLE 22. MFR READ IIN Register**

Value	Meaning	Default
0h – 0FFFh	Measured value for input current sense voltage	0000h

**MFR\_SPECIFIC\_02: MFR\_READ\_PIN**

The MFR\_READ\_PIN command will report the upper 12-bits of the VIN x IIN product as measured by the 12-bit ADC. To read data from the MFR\_READ\_PIN command, use the PMBus™ Read Word protocol. Reading this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table. Please see the section on coefficient calculations to calculate the values to use.

**TABLE 23. MFR READ PIN Register**

Value	Meaning	Default
0h – 0FFFh	Value for input current x input voltage	0000h

**MFR\_SPECIFIC\_03: MFR\_IIN\_OC\_WARN\_LIMIT**

The MFR\_IIN\_OVER CURRENT WARN LIMIT PMBus command sets the input overcurrent warning threshold. In the event that the input current rises above the value set in this register, the IIN Overcurrent flags are set in the status registers and the SMBALERT is asserted. To access the MFR\_IIN\_OVERCURRENT WARN LIMIT register, use the PMBus™ Read/Write Word protocol. Reading/writing to this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table.

**TABLE 24. MFR IIN OVERCURRENT WARN LIMIT Register**

Value	Meaning	Default
0h – 0FFEh	Value for input over current warn limit	0FFFh
0FFFh	Input over current warning disabled	n/a

**MFR\_SPECIFIC\_04: MFR\_PIN\_OP\_WARN\_LIMIT**

The MFR\_IIN\_OVER POWER WARN LIMIT PMBus command sets the input overpower warning threshold. In the event that the input power rises above the value set in this register, the PIN Overpower flags are set in the status registers and the SMBALERT is asserted. To access the MFR\_PIN\_OVERPOWER WARN LIMIT register, use the PMBus™ Read/Write Word protocol. Reading/writing to this register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table.

**TABLE 25. PIN OVER POWER WARN LIMIT Register**

Value	Meaning	Default
0h – 0FFEh	Value for input over power warn limit	0FFFh
0FFFh	Input over power warning disabled	n/a

**MFR\_SPECIFIC\_05: READ\_PIN\_PEAK**

The READ\_PIN\_PEAK command will report the maximum input power measured since a Power On reset or the last CLEAR\_PIN\_PEAK command. To access the READ\_PIN\_PEAK command, use the PMBus™ Read Word protocol. Use the coefficients shown in the Telemetry and Warning Coefficients Table.

**TABLE 26. Read PIN Peak Register**

Value	Meaning	Default
0h – 0FFEh	Maximum Value for input current x input voltage since reset or last clear	0h

**MFR\_SPECIFIC\_06: CLEAR\_PIN\_PEAK**

The CLEAR\_PIN\_PEAK command will clear the PIN\_PEAK register. This command uses the PMBus™ Send Byte protocol.

**MFR\_SPECIFIC\_07: GATE\_MASK**

The GATE\_MASK register allows the hardware to prevent fault conditions from switching off the MOSFET. When the bit is high, the corresponding FAULT has no control over the MOSFET gate. All status registers will still be updated (STATUS, DIAGNOSTIC) and an SMBALERT will still be issued. This register is accessed with the PMBus™ Read / Write Byte protocol.

**Warning:** Inhibiting the MOSFET switch off in response to overcurrent or circuit breaker fault conditions will likely result in the destruction of the MOSFET! This functionality should be used with great care and supervision!

**TABLE 27. MFR\_SPECIFIC\_07 GATE MASK Definitions**

Bit	NAME	Default
7	Not used, always 0	0
6	Not used, always 0	0
5	VIN UV FAULT	0
4	VIN OV FAULT	0
3	IIN/PFET FAULT	0
2	OVERTEMP FAULT	0
1	Not used, always 0	0
0	CIRCUITBREAKER_FAULT	0

The IIN/PFET Fault refers to the input current fault and the MOSFET power dissipation fault. There is no input power fault detection; only input power warning detection.

**MFR\_SPECIFIC\_08: ALERT\_MASK**

The ALERT\_MASK is used to mask the SMBALERT when a specific fault or warning has occurred. Each bit corresponds to one of the 14 different analog and digital faults or warnings that would normally result in an SMBALERT being set. When the corresponding bit is high, that condition will not cause the SMBALERT to be asserted. If that condition occurs, the registers where that condition is captured will still be updated

(STATUS registers, DIAGNOSTIC\_WORD) and the external MOSFET gate control will still be active (VIN\_OV\_FAULT, VIN\_UV\_FAULT, IIN/PFET\_FAULT, CB\_FAULT,

OT\_FAULT). This register is accessed with the PMBus™ Read / Write Word protocol.

**TABLE 28. ALERT MASK Definitions**

BIT	NAME	DEFAULT
15	VOUT UNDERVOLTAGE WARN	0
14	IIN LIMIT Warn	0
13	VIN UNDERVOLTAGE WARN	0
12	VIN OVERVOLTAGE WARN	0
11	PGOOD BAR	1
10	OVERTEMP WARN	0
9	Not Used	0
8	OVERPOWER LIMIT WARN	0
7	Not Used	0
6	EXT_MOSFET_SHORTED	0
5	VIN UNDERVOLTAGE FAULT	0
4	VIN OVERVOLTAGE FAULT	0
3	IIN/PFET FAULT	0
2	OVERTEMPERATURE FAULT	0
1	CML FAULT (Communications Fault)	0
0	CIRCUIT BREAKER FAULT	0

#### MFR\_SPECIFIC\_09: DEVICE\_SETUP

The DEVICE SETUP command may be used to override pin settings to define operation of the LM25066 under host control. This command is accessed with the PMBus™ read / write byte protocol.

**TABLE 29. DEVICE\_SETUP Byte Format**

Bit	Name	Meaning
7:5	Retry setting	111 = Unlimited retries
		110 = Retry 16 times
		101 = Retry 8 times
		100 = Retry 4 times
		011 = Retry 2 times
		010 = Retry 1 time
		001 = No retries
4	Current limit setting	000 = Pin configured retries
		0 = Low setting (25mV)
3	CB/CL Ratio	1 = High setting (46mV)
		0 = Low setting (1.8x)
2	Current limit Configuration	1 = High setting (3.6x)
		0 = Use pin settings
1	Circuit breaker Configuration	1 = Use SMBus settings
		0 = Use pin settings
0	Unused	

In order to configure the Current Limit Setting via this register, it is necessary to set the Current Limit Configuration bit (2) to 1 to enable the register to control the current limit function and the Current Limit Setting bit (4) to select the desired setting. Similarly, in order to control the Circuit Breaker via this register, it is necessary to set the Circuit Breaker Configuration bit (1) to 1 to enable the register to control the Circuit Breaker Setting, and the Circuit Breaker / Current Limit Ratio bit (3) to

the desired value. If the respective Configuration bits are not set, the Settings will be ignored and the pin set values used. The Current Limit Configuration effects the coefficients used for the Current and Power measurements and warning registers.

#### MFR\_SPECIFIC\_10: BLOCK\_READ

The BLOCK\_READ COMMAND concatenates the DIAGNOSTIC\_WORD with input and output telemetry information (IIN, VOUT, VIN, PIN) as well as TEMPERATURE to capture all of the operating information of the LM25066 in a single SMBus transaction. The block is 12 bytes long with telemetry information being sent out in the same manner as if an individual READ\_XXX command had been issued (shown below). The contents of the block read register are updated every clock cycle (85ns) as long as the SMBus interface is idle. BLOCK\_READ also guarantees that the VIN, VOUT, IIN and PIN measurements are all time-aligned whereas there is a chance they may not be if read with individual PMBus™ commands.

The Block Read command is read via the PMBus™ block read protocol.

**TABLE 30. BLOCK\_READ Register Format**

Byte Count (always 12)	(1 byte)
DIAGNOSTIC WORD	(1 Word)
IIN_BLOCK	(1 Word)
VOUT_BLOCK	(1 Word)
VIN_BLOCK	(1 Word)
PIN_BLOCK	(1 Word)
TEMP_BLOCK	(1 Word)

#### MFR\_SPECIFIC\_11: SAMPLES\_FOR\_AVG

The SAMPLES\_FOR AVERAGE is a manufacturer specific command for setting the number of samples used in computing the average values for IIN, VIN, VOUT, PIN. The decimal equivalent of the AVGN nibble is the power of 2 samples (e.g.

AVGN=12 equates to 4096 samples used in computing the average. The LM25066 supports average numbers of 1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048, 4096. The SAMPLES\_FOR\_AVG number applies to average values of IIN, VIN, VOUT, PIN simultaneously. The LM25066 uses simple averaging. This is accomplished by summing consecutive results up to the number programmed, then dividing by the number of samples. Averaging is calculated according to the following sequence:

$$Y = (X_{(N)} + X_{(N-1)} + \dots + X_{(0)}) / \text{AVGN}$$

When the averaging has reached the end of a sequence (for example, 4095 samples are averaged), then a whole new sequence begins that will require the same number of samples (in this example, 4095) to be taken before the new average is ready.

**TABLE 31. SAMPLES\_FOR\_AVERAGE**

AVGN	2 <sup>N</sup> averages	Averaging/Register Update Period (ms)
0000	0	1
0001	1	2
0010	2	4
0011	3	8
0100	4	16
0101	5	32

AVGN	2 <sup>N</sup> averages	Averaging/Register Update Period (ms)
0110	6	64
0111	7	128
1000	8	256
1001	9	512
1010	10	1024
1011	11	2048
1100	12	4096

Note that a change in the SAMPLES\_FOR\_AVG register will not be reflected in the average telemetry measurements until the present averaging interval has completed. The default setting for AVGN is 0000 and therefore the average telemetry will mirror the instantaneous telemetry until a value higher than zero is programmed.

The Samples For Average register is accessed via the PMBus<sup>®</sup>; read / write byte protocol.

**TABLE 32. SAMPLES FOR AVG Register**

Value	Meaning	Default
0h – 0Ch	Exponent for number of samples to average over	00h

**MFR\_SPECIFIC\_12: READ\_AVG\_VIN**

The READ AVG VIN command will report the 12-bit ADC measured input average voltage. If the data is not ready, the returned value will be the previous averaged data. However, if there is no previously averaged data the default value (0000h) will be returned. This data is read with the PMBus™ Read Word protocol. This register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table.

**TABLE 33. READ AVG VIN Register**

Value	Meaning	Default
0h – 0FFFh	Average of measured values for input voltage	0000h

**MFR\_SPECIFIC\_13: READ\_AVG\_VOUT**

The READ AVG IIN command will report the 12-bit ADC measured current sense average voltage. The returned value will be the default value (0000h) or previous data when the average data is not ready. This data is read with the PMBus™ Read Word protocol. This register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table.

**TABLE 34. READ AVG VOUT Register**

Value	Meaning	Default
0h – 0FFFh	Average of measured values for output voltage	0000h

**MFR\_SPECIFIC\_14: READ\_AVG\_IIN**

The READ AVG IIN command will report the 12-bit ADC measured current sense average voltage. The returned value will be the default value (0000h) or previous data when the average data is not ready. This data is read with the PMBus™ Read Word protocol. This register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table.

**TABLE 35. READ\_AVG\_IIN Register**

Value	Meaning	Default
0h – 0FFFh	Average of measured values for current sense voltage	0000h

**MFR\_SPECIFIC\_15: READ\_AVG\_PIN**

The READ AVG PIN command will report the upper 12-bits of the average VIN x IIN product as measured by the 12-bit ADC. You will read the default value (0000h) or previous data when the average data is not ready. This data is read with the PMBus™ Read Word protocol. This register should use the coefficients shown in the Telemetry and Warning Conversion Coefficients Table.

**TABLE 36. READ\_AVG\_PIN Register**

Value	Meaning	Default
0h – 0FFFh	Average of measured value for input voltage x input current sense voltage	0000h

**MFR\_SPECIFIC\_16: BLACK\_BOX\_READ**

The BLACK BOX READ command retrieves the BLOCK READ data which was latched in at the first assertion of  $\overline{\text{SMBALERT}}$ . It is re-set with the CLEAR FAULTS command. It is the same format as the BLOCK READ registers, the only difference being that its contents are updated with the  $\overline{\text{SMBALERT}}$  edge rather than the internal clock edge. This command is read with the PMBus™ Block Read protocol.

**MFR\_SPECIFIC\_17: READ\_DIAGNOSTIC\_WORD**

The READ DIAGNOSTIC WORD PMBus command will report all of the LM25066 faults and warnings in a single read operation. The standard response to the assertion of the  $\overline{\text{SMBALERT}}$  signal of issuing multiple read requests to various status registers can be replaced by a single word read to the DIAGNOSTIC WORD register. The READ DIAGNOSTIC WORD command should be read with the PMBus™ Read Word protocol. The DIAGNOSTIC WORD is also returned in the BLOCK READ, BLACK BOX READ, and AVG BLOCK READ operations.

[查询"LM25066"供应商](#)
**TABLE 37. DIAGNOSTIC\_WORD Format**

Bit	Meaning	Default
15	VOUT_UNDERVOLTAGE_WARN	0
14	IIN_OP_WARN	0
13	VIN_UNDERVOLTAGE_WARN	0
12	VIN_OVERTVOLTAGE_WARN	0
11	PGOOD_BAR	1
10	OVER_TEMPERATURE_WARN	0
9	TIMER_LATCHED_OFF	0
8	EXT_MOSFET_SHORTED	0
7	CONFIG_PRESET	1
6	DEVICE_OFF	1
5	VIN_UNDERVOLTAGE_FAULT	1
4	VIN_OVERTVOLTAGE_FAULT	0
3	VIN_CURRENT/PFET_FAULT	0
2	OVER_TEMPERATURE_FAULT	0
1	CML_FAULT	0
0	CIRCUIT_BREAKER_FAULT	0

**MFR\_SPECIFIC\_18: AVG\_BLOCK\_READ**

The AVG\_BLOCK\_READ command concatenates the DIAGNOSTIC\_WORD with input and output average telemetry information (IIN, VOUT, VIN, PIN) as well as TEMPERATURE to capture all of the operating information of the part in a single PMBus® transaction. The block is 12 bytes long with telemetry information being sent out in the same manner as if an individual READ\_AVG\_XXX command had been issued (shown below). AVG\_BLOCK\_READ also guarantees that the VIN, VOUT, and IIN measurements are all time-aligned whereas there is a chance they may not be if read with individual PMBus™ commands. To read data from the AVG\_BLOCK\_READ command, use the SMBus Block Read protocol.

**TABLE 38. AVG\_BLOCK\_READ Register Format**

Byte Count (always 12)	(1 byte)
DIAGNOSTIC WORD	(1 word)
AVG_IIN	(1 word)
AVG_VOUT	(1 word)
AVG_VIN	(1 word)
AVG_PIN	(1 word)
TEMPERATURE	(1 word)

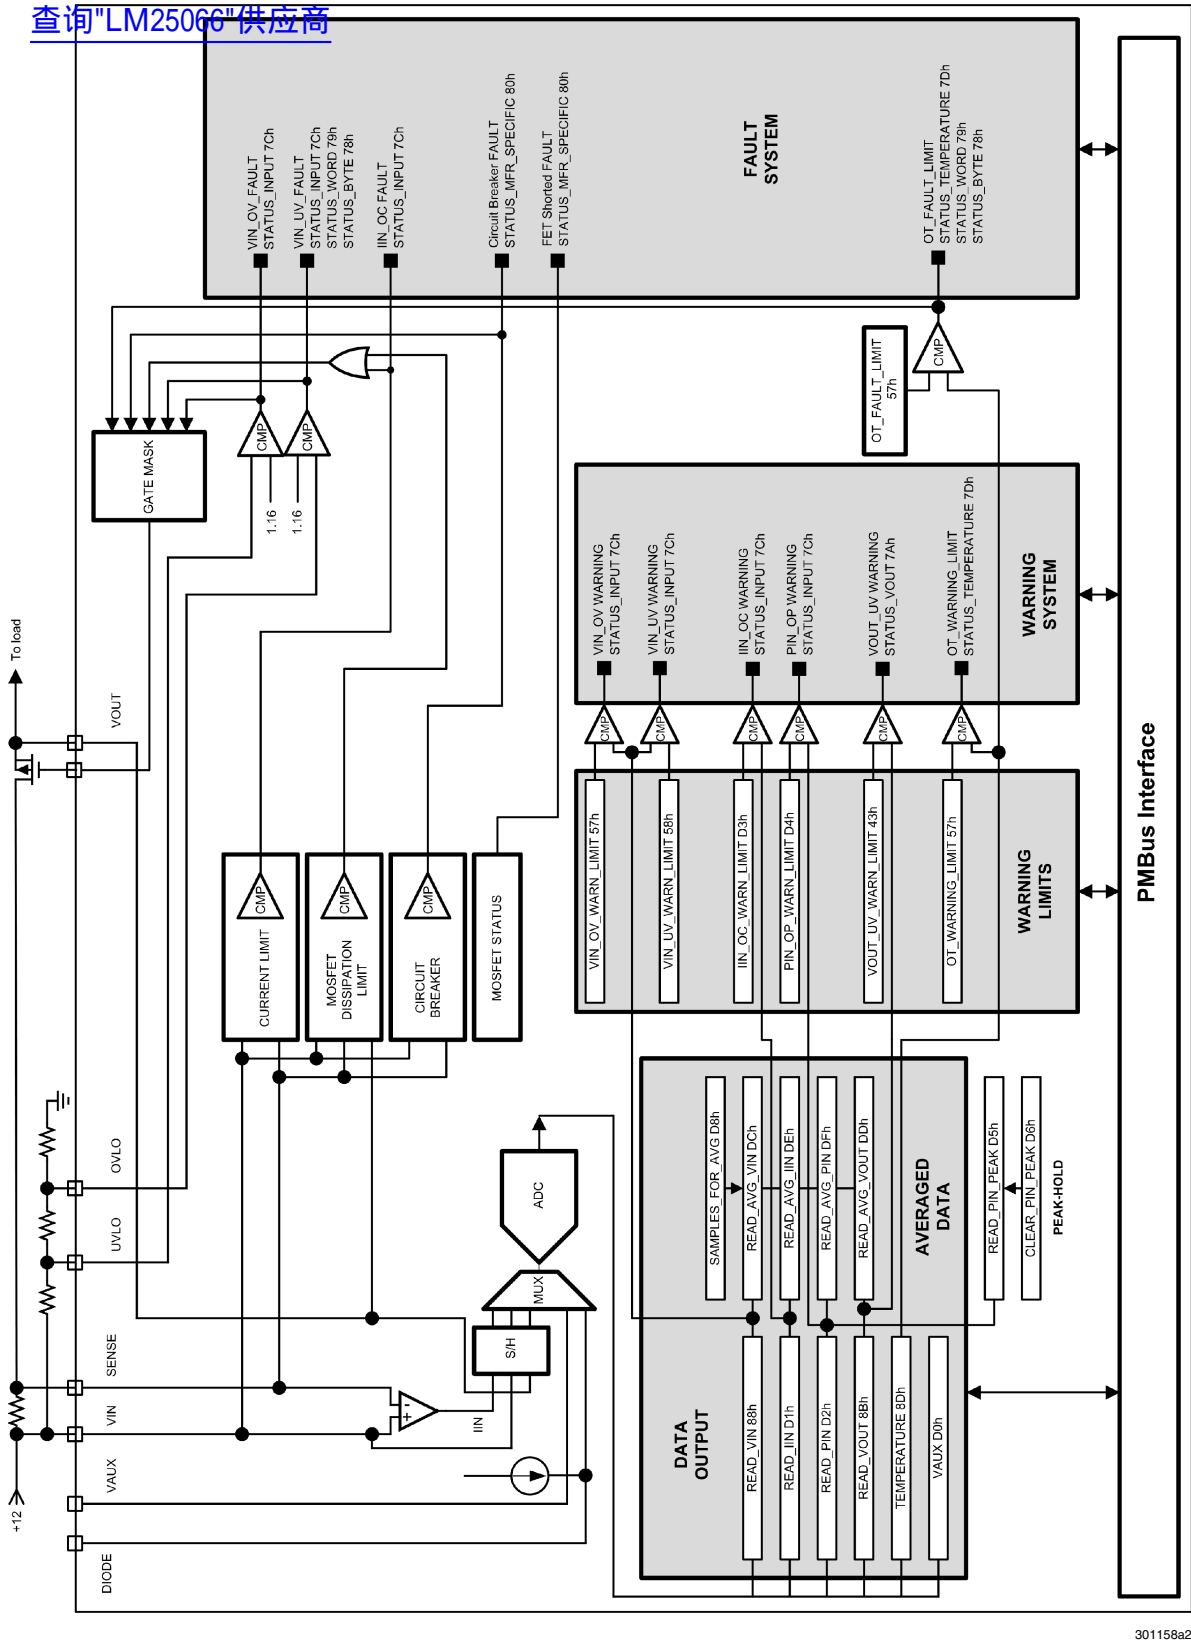


FIGURE 17. Command/Register and Alert Flow Diagram

## Reading and Writing Telemetry Data and Warning Thresholds

查询"LM25066"供应商

All measured telemetry data and user programmed warning thresholds are communicated in 12 bit two's complement binary numbers read/written in 2 byte increments conforming to the Direct format as described in section 8.3.3 of the PMBus™ Power System Management Protocol Specification 1.1 (Part

II). The organization of the bits in the telemetry or warning word is shown in Table 40, where Bit\_11 is the most significant bit (MSB) and Bit\_0 is the least significant bit (LSB). The decimal equivalent of all warning and telemetry words are constrained to be within the range of 0 to 4095, with the exception of temperature. The decimal equivalent value of the temperature word ranges from 0 to 65535.

**TABLE 39. Telemetry and Warning Word Format**

Byte	B7	B6	B5	B4	B3	B2	B1	B0
1	Bit_7	Bit_6	Bit_5	Bit_4	Bit_3	Bit_2	Bit_1	Bit_0
2	0	0	0	0	Bit_11	Bit_10	Bit_9	Bit_8

Conversion from direct format to real world dimensions of current, voltage, power, and temperature is accomplished by determining appropriate coefficients as described in section 7.2.1 of the PMBus™ Power System Management Protocol Specification 1.1 (Part II). According to this specification, the host system converts the values received into a reading of volts, amperes, watts, or other units using the following relationship:

$$X = \frac{1}{m} (Y \times 10^{-R} - b)$$

Where:

**X:** the calculated "real world" value (volts, amps, watt, etc.)

**m:** the slope coefficient

**Y:** a two byte two's complement integer received from device

**b:** the offset, a two byte, two's complement integer

**R:** the exponent, a one byte two's complement integer

R is only necessary in systems where m is required to be an integer (for example, where m may be stored in a register in an integrated circuit). In those cases, R only needs to be large enough to yield the desired accuracy.

**TABLE 40. Telemetry and Warning Conversion Coefficients**

Commands	Condition	Format	Number of Data Bytes	m	b	R	Units
READ_VIN, READ_AVG_VIN VIN_OV_WARN_LIMIT VIN_UV_WARN_LIMIT		DIRECT	2	22070	-1800	-2	V
READ_VOUT, READ_AVG_VOUT VOUT_UV_WARN_LIMIT		DIRECT	2	22070	-1800	-2	V
READ_VAUX		DIRECT	2	35330	-150	0	V
*READ_IN, READ_AVG_IN MFR_IIN_OC_WARN_LIMIT	CL = GND	DIRECT	2	13661	-5200	-2	A
*READ_IN, READ_AVG_IN MFR_IIN_OC_WARN_LIMIT	CL = VDD	DIRECT	2	6852	-3100	-2	A
*READ_PIN, READ_AVG_PIN, READ_PEAK_PIN MFR_PIN_OP_WARN_LIMIT	CL = GND	DIRECT	2	736	-3300	-2	W
*READ_PIN, READ_AVG_PIN, READ_PEAK_PIN MFR_PIN_OP_WARN_LIMIT	CL = VDD	DIRECT	2	369	-1900	-2	W
READ_TEMPERATURE_1 OT_WARN_LIMIT OT_FAULT_LIMIT		DIRECT	2	16000	0	-3	°C

\* The coefficients relating to current/power measurements and warning thresholds shown in Table 40 are normalized to a sense resistor ( $R_S$ ) value of 1mΩ. In general, the current/power coefficients can be calculated using the relationships shown in Table 41.



TABLE 41. Current and Power Telemetry and Warning Conversion Coefficients ( $R_S$  in  $m\Omega$ )

Commands	Condition	Format	Number of Data Bytes	m	b	R	Units
*READ_IN, READ_AVG_IN MFR_IIN_OC_WARN_LIMIT	CL = GND	DIRECT	2	$13661 \times R_S$	-5200	-2	A
*READ_IN, READ_AVG_IN MFR_IIN_OC_WARN_LIMIT	CL = VDD	DIRECT	2	$6854 \times R_S$	-3100	-2	A
*READ_PIN, READ_AVG_PIN, READ_PEAK_PIN MFR_PIN_OP_WARN_LIMIT	CL = GND	DIRECT	2	$736 \times R_S$	-3300	-2	W
*READ_PIN, READ_AVG_PIN, READ_PEAK_PIN MFR_PIN_OP_WARN_LIMIT	CL = VDD	DIRECT	2	$369 \times R_S$	-1900	-2	W

Care must be taken to adjust the exponent coefficient, R, such that the value of m remains within the range of -32768 to +32767. For example, if a 5  $m\Omega$  sense resistor is used, the correct coefficients for the READ\_IIN command with CL = VDD would be m = 6830, b = -310, R = -1.

#### A Note on the "b" Coefficient

Since b coefficients represent offset, for simplification b is set to zero in the following discussions.

efficients enable the data output to be converted to amps. The values shown in the example are based on having the device programmed for a 25 mV current limit threshold (CL = GND). In the 25mV range, the LSB value is 7.32  $\mu V$  and the full scale range is 30.2 mV. In the 46mV range (CL = VDD), the LSB value is 14.64  $\mu V$  and the full scale range in 60.4 mV.

## Reading Current

The current register actually displays a value equivalent to a voltage across the user specified sense resistor,  $R_S$ . The co-

Step	Example
1. Determine full scale current and shunt value based on 29.98 mV across shunt at full scale. Use either:  $I_{IN\_MAX} = \frac{30.2 \text{ mV}}{R_S}$ or: 	Example: 122A application with 250 $\mu\Omega$ shunt.  $I_{IN\_MAX} = \frac{30.2 \text{ mV}}{0.25 \text{ m}\Omega} = 120.8A$
2. Determine m':  $m' = \frac{4095}{I_{IN\_MAX}}$	$m' = \frac{4095}{120.8A} = 33.90$
3. Determine exponent R necessary to set m' to integer value m:  $10^R = \frac{m'}{m}$	Select R to provide integer value of m:  $R = \log_{10} \frac{33.90}{3390}$  R = -2
4. Final values	m = 3390 R = -2 b = 0

## Reading Input and Output Voltage

查询"LM25066"供应商

Coefficients for VIN and VOUT are fixed and are consistent between read telemetry measurements (e.g., READ\_VIN, READ\_AVG\_VIN) and warning thresholds (e.g.,

VIN\_UV\_WARN\_LIMIT). Input and output voltage values are read/written in Direct format with 12-bit resolution and a 4.54 mV LSB. An example of calculating the PMBus™ coefficients for input voltage is shown below.

Step	Example
1. Determine m' based on full scale analog input and full scale digital range:  $m'' = \frac{4095}{V_{IN\_MAX}} = \frac{4095}{18.59V}$	$m' = \frac{4095}{18.59V} = 220.26$
2. Determine exponent R necessary to set m' to integer value m with desired accuracy:  $10^R = \frac{m'}{m}$	<p>Select R to provide 5 digit accuracy for the integer value of m (which would be 21703 in this example:</p> $R = \log_{10} \frac{220.26}{22026}$ <p>R = -2</p>
3. Final values	<p>m = 22026</p> <p>R = -2</p> <p>b = 0</p>

## Reading Power

The power calculation of the LM25066 is a relative power calculation meaning that full scale of the power register corresponds to simultaneous full scale values in the current register and voltage register such that the power register has the following relationship based on decimal equivalents of the register contents:

$$PIN = \frac{IIN \times VIN}{4095}$$

For this reason power coefficients will also vary depending on the shunt value and must be calculated for each application. The power LSB will vary depending on shunt value according to 276 μW/Rsense for 46mV range or 138.2 μW/Rsense for 25mV range.

Power is read in:

Step	Example
1. Determine full scale power from known full scale of input current and input voltage $P_{IN\_MAX} = V_{IN\_MAX} \times I_{IN\_MAX}$	<p>Example: 125A application with 250 μΩ shunt.</p> $P_{IN\_MAX} = (18.59V) \times (120.8A) = 2246W$
2. Determine m':  $m' = \frac{4095}{P_{MAX}}$	$m' = \frac{4095}{2246W} = 1.823$
3. Optional: Determine exponent R necessary to set m' to integer value m with desired accuracy:  $10^R = \frac{m'}{m}$	<p>Select R (in this case selected to provide 4 digit accuracy for the integer value of m):</p> $R = \log_{10} \frac{1.823}{1823}$ <p>R = -3</p>
4. Final values	<p>m = 1823</p> <p>R = -3</p> <p>b = 0</p>

## Determining Telemetry Coefficients Empirically with Linear Fit

The coefficients for telemetry measurements and warning thresholds presented in Table 40 are adequate for the majority of applications. Current and power coefficients must be calculated per application as they are dependent on the value of the sense resistor,  $R_S$ , used. Table 41 provides the equations necessary for calculating the current and power coefficients for the general case. The small signal nature of the current measurement make it and the power measurement more susceptible to PCB parasitics than other telemetry channels. This may cause slight variations in the optimum coefficients (m, b, R) for converting from Direct format digital values to real-world values (e.g., Amps and Watts). The optimum coefficients can be determined empirically for a specific application and PCB layout using two or more measurements of the telemetry channel of interest. The current coefficients can be determined using the following method:

1. While the LM25066 is in normal operation measure the voltage across the sense resistor using kelvined test points and a high accuracy DVM while controlling the load current. Record the integer value returned by the READ\_AVG\_IIN command (with the SAMPLES\_FOR\_AVG set to a value greater than 0) for two or more voltages across the sense resistor. For best results, the individual READ\_AVG\_IIN measurements should span nearly the full scale range of the current (For example, voltage across  $R_S$  of 5mV and 20mV).
2. Convert the measured voltages to currents by dividing them by the value of  $R_S$ . For best accuracy the value of  $R_S$  should be measured. Table 42 assumes a sense resistor value of 5m $\Omega$ .

**TABLE 42. Measurements for linear fit determination of current coefficients:**

Measured voltage across $R_S$ (V)	Measured Current (A)	READ_AVG_IIN (integer value)
0.005	1	648
0.01	2	1331
0.02	4	2698

3. Using the spreadsheet or math program of your choice determine the slope and the y-intercept of the returned by the READ\_AVG\_IIN command values versus the measured current. For the data shown in Table 42:  
 READ\_AVG\_IIN value = slope x (Measured Current) + (y-intercept)  
 slope = 683.4  
 y-intercept = -35.5

4. To determine the 'm' coefficient, simply shift the decimal point of the calculated slope to arrive at an integer with a suitable number of significant digits for accuracy (typically 4) while staying with the range of -32768 to +32767. This shift in the decimal point equates to the 'R' coefficient. For the slope value shown above, the decimal point would be shifted to the right once hence  $R = -1$ .
5. Once the 'R' coefficient has been determined, the 'b' coefficient is found by multiplying the y-intercept by  $10^{-R}$ . In this case the value of  $b = -355$ .  
 Calculated Current Coefficients:  
 $m = 6834$   
 $b = -355$   
 $R = -1$

$$X = \frac{1}{m} (Y \times 10^{-R} - b)$$

Where:

**X:** the calculated "real world" value (volts, amps, watts, temperature)

**m:** the slope coefficient, is the two byte, two's complement integer

**Y:** a two byte two's complement integer received from device

**b:** the offset, a two byte, two's complement integer

**R:** the exponent, a one byte two's complement integer

The above procedure can be repeated to determine the coefficients of any telemetry channel simply by substituting measured current for some other parameter (e.g., power, voltage, etc.).

## Writing Telemetry Data

There are several locations that will require writing data if their optional usage is desired. Use the same coefficients previously calculated for your application, and apply them using this method as prescribed by the PMBus™ revision section 7.2.2 "Sending a Value"

$$Y = (mX + b) \times 10^R$$

Where:

**X:** the calculated "real world" value (volts, amps, watts, temperature)

**m:** the slope coefficient, is the two byte, two's complement integer

**Y:** a two byte two's complement integer received from device

**b:** the offset, a two byte, two's complement integer

**R:** the exponent, a one byte two's complement integer

## PMBus™ Address Lines (ADR0, ADR1, ADR2)

[查询"LM25066"供应商](#)

for communicating with the LM25066. Table 43 depicts 7-bit addresses (eighth bit is read/write bit):

The three address lines are to be set high (connect to VDD), low (connect to GND), or open to select one of 27 addresses

**TABLE 43. Device Addressing**

ADR2	ADR1	ADR0	Decoded Address
Z	Z	Z	40h
Z	Z	0	41h
Z	Z	1	42h
Z	0	Z	43h
Z	0	0	44h
Z	0	1	45h
Z	1	Z	46h
Z	1	0	47h
Z	1	1	10h
0	Z	Z	11h
0	Z	0	12h
0	Z	1	13h
0	0	Z	14h
0	0	0	15h
0	0	1	16h
0	1	Z	17h
0	1	0	50h
0	1	1	51h
1	Z	Z	52h
1	Z	0	53h
1	Z	1	54h
1	0	Z	55h
1	0	0	56h
1	0	1	57h
1	1	Z	58h
1	1	0	59h
1	1	1	5Ah

# SMBus Communications Timing Requirements

查询"LM25066"供应商

LM25066

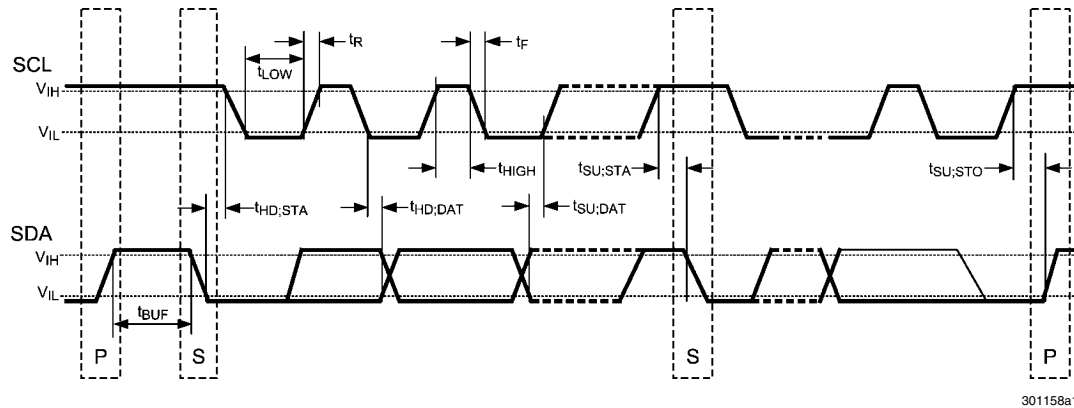


FIGURE 18. SMBus Timing Diagram

TABLE 44. SMBus Timing Definition

Symbol	Parameter	Limits		Units	Comments
		Min	Max		
$F_{SMB}$	SMBus Operating Frequency	10	400	kHz	
$T_{BUF}$	Bus free time between Stop and Start Condition	1.3		$\mu s$	
$T_{HD:STA}$	Hold time after (Repeated) Start Condition. After this period, the first clock is generated.	0.6		$\mu s$	
$T_{SU:STA}$	Repeated Start Condition setup time	0.6		$\mu s$	
$T_{SU:STO}$	Stop Condition setup time	0.6		$\mu s$	
$T_{HD:DAT}$	Data hold time	300		ns	
$T_{SU:DAT}$	Data setup time	100		ns	
$T_{TIMEOUT}$	Clock low time-out	25	35	ms	(Note 8)
$T_{LOW}$	Clock low period	1.5		$\mu s$	
$T_{HIGH}$	Clock high period	0.6		$\mu s$	(Note 9)
$T_{LOW:SEXT}$	Cumulative clock low extend time (slave device)		25	ms	(Note 10)
$T_{LOW:MEXT}$	Cumulative low extend time (master device)		10	ms	(Note 11)
$T_F$	Clock or Data Fall Time	20	300	ns	(Note 12)
$T_R$	Clock or Data Rise Time	20	300	ns	(Note 12)

**Note 8:** Devices participating in a transfer will timeout when any clock low exceeds the value of  $T_{TIMEOUT,MIN}$  of 25 ms. Devices that have detected a timeout condition must reset the communication no later than  $T_{TIMEOUT,MAX}$  of 35 ms. The maximum value must be adhered to by both a master and a slave as it incorporates the cumulative stretch limit for both a master (10ms) and a slave (25ms).

**Note 9:**  $T_{HIGH,MAX}$  provides a simple method for devices to detect bus idle conditions.

**Note 10:**  $T_{LOW:SEXT}$  is the cumulative time a slave device is allowed to extend the clock cycles in one message from the initial start to the stop. If a slave exceeds this time, it is expected to release both its clock and data lines and reset itself.

**Note 11:**  $T_{LOW:MEXT}$  is the cumulative time a master device is allowed to extend its clock cycles within each byte of a message as defined from start-to-ack, ack-to-ack, or ack-to-stop.

**Note 12:** Rise and fall time is defined as follows:

- $T_R = (V_{IL,MAX} - 0.15) \text{ to } (V_{IH,MIN} + 0.15)$
- $T_F = 0.9 VDD \text{ to } (V_{IL,MAX} - 0.15)$

## SMBALERT Response

查询"LM25066"供应商

The SMBALERT effectively has two masks:


1. The Alert Mask Register at D8h, and
2. The ARA Automatic Mask.

The ARA Automatic Mask is a mask that is set in response to a successful ARA read. An ARA read operation returns the PMBus® address of the lowest addressed part on the bus that has its SMBALERT asserted. A successful ARA read means that THIS part was the one that returned its address. When a part responds to the ARA read, it releases the SMBALERT signal. When the last part on the bus that has an

SMBALERT set has successfully reported its address, the SMBALERT signal will de-assert.

The way that the LM25066 releases the SMBALERT signal is by setting the ARA Automatic mask bit for all fault conditions present at the time of the ARA read. All status registers will still show the fault condition, but it will not generate and SMBALERT on that fault again until the ARA Automatic mask is cleared by the host issuing a Clear Fault command to this part. This should be done as a routine part of servicing an SMBALERT condition on a part, even if the ARA read is not done.

Figure 19 depicts a schematic version of this flow.

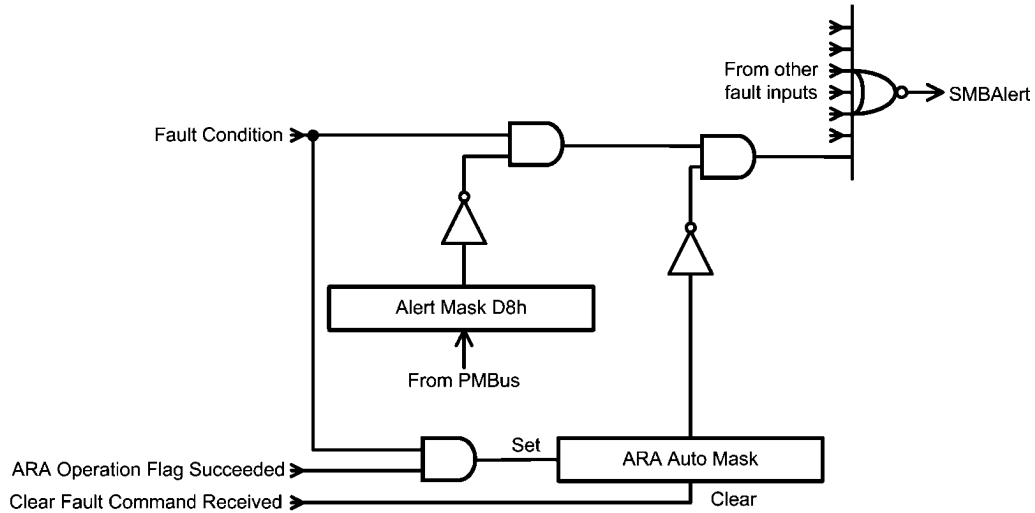


301158a0

FIGURE 19. Typical Flow Schematic for SMBALERT Fault



# Physical Dimensions

inches (millimeters) unless otherwise noted



查询"LM25066"供应商

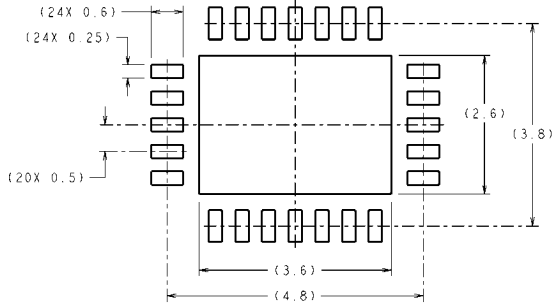

RECOMMENDED LAND PATTERN

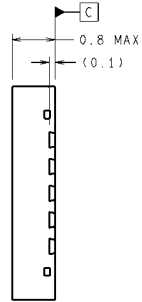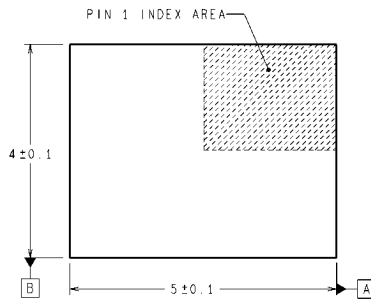

 DIMENSIONS ARE IN MILLIMETERS  
DIMENSIONS IN ( ) FOR REFERENCE ONLY

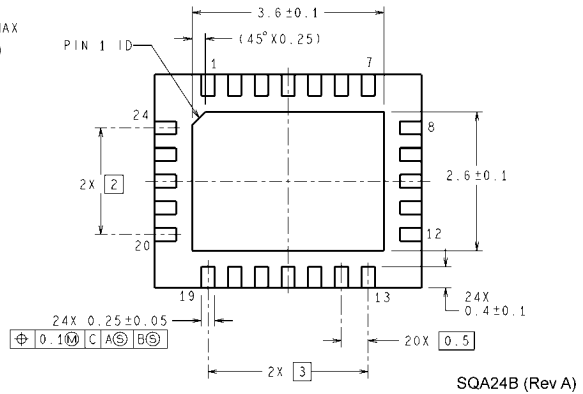

NS Package Number SQA24B

[查询"LM25066"供应商](#)

## Notes

For more National Semiconductor product information and proven design tools, visit the following Web sites at:  
[www.national.com](http://www.national.com)

Products		Design Support	
Amplifiers	<a href="http://www.national.com/amplifiers">www.national.com/amplifiers</a>	WEBENCH® Tools	<a href="http://www.national.com/webench">www.national.com/webench</a>
Audio	<a href="http://www.national.com/audio">www.national.com/audio</a>	App Notes	<a href="http://www.national.com/appnotes">www.national.com/appnotes</a>
Clock and Timing	<a href="http://www.national.com/timing">www.national.com/timing</a>	Reference Designs	<a href="http://www.national.com/refdesigns">www.national.com/refdesigns</a>
Data Converters	<a href="http://www.national.com/adac">www.national.com/adac</a>	Samples	<a href="http://www.national.com/samples">www.national.com/samples</a>
Interface	<a href="http://www.national.com/interface">www.national.com/interface</a>	Eval Boards	<a href="http://www.national.com/evalboards">www.national.com/evalboards</a>
LVDS	<a href="http://www.national.com/lvds">www.national.com/lvds</a>	Packaging	<a href="http://www.national.com/packaging">www.national.com/packaging</a>
Power Management	<a href="http://www.national.com/power">www.national.com/power</a>	Green Compliance	<a href="http://www.national.com/quality/green">www.national.com/quality/green</a>
Switching Regulators	<a href="http://www.national.com/switchers">www.national.com/switchers</a>	Distributors	<a href="http://www.national.com/contacts">www.national.com/contacts</a>
LDOs	<a href="http://www.national.com/ldo">www.national.com/ldo</a>	Quality and Reliability	<a href="http://www.national.com/quality">www.national.com/quality</a>
LED Lighting	<a href="http://www.national.com/led">www.national.com/led</a>	Feedback/Support	<a href="http://www.national.com/feedback">www.national.com/feedback</a>
Voltage References	<a href="http://www.national.com/vref">www.national.com/vref</a>	Design Made Easy	<a href="http://www.national.com/easy">www.national.com/easy</a>
PowerWise® Solutions	<a href="http://www.national.com/powerwise">www.national.com/powerwise</a>	Applications & Markets	<a href="http://www.national.com/solutions">www.national.com/solutions</a>
Serial Digital Interface (SDI)	<a href="http://www.national.com/sdi">www.national.com/sdi</a>	Mil/Aero	<a href="http://www.national.com/milaero">www.national.com/milaero</a>
Temperature Sensors	<a href="http://www.national.com/tempsensors">www.national.com/tempsensors</a>	SolarMagic™	<a href="http://www.national.com/solarmagic">www.national.com/solarmagic</a>
PLL/VCO	<a href="http://www.national.com/wireless">www.national.com/wireless</a>	PowerWise® Design University	<a href="http://www.national.com/training">www.national.com/training</a>

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED IN CONNECTION WITH NATIONAL SEMICONDUCTOR CORPORATION ("NATIONAL") PRODUCTS. NATIONAL MAKES NO REPRESENTATIONS OR WARRANTIES WITH RESPECT TO THE ACCURACY OR COMPLETENESS OF THE CONTENTS OF THIS PUBLICATION AND RESERVES THE RIGHT TO MAKE CHANGES TO SPECIFICATIONS AND PRODUCT DESCRIPTIONS AT ANY TIME WITHOUT NOTICE. NO LICENSE, WHETHER EXPRESS, IMPLIED, ARISING BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT.

TESTING AND OTHER QUALITY CONTROLS ARE USED TO THE EXTENT NATIONAL DEEMS NECESSARY TO SUPPORT NATIONAL'S PRODUCT WARRANTY. EXCEPT WHERE MANDATED BY GOVERNMENT REQUIREMENTS, TESTING OF ALL PARAMETERS OF EACH PRODUCT IS NOT NECESSARILY PERFORMED. NATIONAL ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR BUYER PRODUCT DESIGN. BUYERS ARE RESPONSIBLE FOR THEIR PRODUCTS AND APPLICATIONS USING NATIONAL COMPONENTS. PRIOR TO USING OR DISTRIBUTING ANY PRODUCTS THAT INCLUDE NATIONAL COMPONENTS, BUYERS SHOULD PROVIDE ADEQUATE DESIGN, TESTING AND OPERATING SAFEGUARDS.

EXCEPT AS PROVIDED IN NATIONAL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, NATIONAL ASSUMES NO LIABILITY WHATSOEVER, AND NATIONAL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY RELATING TO THE SALE AND/OR USE OF NATIONAL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

### LIFE SUPPORT POLICY

**NATIONAL'S PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS PRIOR WRITTEN APPROVAL OF THE CHIEF EXECUTIVE OFFICER AND GENERAL COUNSEL OF NATIONAL SEMICONDUCTOR CORPORATION.** As used herein:

Life support devices or systems are devices which (a) are intended for surgical implant into the body, or (b) support or sustain life and whose failure to perform when properly used in accordance with instructions for use provided in the labeling can be reasonably expected to result in a significant injury to the user. A critical component is any component in a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system or to affect its safety or effectiveness.

National Semiconductor and the National Semiconductor logo are registered trademarks of National Semiconductor Corporation. All other brand or product names may be trademarks or registered trademarks of their respective holders.

Copyright© 2010 National Semiconductor Corporation

For the most current product information visit us at [www.national.com](http://www.national.com)



**National Semiconductor  
Americas Technical  
Support Center**  
Email: [support@nsc.com](mailto:support@nsc.com)  
Tel: 1-800-272-9959

**National Semiconductor Europe  
Technical Support Center**  
Email: [europe.support@nsc.com](mailto:europe.support@nsc.com)

**National Semiconductor Asia  
Pacific Technical Support Center**  
Email: [ap.support@nsc.com](mailto:ap.support@nsc.com)

**National Semiconductor Japan  
Technical Support Center**  
Email: [jpn.feedback@nsc.com](mailto:jpn.feedback@nsc.com)