


# Model 3560, 3562, 3564, 4690 Banana Jack To #12, 16, 20 & 22 Socket

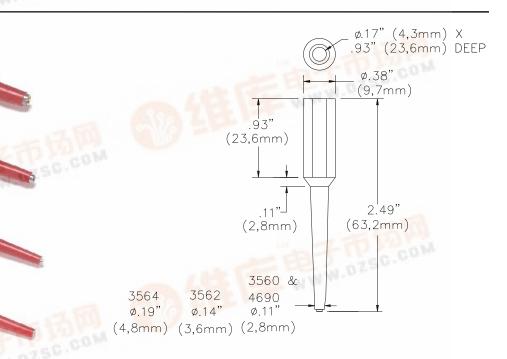

## **FEATURES**:

- Ideal test adapters for rapid testing of the hard-to-get to pins of multi-pin connectors.
- $\checkmark$  Flexible tip allows testing of adjacent contacts.
- ✓ Full insulation protects against shorting or contact damage.
- ✓ Model 4690 will also slip over 0.025" (0.63mm) square pins.

### **MATERIALS:**

Insulation: Polyvinyl chloride (PVC) Banana Jack Body (upper connector) *Material:* Brass. *Finish:* Bright Tin plated Socket (lower connector): *Material:* Copper Alloy *Finish:* Gold over copper plate

| ize Type Current   | Contact Size          | Model |
|--------------------|-----------------------|-------|
| Socket 5 Amps      | 22 AWG .030" (.76mm)  | 4690  |
| n) Socket 7.5 Amps | 20 AWG .040" (1.02mm) | 3560  |
| n) Socket 13 Amps  | 16 AWG .063" (1.60mm) | 3562  |
| n) Socket 24 Amps  | 12 AWG .093" (2.36mm) | 3564  |
| n) Socket 24 An    | 12 AWG .093" (2.36mm) | 3564  |

#### **Ratings:**

Hands free testing in controlled voltage environments: 2500 Vrms Max. *For CE compliance*: not intended for hand-held use at voltages above 33 Vrms/70 Vdc. Operating Temperature: +131F (+55C) Max.

## ORDERING INFORMATION: Model: 3560-\*, 3562-\*, 3564-\*, 4690-\*

\*=Color, -0 Black, -2 Red Ordering Example: 3560-2 (red adapter)

*Test Kit 6481:* contains 18 pieces, one red and one black adapter of each adapter; 3560, 3561, 3562, 3563, 3564, 3565, 4690, 4691 and one set of model 6358 test leads.

For banana jack to test pins, see models: 3561, 3562, 3565, 4691

All dimensions are in inches. Tolerances (except noted):  $.xx = \pm .02$ " (,51 mm),  $.xxx = \pm .005$ " (,127 mm). All specifications are to the latest revisions. Specifications are subject to change without notice. Registered trademarks are the property of their respective companies.

Sales: 800-490-2361 Fax: 888-403-3360 Technical Support: 800-241-2060 (technical support@pomonatest.com) For "Where to Buy" information, visit the Pomona web site at www.pomonaelectronics.com

D1093952, D1093954, D1093956, D1094166

df.dzsc.com



# Model 3560, 3562, 3564, 4690 Banana Jack To #12, 16, 20 & 22 Socket **CE**

# <sup>D</sup>omona<sup>®</sup>


The items included with this product are certified to meet IEC 1010-2-031 safety requirements.

Les éleménts inclus avec ce produit sont certifies pour répondre à des exigences de surete du IEC 1010-2-031.

Los items incluidos con este producto se certifican para resolver requisitos de seguridad del IEC 1010-2-031.

 Only IEC 1010 type shrouded test plugs should be used with IEC 1010 type jacks. NEVER INSERT A PROBE
TIP WITH BANANA SPRING INTO A TEST ACCESSORY JACK
THAT WILL BE USED AS A HAND HELD PROBING DEVICE -Seuls les vérificateurs de tension renforcés de type IEC 1010 devraient être utilisés avec des jacks de type IEC 1010. NE JAMAIS INSERER DE BOUT DE SONDE AVEC RESSORT BANANE DANS UN JACK D'ESSAI D'ACCESSOIRES QUI SERA UTILISE COMME DISPOSITIF DE SONDAGE A MAIN.

-Se deben usar sólo tapones de prueba reforzados del tipo IEC 1010 con receptáculos de tipo IEC 1010. NUNCA INTRODUZCA UNA CLAVIJA CON UN MUELLE TIPO BANANA EN UN RECEPTACULO DE PRUEBA QUE A SU VEZ SE USE COMO APARATO DE PRUEBA MANUAL.

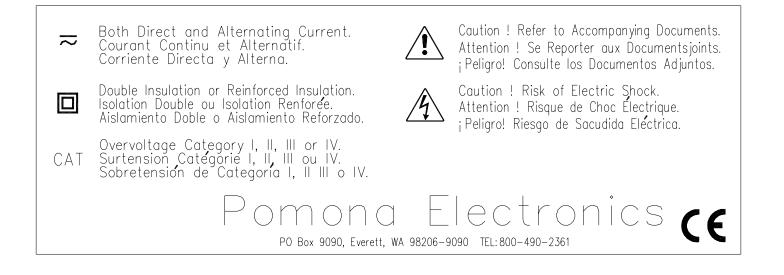

All dimensions are in inches. Tolerances (except noted):  $.xx = \pm .02$ " (,51 mm),  $.xxx = \pm .005$ " (,127 mm). All specifications are to the latest revisions. Specifications are subject to change without notice. Registered trademarks are the property of their respective companies.

Sales: 800-490-2361 Fax: 888-403-3360 Technical Support: 800-241-2060 (technicalsupport@pomonatest.com) For "Where to Buy" information, visit the Pomona web site at www.pomonaelectronics.com