




Extractor Tool for 1.5mm MX150 and MX150L Terminals Instruction Sheet Order No. 63813-1500

SEALED RECEPTACLE ASSEMBLY - SERVICEABILITY

- 1) Return TPA to pre-lock position
 - Use Standard Screw Driver to return TPA to pre-Lock
 - Listen for loud audible click




- 2) Release terminal from connector assembly
 - Insert & drive forward (0.9 to 1mm) diameter service tool (or optional paper clip) to release terminal.
 - Pull terminal from rear of connector

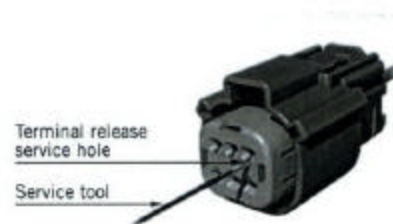


SEALED BLADE ASSEMBLY - SERVICEABILITY

- 1) Return TPA to pre-lock position
 - Use Standard Needle Nose Pliers to return TPA to pre-Lock
 - Listen for loud audible click

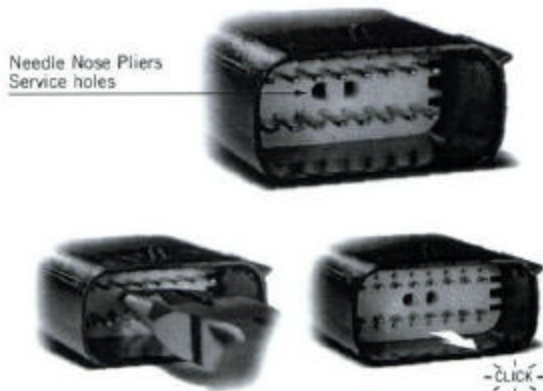

- 2) Release terminal from connector assembly
 - Insert & drive forward (0.9 to 1mm) diameter service tool (or optional paper clip) to release terminal.
 - Pull terminal from rear of connector

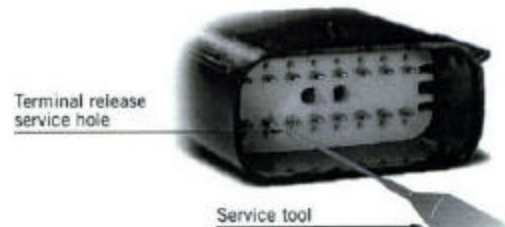

TERMINAL INSTALLATION

Terminal Orientation Feature

