

#### General Description

The MAX4172 is a low-cost, precision, high-side current-sense amplifier for portable PCs, telephones, and other systems where battery/DC power-line monitoring is critical. High-side power-line monitoring is especially useful in battery-powered systems, since it does not interfere with the battery charger's ground path. Wide bandwidth and ground-sensing capability make the MAX4172 suitable for closed-loop battery-charger and general-purpose current-source applications. The 0V to 32V input common-mode range is independent of the supply voltage, which ensures that current-sense feedback remains viable, even when connected to a battery in deep discharge.


To provide a high level of flexibility, the MAX4172 functions with an external sense resistor to set the range of load current to be monitored. It has a current output that can be converted to a ground-referred voltage with a single resistor, accommodating a wide range of battery voltages and currents.

An open-collector power-good output  $(\overline{PG})$  indicates when the supply voltage reaches an adequate level to guarantee proper operation of the current-sense amplifier. The MAX4172 operates with a 3.0V to 32V supply voltage, and is available in a space-saving, 8-pin  $\mu$ MAX or SO package.

## Applications

Portable PCs: Notebooks/Subnotebooks/Palmtops
Battery-Powered/Portable Equipment
Closed-Loop Battery Chargers/Current Sources
Smart-Battery Packs
Portable/Cellular Phones
Portable Test/Measurement Systems
Energy Management Systems

## Pin Configuration

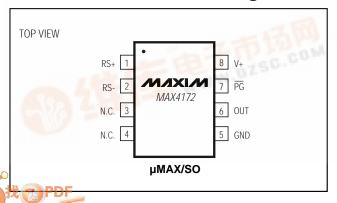

#### **Features**


- **♦ Low-Cost, High-Side Current-Sense Amplifier**
- ±0.5% Typical Full-Scale Accuracy Over Temperature
- ♦ 3V to 32V Supply Operation
- 0V to 32V Input Range—Independent of Supply Voltage
- ♦ 800kHz Bandwidth [VSENSE = 100mV (1C)] 200kHz Bandwidth [VSENSE = 6.25mV (C/16)]
- Available in Space-Saving μMAX and SO Packages

#### Ordering Information

PART	TEMP. RANGE	PIN-PACKAGE
MAX4172ESA	-40°C to +85°C	8 SO
MAX4172EUA	-40°C to +85°C	8 μMAX*

<sup>\*</sup>Contact factory for availability.

## Typical Operating Circuit

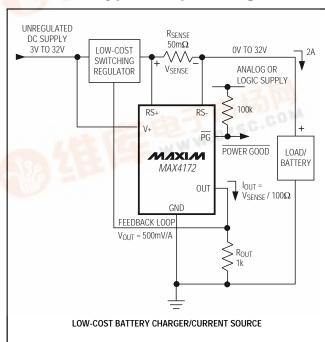

Maxim Integrated Products

#### **ABSOLUTE MAXIMUM RATINGS**

V+, RS+, RS-, <del>PG</del> 0.3V	to +36V
OUT0.3V to (V+	
Differential Input Voltage, V <sub>RS+</sub> - V <sub>RS-</sub>	±700mV
Current into Any Pin	.±50mA
Continuous Power Dissipation (T <sub>A</sub> = +70°C)	
SO (derate 5.88mW/°C above +70°C)	.471mW
μMAX (derate 4.10mW/°C above +70°C)	.330mW

Operating Temperature Range	
MAX4172E_A	40°C to +85°C
Storage Temperature Range	65°C to +150°C
Lead Temperature (soldering,	10sec)+300°C

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

#### **ELECTRICAL CHARACTERISTICS**

 $(V+ = +3V \text{ to } +32V; \text{ RS+}, \text{ RS-} = 0V \text{ to } 32V; \text{ TA} = \text{TMIN to TMAX}; \text{ unless otherwise noted. Typical values are at } V+ = +12V, \text{ RS+} = 12V, \text{ TA} = +25^{\circ}\text{C.})$ 

PARAMETER	SYMBOL	CONDITIONS		MIN	TYP	MAX	UNITS
Operating Voltage Range	V+			3		32	V
Input Voltage Range	V <sub>RS</sub> -			0		32	V
Supply Current	I <sub>V+</sub>	I <sub>OUT</sub> = 0mA			0.8	1.6	mA
		V+ = 12V, V <sub>RS+</sub> = 12V	MAX4172ESA		±0.1	±0.75	mV
Input Offset Voltage	Vos	V+ - 12V, VRS+ - 12V	MAX4172EUA		±0.2	±1.6	
		V <sub>RS+</sub> ≤ 2.0V			4		
Positive Input Bias Current	I <sub>RS+</sub>	$V_{RS+} > 2.0V$ , $I_{OUT} = 0mA$		0	27	42.5	- μΑ
1 ositive iripat bias carrent	IKS+	$V_{RS+} \le 2.0V$ , $I_{OUT} = 0mA$		-325		42.5	
Negative Input Bias Current	IRS-	V <sub>RS+</sub> > 2.0V		0	50	85	μΑ
Negative input bias current	IKS-	$V_{RS+} \le 2.0V$	$V_{RS+} \le 2.0V$			85	] μΑ
Maximum V <sub>SENSE</sub> Voltage				150	175		mV
Low-Level Current Error		V <sub>SENSE</sub> = 6.25mV, V <sub>+</sub> = 12V, V <sub>RS+</sub> = 12V (Note 1)	MAX4172ESA			±8.0	μA
Low Level Current Error			MAX4172EUA			±15	
Output Current Error	VSENSE = 100mV, V+ = 12V, V <sub>RS+</sub> = 12V		MAX4172ESA, $T_A = -40^{\circ}C$ to $0^{\circ}C$			±20	- μΑ
			MAX4172EUA, T <sub>A</sub> = -40°C to 0°C			±50	
			MAX4172ESA, $T_A = 0^{\circ}C \text{ to } +85^{\circ}C$			±10	
		MAX4172EUA, T <sub>A</sub> = 0°C to +85°C			±15		
OUT Power-Supply Rejection Ratio	ΔI <sub>OUT</sub> / ΔV+	3V ≤ V+ ≤ 32V, V <sub>RS+</sub> > 2.0V			0.2		μA/V
OUT Common-Mode Rejection Ratio	Δlout / ΔV <sub>RS+</sub>	2.0V < V <sub>RS+</sub> < 32V			0.03		μA/V

#### **ELECTRICAL CHARACTERISTICS (continued)**

 $(V + = +3V \text{ to } +32V; \text{RS+, RS-} = 0V \text{ to } 32V; T_A = T_{MIN} \text{ to } T_{MAX}; \text{ unless otherwise noted. Typical values are at } V + = +12V, RS + = 12V, T_A = +25^{\circ}\text{C.})$ 


PARAMETER	SYMBOL	CONDITIONS		MIN	TYP	MAX	UNITS	
Maximum Output Voltage (OUT)		I <sub>OUT</sub> ≤ 1.5mA				V+ - 1.2	V	
Bandwidth		VSENSE = 100mV VSENSE = 6.25mV (Note 1)			800		- kHz	
Danuwiuiii					200		KIIZ	
Maximum Output Current	lout				1.75		mA	
Transconductance	C	$G_{m} = I_{OUT} / (V_{RS+} - V_{RS-}),$	$T_A = 0$ °C to +85°C	9.8	10	10.2	mA/V	
Transconductance	Gm	$V_{SENSE} = 100 \text{mV}, V_{RS+} > 2.0 \text{V}$	$T_A = -40^{\circ}\text{C to }0^{\circ}\text{C}$	9.7	10	10.3		
V+ Threshold for PG Output		V+ rising	V+ rising V+ falling		2.77		V	
Low (Note 2)		V+ falling			2.67		V	
PG Output Low Voltage	V <sub>OL</sub>	I <sub>SINK</sub> = 1.2mA, V+ = 2.9V, T <sub>A</sub>	A = +25°C			0.4	V	
Leakage Current into PG		V+ = 2.5V, T <sub>A</sub> = +25°C				1	μΑ	
Power-Off Input Leakage Current (RS+, RS-)		V+ = 0V, V <sub>RS+</sub> = V <sub>RS-</sub> = 32V			0.1	1	μΑ	
OUT Rise Time		V <sub>SENSE</sub> = 0mV to 100mV, 10% to 90%			400		ns	
OUT Fall Time		V <sub>SENSE</sub> = 100mV to 0mV, 90% to 10%			800		ns	
OLIT Settling Time to 19/		Vocas	Rising		1.3		IIC.	
OUT Settling Time to 1%		VSENSE = 5mV to 100mV Falling			6		– µs	
OUT Output Resistance		VSENSE = 150mV			20		MΩ	


Note 1: 6.25mV = 1/16 of typical full-scale sense voltage (C/16).


Note 2: Valid operation of the MAX4172 is guaranteed by design when  $\overline{PG}$  is low.

## \_Typical Operating Characteristics

(V+ = +12V,  $V_{RS+}$  = 12V,  $R_{OUT}$  = 1k $\Omega$ ,  $T_A$  = +25°C, unless otherwise noted.)

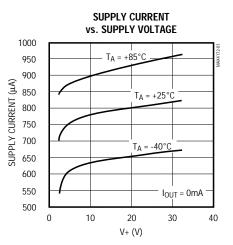


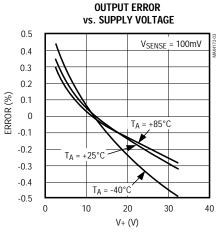


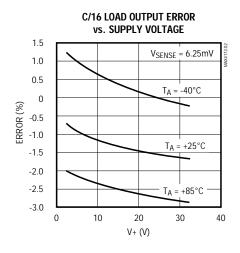



## Typical Operating Characteristics (continued)


 $(V + = +12V, V_{RS+} = 12V, R_{OUT} = 1k\Omega, T_A = +25^{\circ}C, unless otherwise noted.)$ 

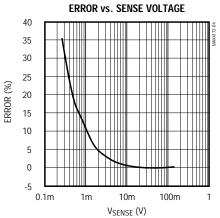


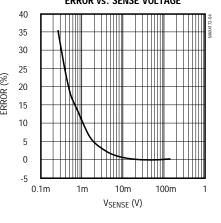


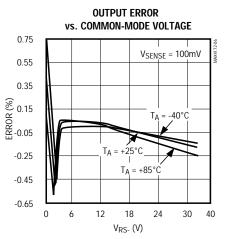

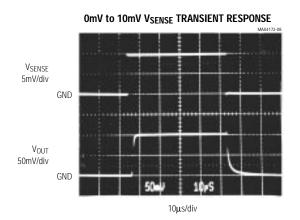

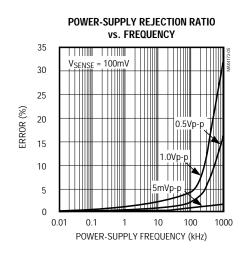


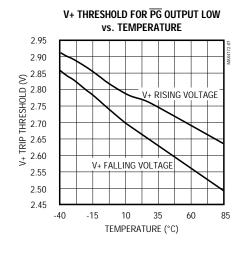


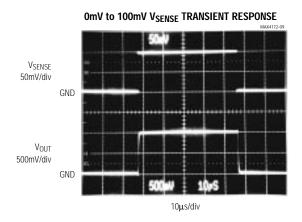

### Typical Operating Characteristics (continued)

 $(V + = +12V, V_{RS+} = 12V, R_{OUT} = 1k\Omega, T_{A} = +25^{\circ}C, unless otherwise noted.)$ 

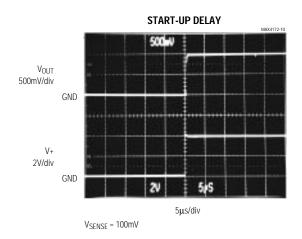

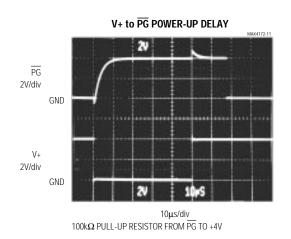

### Pin Description

PIN	NAME	FUNCTION		
1	RS+	Power connection to the external sense resistor. The "+" indicates the direction of current flow.		
2	RS-	Load-side connection for the external sense resistor. The "-" indicates the direction of current flow.		
3, 4	N.C.	No Connect. No internal connection. Leave open or connect to GND.		
5	GND	Ground		
6	OUT	Current Output. OUT is proportional to the magnitude of the sense voltage (VRS+ - VRS-). A $1k\Omega$ resistor from OUT to ground will result in a voltage equal to $10V/V$ of sense voltage.		
		Power Good Open-Collector Logic Output. A low level indicates that V+ is sufficient to power the MAX4172, and adequate time has passed for power-on transients to settle out.		
8	V+	Supply Voltage Input for the MAX4172		

#### Detailed Description

The MAX4172 is a unidirectional, high-side current-sense amplifier with an input common-mode range that is independent of supply voltage. This feature not only allows the monitoring of current flow into a battery in deep discharge, but also enables high-side current sensing at voltages far in excess of the supply voltage (V+).

The MAX4172 current-sense amplifier's unique topology simplifies current monitoring and control. The MAX4172's amplifier operates as shown in Figure 1. The battery/load current flows through the external sense resistor (RSENSE), from the RS+ node to the RS-

node. Current flows through RG1 and Q1, and into the current mirror, where it is multiplied by a factor of 50 before appearing at OUT.

To analyze the circuit of Figure 1, assume that current flows from RS+ to RS-, and that OUT is connected to GND through a resistor. Since A1's inverting input is high impedance, no current flows though R<sub>G2</sub> (neglecting the input bias current), so A1's negative input is equal to VSOURCE - (ILOAD x RSENSE). A1's open-loop gain forces its positive input to essentially the same voltage level as the negative input. Therefore, the drop across R<sub>G1</sub> equals ILOAD x RSENSE. Then, since IRG1

flows through RG1, IRG1 x RG1 = ILOAD x RSENSE. The internal current mirror multiplies IRG1 by a factor of 50 to give IOUT =  $50 \times I_{RG1}$ . Substituting IOUT /  $50 \times I_{RG1}$ , (IOUT /  $50 \times I_{RG1}$ ) x RG1 = ILOAD x RSENSE, or:

IOUT = 50 x ILOAD x (RSENSE / RG1)

The internal current gain of 50 and the factory-trimmed resistor RG1 combine to result in the MAX4172 transconductance (Gm) of 10mA/V. Gm is defined as being equal to IOUT / (VRS+ - VRS-). Since (VRS+ - VRS-) = ILOAD x RSENSE, the output current (IOUT) can be calculated with the following formula:

 $I_{OUT} = G_{m} \times (V_{RS+} - V_{RS-}) =$ (10mA/V) x (ILOAD x RSENSE)

#### **Current Output**

The output voltage equation for the MAX4172 is given below:

 $VOUT = (G_m) \times (RSENSE \times ROUT \times ILOAD)$ 

where  $V_{OUT}$  = the desired full-scale output voltage,  $I_{LOAD}$  = the full-scale current being sensed, RSENSE = the current-sense resistor,  $R_{OUT}$  = the voltage-setting resistor, and  $G_m$  = MAX4172 transconductance (10mA/V).

The full-scale output voltage range can be set by changing the R<sub>OUT</sub> resistor value, but the output voltage must be no greater than V<sub>+</sub> - 1.2V. The above equation can be modified to determine the R<sub>OUT</sub> required for a particular full-scale range:

 $ROUT = (VOUT) / (ILOAD \times RSENSE \times Gm)$ 

OUT is a high-impedance current source that can be integrated by connecting it to a capacitive load.

#### PG Output

The PG output is an open-collector logic output that indicates the status of the MAX4172's V+ power supply. A logic low on the PG output indicates that V+ is sufficient to power the MAX4172. This level is temperature dependent (see Typical Operating Characteristics graphs), and is typically 2.7V at room temperature. The internal PG comparator has a 100mV (typical) hysteresis to prevent possible oscillations caused by repeated toggling of the PG output, making the device ideal for power-management systems lacking soft-start capability. An internal delay (15µs typical) in the PG comparator allows adequate time for power-on transients to settle out. The PG status indicator greatly simplifies the design of closed-loop systems by ensuring that the components in the control loop have sufficient voltage to operate correctly.

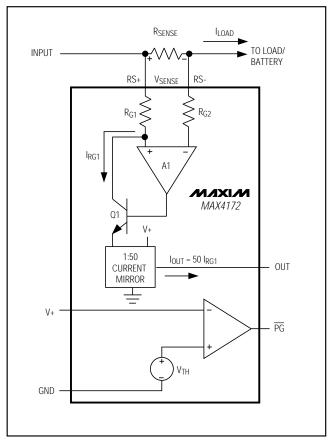


Figure 1. Functional Diagram

## Applications Information

# Suggested Component Values for Various Applications

The *Typical Operating Circuit* is useful in a wide variety of applications. Table 1 shows suggested component values and indicates the resulting scale factors for various applications required to sense currents from 100mA to 10A.

Adjust the RSENSE value to monitor higher or lower current levels. Select RSENSE using the guidelines and formulas in the following section.

#### Sense Resistor, Rsense

Choose RSENSE based on the following criteria:

 Voltage Loss: A high RSENSE value causes the power-source voltage to degrade through IR loss. For minimal voltage loss, use the lowest RSENSE value.

**Table 1. Suggested Component Values** 

FULL-SCALE LOAD CURRENT (A)	CURRENT-SENSE RESISTOR, RSENSE $(m\Omega)$	OUTPUT RESISTOR, ROUT ( $k\Omega$ )	FULL-SCALE OUTPUT VOLTAGE, Vout (V)	SCALE FACTOR, Vout/Isense (V/A)
0.1	1000	3.48	3.48	34.8
1	100	3.48	3.48	3.48
5	20	3.48	3.48	0.696
10	10	3.48	3.48	0.348

- Accuracy: A high RSENSE value allows lower currents to be measured more accurately. This is because offsets become less significant when the sense voltage is larger. For best performance, select RSENSE to provide approximately 100mV of sense voltage for the full-scale current in each application.
- Efficiency and Power Dissipation: At high current levels, the I<sup>2</sup>R losses in R<sub>SENSE</sub> can be significant. Take this into consideration when choosing the resistor value and its power dissipation (wattage) rating. Also, the sense resistor's value might drift if it is allowed to heat up excessively.
- **Inductance:** Keep inductance low if Isense has a large high-frequency component. Wire-wound resistors have the highest inductance, while metal film is somewhat better. Low-inductance metal-film resistors are also available. Instead of being spiral wrapped around a core, as in metal-film or wirewound resistors, they are a straight band of metal and are available in values under 1Ω.
- **Cost:** If the cost of RSENSE is an issue, you might want to use an alternative solution, as shown in Figure 2. This solution uses the PC board traces to create a sense resistor. Because of the inaccuracies of the copper resistor, the full-scale current value must be adjusted with a potentiometer. Also, copper's resistance temperature coefficient is fairly high (approximately 0.4%/°C).

In Figure 2, assume that the load current to be measured is 10A, and that you have determined a 0.3-inchwide, 2-ounce copper to be appropriate. The resistivity of 0.1-inch-wide, 2-ounce (70µm thickness) copper is  $30m\Omega/\text{ft}$ . For 10A, you might want RSENSE =  $5m\Omega$  for a 50mV drop at full scale. This resistor requires about 2 inches of 0.1-inch-wide copper trace.

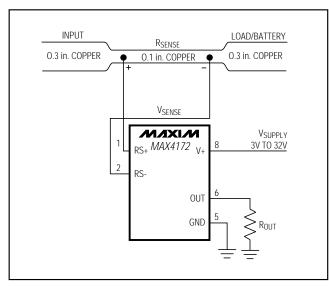


Figure 2. MAX4172 Connections Showing Use of PC Board

# Current-Sense Adjustment (Resistor Range, Output Adjust)

Choose R<sub>OUT</sub> after selecting R<sub>SENSE</sub>. Choose R<sub>OUT</sub> to obtain the full-scale voltage you require, given the full-scale l<sub>OUT</sub> determined by R<sub>SENSE</sub>. OUT's high impedance permits using R<sub>OUT</sub> values up to  $200k\Omega$  with minimal error. OUT's load impedance (e.g., the input of an op amp or ADC) must be much greater than R<sub>OUT</sub> (e.g., 100 x R<sub>OUT</sub>) to avoid degrading measurement accuracy.

#### **High-Current Measurement**

The MAX4172 can achieve high-current measurements by using low-value sense resistors, which can be paralleled to further increase the current-sense limit. As an alternative, PC board traces can be adjusted over a wide range.

#### Power-Supply Bypassing and Grounding


In most applications, grounding the MAX4172 requires no special precautions. However, in high-current systems, large voltage drops can develop across the ground plane, which can add to or subtract from Vout. Use a single-point star ground for the highest current-measurement accuracy.

The MAX4172 requires no special bypassing and responds quickly to transient changes in line current. If the noise at OUT caused by these transients is a problem, you can place a 1µF capacitor at the OUT pin to ground. You can also place a large capacitor at the RS terminal (or load side of the MAX4172) to decouple the load, reducing the current transients. These capacitors are not required for MAX4172 operation or stability. The RS+ and RS- inputs can be filtered by placing a capacitor (e.g., 1µF) between them to average the sensed current.

#### \_\_\_Chip Information

TRANSISTOR COUNT: 177
SUBSTRATE CONNECTED TO GND

## \_Package Information

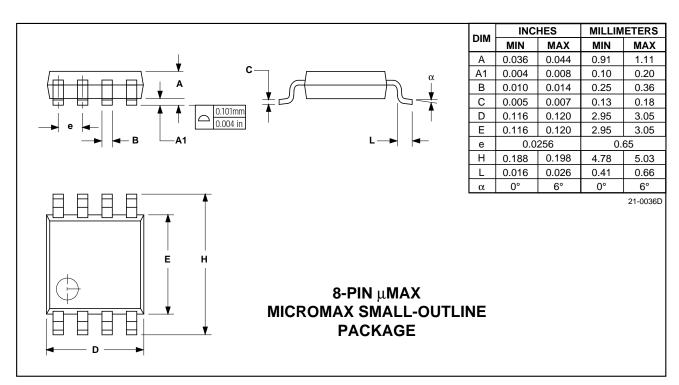

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

\_\_\_\_\_\_Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 (408) 737-7600