



## Configuration Devices for ACEX, APEX, FLEX & Mercury Devices

March 2001, ver. 11

Data Sheet


### Features

- Serial device family for configuring ACEX™, APEX™ (including APEX 20K, APEX 20KC, and APEX 20KE), FLEX® (FLEX 10KE and FLEX 10KA), and Mercury™ devices
- Easy-to-use 4-pin interface to ACEX, APEX, FLEX, and Mercury devices
- Low current during configuration and near-zero standby current
- 5.0-V and 3.3-V operation
- Software design support with the Altera® Quartus™ and MAX+PLUS® II development systems for Windows-based PCs as well as Sun SPARCstation, and HP 9000 Series 700/800
- Programming support with Altera's Master Programming Unit (MPU) and programming hardware from Data I/O, BP Microsystems, and other manufacturers
- Available in compact plastic packages (see [Figures 1 and 2](#))
  - 8-pin plastic dual in-line package (PDIP)
  - 20-pin plastic J-lead chip carrier (PLCC) package
  - 32-pin plastic thin quad flat pack (TQFP) package
- EPC2 device has reprogrammable Flash configuration memory
  - 5.0-V and 3.3-V in-system programmability (ISP) through the built-in IEEE Std. 1149.1 Joint Test Action Group (JTAG) interface
  - Built-in JTAG boundary-scan test (BST) circuitry compliant with IEEE Std. 1149.1
  - ISP circuitry is compatible with IEEE Std. 1532 for EPC2 configuration device
  - Supports programming through Serial Vector Format Files (.svf), Jam™ Standard Test and Programming Language (STAPL) Files (.jam), Jam STAPL Byte-Code Files (.jbc), and the MAX+PLUS II software via the MasterBlaster™, ByteBlasterMV™, or BitBlaster™ download cable
  - nINIT\_CONF pin allows a JTAG instruction to initiate APEX, FLEX, or Mercury device configuration
  - Can be programmed with Programmer Object Files (.pof) for EPC1 and EPC1441 devices
  - Available in 20-pin PLCC and 32-pin TQFP packages



Configuration Devices for ACEX, APEX, FLEX & Mercury Devices Data Sheet


Figure 1. EPC1, EPC1441, EPC1213, EPC1064, & EPC1064V Package Pin-Out Diagrams

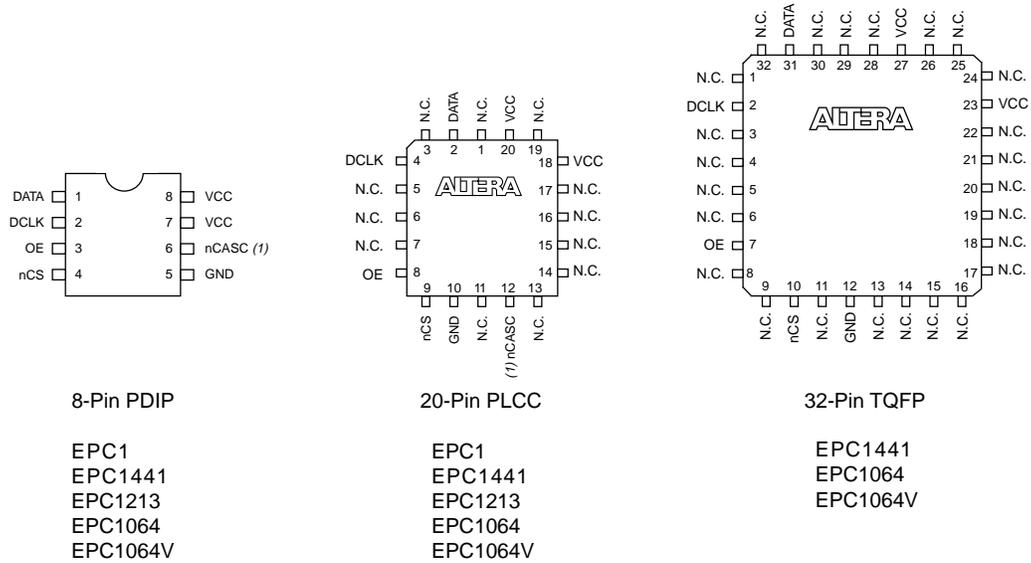

**Note:**

(1) The nCASC pin is available on EPC1 and EPC1213 devices. On the EPC1064, EPC1064V, and EPC1441 devices, it is a reserved pin and should not be connected.

Figure 2. EPC2 Package Pin-Out Diagrams

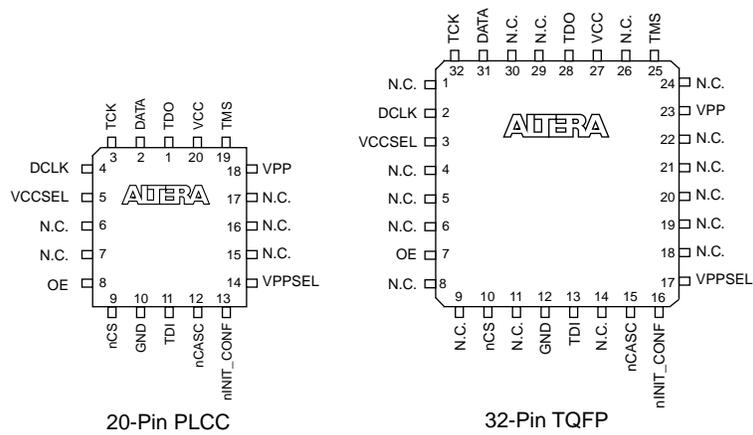

## Functional Description

With SRAM-based devices, configuration data must be reloaded each time the system initializes, or when new configuration data is needed. Altera configuration devices store configuration data for SRAM-based ACEX, APEX, FLEX, and Mercury devices. [Table 1](#) lists Altera configuration devices.

| Device   | Description  |
|----------|--|
| EPC2     | 1,695,680 × 1-bit device with 5.0-V or 3.3-V operation |
| EPC1     | 1,046,496 × 1-bit device with 5.0-V or 3.3-V operation |
| EPC1441  | 440,800 × 1-bit device with 5.0-V or 3.3-V operation   |
| EPC1213  | 212,942 × 1-bit device with 5.0-V operation            |
| EPC1064  | 65,536 × 1-bit device with 5.0-V operation             |
| EPC1064V | 65,536 × 1-bit device with 3.3-V operation             |

[Table 2](#) lists the configuration device used with each ACEX, APEX, FLEX and Mercury device.

| ACEX, APEX, FLEX & Mercury Device | Configuration Device     |
|-----------------------------------|--------------------------|
| EP20K30E                          | EPC2, EPC1, or EPC1441   |
| EP20K60E                          | EPC2 or EPC1             |
| EP20K100, EP20K100E               | EPC2 or EPC1             |
| EP20K160E                         | EPC2                     |
| EP20K200, EP20K200E               | Two EPC2 devices (1)     |
| EP20K300E                         | Two EPC2 devices (1)     |
| EP20K400, EP20K400E               | Three EPC2 devices (1)   |
| EP20K600E                         | Four EPC2 devices (1)    |
| EP20K1000E                        | Six EPC2 devices (1)     |
| EP20K1500E                        | Eight EPC2 devices (1)   |
| EP1K10                            | EPC2, EPC1, or EPC1441   |
| EP1K30                            | EPC2, EPC1, or EPC1441   |
| EP1K50                            | EPC2 or EPC1             |
| EP1K100                           | EPC2 or two EPC1 devices |
| EPF10K10, EPF10K10A               | EPC2, EPC1, or EPC1441   |
| EPF10K20                          | EPC2, EPC1, or EPC1441   |
| EPF10K30E                         | EPC2 or EPC1             |
| EPF10K30, EPF10K30A               | EPC2, EPC1, or EPC1441   |
| EPF10K40                          | EPC2 or EPC1             |

**Configuration Devices for ACEX, APEX, FLEX & Mercury Devices Data Sheet**

*Table 2. Appropriate Configuration Device for Each ACEX, APEX, FLEX & Mercury Device (Part 2 of 2)*

| ACEX, APEX, FLEX & Mercury Device             | Configuration Device               |
|---|------------------------------------|
| EPF10K50, EPF10K50V, EPF10K50E                | EPC2 or EPC1                       |
| EPF10K70                                      | EPC2 or EPC1                       |
| EPF10K100, EPF10K100A, EPF10K100B, EPF10K100E | EPC2 or two EPC1 devices           |
| EPF10K130V                                    | EPC2 or two EPC1 devices           |
| EPF10K130E                                    | Two EPC2 or two EPC1 devices       |
| EPF10K200E                                    | Two EPC2 or three EPC1 devices     |
| EPF10K250A                                    | Two EPC2 or four EPC1 devices      |
| EPF8282A                                      | EPC1, EPC1441, or EPC1064          |
| EPF8282AV                                     | EPC1, EPC1441, or EPC1064V         |
| EPF8452A                                      | EPC1, EPC1441, EPC1064, or EPC1213 |
| EPF8636A                                      | EPC1, EPC1441, or EPC1213          |
| EPF8820A                                      | EPC1, EPC1441, or EPC1213          |
| EPF81188A                                     | EPC1, EPC1441, or EPC1213          |
| EPF81500A                                     | EPC1 or EPC1441                    |
| EPF6010A                                      | EPC1 or EPC1441                    |
| EPF6016, EPF6016A                             | EPC1 or EPC1441                    |
| EPF6024A                                      | EPC1 or EPC1441                    |
| EP1M120                                       | EPC2 or EPC16                      |
| EP1M350                                       | EPC16 or three EPC2 devices        |

**Note:**

- (1) This device can be configured by a smaller number of EPC16 configuration devices. For more information, see the [EPC16 Configuration Device Data Sheet](#).

Table 3 shows which configuration devices can be used with each device family.

*Table 3. Configuration Device & PLD Compatibility*

| PLD           | Configuration Device |      |         |                                |
|---------------|----------------------|------|---------|--------------------------------|
|               | EPC2                 | EPC1 | EPC1441 | EPC1213<br>EPC1064<br>EPC1064V |
| ACEX 1K (1)   | ✓                    | ✓    | ✓       |                                |
| APEX 20K (1)  | ✓                    | ✓    | ✓       |                                |
| FLEX 10K (1)  | ✓                    | ✓    | ✓       |                                |
| FLEX 10KE (1) | ✓                    | ✓    |         |                                |

| <i>Table 3. Configuration Device &amp; PLD Compatibility</i> |                      |      |         |                                |
|--|----------------------|------|---------|--------------------------------|
| PLD  | Configuration Device |      |         |                                |
|  | EPC2                 | EPC1 | EPC1441 | EPC1213<br>EPC1064<br>EPC1064V |
| FLEX 8000  |                      | ✓    | ✓       | ✓                              |
| FLEX 6000  |                      | ✓    | ✓       |                                |
| Mercury (1)  | ✓                    | ✓    | ✓       |                                |


**Note to Table:**

- (1) EPC16 configuration devices support this device. For more information, see the [EPC16 Configuration Device Data Sheet](#).


Figure 3 shows the configuration device block diagram.

Figure 3. Configuration Device Block Diagram

ACEX 1K, APEX 20K, FLEX 10K, & FLEX 6000 Device Configuration Using an EPC2, EPC1, or EPC1441 Device

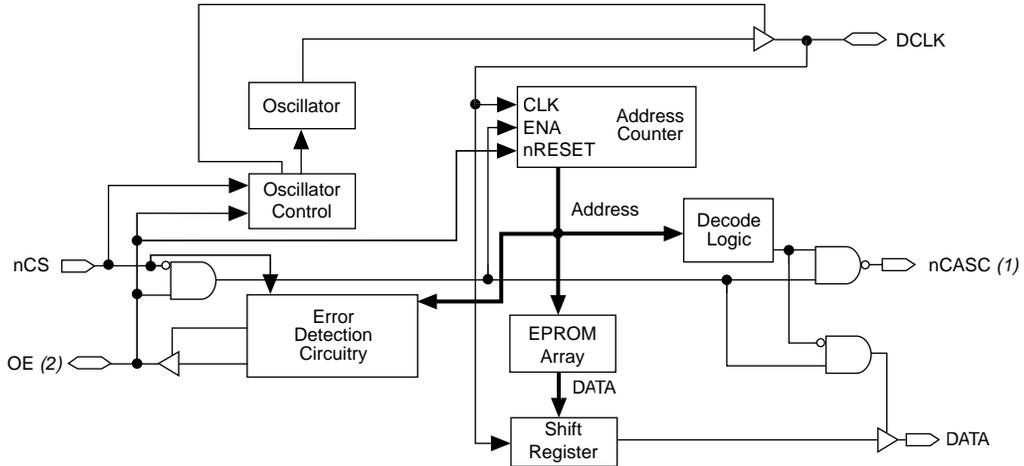

FLEX 8000 Device Configuration Using an EPC1, EPC1441, EPC1213, EPC1064, or EPC1064V Device

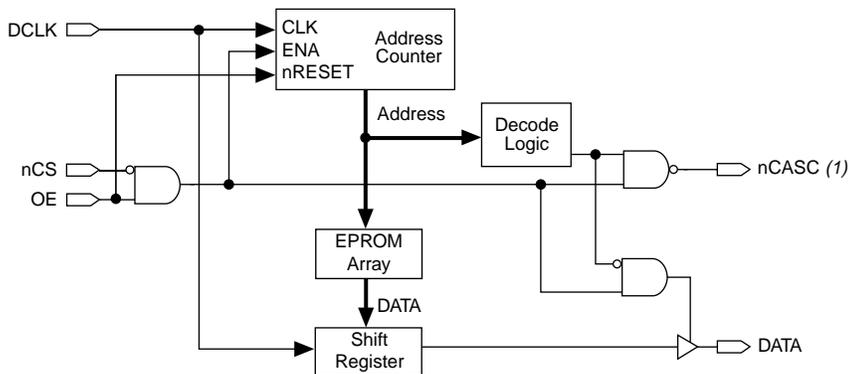

**Notes:**

- (1) The EPC1441, EPC1064, and EPC1064V devices do not support data cascading. The EPC2, EPC1, and EPC1213 devices support data cascading.
- (2) The OE pin is a bidirectional open-drain pin.

## Device Configuration

The control signals for configuration devices— $nCS$ ,  $OE$ , and  $DCLK$ —interface directly with ACEX, APEX, FLEX, and Mercury device control signals. All ACEX, APEX, FLEX, and Mercury devices can be configured by a configuration device without requiring an external intelligent controller.

The configuration device's  $OE$  and  $nCS$  pins control the tri-state buffer on the  $DATA$  output pin, and enable the address counter (and the oscillator in EPC2, EPC1, and EPC1441 devices). When  $OE$  is driven low, the configuration device resets the address counter and tri-states its  $DATA$  pin. The  $nCS$  pin controls the output of the configuration device. If  $nCS$  is held high after the  $OE$  reset pulse, the counter is disabled and the  $DATA$  output pin is tri-stated. When  $nCS$  is driven low, the counter and  $DATA$  output pin are enabled. When  $OE$  is driven low again, the address counter is reset and the  $DATA$  output pin is tri-stated, regardless of the state of  $nCS$ .

 The EPC2, EPC1, and EPC1441 devices determine the operation mode and whether the ACEX 1K, APEX 20K, FLEX 10K, FLEX 8000, FLEX 6000, or Mercury protocols should be used when  $OE$  is driven high.

When the configuration device has driven out all of its data and has driven  $nCASC$  low, the device tri-states the  $DATA$  pin to avoid contention with other configuration devices.


The EPC2 device allows the user to initiate configuration of the ACEX, APEX, FLEX, or Mercury device via an additional pin,  $nINIT\_CONF$ , that can be tied to the  $nCONFIG$  pin of the ACEX, APEX, FLEX, or Mercury device(s) to be configured. A JTAG instruction causes the EPC2 device to drive  $nINIT\_CONF$  low, which in turn pulls  $nCONFIG$  low. The EPC2 device then drives  $nINIT\_CONF$  high to start configuration. When the JTAG state machine exits this state,  $nINIT\_CONF$  releases  $nCONFIG$  and configuration is initiated.

 An EPC2 device can be programmed with a POF generated for an EPC1 or EPC1441 device, however, an EPC2 device cannot configure FLEX 6000 or FLEX 8000 devices. An EPC1 device can be programmed using a POF generated for an EPC1441 device.

## ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000 & Mercury Device Configuration

ACEX 1K, APEX 20K, FLEX 10K, and Mercury devices can be configured with EPC2, EPC1, or EPC1441 devices. FLEX 6000 devices can be configured with EPC1 or EPC1441 devices. The EPC2, EPC1, or EPC1441 device stores configuration data in its EPROM array and serially clocks data out with an internal oscillator. The OE, nCS, and DCLK pins supply the control signals for the address counter and the output tri-state buffer. The configuration device sends a serial bitstream of configuration data to its DATA pin, which is routed to the DATA0 or DATA input pin on the ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury device. Figure 4 shows an ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury device configured with a single EPC2, EPC1, or EPC1441 device.

Figure 4. ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury Device Configured with an EPC2, EPC1, or EPC1441 Configuration Device

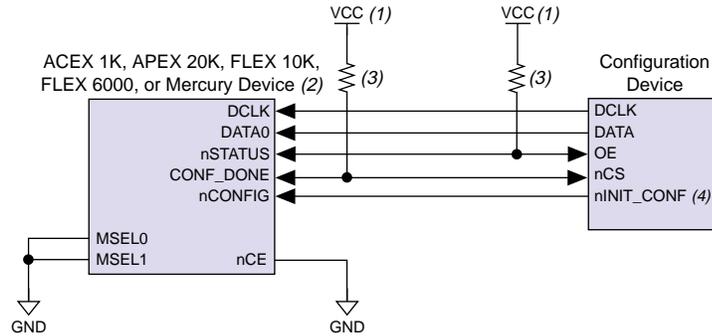

**Notes:**

- (1) The pull-up resistor should be connected to the same supply voltage as the configuration device.
- (2) The diagram shows an ACEX 1K, APEX 20K, FLEX 10K or Mercury device, which has MSEL0 and MSEL1 tied to ground. For FLEX 6000 devices, MSEL is tied to ground, and the DATA0 pin is named DATA. EPC2 cannot be used with FLEX 6000 devices. All other connections are the same for ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000 and Mercury devices.
- (3) All pull-up resistors are 1 k $\Omega$ . APEX 20KE pull up resistors are 10 k $\Omega$ . The OE, nCS, and nINIT\_CONF pins on EPC2 devices have internal, user-configurable 1-k $\Omega$  pull-up resistors. If internal pull-up resistors are used, external pull-up resistors should not be used on these pins.
- (4) The nINIT\_CONF pin is only available on EPC2 devices and has an internal pull up of 1 k $\Omega$  that is always active. If nINIT\_CONF is not available or not used, nCONFIG must be pulled to V<sub>CC</sub> either directly or through a 1-k $\Omega$  resistor.

Table 4 describes EPC2, EPC1, and EPC1441 pin functions during ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, and Mercury device configuration.

Configuration Devices for ACEX, APEX, FLEX & Mercury Devices Data Sheet

*Table 4. EPC2, EPC1, & EPC1441 Pin Functions During ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000 & Mercury Configuration (Part 1 of 2)*

| Pin Name  | Pin Number     |             |                 | Pin Type       | Description   |
|-----------|----------------|-------------|-----------------|----------------|---|
|           | 8-Pin PDIP (1) | 20-Pin PLCC | 32-Pin TQFP (2) |                |   |
| DATA      | 1              | 2           | 31              | Output         | Serial data output. The DATA pin is tri-stated before configuration when the nCS pin is high, and after the configuration device finishes sending its configuration data. This operation is independent of the device's position in the cascade chain.  |
| DCLK      | 2              | 4           | 2               | I/O            | DCLK is a clock output when configuring with a single configuration device or when the configuration device is the first device in a configuration device chain. DCLK is a clock input for subsequent configuration devices in a configuration device chain. Rising edges on DCLK increment the internal address counter and present the next bit of data to the DATA pin. The counter is incremented only if the OE input is held high, the nCS input is held low, and all configuration data has not been transferred to the target device. When configuring with the first EPC2 or EPC1 device in a configuration device chain or with a single EPC1441 device, the DCLK pin drives low after configuration is complete or when OE is low. |
| OE (3)    | 3              | 8           | 7               | Open-Drain I/O | Output enable (active high) and reset (active low). A low logic level resets the address counter. A high logic level enables DATA and permits the address counter to count. If this pin is low (reset) during configuration, the internal oscillator becomes inactive and DCLK drives low. See "Error Detection Circuitry" on page 17.  |
| nCS (3)   | 4              | 9           | 10              | Input          | Chip select input (active low). A low input allows DCLK to increment the address counter and enables DATA to drive out. If the EPC1 or EPC2 is reset with nCS low, the device initializes as the first device in a configuration chain. If the EPC1 or EPC2 device is reset with nCS high, the device initializes as the subsequent device in the chain.  |
| nCASC (4) | 6              | 12          | 15              | Output         | Cascade select output (active low). This output goes low when the address counter has reached its maximum value. In a chain of EPC1 or EPC2 devices, the nCASC pin of one device is connected to the nCS pin of the next device, which permits DCLK to clock data from the next EPC1 or EPC2 device in the chain.   |

Configuration Devices for ACEX, APEX, FLEX & Mercury Devices Data Sheet

*Table 4. EPC2, EPC1, & EPC1441 Pin Functions During ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000 & Mercury Configuration (Part 2 of 2)*

| Pin Name            | Pin Number     |             |                 | Pin Type          | Description  |
|---------------------|----------------|-------------|-----------------|-------------------|--|
|                     | 8-Pin PDIP (1) | 20-Pin PLCC | 32-Pin TQFP (2) |                   |  |
| nINIT_CONF (3), (5) | –              | 13          | 16              | Open-Drain Output | Allows the INIT_CONF JTAG instruction to initiate configuration. This pin is connected to the nCONFIG pin of the ACEX, APEX, FLEX or Mercury device to initiate configuration from the EPC2 via a JTAG instruction. If multiple EPC2 devices are used to configure an ACEX, APEX, FLEX or Mercury device, only the first EPC2 has its nINIT_CONF pin tied to the device's nCONFIG pin. |
| TDI (5)             | –              | 11          | 13              | Input             | JTAG data input pin. Connect this pin to V <sub>CC</sub> if the JTAG circuitry is not used.  |
| TDO (5)             | –              | 1           | 28              | Output            | JTAG data output pin. Do not connect this pin if the JTAG circuitry is not used.   |
| TMS (5)             | –              | 19          | 25              | Input             | JTAG mode select pin. Connect this pin to V <sub>CC</sub> if the JTAG circuitry is not used.   |
| TCK (5)             | –              | 3           | 32              | Input             | JTAG clock pin. Connect this pin to ground if the JTAG circuitry is not used.  |
| VCCSEL (5)          | –              | 5           | 3               | Input             | Mode select for V <sub>CC</sub> supply. VCCSEL must be connected to ground if the device uses a 5.0-V power supply (i.e., V <sub>CC</sub> = 5.0 V). VCCSEL must be connected to V <sub>CC</sub> if the device uses a 3.3-V power supply (i.e., V <sub>CC</sub> = 3.3 V).   |
| VPPSEL (5)          | –              | 14          | 17              | Input             | Mode select for V <sub>PP</sub> . VPPSEL must be connected to ground if V <sub>PP</sub> uses a 5.0-V power supply (i.e., V <sub>PP</sub> = 5.0 V). VPPSEL must be connected to V <sub>CC</sub> if V <sub>PP</sub> uses a 3.3-V power supply (i.e., V <sub>PP</sub> = 3.3 V).   |
| VPP (5)             | –              | 18          | 23              | Power             | Programming power pin. For the EPC2 device, this pin is normally tied to V <sub>CC</sub> . If the EPC2 V <sub>CC</sub> is 3.3 V, V <sub>PP</sub> can be tied to 5.0 V to improve in-system programming times. For EPC1 and EPC1441 devices, V <sub>PP</sub> must be tied to V <sub>CC</sub> .  |
| VCC                 | 7, 8           | 20          | 27              | Power             | Power pin.   |
| GND                 | 5              | 10          | 12              | Ground            | Ground pin. A 0.2-μF decoupling capacitor must be placed between the VCC and GND pins.   |

**Notes:**

- (1) This package is available for EPC1 and EPC1441 devices only.
- (2) This package is available for EPC2 and EPC1441 devices only.
- (3) The OE, nCS, and nINIT\_CONF pins on EPC2 devices have internal, user-configurable 1-k $\Omega$  pull-up resistors. If internal pull-up resistors are used, external pull-up resistors should not be used on these pins.
- (4) The EPC1441 device does not support data cascading. EPC2 and EPC1 devices support data cascading.
- (5) This pin applies to the EPC2 device only.

### ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000 & Mercury Device Configuration with Multiple EPC2 or EPC1 Configuration Devices

When configuration data for ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury devices exceeds the capacity of a single EPC2 or EPC1 device, multiple EPC2 or EPC1 devices can be cascaded together. (The EPC1441 device does not support data cascading.) If multiple EPC2 or EPC1 devices are required, the `nCASC` and `nCS` pins provide handshaking between the devices.

When configuring ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury devices with cascaded EPC2 or EPC1 devices, the position of the EPC2 or EPC1 device in the chain determines its operation. When the first or master device in a configuration device chain is powered-up or reset and the `nCS` pin is driven low, the master device controls configuration. The master device supplies all clock pulses to one or more ACEX, APEX, FLEX, or Mercury devices and to any subsequent slave devices during configuration. The master EPC2 or EPC1 device also provides the first stream of data to the ACEX, APEX, FLEX, or Mercury devices during multi-device configuration. After the master EPC2 or EPC1 device finishes sending configuration data, the master EPC2 or EPC1 device drives its `nCASC` pin low, which drives the `nCS` pin of the first slave EPC2 or EPC1 device low. This action causes the slave EPC2 or EPC1 device to send configuration data to the ACEX, APEX, FLEX, or Mercury devices.

The master EPC2 or EPC1 device clocks all subsequent slave devices until configuration is complete. Once all configuration data is transferred and the `nCS` pin on the master EPC2 or EPC1 device is driven high by the ACEX, APEX, FLEX, or Mercury device's `CONF_DONE` pin, the master EPC2 or EPC1 device clocks 16 additional cycles to initialize the ACEX, APEX, FLEX, or Mercury device(s). The master EPC2 or EPC1 device then goes into zero-power (idle) state. If `nCS` on the master EPC2 or EPC1 device is driven high before all configuration data is transferred, or if `nCS` is not driven high after all configuration data is transferred, the master EPC2 or EPC1 device drives the ACEX, APEX, FLEX, or Mercury device's `nSTATUS` pin low, indicating a configuration error.


Configuration automatically restarts if the project is compiled with the *Auto-Restart Configuration on Frame Error* option turned on in the MAX+PLUS II software's **Global Project Device Options** dialog box (Assign menu).

Figure 5 shows an ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury device configured with two EPC2 or EPC1 devices. Additional EPC2 or EPC1 devices can be added by connecting `nCASC` to `nCS` of the subsequent slave EPC2 or EPC1 device in the chain and connecting `DCLK`, `DATA`, and `OE` in parallel.



A mixture of ACEX 1K, APEX 20K, APEX 20KE, and Mercury devices can be configured in the same chain. A mixture of FLEX 10K, FLEX 10KA, FLEX 10KE, and 5.0-V and 3.3-V FLEX 6000 devices can be configured in the same chain. See “Configuration Chain with Multiple Voltage Levels” on page 19.

Figure 5. ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury Device Configured with Two EPC2 or EPC1 Configuration Devices

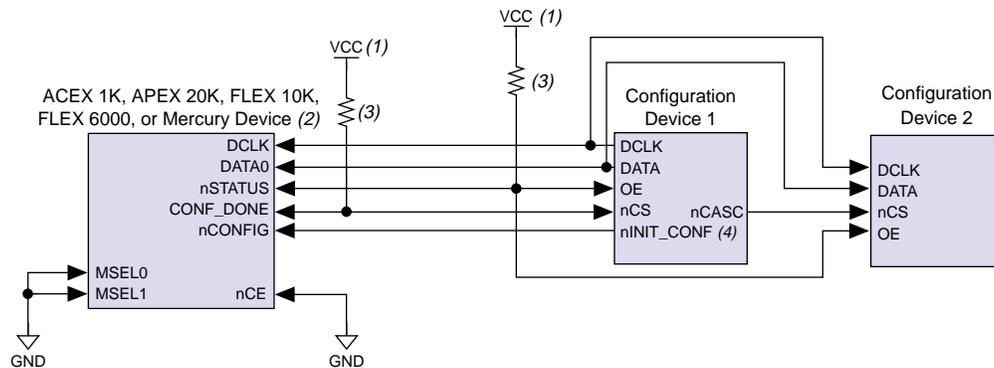


**Notes:**

- (1) The pull-up resistor should be connected to the same supply voltage as the configuration device.
- (2) The diagram shows an ACEX 1K, APEX 20K, FLEX 10K, or Mercury device, which has MSEL0 and MSEL1 tied to ground. For FLEX 6000 devices, MSEL is tied to ground, and the DATA0 pin is named DATA. EPC2 cannot be used with FLEX 6000 devices. All other connections are the same for ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, and Mercury devices.
- (3) All pull-up resistors are 1 k $\Omega$  (APEX 20KE pull-resistors are 10k $\Omega$ ). The OE and nCS pins on EPC2 devices have internal, user-configurable 1-k $\Omega$  pull-up resistors. If internal pull-up resistors are used, external pull-up resistors should not be used on these pins.
- (4) The nINIT\_CONF pin is only available on EPC2 devices and has an internal pull up of 1 k $\Omega$  that is always active. If nINIT\_CONF is not available or not used, nCONFIG must be pulled to VCC either directly or through a 1-k $\Omega$  resistor.

Figure 6 shows two ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury devices configured with two EPC2 or EPC1 devices.

Figure 6. Two ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury Devices Configured with Two EPC2 or EPC1 Configuration Devices

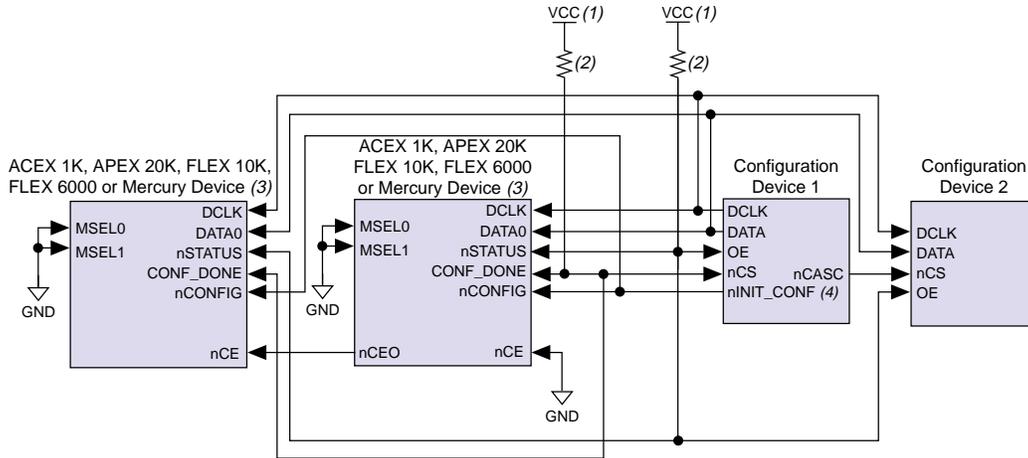

**Notes:**

- (1) The pull-up resistor should be connected to the same supply voltage as the configuration device.
- (2) The diagram shows an ACEX 1K, APEX 20K, FLEX 10K, or Mercury device, which has MSEL0 and MSEL1 tied to ground. For FLEX 6000 devices, MSEL is tied to ground, and the DATA0 pin is named DATA. EPC2 cannot be used with FLEX 6000 devices. All other connections are the same for ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, and Mercury devices.
- (3) All pull-up resistors are 1 k $\Omega$  (APEX 20KE pull-resistors are 10k $\Omega$ ). The OE and nCS pins on EPC2 devices have internal, user-configurable 1-k $\Omega$  pull-up resistors. If internal pull-up resistors are used, external pull-up resistors should not be used on these pins.
- (4) The nINIT\_CONF pin is only available on EPC2 devices and has an internal pull up of 1 k $\Omega$  that is always active. If nINIT\_CONF is not available or not used, nCONFIG must be pulled to V<sub>CC</sub> either directly or through a 1-k $\Omega$  resistor.



For more information on ACEX 1K, APEX 20K, FLEX 10K, or FLEX 6000 device configuration, see [Application Note 116 \(Configuring ACEX 1K, APEX 20K, FLEX 10K & FLEX 6000 Devices\)](#).


**FLEX 8000 Device Configuration**

FLEX 8000 devices differ from ACEX 1K, APEX 20K, FLEX 10K, and FLEX 6000 devices in that they have internal oscillators that can provide a DCLK signal to the configuration device. The configuration device sends configuration data out as a serial bitstream on the DATA output pin. This data is routed into the FLEX 8000 device via the DATA0 input pin. The EPC1, EPC1441, EPC1213, EPC1064, and EPC1064V configuration devices support this type of configuration.

EPC1 and EPC1441 devices can replace the EPC1213, EPC1064, and EPC1064V configuration devices. The EPC1 or EPC1441 device automatically emulates the EPC1213, EPC1064, or EPC1064V when it is programmed with the appropriate POF. When the EPC1 or EPC1441 device is programmed with an EPC1213, EPC1064, or EPC1064V POF, the FLEX 8000 device drives the EPC1 or EPC1441 device's  $\overline{OE}$  pin high and clocks the EPC1 or EPC1441 device. One EPC1 device can store more configuration data than the EPC1064, EPC1064V, EPC1213, or EPC1441 device. Therefore, designers can use one type of configuration device for all FLEX devices. In addition, a single EPC1 or EPC1441 device can configure any FLEX 8000 device.

For multi-device configuration of FLEX 8000 devices, the  $nCASC$  and  $nCS$  pins provide handshaking between multiple configuration devices, allowing several cascaded EPC1 or EPC1213 devices to serially configure multiple FLEX 8000 devices. The EPC1441, EPC1064, and EPC1064V do not support data cascading. [Figure 7](#) shows a FLEX 8000 device configured with a single EPC1, EPC1441, EPC1213, EPC1064, or EPC1064V configuration device.

**Figure 7. FLEX 8000 Device Configured with an EPC1, EPC1441, EPC1213, EPC1064, or EPC1064V Configuration Device**

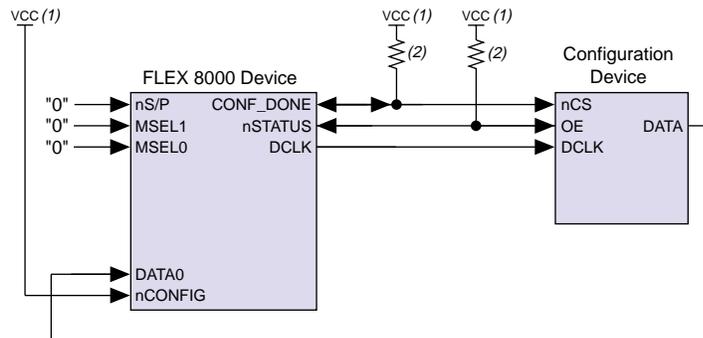


**Notes:**

- (1) The pull-up resistor should be connected to the same supply voltage as the configuration device.
- (2) All pull-up resistors are 1 k $\Omega$ .

Figure 8 shows three FLEX 8000 devices configured with two EPC1 or EPC1213 configuration devices.

Figure 8. FLEX 8000 Multi-Device Configuration with Two EPC1 or EPC1213 Configuration Devices

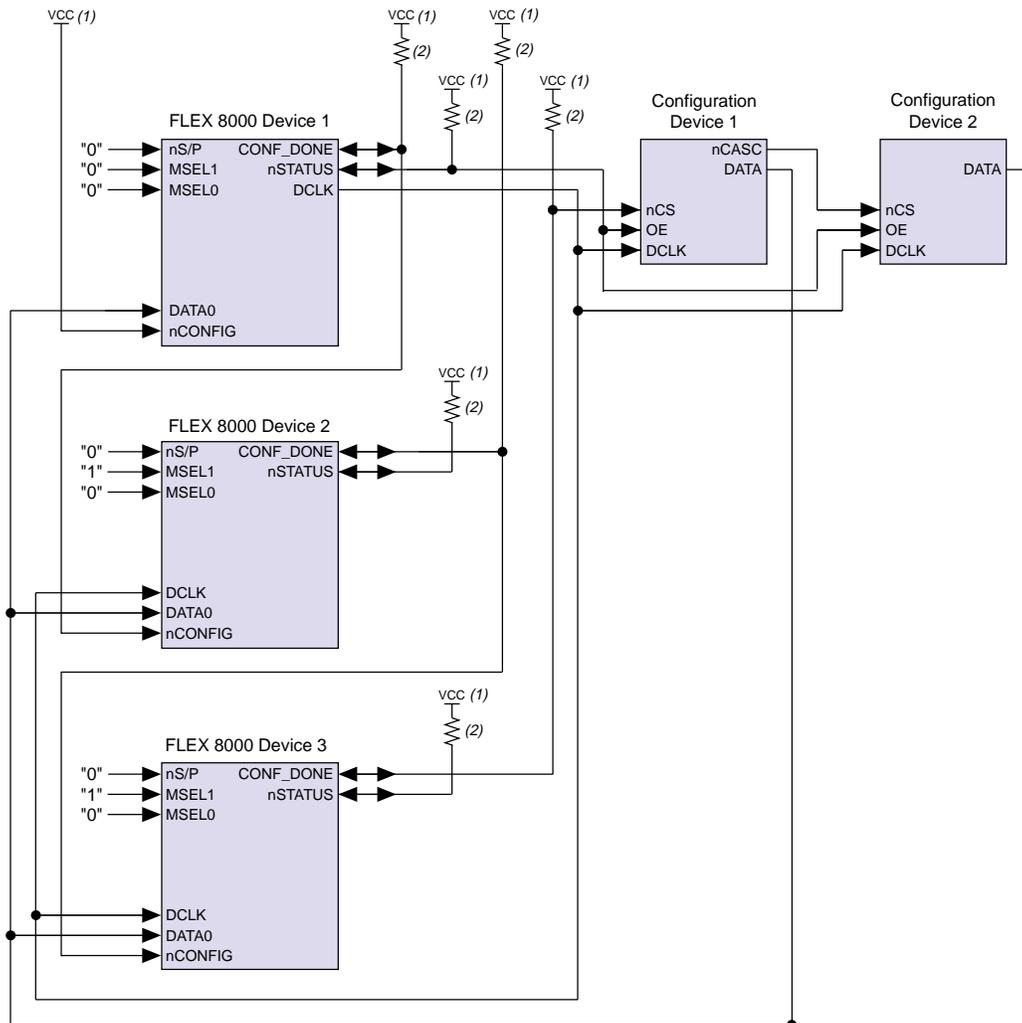

**Notes:**

- (1) The pull-resistor should be connected to the same supply voltage as the configuration device.
- (2) All pull-up resistors are 1 k $\Omega$ .

Table 5 describes the pin functions of all configuration devices during FLEX 8000 device configuration.

| Pin Name | Pin Number     |             |                 | Pin Type       | Description   |
|----------|----------------|-------------|-----------------|----------------|---|
|          | 8-Pin PDIP (1) | 20-Pin PLCC | 32-Pin TQFP (2) |                |   |
| DATA     | 1              | 2           | 31              | Output         | Serial data output. The DATA pin is tri-stated before configuration when the nCS pin is high and after the configuration device finishes sending its configuration data. This operation is independent of the device's position in the cascade chain.   |
| DCLK     | 2              | 4           | 2               | Input          | DCLK is a clock input when using EPC1, EPC1213, EPC1064, and EPC1064V configuration devices. Rising edges on DCLK increment the internal address counter and present the next bit of data to the DATA pin. The counter is incremented only if the OE input is held high, the nCS input is held low, and all configuration data has not been transferred to the target device. |
| OE       | 3              | 8           | 7               | Open-Drain I/O | Output enable (active high) and reset (active low). A low logic level resets the address counter. A high logic level enables DATA and permits the address counter to count.   |
| nCS (3)  | 4              | 9           | 10              | Input          | Chip-select input (active low). A low input allows DCLK to increment the address counter and enables DATA.  |
| nCASC    | 6              | 12          | 15              | Output         | Cascade-select output (active low). This output goes low when the address counter has reached its maximum value. The nCASC output is usually connected to the nCS input of the next device in a configuration chain, so the next DCLK clocks data out of the next device.   |
| VCC      | 7, 8           | 20          | 27              | Power          | Power pin.  |
| GND      | 5              | 10          | 12              | Ground         | Ground pin. A 0.2- $\mu$ F decoupling capacitor must be placed between the VCC and GND pins.  |

**Notes:**

- (1) This package is available for EPC1, EPC1441, EPC1213, EPC1064, and EPC1064V devices only.
- (2) This package is available for EPC1441, EPC1064, and EPC1064V devices only.
- (3) The EPC1441, EPC1064, and EPC1064V devices do not support data cascading. The EPC1 and EPC1213 devices support data cascading for FLEX 8000 devices.



For more information on FLEX 8000 device configuration, see the following documents:

- [Application Note 33 \(Configuring FLEX 8000 Devices\)](#)
- [Application Note 38 \(Configuring Multiple FLEX 8000 Devices\)](#)

## Power & Operation

This section describes Power-On Reset (POR) delay, error detection, and 3.3-V and 5.0-V operation of Altera configuration devices.

### Power-On Reset

During initial power-up, a POR delay occurs to permit voltage levels to stabilize. When configuring an ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury device with an EPC2, EPC1, or EPC1441 device, the POR delay occurs inside the configuration device, and the POR delay is a maximum of 100 ms. When configuring a FLEX 8000 device with an EPC1213, EPC1064, or EPC1064V device, the POR delay occurs inside the FLEX 8000 device, and the POR delay is typically 100 ms, with a maximum of 200 ms.

### Error Detection Circuitry

The EPC2, EPC1, and EPC1441 configuration devices have built-in error detection circuitry for configuring ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, and Mercury devices only.

Built-in error-detection circuitry uses the `nCS` pin of the configuration device, which monitors the `CONF_DONE` pin on the ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury device. An error condition occurs if the `CONF_DONE` pin does not go high after all the configuration data has been sent, or if the `CONF_DONE` pin goes high before the configuration device has completed sending configuration data. When an error condition occurs, the configuration device drives its `OE` pin low, which drives the ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury device's `nSTATUS` pin low, indicating an error. After an error, configuration automatically restarts if the *Auto-Restart Configuration on Frame Error* option is turned on in the **Global Project Device Options** dialog box (Assign menu) in the MAX+PLUS II software. For APEX 20K and Mercury devices, the Quartus software provides a similar option.

In addition, if the ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury device detects a cyclic redundancy code (CRC) error in the received data, it may also flag the error by driving `nSTATUS` low. This low signal on `nSTATUS` resets the configuration device, allowing reconfiguration. CRC checking is performed when configuring all ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, and Mercury devices.

### 3.3-V or 5.0-V Operation

EPC2, EPC1, and EPC1441 devices can configure 5.0-V, 3.3-V, or 2.5-V devices. For each configuration device, an option must be set for 5.0-V or 3.3-V operation. For EPC1 and EPC1441 configuration devices, the *Use Low-Voltage Configuration EPROM* option in the **Global Project Device Options** dialog box (Assign menu) in the MAX+PLUS II software sets this parameter. (For APEX 20K and Mercury devices, the Quartus software provides a similar option.) For EPC2 devices, this option is set externally by the VCCSEL pin. In addition, the EPC2 device has an externally controlled option, set by the VPPSEL pin, to adjust the programming voltage to 5.0 V or 3.3 V.

The functions of the VCCSEL and VPPSEL pins are described below.

- VCCSEL pin—For EPC2 configuration devices, 5.0-V or 3.3-V operation is controlled by the VCCSEL option pin. The device functions in 5.0-V mode when VCCSEL is connected to GND; the device functions in 3.3-V mode when VCCSEL is connected to V<sub>CC</sub>.
- VPPSEL pin—The EPC2 VPP programming power pin is normally tied to V<sub>CC</sub>. For EPC2 devices operating with a 3.3-V supply, it is possible to improve EPC2 in-system programming times by providing VPP with a 5.0-V supply. For all other devices, VPP must be tied to V<sub>CC</sub>. The EPC2 device's VPPSEL pin must be set in accordance with the EPC2 VPP pin. If the VPP pin is supplied by a 5.0-V supply, VPPSEL must be connected to GND; if the VPP pin is supplied by a 3.3-V power supply, VPPSEL must be connected to V<sub>CC</sub>.

Table 6 describes the relationship between the V<sub>CC</sub> and V<sub>PP</sub> voltage levels and the required logic level for VCCSEL and VPPSEL (i.e., high or low logic level).

| V <sub>CC</sub> Voltage Level (V) | V <sub>PP</sub> Voltage Level (V) | VCCSEL Pin Logic Level | VPPSEL Pin Logic Level |
|-----------------------------------|-----------------------------------|------------------------|------------------------|
| 3.3                               | 3.3                               | High                   | High                   |
| 3.3                               | 5.0                               | High                   | Low                    |
| 5.0                               | 5.0                               | Low                    | Low                    |

For EPC1 and EPC1441 configuration devices, 3.3-V or 5.0-V operation is controlled by a programming bit in the POF. The programming bit value is determined by the core supply voltage of the targeted device during design compilation with the MAX+PLUS II software. For example, EPC1 devices are programmed automatically to operate in 3.3-V mode when configuring FLEX 10KA devices, which have a  $V_{CC}$  voltage of 3.3 V. In this example, the EPC1 device's VCC pin is connected to a 3.3-V power supply.

Designers may choose to set the configuration device for low voltage when using the MultiVolt™ feature, which allows an ACEX, APEX, FLEX, or Mercury device to bridge between systems operating with different voltages. When compiling for 3.3-V FLEX 6000 devices, set the configuration device for low-voltage operation. To set the EPC1 and EPC1441 configuration devices for low-voltage operation, turn on the *Low-Voltage I/O* option in the **Global Project Device Options** dialog box (Assign menu) in the MAX+PLUS II software.

### Configuration Chain with Multiple Voltage Levels

An EPC2 or EPC1 device can configure a device chain with multiple voltage levels. All 3.3-V and 2.5-V ACEX, APEX, FLEX, and Mercury devices can be driven by higher-voltage signals.

When configuring a mixed-voltage device chain, the ACEX, APEX, FLEX and Mercury devices' VCCINT and VCCIO pins may be connected to 2.5 V, 3.3 V, or 5.0 V, depending upon the device. The configuration device may be powered at 3.3 V or 5.0 V. If an EPC1, EPC1441, EPC1213, EPC1064, or EPC1064V configuration device is powered at 3.3 V, the nSTATUS and CONF\_DONE pull-up resistors must be connected to 3.3 V. If these configuration devices are powered at 5.0 V, the nSTATUS and CONF\_DONE pull-up resistors must be connected to 3.3 V or 5.0 V.

At 3.3-V operation, all EPC2 inputs are 5.0-V tolerant, except DATA, DCLK, and nCASC. The DATA, DCLK, and nCEO pins are used only to interface between the EPC2 and the ACEX 1K, APEX 20K, FLEX 10K, FLEX 6000, or Mercury device it is configuring. The voltage tolerances of all EPC2 pins at 5.0 V and 3.3 V are listed in [Table 7](#).

| Pin  | 5.0-V Operation |                | 3.3-V Operation |                |
|------|-----------------|----------------|-----------------|----------------|
|      | 5.0-V Tolerant  | 3.3-V Tolerant | 5.0-V Tolerant  | 3.3-V Tolerant |
| DATA | ✓               | ✓              |                 | ✓              |
| DCLK | ✓               | ✓              |                 | ✓              |

*Table 7. EPC2 Input & Bidirectional Pin Voltage Tolerance*

| Pin        | 5.0-V Operation |                | 3.3-V Operation |                |
|------------|-----------------|----------------|-----------------|----------------|
|            | 5.0-V Tolerant  | 3.3-V Tolerant | 5.0-V Tolerant  | 3.3-V Tolerant |
| nCASC      | ✓               | ✓              |                 | ✓              |
| OE         | ✓               | ✓              | ✓               | ✓              |
| nCS        | ✓               | ✓              | ✓               | ✓              |
| VCCSEL     | ✓               | ✓              | ✓               | ✓              |
| VPPSEL     | ✓               | ✓              | ✓               | ✓              |
| nINIT_CONF | ✓               | ✓              | ✓               | ✓              |
| TDI        | ✓               | ✓              | ✓               | ✓              |
| TMS        | ✓               | ✓              | ✓               | ✓              |
| TCK        | ✓               | ✓              | ✓               | ✓              |



For more information on ACEX 1K, APEX 20K, FLEX 10K, FLEX 8000, FLEX 6000, and Mercury devices, see the following documents:

- [ACEX 1K Programmable Logic Device Family Data Sheet](#)
- [APEX 20K Programmable Logic Device Family Data Sheet](#)
- [FLEX 10K Embedded Programmable Logic Family Data Sheet](#)
- [FLEX 10KE Embedded Programmable Logic Family Data Sheet](#)
- [FLEX 8000 Programmable Logic Device Family Data Sheet](#)
- [FLEX 6000 Programmable Logic Device Family Data Sheet](#)
- [Mercury Programmable Logic Device Family Data Sheet](#)

## Programming & Configuration File Support

The Quartus and MAX+PLUS II development systems provide programming support for Altera configuration devices. The Quartus and MAX+PLUS II software automatically generates a POF to program each configuration device in a project. In a multi-device project, the software can combine the programming files for multiple ACEX, APEX, FLEX, or Mercury devices into one or more configuration devices. The software allows you to select the appropriate configuration device to most efficiently store the data for each ACEX, APEX, FLEX, and Mercury device. Moreover, when compiling for ACEX 1K, FLEX 10KA, FLEX 10KE, or Mercury devices, the MAX+PLUS II software automatically defaults to generate the EPC1 or EPC1441 POF with the programming bit set for 3.3-V operation.

All Altera configuration devices are programmable using Altera programming hardware in conjunction with the Quartus or MAX+PLUS II software. In addition, many manufacturers offer programming hardware that supports other Altera configuration devices.

The EPC2 configuration device can be programmed in-system through its industry-standard 4-pin JTAG interface. ISP capability in the EPC2 provides ease in prototyping and updating ACEX, APEX, FLEX, and Mercury device functionality. The EPC2 configuration device can be programmed in-system via test equipment using SVF Files, Jam STAPL Files (.jam), or Jam STAPL Byte-Code Files (.jbc), embedded processors using the Jam programming and test language, and the MAX+PLUS II software via the MasterBlaster, ByteBlasterMV, or BitBlaster download cables. When programming multiple EPC2 devices in a JTAG chain, the Quartus and MAX+PLUS II software and other programming methods employ concurrent programming to simultaneously program multiple devices and reduce programming time. EPC2 devices can be programmed and erased up to 100 times.

After programming an EPC2 device in-system, ACEX, APEX, FLEX, or Mercury device configuration can be initiated by including the EPC2 JTAG configuration instruction. See [Table 8 on page 21](#).



For more information on programming and configuration support, see the following documents:

- [Altera Programming Hardware Data Sheet](#)
- [Programming Hardware Manufacturers](#)
- [MasterBlaster Serial/USB Communications Cable Data Sheet](#)
- [ByteBlasterMV Parallel Port Download Cable Data Sheet](#)
- [ByteBlaster Parallel Port Download Cable Data Sheet](#)
- [BitBlaster Serial Download Cable Data Sheet](#)

## IEEE Std. 1149.1 (JTAG) Boundary-Scan Testing

The EPC2 provides JTAG BST circuitry that complies with the IEEE Std. 1149.1-1990 specification. JTAG boundary-scan testing can be performed before or after configuration, but not during configuration. The EPC2 device supports the JTAG instructions shown in [Table 8](#).

The ISP circuitry in EPC2 devices is compatible with tools that support the IEEE Std. 1532. The IEEE Std. 1532 is a standard developed to allow concurrent ISP between multiple PLD vendors.

| JTAG Instruction | Description   |
|------------------|---|
| SAMPLE/PRELOAD   | Allows a snapshot of a signal at the device pins to be captured and examined during normal device operation, and permits an initial data pattern output at the device pins. |
| EXTEST           | Allows the external circuitry and board-level interconnections to be tested by forcing a test pattern at the output pins and capturing results at the input pins.           |

| <i>Table 8. EPC2 JTAG Instructions</i> |   |
|--|---|
| JTAG Instruction                       | Description   |
| BYPASS                                 | Places the 1-bit bypass register between the TDI and TDO pins, which allows the BST data to pass synchronously through a selected device to adjacent devices during normal device operation.  |
| IDCODE                                 | Selects the device IDCODE register and places it between TDI and TDO, allowing the device IDCODE to be serially shifted out of TDO. The device IDCODE for the EPC2 is shown below:<br>0000 0001000000000010 00001101110 1   |
| USERCODE                               | Selects the USERCODE register and places it between TDI and TDO, allowing the USERCODE to be serially shifted out of TDO. The 32-bit USERCODE is a programmable user-defined pattern.   |
| ISP Instructions                       | These instructions are used when programming an EPC2 device via JTAG ports with a MasterBlaster, ByteBlaster MV, ByteBlaster, or BitBlaster download cable, or using a Jam STAPL File (.jam), Jam STAPL Byte-Code File (.jbc), or SVF File via an embedded processor.   |
| INIT_CONF                              | This function allows the user to initiate the APEX or FLEX configuration process by tying nINIT_CONF to the APEX or FLEX device(s) nCONFIG pin(s). After this instruction is updated, the nINIT_CONF pin is driven low. When the Initiate Configuration instruction is cleared, nINIT_CONF is released, which starts the APEX or FLEX device configuration. This instruction is used by the MAX+PLUS II software, Jam STAPL Files, and JBC Files. |



For more information, see [Application Note 39 \(IEEE 1149.1 \(JTAG\) Boundary-Scan Testing in Altera Devices\)](#).

[Figure 9](#) shows the timing requirements for the JTAG signals.

Figure 9. EPC2 JTAG Waveforms

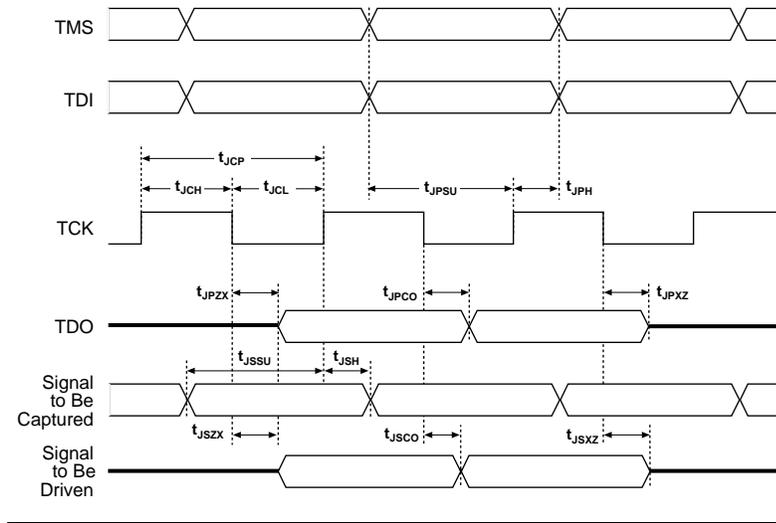


Table 9 shows the timing parameters and values for configuration devices.

| Symbol     | Parameter                                      | Min | Max | Unit |
|------------|--|-----|-----|------|
| $t_{JCP}$  | TCK clock period                               | 100 |     | ns   |
| $t_{JCH}$  | TCK clock high time                            | 50  |     | ns   |
| $t_{JCL}$  | TCK clock low time                             | 50  |     | ns   |
| $t_{JPSU}$ | JTAG port setup time                           | 20  |     | ns   |
| $t_{JPH}$  | JTAG port hold time                            | 45  |     | ns   |
| $t_{JPCO}$ | JTAG port clock to output                      |     | 25  | ns   |
| $t_{JPZX}$ | JTAG port high impedance to valid output       |     | 25  | ns   |
| $t_{JPXZ}$ | JTAG port valid output to high impedance       |     | 25  | ns   |
| $t_{JSSU}$ | Capture register setup time                    | 20  |     | ns   |
| $t_{JSH}$  | Capture register hold time                     | 45  |     | ns   |
| $t_{JSCO}$ | Update register clock to output                |     | 25  | ns   |
| $t_{JSZX}$ | Update register high-impedance to valid output |     | 25  | ns   |
| $t_{JSXZ}$ | Update register valid output to high impedance |     | 25  | ns   |

## Operating Conditions

Tables 10 through 17 provide information on absolute maximum ratings, recommended operating conditions, DC operating conditions, and capacitance for configuration devices.

**Table 10. Absolute Maximum Ratings** *Note (1)*

| Symbol           | Parameter                            | Conditions                 | Min  | Max | Unit |
|------------------|--------------------------------------|----------------------------|------|-----|------|
| V <sub>CC</sub>  | Supply voltage                       | With respect to ground (2) | -2.0 | 7.0 | V    |
| V <sub>I</sub>   | DC input voltage                     | With respect to ground (2) | -2.0 | 7.0 | V    |
| I <sub>MAX</sub> | DC V <sub>CC</sub> or ground current |                            |      | 50  | mA   |
| I <sub>OUT</sub> | DC output current, per pin           |                            | -25  | 25  | mA   |
| P <sub>D</sub>   | Power dissipation                    |                            |      | 250 | mW   |
| T <sub>STG</sub> | Storage temperature                  | No bias                    | -65  | 150 | °C   |
| T <sub>AMB</sub> | Ambient temperature                  | Under bias                 | -65  | 135 | °C   |
| T <sub>J</sub>   | Junction temperature                 | Under bias                 |      | 135 | °C   |

**Table 11. Recommended Operating Conditions**

| Symbol          | Parameter                          | Conditions             | Min         | Max                       | Unit |
|-----------------|------------------------------------|------------------------|-------------|---------------------------|------|
| V <sub>CC</sub> | Supply voltage for 5.0-V operation | (3), (4)               | 4.75 (4.50) | 5.25 (5.50)               | V    |
|                 | Supply voltage for 3.3-V operation | (3), (4)               | 3.0 (3.0)   | 3.6 (3.6)                 | V    |
| V <sub>I</sub>  | Input voltage                      | With respect to ground | -0.3        | V <sub>CC</sub> + 0.3 (5) | V    |
| V <sub>O</sub>  | Output voltage                     |                        | 0           | V <sub>CC</sub>           | V    |
| T <sub>A</sub>  | Operating temperature              | For commercial use     | 0           | 70                        | °C   |
|                 |                                    | For industrial use     | -40         | 85                        | °C   |
| t <sub>R</sub>  | Input rise time                    |                        |             | 20                        | ns   |
| t <sub>F</sub>  | Input fall time                    |                        |             | 20                        | ns   |

**Table 12. DC Operating Conditions**

| Symbol          | Parameter                                 | Conditions                                 | Min                   | Max                       | Unit |
|-----------------|---|--|-----------------------|---------------------------|------|
| V <sub>IH</sub> | High-level input voltage                  |  | 2.0                   | V <sub>CC</sub> + 0.3 (5) | V    |
| V <sub>IL</sub> | Low-level input voltage                   |  | -0.3                  | 0.8                       | V    |
| V <sub>OH</sub> | 5.0-V mode high-level TTL output voltage  | I <sub>OH</sub> = -4 mA DC (6)             | 2.4                   |                           | V    |
|                 | 3.3-V mode high-level CMOS output voltage | I <sub>OH</sub> = -0.1 mA DC (6)           | V <sub>CC</sub> - 0.2 |                           | V    |
| V <sub>OL</sub> | Low-level output voltage                  | I <sub>OL</sub> = 4 mA DC (6)              |                       | 0.4                       | V    |
| I <sub>I</sub>  | Input leakage current                     | V <sub>I</sub> = V <sub>CC</sub> or ground | -10                   | 10                        | μA   |
| I <sub>OZ</sub> | Tri-state output off-state current        | V <sub>O</sub> = V <sub>CC</sub> or ground | -10                   | 10                        | μA   |

Configuration Devices for ACEX, APEX, FLEX & Mercury Devices Data Sheet

**Table 13. EPC1213, EPC1064 & EPC1064V Device  $I_{CC}$  Supply Current Values**

| Symbol    | Parameter                                      | Conditions | Min | Typ | Max | Unit    |
|-----------|--|------------|-----|-----|-----|---------|
| $I_{CC0}$ | $V_{CC}$ supply current (standby)              |            |     | 100 | 200 | $\mu$ A |
| $I_{CC1}$ | $V_{CC}$ supply current (during configuration) |            |     | 10  | 50  | mA      |

**Table 14. EPC2 Device  $I_{CC}$  Supply Current Values**

| Symbol    | Parameter                                      | Conditions                | Min | Typ | Max | Unit    |
|-----------|--|---------------------------|-----|-----|-----|---------|
| $I_{CC0}$ | $V_{CC}$ supply current (standby)              | $V_{CC} = 5.0$ V or 3.3 V |     | 50  | 100 | $\mu$ A |
| $I_{CC1}$ | $V_{CC}$ supply current (during configuration) | $V_{CC} = 5.0$ V or 3.3 V |     | 18  | 50  | mA      |

**Table 15. EPC1 Device  $I_{CC}$  Supply Current Values**

| Symbol    | Parameter                                      | Conditions       | Min | Typ | Max  | Unit    |
|-----------|--|------------------|-----|-----|------|---------|
| $I_{CC0}$ | $V_{CC}$ supply current (standby)              |                  |     | 50  | 100  | $\mu$ A |
| $I_{CC1}$ | $V_{CC}$ supply current (during configuration) | $V_{CC} = 5.0$ V |     | 30  | 50   | mA      |
|           |  | $V_{CC} = 3.3$ V |     | 10  | 16.5 | mA      |

**Table 16. EPC1441 Device  $I_{CC}$  Supply Current Values**

| Symbol    | Parameter                                      | Conditions       | Min | Typ | Max | Unit    |
|-----------|--|------------------|-----|-----|-----|---------|
| $I_{CC0}$ | $V_{CC}$ supply current (standby)              |                  |     | 30  | 60  | $\mu$ A |
| $I_{CC1}$ | $V_{CC}$ supply current (during configuration) | $V_{CC} = 5.0$ V |     | 15  | 30  | mA      |
| $I_{CC1}$ | $V_{CC}$ supply current (during configuration) | $V_{CC} = 3.3$ V |     | 5   | 10  | mA      |

**Table 17. Capacitance** *Note (7)*

| Symbol    | Parameter              | Conditions                     | Min | Max | Unit |
|-----------|------------------------|--------------------------------|-----|-----|------|
| $C_{IN}$  | Input pin capacitance  | $V_{IN} = 0$ V, $f = 1.0$ MHz  |     | 10  | pF   |
| $C_{OUT}$ | Output pin capacitance | $V_{OUT} = 0$ V, $f = 1.0$ MHz |     | 10  | pF   |

**Notes to tables:**

- (1) See the *Operating Requirements for Altera Devices Data Sheet* in this data book.
- (2) The minimum DC input is  $-0.3$  V. During transitions, the inputs may undershoot to  $-2.0$  V or overshoot to 7.0 V for input currents less than 100 mA and periods shorter than 20 ns under no-load conditions.
- (3) Numbers in parentheses are for industrial-temperature-range devices.
- (4) Maximum  $V_{CC}$  rise time is 100 ms.
- (5) Certain EPC2 pins may be driven to 5.75 V when operated with a 3.3-V  $V_{CC}$ . See [Table 7 on page 19](#).
- (6) The  $I_{OH}$  parameter refers to high-level TTL or CMOS output current; the  $I_{OL}$  parameter refers to low-level TTL or CMOS output current.
- (7) Capacitance is sample-tested only.

Configuration Devices for ACEX, APEX, FLEX & Mercury Devices Data Sheet

Tables 18 through 22 show the device configuration parameters for FLEX 10K, FLEX 8000, and FLEX 6000 devices.

*Table 18. ACEX 1K, FLEX 10K & FLEX 6000 Device Configuration Parameters Using EPC2 Devices at 5.0-V*

| Symbol             | Parameter  | Conditions | Min | Typ | Max  | Unit |
|--------------------|--|------------|-----|-----|------|------|
| t <sub>CE</sub>    | OE high to first clock delay                                   |            |     |     | 200  | ns   |
| t <sub>OEZX</sub>  | OE high to data output enabled                                 |            |     |     | 50   | ns   |
| t <sub>CO</sub>    | DCLK to data out delay   |            |     |     | 20   | ns   |
| t <sub>MCH</sub>   | DCLK high time for the first device in the configuration chain |            | 30  | 50  | 75   | ns   |
| t <sub>MCL</sub>   | DCLK low time for the first device in the configuration chain  |            | 30  | 50  | 75   | ns   |
| f <sub>CK</sub>    | Clock frequency  |            | 6.7 | 10  | 16.7 | MHz  |
| t <sub>SCH</sub>   | DCLK high time for subsequent devices                          |            | 30  |     |      | ns   |
| t <sub>SCL</sub>   | DCLK low time for subsequent devices                           |            | 30  |     |      | ns   |
| t <sub>CASC</sub>  | CLK rising edge to nCASC                                       |            |     |     | 20   | ns   |
| t <sub>CCA</sub>   | nCS to nCASC cascade delay                                     |            |     |     | 10   | ns   |
| f <sub>CDOE</sub>  | CLK to data enable/disable                                     |            |     |     | 20   | ns   |
| t <sub>OEC</sub>   | OE low to CLK disable delay                                    |            |     |     | 20   | ns   |
| t <sub>NRCAS</sub> | OE low (reset) to nCASC delay                                  |            |     |     | 25   | ns   |
| t <sub>NRR</sub>   | OE low time (reset) minimum                                    |            | 100 |     |      | ns   |

*Table 19. ACEX 1K, APEX 20K, FLEX 10K & Mercury Device Configuration Parameters Using EPC2 Devices at 3.3-V*

| Symbol             | Parameter  | Conditions | Min | Typ | Max  | Unit |
|--------------------|--|------------|-----|-----|------|------|
| t <sub>CE</sub>    | OE high to first clock delay                                   |            |     |     | 300  | ns   |
| t <sub>OEZX</sub>  | OE high to data output enabled                                 |            |     |     | 80   | ns   |
| t <sub>CO</sub>    | DCLK to data out delay   |            |     |     | 30   | ns   |
| t <sub>MCH</sub>   | DCLK high time for the first device in the configuration chain |            | 40  | 65  | 100  | ns   |
| t <sub>MCL</sub>   | DCLK low time for the first device in the configuration chain  |            | 40  | 65  | 100  | ns   |
| f <sub>CK</sub>    | Clock frequency  |            | 5   | 7.7 | 12.5 | MHz  |
| t <sub>SCH</sub>   | DCLK high time for subsequent devices                          |            | 40  |     |      | ns   |
| t <sub>SCL</sub>   | DCLK low time for subsequent devices                           |            | 40  |     |      | ns   |
| t <sub>CASC</sub>  | CLK rising edge to nCASC                                       |            |     |     | 25   | ns   |
| t <sub>CCA</sub>   | nCS to nCASC cascade delay                                     |            |     |     | 15   | ns   |
| f <sub>CDOE</sub>  | CLK to data enable/disable                                     |            |     |     | 30   | ns   |
| t <sub>OEC</sub>   | OE low to CLK disable delay                                    |            |     |     | 30   | ns   |
| t <sub>NRCAS</sub> | OE low (reset) to nCASC delay                                  |            |     |     | 30   | ns   |
| t <sub>NRR</sub>   | OE low time (reset) minimum                                    |            | 100 |     |      | ns   |

**Configuration Devices for ACEX, APEX, FLEX & Mercury Devices Data Sheet**

| <i>Table 20. ACEX 1K, FLEX 10K &amp; FLEX 6000 Device Configuration Parameters Using EPC1 &amp; EPC1441 Devices at 5.0-V</i> |  |            |     |     |      |      |
|--|--|------------|-----|-----|------|------|
| Symbol   | Parameter  | Conditions | Min | Typ | Max  | Unit |
| t <sub>CE</sub>  | OE high to first clock delay                                   |            |     |     | 200  | ns   |
| t <sub>OEZX</sub>  | OE high to data output enabled                                 |            |     |     | 50   | ns   |
| t <sub>CO</sub>  | DCLK to data out delay   |            |     |     | 20   | ns   |
| t <sub>MCH</sub>   | DCLK high time for the first device in the configuration chain |            | 30  | 50  | 75   | ns   |
| t <sub>MCL</sub>   | DCLK low time for the first device in the configuration chain  |            | 30  | 50  | 75   | ns   |
| f <sub>CK</sub>  | Clock frequency  |            | 6.7 | 10  | 16.7 | MHz  |
| t <sub>SCH</sub>   | DCLK high time for subsequent devices                          |            | 30  |     |      | ns   |
| t <sub>SCL</sub>   | DCLK low time for subsequent devices                           |            | 30  |     |      | ns   |
| t <sub>CASC</sub>  | CLK rising edge to nCASC                                       |            |     |     | 20   | ns   |
| t <sub>CCA</sub>   | nCS to nCASC cascade delay                                     |            |     |     | 10   | ns   |
| f <sub>CDOE</sub>  | CLK to data enable/disable                                     |            |     |     | 20   | ns   |
| t <sub>OEC</sub>   | OE low to CLK disable delay                                    |            |     |     | 20   | ns   |
| t <sub>NRCAS</sub>   | OE low (reset) to nCASC delay                                  |            |     |     | 25   | ns   |
| t <sub>NRR</sub>   | OE low time (reset) minimum                                    |            | 100 |     |      | ns   |

| <i>Table 21. ACEX 1K, FLEX 10K &amp; FLEX 6000 Device Configuration Parameters Using EPC1 &amp; EPC1441 Devices at 3.3-V</i> |  |            |     |     |     |      |
|--|--|------------|-----|-----|-----|------|
| Symbol   | Parameter  | Conditions | Min | Typ | Max | Unit |
| t <sub>CE</sub>  | OE high to first clock delay                                   |            |     |     | 300 | ns   |
| t <sub>OEZX</sub>  | OE high to data output enabled                                 |            |     |     | 80  | ns   |
| t <sub>CO</sub>  | DCLK to data out delay   |            |     |     | 30  | ns   |
| t <sub>MCH</sub>   | DCLK high time for the first device in the configuration chain |            | 50  | 125 | 250 | ns   |
| t <sub>MCL</sub>   | DCLK low time for the first device in the configuration chain  |            | 50  | 125 | 250 | ns   |
| f <sub>CK</sub>  | Clock frequency  |            | 2   | 4   | 10  | MHz  |
| t <sub>SCH</sub>   | DCLK high time for subsequent devices                          |            | 50  |     |     | ns   |
| t <sub>SCL</sub>   | DCLK low time for subsequent devices                           |            | 50  |     |     | ns   |
| t <sub>CASC</sub>  | CLK rising edge to nCASC                                       |            |     |     | 25  | ns   |
| t <sub>CCA</sub>   | nCS to nCASC cascade delay                                     |            |     |     | 15  | ns   |
| f <sub>CDOE</sub>  | CLK to data enable/disable                                     |            |     |     | 30  | ns   |
| t <sub>OEC</sub>   | OE low to CLK disable delay                                    |            |     |     | 30  | ns   |
| t <sub>NRCAS</sub>   | OE low (reset) to nCASC delay                                  |            |     |     | 30  | ns   |
| t <sub>NRR</sub>   | OE low time (reset) minimum                                    |            | 100 |     |     | ns   |

Configuration Devices for APEX, ACEX, FLEX & Mercury Devices Data Sheet

Table 22. FLEX 8000 Device Configuration Parameters Using EPC1, EPC1441, EPC1213, EPC1064 & EPC1064V Devices

| Symbol             | Parameter                                    | Conditions | EPC1064V |     | EPC1064<br>EPC1213 |     | EPC1<br>EPC1441 |     | Unit |
|--------------------|--|------------|----------|-----|--------------------|-----|-----------------|-----|------|
|                    |  |            | Min      | Max | Min                | Max | Min             | Max |      |
| t <sub>OEZX</sub>  | OE high to DATA output enabled               |            |          | 75  |                    | 50  |                 | 50  | ns   |
| t <sub>CSZX</sub>  | nCS low to DATA output enabled               |            |          | 75  |                    | 50  |                 | 50  | ns   |
| t <sub>CSXZ</sub>  | nCS high to DATA output disabled             |            |          | 75  |                    | 50  |                 | 50  | ns   |
| t <sub>CSS</sub>   | nCS low setup time to first DCLK rising edge |            | 150      |     | 100                |     | 50              |     | ns   |
| t <sub>CSH</sub>   | nCS low hold time after DCLK rising edge     |            | 0        |     | 0                  |     | 0               |     | ns   |
| t <sub>DSU</sub>   | Data setup time before rising edge on DCLK   |            | 75       |     | 50                 |     | 50              |     | ns   |
| t <sub>DH</sub>    | Data hold time after rising edge on DCLK     |            | 0        |     | 0                  |     | 0               |     | ns   |
| t <sub>CO</sub>    | DCLK to DATA out delay                       |            |          | 100 |                    | 75  |                 | 75  | ns   |
| t <sub>CK</sub>    | Clock period                                 |            | 240      |     | 160                |     | 100             |     | ns   |
| f <sub>CK</sub>    | Clock frequency                              |            |          | 4   |                    | 6   |                 | 8   | MHz  |
| t <sub>CL</sub>    | DCLK low time                                |            | 120      |     | 80                 |     | 50              |     | ns   |
| t <sub>CH</sub>    | DCLK high time                               |            | 120      |     | 80                 |     | 50              |     | ns   |
| t <sub>XZ</sub>    | OE low or nCS high to DATA output disabled   |            |          | 75  |                    | 50  |                 | 50  | ns   |
| t <sub>OEW</sub>   | OE pulse width to guarantee counter reset    |            | 150      |     | 100                |     | 100             |     | ns   |
| t <sub>CASC</sub>  | Last DCLK + 1 to nCASC low delay             |            |          | 90  |                    | 60  |                 | 50  | ns   |
| t <sub>CKXZ</sub>  | Last DCLK + 1 to DATA tri-state delay        |            |          | 75  |                    | 50  |                 | 50  | ns   |
| t <sub>CEOUT</sub> | nCS high to nCASC high delay                 |            |          | 150 |                    | 100 |                 | 100 | ns   |



101 Innovation Drive  
 San Jose, CA 95134  
 (408) 544-7000  
<http://www.altera.com>  
**Applications Hotline:**  
 (800) 800-EPLD  
**Customer Marketing:**  
 (408) 544-7104  
**Literature Services:**  
[lit\\_req@altera.com](mailto:lit_req@altera.com)

Altera, ACEX, APEX, BitBlaster, ByteBlaster, FLEX, Jam, Master Blaster, MAX+PLUS II, Mercury, Quartus, and specific device designations, are trademarks and/or service marks of Altera Corporation in the United States and other countries. Altera acknowledges the trademarks of other organizations for their respective products or services mentioned in this document. Altera products are protected under numerous U.S. and foreign patents and pending applications, maskwork rights, and copyrights. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera Corporation. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.



I.S. EN ISO 9001