56F8365/56F8165

Data Sheet
Preliminary Technical Data

56F8300
16-bit Digital Signal Controllers

freescale.com

freescale™
semiconductor

Document Revision History

Version History	Description of Change
Rev 0	Pre-release, Alpha customers only
Rev 1.0	Initial Public Release
Rev 2.0	Added output voltage maximum value and note to clarify in **Table 10-1**; also removed overall life expectancy note, since life expectancy is dependent on customer usage and must be determined by reliability engineering. Clarified value and unit measure for Maximum allowed P_D in **Table 10-3**. Corrected note about average value for Flash Data Retention in **Table 10-4**. Added new RoHS-compliant orderable part numbers in **Table 13-1**.
Rev 3.0	Corrected Data Flash on page 5
Rev 4.0	Deleted RSTO from Pin Group 2 (listed after **Table 10-1**). Deleted formula for Max Ambient Operating Temperature (Automotive) and Max Ambient Operating Temperature (Industrial) in **Table 10-4**. Added RoHS-compliance and "pb-free" language to back cover.
Rev 5.0	Added information/corrected state during reset in **Table 2-2**. Clarified external reference crystal frequency for PLL in **Table 10-14** by increasing maximum value to 8.4MHz.
Rev 6.0	Replaced "Tri-stated" with an explanation in State During Reset column in **Table 2-2**.

Please see http://www.freescale.com for the most current Data Sheet revision.

56F8365/56F8165 General Description

Note: *Features in italics are NOT available in the 56F8165 device.*

- Up to 60 MIPS at 60MHz core frequency
- DSP and MCU functionality in a unified, C-efficient architecture
- 512KB Program Flash
- *4KB Program RAM*
- *32KB Data Flash*
- 32KB Data RAM
- 32KB Boot Flash
- *Up to two* 6-channel PWM modules
- Four 4-channel, 12-bit ADCs
- *Temperature Sensor*

- *Up to two* Quadrature Decoders
- *Up to two FlexCAN modules*
- Optional On-Chip Regulator
- Two Serial Communication Interfaces (SCIs)
- Up to two Serial Peripheral Interface (SPIs)
- Up to four general-purpose Quad Timers
- Computer Operating Properly (COP)/Watchdog
- JTAG/Enhanced On-Chip Emulation (OnCE™) for unobtrusive, real-time debugging
- Up to 49 GPIO lines
- 128-pin LQFP Package
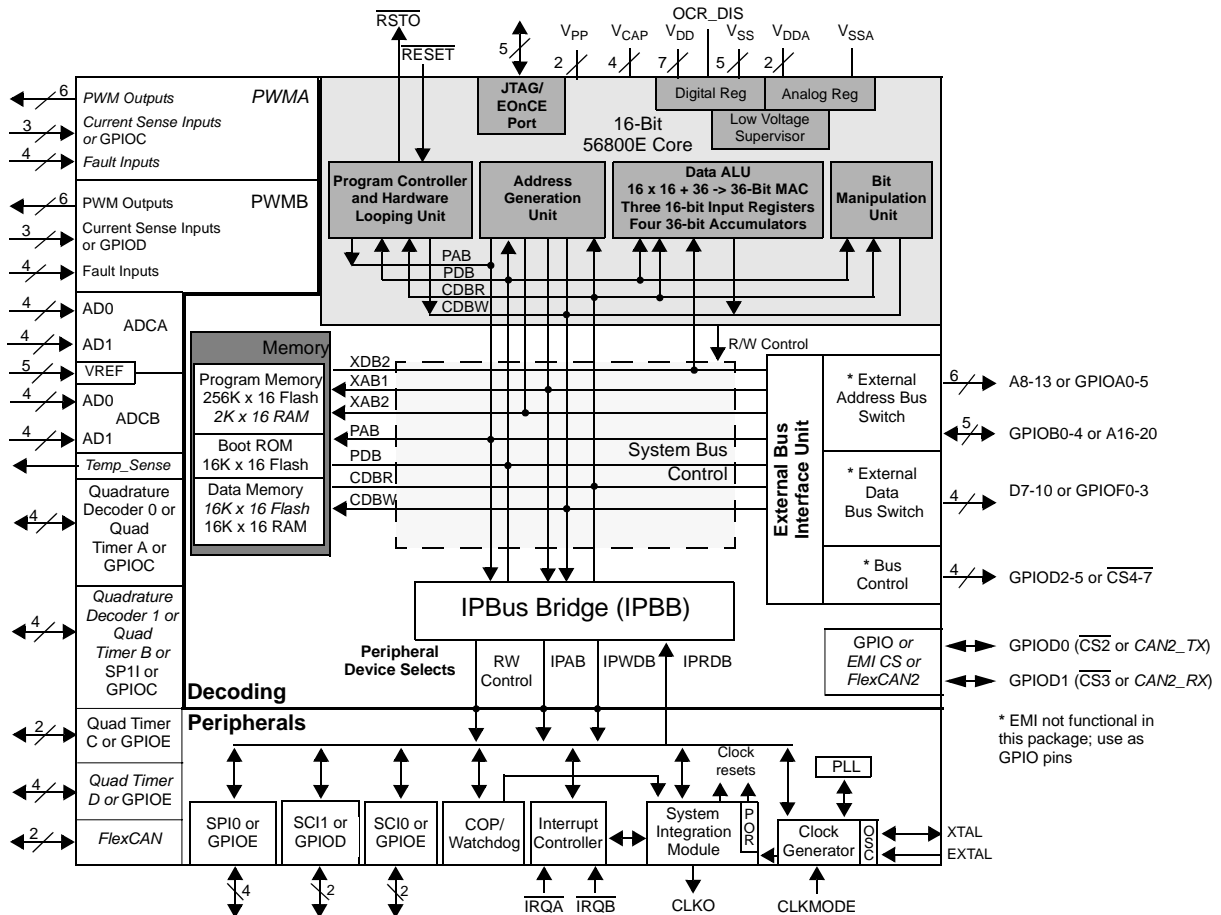
56F8365/56F8165 Block Diagram

Table of Contents

Part 1 Overview

1.1 56F8365/56F8165 Features

1.1.1 Core

- Efficient 16-bit 56800E family controller engine with dual Harvard architecture
- Up to 60 Million Instructions Per Second (MIPS) at 60MHz core frequency
- Single-cycle 16 × 16-bit parallel Multiplier-Accumulator (MAC)
- Four 36-bit accumulators, including extension bits
- Arithmetic and logic multi-bit shifter
- Parallel instruction set with unique DSP addressing modes
- Hardware DO and REP loops
- Three internal address buses
- Four internal data buses
- Instruction set supports both DSP and controller functions
- Controller-style addressing modes and instructions for compact code
- Efficient C compiler and local variable support
- Software subroutine and interrupt stack with depth limited only by memory
- JTAG/EOnCE debug programming interface

1.1.2 Differences Between Devices

Table 1-1 outlines the key differences between the 56F8365 and 56F8165 devices.

Table 1-1 Device Differences

Feature	56F8365	56F8165
Guaranteed Speed	60MHz/60 MIPS	40MHz/40MIPS
Program RAM	4KB	Not Available
Data Flash	32KB	Not Available
PWM	2 x 6	1 x 6
CAN	2	Not Available
Quad Timer	4	2
Quadrature Decoder	2 x 4	1 x 4
Temperature Sensor	1	Not Available

56F8365 Technical Data, Rev. 6.0

1.1.3   Memory

Note: *Features in italics are NOT available in the 56F8165 device.*

- Harvard architecture permits as many as three simultaneous accesses to program and data memory
- Flash security protection feature
- On-chip memory, including a low-cost, high-volume Flash solution
    - 512KB of Program Flash
    - *4KB of Program RAM*
    - *32KB of Data Flash*
    - 32KB of Data RAM
    - 32KB of Boot Flash
- EEPROM emulation capability

1.1.4   Peripheral Circuits

Note: *Features in italics are NOT available in the 56F8165 device.*

- Pulse Width Modulator module:
    - In the 56F8365, two Pulse Width Modulator modules, each with six PWM outputs, three Current Sense inputs, and four Fault inputs; fault-tolerant design with dead time insertion; supports both center-aligned and edge-aligned modes
    - In the 56F8165, one Pulse Width Modulator module with six PWM outputs, three Current Sense inputs and three Fault inputs; fault-tolerant design with dead time insertion; supports both center-aligned and edge-aligned modes
- Four 12-bit, Analog-to-Digital Converters (ADCs), which support four simultaneous conversions with quad, 4-pin multiplexed inputs; ADC and PWM modules can be synchronized through Timer C, channels 2 and 3
- Quadrature Decoder:
    - In the 56F8365, two four-input Quadrature Decoders or two additional Quad Timers
    - In the 56F8165, one four-input Quadrature Decoder, which works in conjunction with Quad Timer A
- *Temperature Sensor can be connected, on the board, to any of the ADC inputs to monitor the on-chip temperature*
- Quad Timer:
    - In the 56F8365, four dedicated general-purpose Quad Timers totaling six dedicated pins: Timer C with two pins and Timer D with four pins
    - In the 56F8165, two Quad Timers; Timer A and Timer C both work in conjunction with GPIO
- Optional On-Chip Regulator
- *Up to two FlexCAN (CAN Version 2.0 B-compliant) modules with 2-pin port for transmit and receive*
- Two Serial Communication Interfaces (SCIs), each with two pins (or four additional GPIO lines)
- Up to two Serial Peripheral Interfaces (SPIs), both with configurable 4-pin port (or eight additional GPIO lines); SPI1 can also be used as Quadrature Decoder 1 or Quad Timer B
- Computer Operating Properly (COP)/Watchdog timer

- Two dedicated external interrupt pins
- 49 General Purpose I/O (GPIO) pins; 28 pins dedicated to GPIO
- External reset input pin for hardware reset
- External reset output pin for system reset
- Integrated low-voltage interrupt module
- JTAG/Enhanced On-Chip Emulation (OnCE) for unobtrusive, processor speed-independent, real-time debugging
- Software-programmable, Phase Lock Loop (PLL)-based frequency synthesizer for the core clock

1.1.5   Energy Information

- Fabricated in high-density CMOS with 5V-tolerant, TTL-compatible digital inputs
- On-board 3.3V down to 2.6V voltage regulator for powering internal logic and memories; can be disabled
- On-chip regulators for digital and analog circuitry to lower cost and reduce noise
- Wait and Stop modes available
- ADC smart power management
- Each peripheral can be individually disabled to save power

1.2   Device Description

The 56F8365 and 56F8165 are members of the 56800E core-based family of controllers. Each combines, on a single chip, the processing power of a Digital Signal Processor (DSP) and the functionality of a microcontroller with a flexible set of peripherals to create an extremely cost-effective solution. Because of their low cost, configuration flexibility, and compact program code, the 56F8365 and 56F8165 are well-suited for many applications. The devices include many peripherals that are especially useful for motion control, smart appliances, steppers, encoders, tachometers, limit switches, power supply and control, *automotive* control (56F8365 only), engine management, noise suppression, remote utility metering, industrial control for power, lighting, and automation applications.

The 56800E core is based on a Harvard-style architecture consisting of three execution units operating in parallel, allowing as many as six operations per instruction cycle. The MCU-style programming model and optimized instruction set allow straightforward generation of efficient, compact DSP and control code. The instruction set is also highly efficient for C/C++ Compilers to enable rapid development of optimized control applications.

The 56F8365 and 56F8165 support program execution from internal memories. Two data operands can be accessed from the on-chip data RAM per instruction cycle. These devices also provide two external dedicated interrupt lines and up to 49 General Purpose Input/Output (GPIO) lines, depending on peripheral configuration.

1.2.1   56F8365 Features

The 56F8365 controller includes 512KB of Program Flash and 32KB of Data Flash (each programmable through the JTAG port) with 4KB of Program RAM and 32KB of Data RAM. A total of 32KB of Boot Flash is incorporated for easy customer inclusion of field-programmable software routines that can be used

56F8365 Technical Data, Rev. 6.0

to program the main Program and Data Flash memory areas. Both Program and Data Flash memories can be independently bulk erased or erased in pages. Program Flash page erase size is 1KB. Boot and Data Flash page erase size is 512 bytes. The Boot Flash memory can also be either bulk or page erased.

A key application-specific feature of the 56F8365 is the inclusion of two Pulse Width Modulator (PWM) modules. These modules each incorporate three complementary, individually programmable PWM signal output pairs (each module is also capable of supporting six independent PWM functions, for a total of 12 PWM outputs) to enhance motor control functionality. Complementary operation permits programmable dead time insertion, distortion correction via current sensing by software, and separate top and bottom output polarity control. The up-counter value is programmable to support a continuously variable PWM frequency. Edge-aligned and center-aligned synchronous pulse width control (0% to 100% modulation) is supported. The device is capable of controlling most motor types: ACIM (AC Induction Motors); both BDC and BLDC (Brush and Brushless DC motors); SRM and VRM (Switched and Variable Reluctance Motors); and stepper motors. The PWMs incorporate fault protection and cycle-by-cycle current limiting with sufficient output drive capability to directly drive standard optoisolators. A "smoke-inhibit", write-once protection feature for key parameters is also included. A patented PWM waveform distortion correction circuit is also provided. Each PWM is double-buffered and includes interrupt controls to permit integral reload rates to be programmable from 1 to 16. The PWM modules provide reference outputs to synchronize the Analog-to-Digital Converters through two channels of Quad Timer C.

The 56F8365 incorporates two Quadrature Decoders capable of capturing all four transitions on the two-phase inputs, permitting generation of a number proportional to actual position. Speed computation capabilities accommodate both fast- and slow-moving shafts. An integrated watchdog timer in the Quadrature Decoder can be programmed with a time-out value to alert when no shaft motion is detected. Each input is filtered to ensure only true transitions are recorded.

This controller also provides a full set of standard programmable peripherals that include two Serial Communications Interfaces (SCIs); two Serial Peripheral Interfaces (SPIs); and four Quad Timers. Any of these interfaces can be used as General Purpose Input/Outputs (GPIOs) if that function is not required. Two Flex Controller Area Network (FlexCAN) interfaces (CAN Version 2.0 B-compliant) and an internal interrupt controller are also a part of the 56F8365.

1.2.2   56F8165 Features

The 56F8165 hybrid controller includes 128KB of Program Flash, programmable through the JTAG port, and 8KB of Data RAM. A total of 8KB of Boot Flash is incorporated for easy customer inclusion of field-programmable software routines that can be used to program the main Program Flash memory area. The Program Flash memory can be independently bulk erased or erased in pages; Program Flash page erase size is 1KB. The Boot Flash page erase size is 512 bytes; Boot Flash memory can also be either bulk or page erased.

A key application-specific feature of the 56F8165 is the inclusion of one Pulse Width Modulator (PWM) module. This module incorporates three complementary, individually programmable PWM signal output pairs and can also support six independent PWM functions to enhance motor control functionality. Complementary operation permits programmable dead time insertion, distortion correction via current sensing by software, and separate top and bottom output polarity control. The up-counter value is

programmable to support a continuously variable PWM frequency. Edge-aligned and center-aligned synchronous pulse width control (0% to 100% modulation) is supported. The device is capable of controlling most motor types: ACIM (AC Induction Motors); both BDC and BLDC (Brush and Brushless DC motors); SRM and VRM (Switched and Variable Reluctance Motors); and stepper motors. The PWM incorporates fault protection and cycle-by-cycle current limiting with sufficient output drive capability to directly drive standard optoisolators. A "smoke-inhibit", write-once protection feature for key parameters is also included. A patented PWM waveform distortion correction circuit is also provided. The PWM is double-buffered and includes interrupt controls to permit integral reload rates to be programmable from 1 to 16. The PWM module provides reference outputs to synchronize the Analog-to-Digital Converters through two channels of Quad Timer C.

The 56F8165 incorporates a Quadrature Decoder capable of capturing all four transitions on the two-phase inputs, permitting generation of a number proportional to actual position. Speed computation capabilities accommodate both fast- and slow-moving shafts. An integrated watchdog timer in the Quadrature Decoder can be programmed with a time-out value to alert when no shaft motion is detected. Each input is filtered to ensure only true transitions are recorded.

This controller also provides a full set of standard programmable peripherals that include two Serial Communications Interfaces (SCIs); two Serial Peripheral Interfaces (SPIs); and two Quad Timers. Any of these interfaces can be used as General Purpose Input/Outputs (GPIOs) if that function is not required. An internal interrupt controller is also a part of the 56F8165.

1.3 Award-Winning Development Environment

Processor Expert^{TM} (PE) provides a Rapid Application Design (RAD) tool that combines easy-to-use component-based software application creation with an expert knowledge system.

The CodeWarrior Integrated Development Environment is a sophisticated tool for code navigation, compiling, and debugging. A complete set of evaluation modules (EVMs) and development system cards will support concurrent engineering. Together, PE, CodeWarrior and EVMs create a complete, scalable tools solution for easy, fast, and efficient development.

1.4   Architecture Block Diagram

Note: *Features in italics are NOT available in the 56F8165 device and are shaded in the following figures.*

The 56F8365/56F8165 architecture is shown in **Figure 1-1** and **Figure 1-2**. **Figure 1-1** illustrates how the 56800E system buses communicate with internal memories and the IPBus Bridge. **Table 1-2** lists the internal buses in the 56800E architecture and provides a brief description of their function. **Figure 1-2** shows the peripherals and control blocks connected to the IPBus Bridge. The figures do not show the on-board regulator and power and ground signals. They also do not show the multiplexing between peripherals or the dedicated GPIOs. Please see **Part 2, Signal/Connection Descriptions,** to see which signals are multiplexed with those of other peripherals.

Also shown in **Figure 1-2** are connections between the PWM, Timer C and ADC blocks. These connections allow the PWM and/or Timer C to control the timing of the start of ADC conversions. The Timer C channel indicated can generate periodic start (SYNC) signals to the ADC to start its conversions. In another operating mode, the PWM load interrupt (SYNC output) signal is routed internally to the Timer C input channel as indicated. The timer can then be used to introduce a controllable delay before generating its output signal. The timer output then triggers the ADC. To fully understand this interaction, please see the **56F8300 Peripheral User Manual** for clarification on the operation of all three of these peripherals.
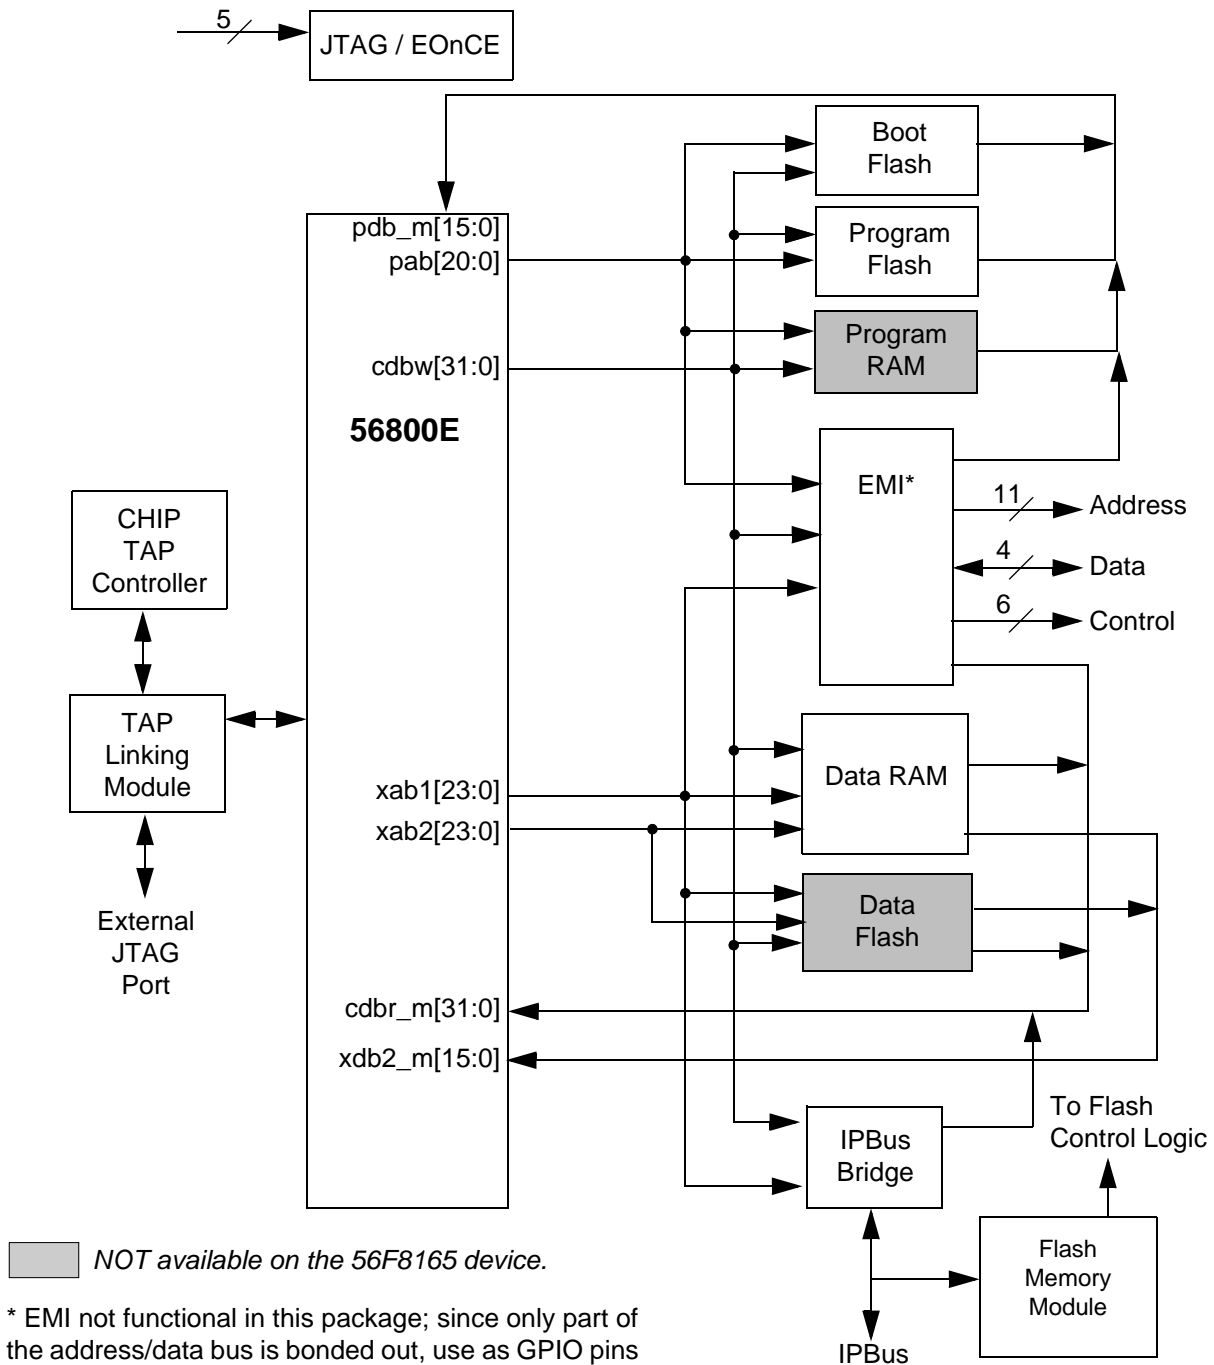
Figure 1-1 System Bus Interfaces

Note: Flash memories are encapsulated within the Flash Memory (FM) Module. Flash control is accomplished by the I/O to the FM over the peripheral bus, while reads and writes are completed between the core and the Flash memories.

Note: The primary data RAM port is 32 bits wide. Other data ports are 16 bits.

To/From IPBus Bridge
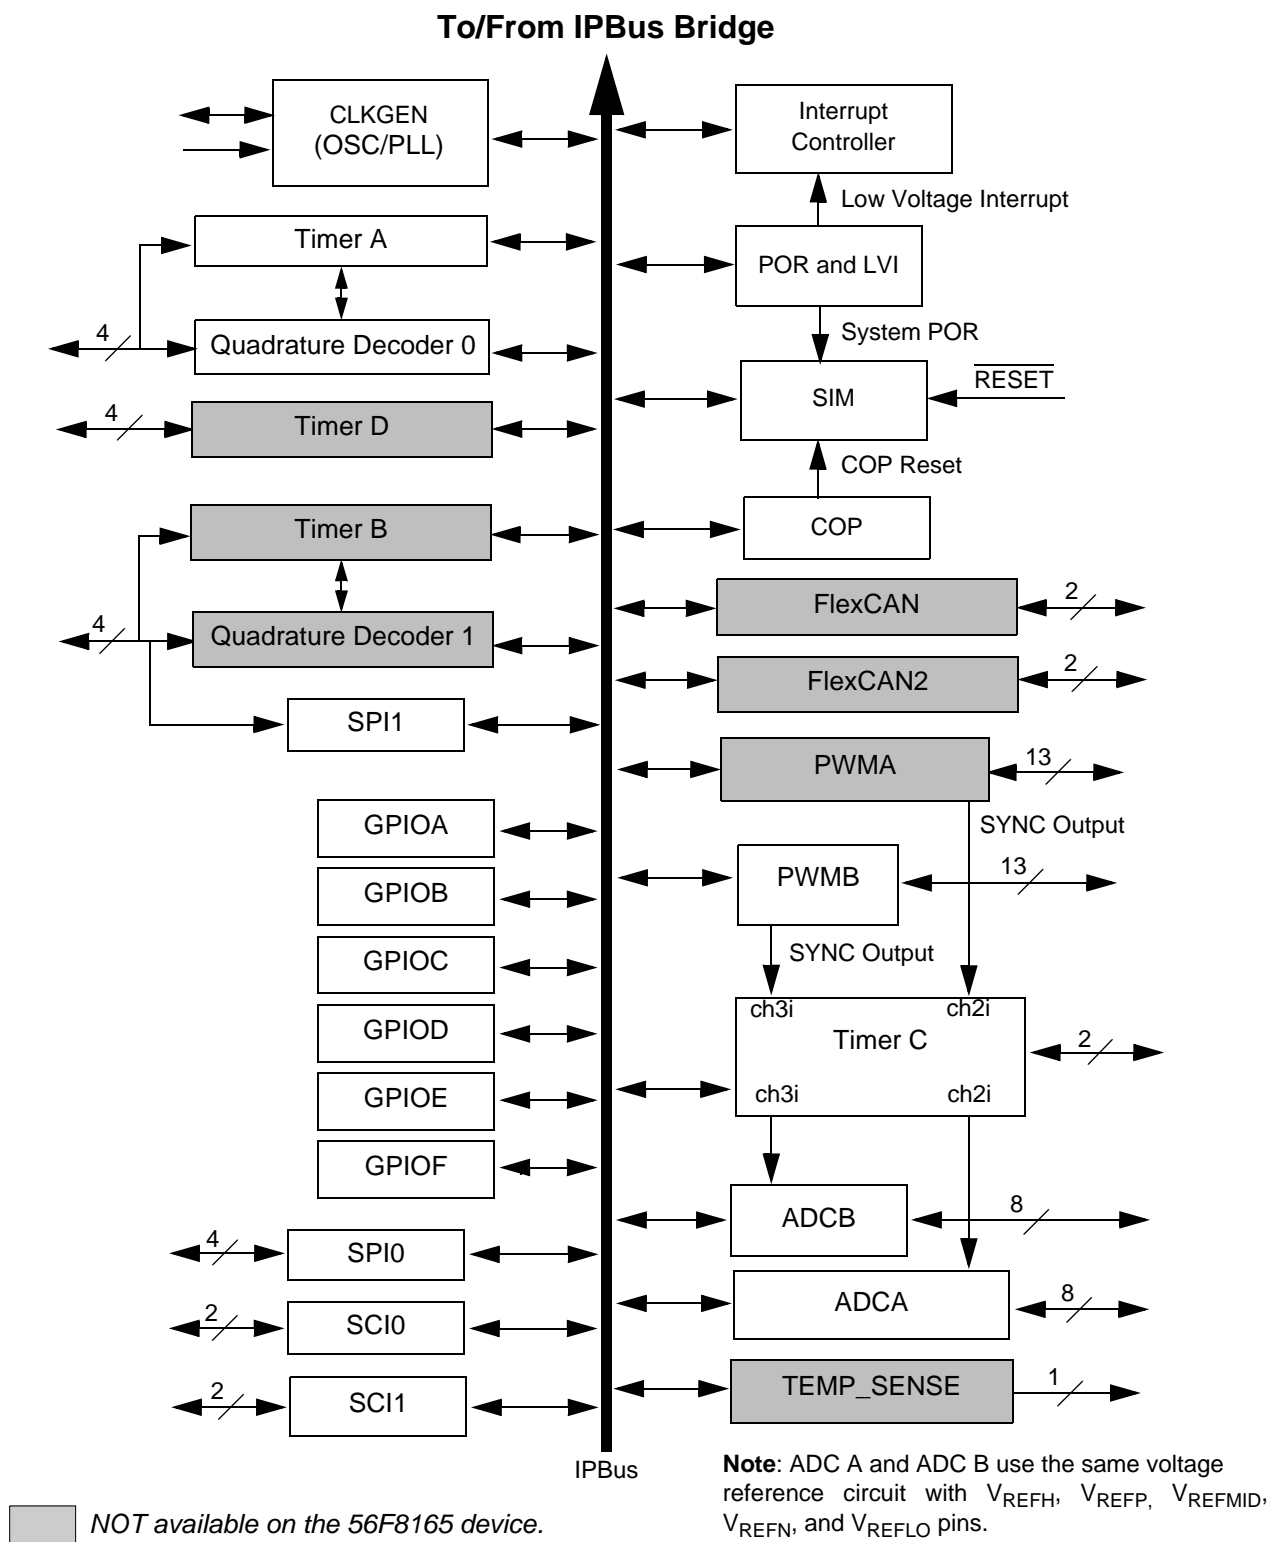
Figure 1-2 Peripheral Subsystem

Table 1-2 Bus Signal Names

Name	Function
Program Memory Interface	
pdb_m[15:0]	Program data bus for instruction word fetches or read operations.
cdbw[15:0]	Primary core data bus used for program memory writes. (Only these 16 bits of the cdbw[31:0] bus are used for writes to program memory.)
pab[20:0]	Program memory address bus. Data is returned on pdb_m bus.
Primary Data Memory Interface Bus	
cdbr_m[31:0]	Primary core data bus for memory reads. Addressed via xab1 bus.
cdbw[31:0]	Primary core data bus for memory writes. Addressed via xab1 bus.
xab1[23:0]	Primary data address bus. Capable of addressing bytes[1], words, and long data types. Data is written on cdbw and returned on cdbr_m. Also used to access memory-mapped I/O.
Secondary Data Memory Interface	
xdb2_m[15:0]	Secondary data bus used for secondary data address bus xab2 in the dual memory reads.
xab2[23:0]	Secondary data address bus used for the second of two simultaneous accesses. Capable of addressing only words. Data is returned on xdb2_m.
Peripheral Interface Bus	
IPBus [15:0]	Peripheral bus accesses all on-chip peripherals registers. This bus operates at the same clock rate as the Primary Data Memory and therefore generates no delays when accessing the processor. Write data is obtained from cdbw. Read data is provided to cdbr_m.

1. Byte accesses can only occur in the bottom half of the memory address space. The MSB of the address will be forced to 0.

56F8365 Technical Data, Rev. 6.0

1.5 Product Documentation

The documents listed in **Table 1-3** are required for a complete description and proper design with the 56F8365/56F8165 devices.. Documentation is available from local Freescale distributors, Freescale semiconductor sales offices, Freescale Literature Distribution Centers, or online at **http://www.freescale.com**.

Table 1-3 Chip Documentation

Topic	Description	Order Number
DSP56800E Reference Manual	Detailed description of the 56800E family architecture, 16-bit controller core processor, and the instruction set	DSP56800EERM
56F8300 Peripheral User Manual	Detailed description of peripherals of the 56F8300 family of devices	MC56F8300UM
56F8300 SCI/CAN Bootloader User Manual	Detailed description of the SCI/CAN Bootloaders 56F8300 family of devices	MC56F83xxBLUM
56F8365/56F8165 Technical Data Sheet	Electrical and timing specifications, pin descriptions, device specific peripheral information and package descriptions (this document)	MC56F8365
Errata	Details any chip issues that might be present	MC56F8365E MC56F8165E

1.6 Data Sheet Conventions

This data sheet uses the following conventions:

OVERBAR — This is used to indicate a signal that is active when pulled low. For example, the $\overline{\text{RESET}}$ pin is active when low.

"asserted" — A high true (active high) signal is high or a low true (active low) signal is low.

"deasserted" — A high true (active high) signal is low or a low true (active low) signal is high.

Examples:	Signal/Symbol	Logic State	Signal State	Voltage[1]
	$\overline{\text{PIN}}$	True	Asserted	V_{IL}/V_{OL}
	$\overline{\text{PIN}}$	False	Deasserted	V_{IH}/V_{OH}
	PIN	True	Asserted	V_{IH}/V_{OH}
	PIN	False	Deasserted	V_{IL}/V_{OL}

1. Values for V_{IL}, V_{OL}, V_{IH}, and V_{OH} are defined by individual product specifications.

56F8365 Technical Data, Rev. 6.0

Part 2 Signal/Connection Descriptions

2.1   Introduction

The input and output signals of the 56F8365 and 56F8165 are organized into functional groups, as detailed in **Table 2-1** and as illustrated in **Figure 2-1**. In **Table 2-2**, each table row describes the signal or signals present on a pin.

Table 2-1 Functional Group Pin Allocations

Functional Group	Number of Pins in Package	
	56F8365	56F8165
Power (V_{DD} or V_{DDA})	9	9
Power Option Control	1	1
Ground (V_{SS} or V_{SSA})	6	6
Supply Capacitors[1] & V_{PP}	6	6
PLL and Clock	4	4
Bus Control	6	6
Interrupt and Program Control	4	4
Pulse Width Modulator (PWM) Ports	26	13
Serial Peripheral Interface (SPI) Port 0	4	4
Serial Peripheral Interface (SPI) Port 1	—	4
Quadrature Decoder Port 0[2]	4	4
Quadrature Decoder Port 1[3]	4	—
Serial Communications Interface (SCI) Ports	4	4
CAN Ports	2	—
Analog-to-Digital Converter (ADC) Ports	21	21
Timer Module Ports	6	4
JTAG/Enhanced On-Chip Emulation (EOnCE)	5	5
Temperature Sense	1	—
Dedicated GPIO (Address Bus = 11; Data Bus = 4[4])	28	28

1. If the on-chip regulator is disabled, the V_{CAP} pins serve as 2.5V V_{DD_CORE} power inputs

2. Alternately, can function as Quad Timer pins or GPIO

3. Pins in this section can function as Quad Timer, SPI 1, orGPIO

4. EMI not functional in these packages; use as GPIO pins.

Note: See **Table 1-1** for 56F8165 functional differences.

56F8365 Technical Data, Rev. 6.0

Power
Power
Power
Ground
Ground

V_{DD_IO} 7
$V_{DDA\_OSC\_PLL}$ 1
V_{DDA_ADC} 1
V_{SS} 5
V_{SSA_ADC} 1

56F8365

OCR_DIS   1

Other
Supply
Ports

$V_{CAP}1 - V_{CAP}4$ 4
$V_{PP}1$ & $V_{PP}2$ 2

PLL
and
Clock

CLKMODE   1
EXTAL   1
XTAL   1
CLKO   1

*External
Address
Bus
or GPIO

A8 - A13 (GPIOA0 - 5)   6
GPIOB0-4 (A16 - 20)   5

*External
Data Bus

D7 - D10 (GPIOF0 - 3)   4

*External
Bus
Control

GPIOD0 ($\overline{CS2}$, CAN2_TX)   1
GPIOD1 ($\overline{CS3}$, CAN2_RX)   1
GPIOD2 - 5 ($\overline{CS4}$ - $\overline{7}$)   4

SCI0 or
GPIOE

TXD0 (GPIOE0)   1
RXD0 (GPIOE1)   1

SCI1 or
GPIO

TXD1 (GPIOD6)   1
RXD1 (GPIOD7)   1

JTAG/
EOnCE
Port

TCK   1
TMS   1
TDI   1
TDO   1
$\overline{TRST}$ 1

1   PHASEA0 (TA0, GPIOC4)
1   PHASEB0(TA1, GPIOC5)
1   INDEX0 (TA2, GPIOC6)
1   HOME0 (TA3, GPIOC7)

Quadrature
Decoder 0
or Quad
Timer A or
GPIO

1   SCLK0 (GPIOE4)
1   MOSI0 (GPIOE5)
1   MISO0 (GPIOE6)
1    $\overline{SS0}$ (GPIOE7)

SPI0 or
GPIO

1   PHASEA1 (TB0, SCLK1, GPIOC0)
1   PHASEB1 (TB1, MOSI1, GPIOC1)
1   INDEX1 (TB2, MISO1, GPIOC2)
1   HOME1 (TB3, $\overline{SS1}$, GPIOC3)

Quadrature
Decoder 1 or
Quad Timer B
or SPI1 or
GPIO

6   PWMA0 - 5
3   ISA0 - 2 (GPIOC8 - 10)
4   FAULTA0 - 3

PWMA

6   PWMB0 - 5
3   ISB0 - 2 (GPIOD10 - 12)
4   FAULTB0 - 3

PWMB

8   ANA0 - 7
5   V_{REF}

ADCA

8   ANB0 - 7

ADCB

1   TEMP_SENSE

Temperature
Sensor

1   CAN_RX
1   CAN_TX

CAN

2   TC0 - 1 (GPIOE8 - 9)
4   TD0 - 3 (GPIOE10 - 13)

Quad
Timer C
and D or
GPIO

1    $\overline{IRQA}$
1    $\overline{IRQB}$
1    $\overline{RESET}$
1    $\overline{RSTO}$

Interrupt/
Program
Control

* **EMI** not functional in this package; use as GPIO pins

Figure 2-1 56F8365 Signals Identified by Functional Group[1] (128-Pin LQFP)

1. Alternate pin functionality is shown in parenthesis; pin direction/type shown is the default functionality.

Figure 2-2 56F8165 Signals Identified by Functional Group[1] (128-Pin LQFP)

1. Alternate pin functionality is shown in parenthesis; pin direction/type shown is the default functionality.

2.2 Signal Pins

After reset, each pin is configured for its primary function (listed first). Any alternate functionality must be programmed.

EMI is not functional in this package; since only part of the address/data bus is bonded out, use as GPIO pins.

Note: *Signals in italics are NOT available in the 56F8165 device.*

If the "State During Reset" lists more than one state for a pin, the first state is the actual reset state. Other states show the reset condition of the alternate function, which you get if the alternate pin function is selected without changing the configuration of the alternate peripheral. For example, the A8/GPIOA0 pin shows that it is tri-stated during reset. If the GPIOA_PER is changed to select the GPIO function of the pin, it will become an input if no other registers are changed.

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
V_{DD_IO}	4	Supply		**I/O Power** — This pin supplies 3.3V power to the chip I/O interface and also the Processor core throught the on-chip voltage regulator, if it is enabled.
V_{DD_IO}	14			
V_{DD_IO}	25			
V_{DD_IO}	36			
V_{DD_IO}	62			
V_{DD_IO}	76			
V_{DD_IO}	112			
V_{DDA_ADC}	94	Supply		**ADC Power** — This pin supplies 3.3V power to the ADC modules. It must be connected to a clean analog power supply.
$V_{DDA\_OSC\_PLL}$	72	Supply		**Oscillator** and **PLL Power** — This pin supplies 3.3V power to the OSC and to the internal regulator that in turn supplies the Phase Locked Loop. It must be connected to a clean analog power supply.
V_{SS}	3	Supply		**Ground** — These pins provide ground for chip logic and I/O drivers.
V_{SS}	21			
V_{SS}	35			
V_{SS}	59			
V_{SS}	65			

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
V_{SSA_ADC}	95	Supply		**ADC Analog Ground** — This pin supplies an analog ground to the ADC modules.
OCR_DIS	71	Input	Input	**On-Chip Regulator Disable** — Tie this pin to V_{SS} to enable the on-chip regulator Tie this pin to V_{DD} to disable the on-chip regulator **This pin is intended to be a static DC signal from power-up to shut down. Do not try to toggle this pin for power savings during operation.**
$V_{CAP}1$	49	Supply	Supply	$V_{CAP}1 - 4$ — When OCR_DIS is tied to V_{SS} (regulator enabled), connect each pin to a 2.2µF or greater bypass capacitor in order to bypass the core logic voltage regulator, required for proper chip operation. When OCR_DIS is tied to V_{DD} (regulator disabled), these pins become V_{DD_CORE} and should be connected to a regulated 2.5V power supply. **Note: This bypass is required even if the chip is powered with an external supply.**
$V_{CAP}2$	122			
$V_{CAP}3$	75			
$V_{CAP}4$	13			
$V_{PP}1$	119	Input	Input	$V_{PP}1 - 2$ — These pins should be left unconnected as an open circuit for normal functionality.
$V_{PP}2$	5			
CLKMODE	79	Input	Input	**Clock Input Mode Selection** — This input determines the function of the XTAL and EXTAL pins. 1 = External clock input on XTAL is used to directly drive the input clock of the chip. The EXTAL pin should be grounded. 0 = A crystal or ceramic resonator should be connected between XTAL and EXTAL.
EXTAL	74	Input	Input	**External Crystal Oscillator Input** — This input can be connected to an 8MHz external crystal. Tie this pin low if XTAL is driven by an external clock source.
XTAL	73	Input/ Output	Chip-driven	**Crystal Oscillator Output** — This output connects the internal crystal oscillator output to an external crystal. If an external clock is used, XTAL must be used as the input and EXTAL connected to GND. The input clock can be selected to provide the clock directly to the core. This input clock can also be selected as the input clock for the on-chip PLL.

56F8365 Technical Data, Rev. 6.0

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
CLKO	6	Output	In reset, output is disabled	**Clock Output** — This pin outputs a buffered clock signal. Using the SIM CLKO Select Register (SIM_CLKOSR), this pin can be programmed as any of the following: disabled, CLK_MSTR (system clock), IPBus clock, oscillator output, prescaler clock and postscaler clock. Other signals are also available for test purposes. See **Part 6.5.7** for details.
A8 (GPIOA0)	15	Output Schmitt Input/ Output	In reset, output is disabled, pull-up is enabled	**Address Bus** — A8 - A13 specify six of the address lines for external program or data memory accesses. Depending upon the state of the DRV bit in the EMI bus control register (BCR), A8 - A13 and EMI control signals are tri-stated when the external bus is inactive. **Port A GPIO** — These six GPIO pins can be individually programmed as input or output pins. After reset, these pins default to address bus functionality and <u>must</u> be programmed as GPIO. To deactivate the internal pull-up resistor, clear the appropriate GPIO bit in the GPIOA_PUR register. Example: GPIOA0, clear bit 0 in the GPIOA_PUR register. **Note:** Primary function is not available in this package configuration; GPIO function must be used instead.
A9 (GPIOA1)	16			
A10 (GPIOA2)	17			
A11 (GPIOA3)	18			
A12 (GPIOA4)	19			
A13 (GPIOA5)	20			
GPIOB0 (A16)	27	Schmitt Input/ Output Output	Input, pull-up enabled	**Port B GPIO** — These four GPIO pins can be individually programmed as an input or output pin. **Address Bus** — A16 - A19 specify four of the address lines for external program or data memory accesses. Depending upon the state of the DRV bit in the EMI bus control register (BCR), A16 - A19 and EMI control signals are tri-stated when the external bus is inactive. After reset, the default state is GPIO. To deactivate the internal pull-up resistor, clear bit 0 in the GPIOB_PUR register. Example: GPIOB1, clear bit 1 in the GPIOB_PUR register.
GPIOB1 (A17)	28			
GPIOB2 (A18)	29			
GPIOB3 (A19)	30			

56F8365 Technical Data, Rev. 6.0

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
GPIOB4	31	Schmitt Input/ Output	Input, pull-up enabled	**Port B GPIO** — This GPIO pin can be individually programmed as an input or output pin.
(A20)		Output		**Address Bus** — A20 specifies one of the address lines for external program or data memory accesses. Depending upon the state of the DRV bit in the EMI bus control register (BCR), A20 and EMI control signals are tri-stated when the external bus is inactive.
(prescaler_ clock)		Output		**Clock Output** — can be used to monitor the prescaler_clock on GPIOB4. After reset, the default state is GPIO. This pin can also be used to view the prescaler_clock. In these cases, the GPIOB_PER can be used to disable the GPIO. The CLKOSR register in the SIM can then be used to choose between address and clock functions; see **Part 6.5.7** for details To deactivate the internal pull-up resistor, clear bit 4 in the GPIOB_PUR register.
D7	22	Input/ Output	In reset, output is disabled, pull-up is enabled	**Data Bus** — D7 - D10 specify part of the data for external program or data memory accesses. Depending upon the state of the DRV bit in the SEMI bus control register (BCR), D7 - D10 are tri-stated when the external bus is inactive
(GPIOF0)		Input/ Output		**Port F GPIO** — These four GPIO pins can be individually programmed as input or output pins. After reset, these pins default to Data Bus functionality and should be programmed as GPIO.
D8 (GPIOF1)	23			
D9 (GPIOF2)	24			To deactivate the internal pull-up resistor, clear the appropriate GPIO bit in the GPIOF_PUR register. Example: GPIOF0, clear bit 0 in the GPIOF_PUR register.
D10 (GPIOF3)	26			**Note:** Primary function is not available in this package configuration; GPIO function must be used instead.

56F8365 Technical Data, Rev. 6.0

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
GPIOD0 **(CS2)** **(*CAN2_TX*)**	42	Input/ Output Output Open Drain Output	Input, pull-up enabled	**Port D GPIO** — This GPIO pin can be individually programmed as an input or output pin. **Chip Select** — CS2 may be programmed within the EMI module to act as a chip select for specific areas of the external memory map. Depending upon the state of the DRV bit in the EMI Bus Control Register (BCR),CS2 is tri-stated when the external bus is inactive. **FlexCAN2 Transmit Data** — CAN output. At reset, this pin is configured as GPIO. This configuration can be changed by setting bit 0 in the GPIO_D_PER register, then change bit 4 in the SIM_GPS register to select the desired peripheral function. To deactivate the internal pull-up resistor, clear bit 0 in the GPIOD_PUR register.
GPIOD1 **(CS3)** **(*CAN2_RX*)**	43	Schmitt Input/ Output Output Schmitt Input	Input, pull-up enabled	**Port D GPIO** — This GPIO pin can be individually programmed as an input or output pin. **Chip Select** — CS3 may be programmed within the EMI module to act as a chip select for specific areas of the external memory map. Depending upon the state of the DRV bit in the EMI Bus Control Register (BCR), CS3 is tri-stated when the external bus is inactive. **FlexCAN2 Receive Data** — This is the CAN input. This pin has an internal pull-up resistor. At reset, this pin is configured as GPIO. This configuration can be changed by setting bit 1 in the GPIO_D_PER register, then change bit 5 in the SIM_GPS register to select the desired peripheral function. To deactivate the internal pull-up resistor, clear bit 1 in the GPIOD_PUR register.

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
GPIOD2 (CS4)	44	Input/ Output Output	Input, pull-up enabled Output	**Port D GPIO** — These four GPIO pins can be individually programmed as input or output pins. **Chip Select** — $\overline{CS4}$ - $\overline{CS7}$ may be programmed within the EMI module to act as chip selects for specific areas of the external memory map. Depending upon the state of the DRV bit in the EMI bus control register (BCR), $\overline{CS4}$ - $\overline{CS7}$ are tri-stated when the external bus is inactive After reset, these pins are configured as GPIO. To deactivate the internal pull-up resistor, clear the appropriate GPIO bit in the GPIOD_PUR register. Example: GPIOD2, clear bit 2 in the GPIOD_PUR register.
GPIOD3 (CS5)	45			
GPIOD4 (CS6)	46			
GPIOD5 (CS7)	47			
TXD0 (GPIOE0)	7	Output Input/ Output	In reset, output is disabled, pull-up is enabled	**Transmit Data** — SCI0 transmit data output **Port E GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is SCI output. To deactivate the internal pull-up resistor, clear bit 0 in the GPIOE_PUR register.
RXD0 (GPIOE1)	8	Input Input/ Output	Input, pull-up enabled	**Receive Data** — SCI0 receive data input **Port E GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is SCI output. To deactivate the internal pull-up resistor, clear bit 1 in the GPIOE_PUR register.
TXD1 (GPIOD6)	40	Output Input/ Output	In reset, output is disabled, pull-up is enabled	**Transmit Data** — SCI1 transmit data output **Port D GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is SCI output. To deactivate the internal pull-up resistor, clear bit 6 in the GPIOD_PUR register.

56F8365 Technical Data, Rev. 6.0

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
RXD1 (GPIOD7)	41	Input Input/ Output	Input, pull-up enabled	**Receive Data** — SCI1 receive data input **Port D GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is SCI input. To deactivate the internal pull-up resistor, clear bit 7 in the GPIOD_PUR register.
TCK	115	Schmitt Input	Input, pulled low internally	**Test Clock Input** — This input pin provides a gated clock to synchronize the test logic and shift serial data to the JTAG/EOnCE port. The pin is connected internally to a pull-down resistor.
TMS	116	Schmitt Input	Input, pulled high internally	**Test Mode Select Input** — This input pin is used to sequence the JTAG TAP controller's state machine. It is sampled on the rising edge of TCK and has an on-chip pull-up resistor. To deactivate the internal pull-up resistor, set the JTAG bit in the SIM_PUDR register.
TDI	117	Schmitt Input	Input, pulled high internally	**Test Data Input** — This input pin provides a serial input data stream to the JTAG/EOnCE port. It is sampled on the rising edge of TCK and has an on-chip pull-up resistor. To deactivate the internal pull-up resistor, set the JTAG bit in the SIM_PUDR register.
TDO	118	Output	In reset, output is disabled, pull-up is enabled	**Test Data Output** — This tri-stateable output pin provides a serial output data stream from the JTAG/EOnCE port. It is driven in the shift-IR and shift-DR controller states, and changes on the falling edge of TCK.
$\overline{\text{TRST}}$	114	Schmitt Input	Input, pulled high internally	**Test Reset** — As an input, a low signal on this pin provides a reset signal to the JTAG TAP controller. To ensure complete hardware reset, TRST should be asserted whenever RESET is asserted. The only exception occurs in a debugging environment when a hardware device reset is required and the JTAG/EOnCE module must not be reset. In this case, assert $\overline{\text{RESET}}$, but do not assert $\overline{\text{TRST}}$. To deactivate the internal pull-up resistor, set the JTAG bit in the SIM_PUDR register.

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
PHASEA0 **(TA0)** **(GPIOC4)**	127	Schmitt Input Schmitt Input/ Output Schmitt Input/ Output	Input, pull-up enabled	**Phase A** — Quadrature Decoder 0, PHASEA input **TA0** — Timer A, Channel 0 **Port C GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is PHASEA0. To deactivate the internal pull-up resistor, clear bit 4 of the GPIOC_PUR register.
PHASEB0 **(TA1)** **(GPIOC5)**	128	Schmitt Input Schmitt Input/ Output Schmitt Input/ Output	Input, pull-up enabled	**Phase B** — Quadrature Decoder 0, PHASEB input **TA1** — Timer A, Channel 1 **Port C GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is PHASEB0. To deactivate the internal pull-up resistor, clear bit 5 of the GPIOC_PUR register.
INDEX0 **(TA2)** **(GPIOC6)**	1	Schmitt Input Schmitt Input/ Output Schmitt Input/ Output	Input, pull-up enabled	**Index** — Quadrature Decoder 0, INDEX input **TA2** — Timer A, Channel 2 **Port C GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is INDEX0. To deactivate the internal pull-up resistor, clear bit 6 of the GPIOC_PUR register.

56F8365 Technical Data, Rev. 6.0

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
HOME0 **(TA3)** **(GPIOC7)**	2	Schmitt Input Schmitt Input/ Output Schmitt Input/ Output	Input, pull-up enabled	**Home** — Quadrature Decoder 0, HOME input **TA3** — Timer A, Channel 3 **Port C GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is HOME0. To deactivate the internal pull-up resistor, clear bit 7 of the GPIOC_PUR register.
SCLK0 **(GPIOE4)**	124	Schmitt Input/ Output Schmitt Input/ Output	Input, pull-up enabled	**SPI 0 Serial Clock** — In the master mode, this pin serves as an output, clocking slaved listeners. In slave mode, this pin serves as the data clock input. **Port E GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is SCLK0. To deactivate the internal pull-up resistor, clear bit 4 in the GPIOE_PUR register.
MOSI0 **(GPIOE5)**	126	Input/ Output Input/ Output	In reset, output is disabled, pull-up is enabled	**SPI 0 Master Out/Slave In** — This serial data pin is an output from a master device and an input to a slave device. The master device places data on the MOSI line a half-cycle before the clock edge the slave device uses to latch the data. **Port E GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is MOSI0. To deactivate the internal pull-up resistor, clear bit 5 in the GPIOE_PUR register.

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
MISO0 **(GPIOE6)**	125	Input/ Output Input/ Output	Input, pull-up enabled	**SPI 0 Master In/Slave Out** — This serial data pin is an input to a master device and an output from a slave device. The MISO line of a slave device is placed in the high-impedance state if the slave device is not selected. The slave device places data on the MISO line a half-cycle before the clock edge the master device uses to latch the data. **Port E GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is MISO0. To deactivate the internal pull-up resistor, clear bit 6 in the GPIOE_PUR register.
$\overline{\text{SS0}}$ **(GPIOE7)**	123	Input Input/ Output	Input, pull-up enabled	**SPI 0 Slave Select** — $\overline{\text{SS0}}$ is used in slave mode to indicate to the SPI module that the current transfer is to be received. **Port E GPIO** — This GPIO pin can be individually programmed as an input or output pin. After reset, the default state is $\overline{\text{SS0}}$. To deactivate the internal pull-up resistor, clear bit 7 in the GPIOE_PUR register.
PHASEA1 (*TB0*) (SCLK1) (GPIOC0)	9	Schmitt Input Schmitt Input/ Output Schmitt Input/ Output Schmitt Input/ Output	Input, pull-up enabled	**Phase A1** — Quadrature Decoder 1, PHASEA input for decoder 1. **TB0** — Timer B, Channel 0 **SPI 1 Serial Clock** — In the master mode, this pin serves as an output, clocking slaved listeners. In slave mode, this pin serves as the data clock input. To activate the SPI function, set the PHSA_ALT bit in the SIM_GPS register. For details, see **Part 6.5.8**. **Port C GPIO** — This GPIO pin can be individually programmed as an input or output pin. In the 56F8365, the default state after reset is PHASEA1. In the 56F8165, the default state is not one of the functions offered and must be reconfigured. To deactivate the internal pull-up resistor, clear bit 0 in the GPIOC_PUR register.

56F8365 Technical Data, Rev. 6.0

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
PHASEB1	10	Schmitt Input	Input, pull-up enabled	**Phase B1** — Quadrature Decoder 1, PHASEB input for decoder 1.
(*TB1*)		Schmitt Input/ Output		**TB1** — Timer B, Channel 1
(MOSI1)		Schmitt Input/ Output		**SPI 1 Master Out/Slave In** — This serial data pin is an output from a master device and an input to a slave device. The master device places data on the MOSI line a half-cycle before the clock edge the slave device uses to latch the data. To activate the SPI function, set the PHSB_ALT bit in the SIM_GPS register. For details, see **Part 6.5.8**.
(GPIOC1)		Schmitt Input/ Output		**Port C GPIO** — This GPIO pin can be individually programmed as an input or output pin. In the 56F8365, the default state after reset is PHASEB1. In the 56F8165, the default state is not one of the functions offered and must be reconfigured. To deactivate the internal pull-up resistor, clear bit 1 in the GPIOC_PUR register.
INDEX1	11	Schmitt Input	Input, pull-up enabled	**Index1** — Quadrature Decoder 1, INDEX input
(*TB2*)		Schmitt Input/ Output		**TB2** — Timer B, Channel 2
(MISO1)		Schmitt Input/ Output		**SPI 1 Master In/Slave Out** — This serial data pin is an input to a master device and output from a slave device. The MISO line of a slave device is placed in the high-impedance state if the slave device is not selected. The slave device places data on the MISO line a half-cycle before the clock edge the master device uses to latch the data. To activate the SPI function, set the INDEX_ALT bit in the SIM_GPS register. See **Part 6.5.8** for details.
(GPIOC2)		Schmitt Input/ Output		**Port C GPIO** — This GPIO pin can be individually programmed as an input or output pin. In the 56F8365, the default state after reset is INDEX1. In the 56F8165, the default state is not one of the functions offered and must be reconfigured. To deactivate the internal pull-up resistor, clear bit 2 in the GPIOC_PUR register.

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
HOME1	12	Schmitt Input	Input, pull-up enabled	**Home** — Quadrature Decoder 1, HOME input
(*TB3*)		Schmitt Input/ Output		**TB3** — Timer B, Channel 3
($\overline{SS1}$)		Schmitt Input		**SPI 1 Slave Select** — In the master mode, this pin is used to arbitrate multiple masters. In slave mode, this pin is used to select the slave. To activate the SPI function, set the HOME_ALT bit in the SIM_GPS register. See **Part 6.5.8** for details.
(GPIOC3)		Schmitt Input/ Output		**Port C GPIO** — This GPIO pin can be individually programmed as input or output pin.

In the 56F8365, the default state after reset is HOME1.

In the 56F8165, the default state is not one of the functions offered and must be reconfigured.

To deactivate the internal pull-up resistor, clear bit 3 in the GPIOC_PUR register. |
PWMA0	58	Output	In reset, output is disabled, pull-up is enabled	**PWMA0 - 5** — These are six PWMA output pins.
PWMA1	60			
PWMA2	61			
PWMA3	63			
PWMA4	64			
PWMA5	66			
ISA0	104	Schmitt Input	Input, pull-up enabled	**ISA0 - 2** — These three input current status pins are used for top/bottom pulse width correction in complementary channel operation for PWMA.
(GPIOC8)		Schmitt Input/ Output		**Port C GPIO** — These GPIO pins can be individually programmed as input or output pins.

In the 56F8365, these pins default to ISA functionality.

In the 56F8165, the default state is not one of the functions offered and must be reconfigured.

To deactivate the internal pull-up resistor, clear the appropriate bit of the GPIOC_PUR register. See **Part 6.5.6** for details. |
| *ISA1* (GPIOC9) | 105 | | | |
| *ISA2* (GPIOC10) | 106 | | | |

56F8365 Technical Data, Rev. 6.0

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
FAULTA0	67	Schmitt Input	Input, pull-up enabled	**FAULTA0 - 2** — These three fault input pins are used for disabling selected PWMA outputs in cases where fault conditions originate off-chip. To deactivate the internal pull-up resistor, set the PWMA0 bit in the SIM_PUDR register. See **Part 6.5.6** for details.
FAULTA1	68			
FAULTA2	69			
FAULTA3	70	Schmitt Input	Input, pull-up enabled	**FAULTA3** — This fault input pin is used for disabling selected PWMA outputs in cases where fault conditions originate off-chip. To deactivate the internal pull-up resistor, set the PWMA1 bit in the SIM_PUDR register. See **Part 6.5.6** for details.
PWMB0	32	Output	In reset, output is disabled, pull-up is enabled	**PWMB0 - 5** — Six PWMB output pins.
PWMB1	33			
PWMB2	34			
PWMB3	37			
PWMB4	38			
PWMB5	39			
ISB0 **(GPIOD10)**	48	Schmitt Input Schmitt Input/ Output	Input, pull-up enabled	**ISB0 - 2** — These three input current status pins are used for top/bottom pulse width correction in complementary channel operation for PWMB. **Port D GPIO** — These GPIO pins can be individually programmed as input or output pins. At reset, these pins default to ISA functionality. Deactivate pull-up by setting the approroate bit of the GPIOD_PUR register. See **Part 6.5.6** for details.
ISB1 (GPIOD11)	50			
ISB2 (GPIOD12)	51			
FAULTB0	54	Schmitt Input	Input, pull-up enabled	**FAULTB0 - 3** — These four fault input pins are used for disabling selected PWMB outputs in cases where fault conditions originate off-chip. To deactivate the internal pull-up resistor, set the PWMB bit in the SIM_PUDR register. See **Part 6.5.6** for details.
FAULTB1	55			
FAULTB2	56			
FAULTB3	57			
ANA0	80	Input	Analog Input	**ANA0 - 3** — Analog inputs to ADC A, channel 0
ANA1	81			
ANA2	82			
ANA3	83			

56F8365 Technical Data, Rev. 6.0

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
ANA4	84	Input	Analog Input	**ANA4 - 7** — Analog inputs to ADC A, channel 1
ANA5	85			
ANA6	86			
ANA7	87			
V$_{REFH}$	93	Input	Analog Input	**V$_{REFH}$** — Analog Reference Voltage High. V$_{REFH}$ must be less than or equal to V$_{DDA\_ADC}$.
V$_{REFP}$	92	Input/ Output	Analog Input/ Output	**V$_{REFP}$, V$_{REFMID}$ & V$_{REFN}$** — Internal pins for voltage reference which are brought off-chip so that they can be bypassed. Connect to a 0.1 μF low ESR capacitor.
V$_{REFMID}$	91			
V$_{REFN}$	90			
V$_{REFLO}$	89	Input	Analog Input	**V$_{REFLO}$** — Analog Reference Voltage Low. This should normally be connected to a low-noise V$_{SSA}$.
ANB0	96	Input	Analog Input	**ANB0 - 3** — Analog inputs to ADC B, channel 0
ANB1	97			
ANB2	98			
ANB3	99			
ANB4	100	Input	Analog Input	**ANB4 - 7** — Analog inputs to ADC B, channel 1
ANB5	101			
ANB6	102			
ANB7	103			
TEMP_ SENSE	88	Output	Analog Output	**Temp Sense Diode** — This signal connects to an on-chip diode that can be connected to one of the ADC inputs and is used to monitor the temperature of the die. Must be bypassed with a 0.01 μF capacitor.
CAN_RX	121	Schmitt Input	Input, pull-up enabled	**FlexCAN Receive Data** — This is the CAN input. This pin has an internal pull-up resistor. To deactivate the internal pull-up resistor, set the CAN bit in the SIM_PUDR register.

56F8365 Technical Data, Rev. 6.0

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
CAN_TX	120	Open Drain Output	Open Drain Output	**FlexCAN Transmit Data** — CAN output with internal pull-up enable at reset.* * **Note**: If a pin is configured as open drain output mode, internal pull-up will automatically be disabled when it outputs low. Internal pull-up will be enabled unless it has been manually disabled by clearing the corresponding bit in the PUREN register of the GPIO module, when it outputs high. If a pin is configured as push-pull output mode, internal pull-up will automatically be disabled, whether it outputs low or high.
TC0 **(GPIOE8)**	111	Schmitt Input/ Output Schmitt Input/ Output	Input, pull-up enabled	**TC0 - 1** — Timer C, Channels 0 and 1 **Port E GPIO** — These GPIO pins can be individually programmed as input or output pins. At reset, these pins default to Timer functionality. To deactivate the internal pull-up resistor, clear the appropriate bit of the GPIOE_PUR register. See **Part 6.5.6** for details.
TC1 **(GPIOE9)**	113			
TD0 **(GPIOE10)**	107	Schmitt Input/ Output Schmitt Input/ Output	Input, pull-up enabled	**TD0 - TD3** — Timer D, Channels 0, 1, 2 and 3 **Port E GPIO** — These GPIO pins can be individually programmed as input or output pins. At reset, these pins default to Timer functionality. To deactivate the internal pull-up resistor, clear the appropriate bit of the GPIOE_PUR register. See **Part 6.5.6** for details.
TD1 **(GPIOE11)**	108			
TD2 **(GPIOE12)**	109			
TD3 **(GPIOE13)**	110			
$\overline{\text{IRQA}}$	52	Schmitt Input	Input, pull-up enabled	**External Interrupt Request A and B** — The $\overline{\text{IRQA}}$ and $\overline{\text{IRQB}}$ inputs are asynchronous external interrupt requests during Stop and Wait mode operation. During other operating modes, they are synchronized external interrupt requests, which indicate an external device is requesting service. They can be programmed to be level-sensitive or negative-edge triggered. To deactivate the internal pull-up resistor, set the IRQ bit in the SIM_PUDR register. See **Part 6.5.6** for details.
$\overline{\text{IRQB}}$	53			

Table 2-2 Signal and Package Information for the 128-Pin LQFP

Signal Name	Pin No.	Type	State During Reset	Signal Description
$\overline{\text{RESET}}$	78	Schmitt Input	Input, pull-up enabled	**Reset** — This input is a direct hardware reset on the processor. When $\overline{\text{RESET}}$ is asserted low, the device is initialized and placed in the reset state. A Schmitt trigger input is used for noise immunity. The internal reset signal will be deasserted synchronous with the internal clocks after a fixed number of internal clocks. To ensure complete hardware reset, $\overline{\text{RESET}}$ and $\overline{\text{TRST}}$ should be asserted together. The only exception occurs in a debugging environment when a hardware device reset is required and the JTAG/EOnCE module must not be reset. In this case, assert $\overline{\text{RESET}}$, but do not assert $\overline{\text{TRST}}$. **Note:** The internal Power-On Reset will assert on initial power-up. To deactivate the internal pull-up resistor, set the $\overline{\text{RESET}}$ bit in the SIM_PUDR register. See **Part 6.5.6**. for details.
$\overline{\text{RSTO}}$	77	Output	Output	**Reset Output** — This output reflects the internal reset state of the chip.
EXTBOOT	Internal Ground	Schmitt Input	Input, pull-up enabled	**External Boot** —This input is tied to V_{DD} to force the device to boot from off-chip memory (assuming that the on-chip Flash memory is not in a secure state). Otherwise, it is tied to ground. For details, see **Table 4-4**. **Note:** When this pin is tied low, the customer boot software should disable the internal pull-up resistor by setting the XBOOT bit of the SIM_PUDR; see **Part 6.5.6**. *Note: This pin is internally tied low (to V_{SS}).*
EMI_MODE	Internal Ground	Schmitt Input	Input, pull-up enabled	**External Memory Mode** — This device will boot from internal Flash memory under normal operation. This function is also affected by EXTBOOT and the Flash security mode; see **Table 4-4** for details. **Note:** When this pin is tied low, the customer boot software should disable the internal pull-up resistor by setting the EMI_MODE bit of the SIM_PUDR; see **Part 6.5.6**. *Note: This pin is internally tied low (to V_{SS}).*

Part 3 On-Chip Clock Synthesis (OCCS)

3.1 Introduction

Refer to the OCCS chapter of the **56F8300 Peripheral User Manual** for a full description of the OCCS. The material contained here identifies the specific features of the OCCS design. **Figure 3-1** shows the specific OCCS block diagram to reference in the OCCS chapter of the **56F8300 Peripheral User Manual**.
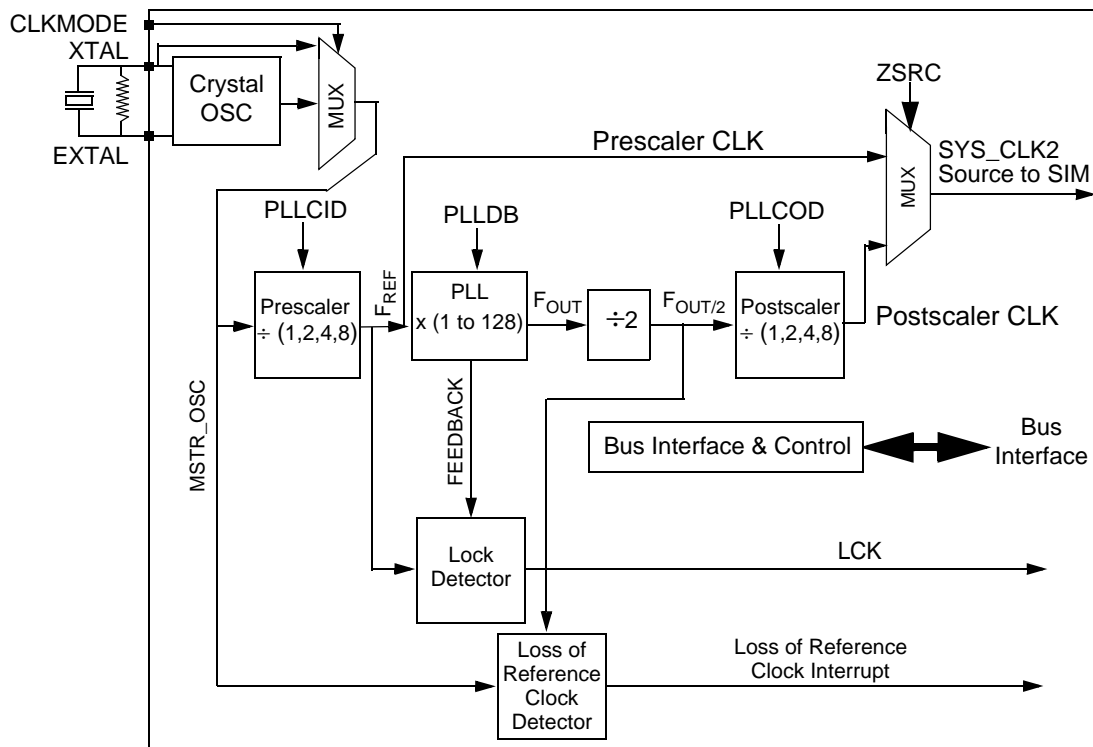
Figure 3-1 OCCS Block Diagram

3.2 External Clock Operation

The system clock can be derived from an external crystal, ceramic resonator, or an external system clock signal. To generate a reference frequency using the internal oscillator, a reference crystal or ceramic resonator must be connected between the EXTAL and XTAL pins.

3.2.1 Crystal Oscillator

The internal oscillator is designed to interface with a parallel-resonant crystal resonator in the frequency range specified for the external crystal in **Table 10-15**. A recommended crystal oscillator circuit is shown in **Figure 3-2**. Follow the crystal supplier's recommendations when selecting a crystal, since crystal parameters determine the component values required to provide maximum stability and reliable start-up.

The crystal and associated components should be mounted as near as possible to the EXTAL and XTAL pins to minimize output distortion and start-up stabilization time.

Crystal Frequency = 4 - 8MHz (optimized for 8MHz)

Sample External Crystal Parameters:
R_z = 750 KΩ

Note: If the operating temperature range is limited to below 85°C (105°C junction), then R_z = 10 Meg Ω
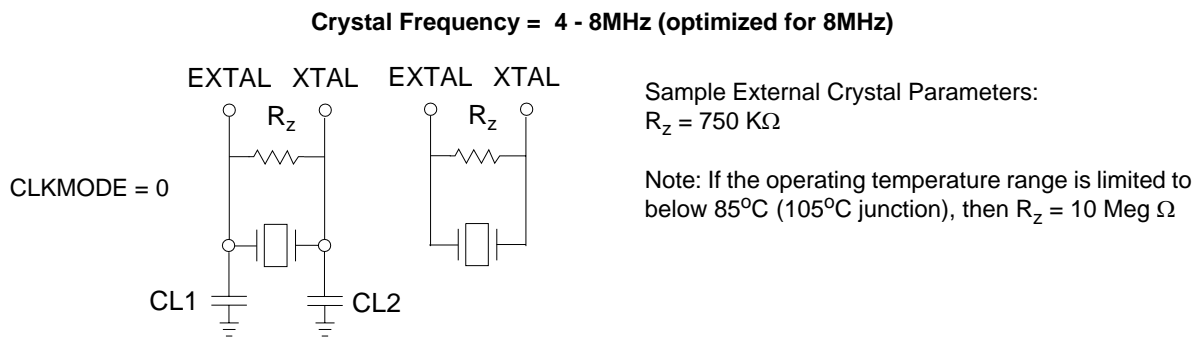
Figure 3-2 Connecting to a Crystal Oscillator

Note: The OCCS_COHL bit must be set to 1 when a crystal oscillator is used. The reset condition on the OCCS_COHL bit is 0. Please see the COHL bit in the Oscillator Control (OSCTL) register, discussed in the **56F8300 Peripheral User Manual**.

3.2.2 Ceramic Resonator (Default)

It is also possible to drive the internal oscillator with a ceramic resonator, assuming the overall system design can tolerate the reduced signal integrity. A typical ceramic resonator circuit is shown in **Figure 3-3**. Refer to the supplier's recommendations when selecting a ceramic resonator and associated components. The resonator and components should be mounted as near as possible to the EXTAL and XTAL pins.

Resonator Frequency = 4 - 8MHz (optimized for 8MHz)

Sample External Ceramic Resonator Parameters:
R_z = 750 KΩ
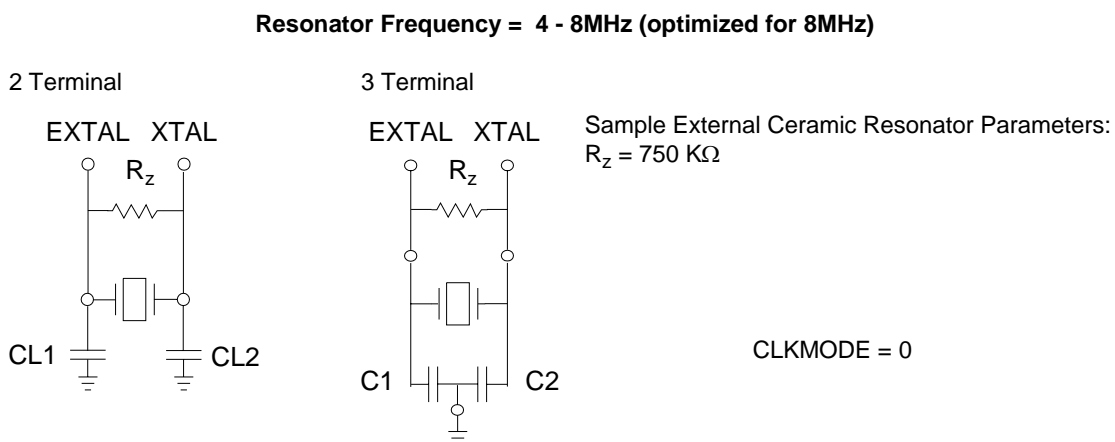
Figure 3-3 Connecting a Ceramic Resonator

Note: The OCCS_COHL bit must be set to 0 when a ceramic resonator is used. The reset condition on the OCCS_COHL bit is 0. Please see the COHL bit in the Oscillator Control (OSCTL) register, discussed in the **56F8300 Peripheral User Manual**.

56F8365 Technical Data, Rev. 6.0

3.2.3 External Clock Source

The recommended method of connecting an external clock is illustrated in **Figure 3-4**. The external clock source is connected to XTAL and the EXTAL pin is grounded. Set OCCS_COHL bit high when using an external clock source as well.
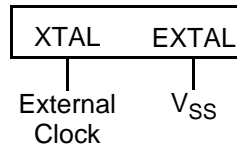
Note: When using an external clocking source with this configuration, the input "CLKMODE" should be high and the COHL bit in the OSCTL register should be set to 1.

Figure 3-4 Connecting an External Clock Signal Register

3.3 Registers

When referring to the register definitions for the OCCS in the **56F8300 Peripheral User Manual**, use the register definitions **without** the internal Relaxation Oscillator, since the 56F8365/56F8165 devices do NOT contain this oscillator.

Part 4 Memory Map

4.1 Introduction

The 56F8365 and 56F8165 devices are 16-bit motor-control chips based on the 56800E core. These parts use a Harvard-style architecture with two independent memory spaces for Data and Program. On-chip RAM and Flash memories are used in both spaces.

This section provides memory maps for:

- Program Address Space, including the Interrupt Vector Table
- Data Address Space, including the EOnCE Memory and Peripheral Memory Maps

On-chip memory sizes for each device are summarized in **Table 4-1.** Flash memories' restrictions are identified in the "Use Restrictions" column of **Table 4-1.**

Note: *Data Flash and Program RAM are NOT available on the 56F8165 device.*

Table 4-1 Chip Memory Configurations

On-Chip Memory	56F8365	56F8165	Use Restrictions
Program Flash	512KB	512KB	Erase/Program via Flash interface unit and word writes to CDBW
Data Flash	32KB	—	Erase/Program via Flash interface unit and word writes to CDBW. Data Flash can be read via either CDBR or XDB2, but not by both simultaneously
Program RAM	4KB	—	None
Data RAM	32KB	32KB	None
Program Boot Flash	32KB	32KB	Erase/Program via Flash Interface unit and word writes to CDBW

4.2 Program Map

The Program memory map is located in **Table 4-4.** The operating mode control bits (MA and MB) in the Operating Mode Register (OMR) control the Program memory map. At reset, these bits are set as indicated in **Table 4-2**.

EXT_BOOT = EMI_MODE = 0 and cannot be changed in the 56F8365 or 56F8165.

Note: *Program RAM is NOT available on the 56F8165 device.*

Table 4-2 OMR MB/MA Value at Reset[1]

OMR MB = Flash Secured State[2,3]	OMR MA = EXTBOOT Pin	Chip Operating Mode
0	0	Mode 0 – Internal Boot; EMI is configured to use 16 address lines; Flash Memory is secured; external P-space is not allowed; the EOnCE is disabled
0	1	Not valid; cannot boot externally if the Flash is secured and will actually configure to 00 state
1	0	Mode 0 – Internal Boot; EMI is configured to use 16 address lines
1	1	Mode 1 – External Boot; Flash Memory is not secured; EMI configuration is determined by the state of the EMI_MODE pin

1. Information in shaded areas not applicable to 56F8365/56F8165.

2. This bit is only configured at reset. If the Flash secured state changes, this will not be reflected in MB until the next reset.

3. Changing MB in software will not affect Flash memory security.

56F8365 Technical Data, Rev. 6.0

After reset, the OMR MA bit can be changed and will have an effect on the P-space memory map, as shown in **Table 4-3**. Changing the OMR MB bit will have no effect.

Table 4-3 Changing OMR MA Value During Normal Operation

OMR MA	Chip Operating Mode
0	Use internal P-space memory map configuration
1[1]	Use external P-space memory map configuration – If MB = 0 at reset, changing this bit has no effect.

1. Setting this bit can cause unpredictable results and is not recommended, since the EMI is not functional in this package.

Table 4-4 shows the memory map options of the 56F8365/56F8165. The two right columns cannot be used, since the EMI pins are not provided in the package; therefore, only the Mode 0 column is relevant.

Note: *Program RAM is NOT available on the 56F8165 device.*

Table 4-4 Program Memory Map at Reset

Begin/End Address	Mode 0 (MA = 0)	Mode 1[1] (MA = 1)	
	Internal Boot	**External Boot**	
	Internal Boot **16-Bit External Address Bus**	**EMI_MODE = 0**[2, 3] **16-Bit External Address Bus**	**EMI_MODE = 1**[4] **20-Bit External Address Bus**
P:$1F FFFF P:$10 0000	External Program Memory[5]	External Program Memory[6]	External Program Memory
P:$0F FFFF P:$05 0000			External Program Memory COP Reset Address = 04 0002 Boot Location = 04 0000
P:$04 FFFF P:$04 F800	*On-Chip Program RAM* *4KB*	*On-Chip Program RAM* *4KB*	
P:$04 F7FF P:$04 4000	Reserved 92KB		
P:$04 3FFF P:$04 0000	Boot Flash 32KB COP Reset Address = 04 0002 Boot Location = 04 0000	Boot Flash 32KB (Not Used for Boot in this Mode)	
P:$03 FFFF P:$02 0000	Internal Program Flash[7] 256KB	Internal Program Flash 256KB	
P:$01 FFFF P:$01 0000	Internal Program Flash[7] 256KB	Internal Program Flash 128KB	
P:$00 FFFF P:$00 0000		External Program Memory COP Reset Address = 00 0002 Boot Location = 00 0000	

1. Cannot be used since MA = EXTBOOT = 0 and the EMI is not available; information in shaded areas not applicable to 56F8365/56F8165.

2. This mode provides maximum compatibility with 56F80x parts while operating externally.

3. "EMI_MODE = 0", EMI_MODE pin is tied to ground at boot up.

56F8365 Technical Data, Rev. 6.0

Freescale Semiconductor
Preliminary

4. "EMI_MODE = 1", EMI_MODE pin is tied to V_{DD} at boot up.

5. Not accessible in reset configuration, since the address is above P:$00 FFFF. The higher bit address/GPIO (and/or chip selects) pins must be reconfigured before this external memory is accessible.

6. Not accessible in this part, since the EMI is not fully pinned out in this package; information in shaded areas not applicable to 56F8365/56F8165.

7. Two independent program flash blocks allow one to be programmed/erased while executing from another. Each block must have its own mass erase.

4.3 Interrupt Vector Table

Table 4-5 provides the reset and interrupt priority structure, including on-chip peripherals. The table is organized with higher-priority vectors at the top and lower-priority interrupts lower in the table. The priority of an interrupt can be assigned to different levels, as indicated, allowing some control over interrupt priorities. All level 3 interrupts will be serviced before level 2, and so on. For a selected priority level, the lowest vector number has the highest priority.

The location of the vector table is determined by the Vector Base Address (VBA) register. Please see **Part 5.6.11** for the reset value of the VBA.

In some configurations, the reset address and COP reset address will correspond to vector 0 and 1 of the interrupt vector table. In these instances, the first two locations in the vector table must contain branch or JMP instructions. All other entries must contain JSR instructions.

Note: *PWMA, FlexCAN, Quadrature Decoder 1, and Quad Timers B and D are NOT available on the 56F8165 device.*

Table 4-5 Interrupt Vector Table Contents[1]

Peripheral	Vector Number	Priority Level	Vector Base Address +	Interrupt Function
				Reserved for Reset Overlay[2]
				Reserved for COP Reset Overlay[2]
core	2	3	P:$04	Illegal Instruction
core	3	3	P:$06	SW Interrupt 3
core	4	3	P:$08	HW Stack Overflow
core	5	3	P:$0A	Misaligned Long Word Access
core	6	1-3	P:$0C	OnCE Step Counter
core	7	1-3	P:$0E	OnCE Breakpoint Unit 0
				Reserved
core	9	1-3	P:$12	OnCE Trace Buffer
core	10	1-3	P:$14	OnCE Transmit Register Empty
core	11	1-3	P:$16	OnCE Receive Register Full
				Reserved

56F8365 Technical Data, Rev. 6.0

Table 4-5 Interrupt Vector Table Contents[1] (Continued)

Peripheral	Vector Number	Priority Level	Vector Base Address +	Interrupt Function
core	14	2	P:$1C	SW Interrupt 2
core	15	1	P:$1E	SW Interrupt 1
core	16	0	P:$20	SW Interrupt 0
core	17	0-2	P:$22	IRQA
core	18	0-2	P:$24	IRQB
				Reserved
LVI	20	0-2	P:$28	Low-Voltage Detector (power sense)
PLL	21	0-2	P:$2A	PLL
FM	22	0-2	P:$2C	FM Access Error Interrupt
FM	23	0-2	P:$2E	FM Command Complete
FM	24	0-2	P:$30	FM Command, data and address Buffers Empty
				Reserved
FLEXCAN	26	0-2	P:$34	FLEXCAN Bus Off
FLEXCAN	27	0-2	P:$36	FLEXCAN Error
FLEXCAN	28	0-2	P:$38	FLEXCAN Wake Up
FLEXCAN	29	0-2	P:$3A	FLEXCAN Message Buffer Interrupt
GPIOF	30	0-2	P:$3C	GPIO F
GPIOE	31	0-2	P:$3E	GPIO E
GPIOD	32	0-2	P:$40	GPIO D
GPIOC	33	0-2	P:$42	GPIO C
GPIOB	34	0-2	P:$44	GPIO B
GPIOA	35	0-2	P:$46	GPIO A
				Reserved
SPI1	38	0-2	P:$4C	SPI 1 Receiver Full
SPI1	39	0-2	P:$4E	SPI 1 Transmitter Empty
SPI0	40	0-2	P:$50	SPI 0 Receiver Full
SPI0	41	0-2	P:$52	SPI 0 Transmitter Empty
SCI1	42	0-2	P:$54	SCI 1 Transmitter Empty
SCI1	43	0-2	P:$56	SCI 1 Transmitter Idle
				Reserved
SCI1	45	0-2	P:$5A	SCI 1 Receiver Error
SCI1	46	0-2	P:$5C	SCI 1 Receiver Full

Table 4-5 Interrupt Vector Table Contents[1] (Continued)

Peripheral	Vector Number	Priority Level	Vector Base Address +	Interrupt Function
DEC1	47	0-2	P:$5E	Quadrature Decoder #1 Home Switch or Watchdog
DEC1	48	0-2	P:$60	Quadrature Decoder #1 INDEX Pulse
DEC0	49	0-2	P:$62	Quadrature Decoder #0 Home Switch or Watchdog
DEC0	50	0-2	P:$64	Quadrature Decoder #0 INDEX Pulse
				Reserved
TMRD	52	0-2	P:$68	Timer D, Channel 0
TMRD	53	0-2	P:$6A	Timer D, Channel 1
TMRD	54	0-2	P:$6C	Timer D, Channel 2
TMRD	55	0-2	P:$6E	Timer D, Channel 3
TMRC	56	0-2	P:$70	Timer C, Channel 0
TMRC	57	0-2	P:$72	Timer C, Channel 1
TMRC	58	0-2	P:$74	Timer C, Channel 2
TMRC	59	0-2	P:$76	Timer C, Channel 3
TMRB	60	0-2	P:$78	Timer B, Channel 0
TMRB	61	0-2	P:$7A	Timer B, Channel 1
TMRB	62	0-2	P:$7C	Timer B, Channel 2
TMRB	63	0-2	P:$7E	Timer B, Channel 3
TMRA	64	0-2	P:$80	Timer A, Channel 0
TMRA	65	0-2	P:$82	Timer A, Channel 1
TMRA	66	0-2	P:$84	Timer A, Channel 2
TMRA	67	0-2	P:$86	Timer A, Channel 3
SCI0	68	0-2	P:$88	SCI 0 Transmitter Empty
SCI0	69	0-2	P:$8A	SCI 0 Transmitter Idle
				Reserved
SCI0	71	0-2	P:$8E	SCI 0 Receiver Error
SCI0	72	0-2	P:$90	SCI 0 Receiver Full
ADCB	73	0-2	P:$92	ADC B Conversion Compete / End of Scan
ADCA	74	0-2	P:$94	ADC A Conversion Complete / End of Scan
ADCB	75	0-2	P:$96	ADC B Zero Crossing or Limit Error
ADCA	76	0-2	P:$98	ADC A Zero Crossing or Limit Error
PWMB	77	0-2	P:$9A	Reload PWM B
PWMA	78	0-2	P:$9C	Reload PWM A

Table 4-5 Interrupt Vector Table Contents[1] (Continued)

Peripheral	Vector Number	Priority Level	Vector Base Address +	Interrupt Function
PWMB	79	0-2	P:$9E	PWM B Fault
PWMA	80	0-2	P:$A0	PWM A Fault
core	81	- 1	P:$A2	SW Interrupt LP
FLEXCAN2	82	0-2	P:$A4	FlexCAN Bus-Off
FLEXCAN2	83	0-2	P:$A6	FlexCAN Error
FLEXCAN2	84	0-2	P:$A8	FlexCAN Wake Up
FLEXCAN2	85	0-2	P:$AA	FlexCAN Message Buffer Interrupt

1. Two words are allocated for each entry in the vector table. This does not allow the full address range to be referenced from the vector table, providing only 19 bits of address.

2. If the VBA is set to $0400 (or VBA = 0000 for Mode 1, EMI_MODE = 0), the first two locations of the vector table are the chip reset addresses; therefore, these locations are not interrupt vectors.

4.4 Data Map

Note: *Data Flash is NOT available on the 56F8165 device.*

Table 4-6 Data Memory Map[1, 2]

Begin/End Address	EX = 0[3]	EX = 1[4]
X:$FF FFFF X:$FF FF00	EOnCE 256 locations allocated	EOnCE 256 locations allocated
X:$FF FEFF X:$01 0000	External Memory	External Memory
X:$00 FFFF X:$00 F000	On-Chip Peripherals 4096 locations allocated	On-Chip Peripherals 4096 locations allocated
X:$00 EFFF X:$00 8000	External Memory	External Memory
X:$00 7FFF X:$00 4000	*On-Chip Data Flash* 32KB	
X:$003FFF X:$00 0000	On-Chip Data RAM 32KB[5]	

1. Information in shaded areas not applicable to 56F8365/56F8165.

2. All addresses are 16-bit Word addresses, not byte addresses.

3. In the Operating Mode Register

4. Setting EX = 1 is not recommended in the 56F8365/56F8165, since the EMI is not functional in this package.

5. The Data RAM is organized as an 8K x 32-bit memory to allow single-cycle, long-word operations.

4.5   Flash Memory Map

Figure 4-1 illustrates the Flash Memory (FM) map on the system bus.

The Flash Memory is divided into three functional blocks. The Program and boot memories reside on the Program Memory buses. They are controlled by one set of banked registers. Data Memory Flash resides on the Data Memory buses and is controlled separately by its own set of banked registers.

The top nine words of the Program Memory Flash are treated as special memory locations. The content of these words is used to control the operation of the Flash Controller. Because these words are part of the Flash Memory content, their state is maintained during power-down and reset. During chip initialization, the content of these memory locations is loaded into Flash Memory control registers, detailed in the Flash Memory chapter of the **56F8300 Peripheral User Manual**. In the 56F8365, these configuration parameters are located between \$03_FFF7 and \$03_FFFF.
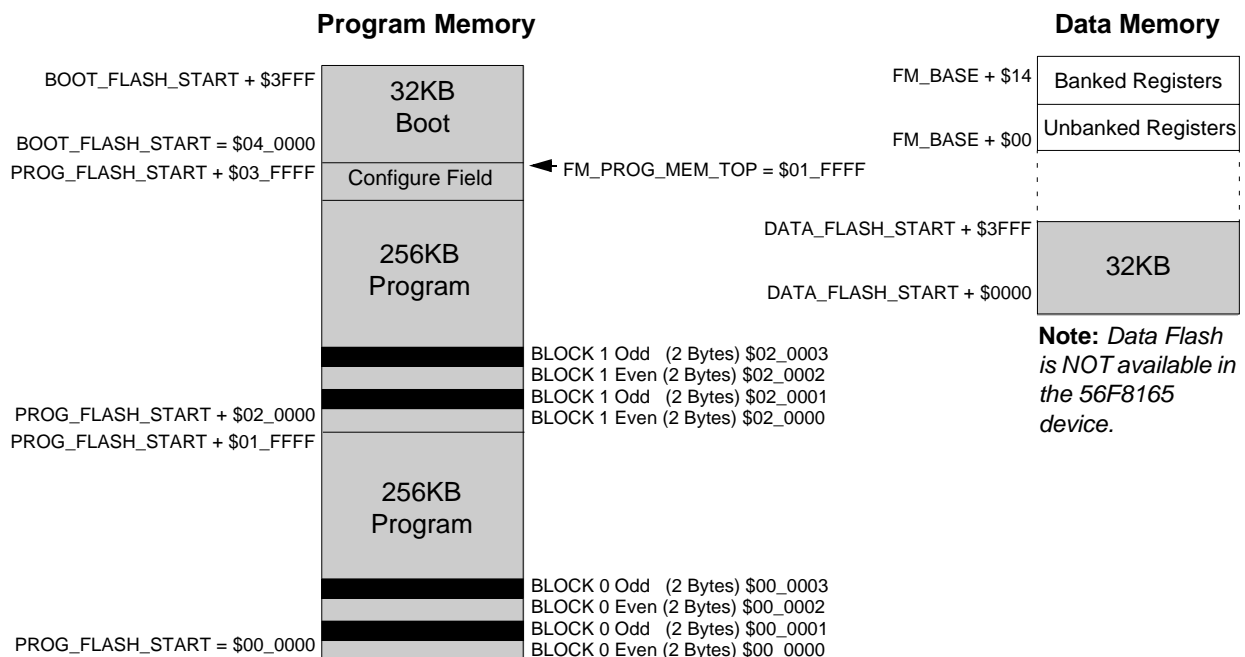
Figure 4-1 Flash Array Memory Maps

Table 4-7 shows the page and sector sizes used within each Flash memory block on the chip.

Note: *Data Flash is NOT available on the 56F8165 device.*

Table 4-7.   Flash Memory Partitions

	Flash Size	Sectors	Sector Size	Page Size
Program Flash	512KB	16	16K x 16 bits	1024x 16 bits
Data Flash	32KB	16	1024 x 16 bits	256 x 16 bits
Boot Flash	32KB	4	4K x 16 bits	512 x 16 bits

Please see the **56F8300 Peripheral User Manual** for additional Flash information.

4.6   EOnCE Memory Map

Table 4-8 EOnCE Memory Map

Address	Register Acronym	Register Name
		Reserved
X:$FF FF8A	OESCR	External Signal Control Register
		Reserved
X:$FF FF8E	OBCNTR	Breakpoint Unit [0] Counter
		Reserved
X:$FF FF90	OBMSK (32 bits)	Breakpoint 1 Unit [0] Mask Register
X:$FF FF91	—	Breakpoint 1 Unit [0] Mask Register
X:$FF FF92	OBAR2 (32 bits)	Breakpoint 2 Unit [0] Address Register
X:$FF FF93	—	Breakpoint 2 Unit [0] Address Register
X:$FF FF94	OBAR1 (24 bits)	Breakpoint 1 Unit [0] Address Register
X:$FF FF95	—	Breakpoint 1 Unit [0] Address Register
X:$FF FF96	OBCR (24 bits)	Breakpoint Unit [0] Control Register
X:$FF FF97	—	Breakpoint Unit [0] Control Register
X:$FF FF98	OTB (21-24 bits/stage)	Trace Buffer Register Stages
X:$FF FF99	—	Trace Buffer Register Stages
X:$FF FF9A	OTBPR (8 bits)	Trace Buffer Pointer Register
X:$FF FF9B	OTBCR	Trace Buffer Control Register
X:$FF FF9C	OBASE (8 bits)	Peripheral Base Address Register
X:$FF FF9D	OSR	Status Register

56F8365 Technical Data, Rev. 6.0

Table 4-8 EOnCE Memory Map (Continued)

Address	Register Acronym	Register Name
X:$FF FF9E	OSCNTR (24 bits)	Instruction Step Counter
X:$FF FF9F	—	Instruction Step Counter
X:$FF FFA0	OCR (bits)	Control Register
		Reserved
X:$FF FFFC	OCLSR (8 bits)	Core Lock / Unlock Status Register
X:$FF FFFD	OTXRXSR (8 bits)	Transmit and Receive Status and Control Register
X:$FF FFFE	OTX / ORX (32 bits)	Transmit Register / Receive Register
X:$FF FFFF	OTX1 / ORX1	Transmit Register Upper Word Receive Register Upper Word

4.7   Peripheral Memory Mapped Registers

On-chip peripheral registers are part of the data memory map on the 56800E series. These locations may be accessed with the same addressing modes used for ordinary Data memory, except all peripheral registers should be read/written using word accesses only.

Table 4-9 summarizes base addresses for the set of peripherals on the 56F8365 and 56F8165 devices. Peripherals are listed in order of the base address.

The following tables list all of the peripheral registers required to control or access the peripherals.

56F8365 Technical Data, Rev. 6.0

Note: *Features in italics are NOT available in the 56F8165 device.*

Table 4-9 Data Memory Peripheral Base Address Map Summary

Peripheral	Prefix	Base Address	Table Number
External Memory Interface	EMI	X:$00 F020	**4-10**
Timer A	TMRA	X:$00 F040	**4-11**
Timer B	TMRB	X:$00 F080	**4-12**
Timer C	TMRC	X:$00 F0C0	**4-13**
Timer D	TMRD	X:$00 F100	**4-14**
PWM A	PWMA	X:$00 F140	**4-15**
PWM B	PWMB	X:$00 F160	**4-16**
Quadrature Decoder 0	DEC0	X:$00 F180	**4-17**
Quadrature Decoder 1	DEC1	X:$00 F190	**4-18**
ITCN	ITCN	X:$00 F1A0	**4-19**
ADC A	ADCA	X:$00 F200	**4-20**
ADC B	ADCB	X:$00 F240	**4-21**
Temperature Sensor	TSENSOR	X:$00 F270	**4-22**
SCI #0	SCI0	X:$00 F280	**4-23**
SCI #1	SCI1	X:$00 F290	**4-24**
SPI #0	SPI0	X:$00 F2A0	**4-25**
SPI #1	SPI1	X:$00 F2B0	**4-26**
COP	COP	X:$00 F2C0	**4-27**
PLL, OSC	CLKGEN	X:$00 F2D0	**4-28**
GPIO Port A	GPIOA	X:$00 F2E0	**4-29**
GPIO Port B	GPIOB	X:$00 F300	**4-30**
GPIO Port C	GPIOC	X:$00 F310	**4-31**
GPIO Port D	GPIOD	X:$00 F320	**4-32**
GPIO Port E	GPIOE	X:$00 F330	**4-33**
GPIO Port F	GPIOF	X:$00 F340	**4-34**
SIM	SIM	X:$00 F350	**4-35**
Power Supervisor	LVI	X:$00 F360	**4-36**
FM	FM	X:$00 F400	**4-37**
FlexCAN	FC	X:$00 F800	**4-38**
FlexCAN2	FC	X:$00 FA00	**4-39**

Table 4-10 External Memory Integration Registers Address Map
(EMI_BASE = $00 F020)

Register Acronym	Address Offset	Register Description	
CSBAR 0	$0	Chip Select Base Address Register 0	
CSBAR 1	$1	Chip Select Base Address Register 1	
CSBAR 2	$2	Chip Select Base Address Register 2	
CSBAR 3	$3	Chip Select Base Address Register 3	
CSBAR 4	$4	Chip Select Base Address Register 4	
CSBAR 5	$5	Chip Select Base Address Register 5	
CSBAR 6	$6	Chip Select Base Address Register 6	
CSBAR 7	$7	Chip Select Base Address Register 7	
CSOR 0	$8	Chip Select Option Register 0	This table added to provide complete information, but this peripheral is not functional in the 56F8365 package
CSOR 1	$9	Chip Select Option Register 1	
CSOR 2	$A	Chip Select Option Register 2	
CSOR 3	$B	Chip Select Option Register 3	
CSOR 4	$C	Chip Select Option Register 4	
CSOR 5	$D	Chip Select Option Register 5	
CSOR 6	$E	Chip Select Option Register 6	
CSOR 7	$F	Chip Select Option Register 7	
CSTC 0	$10	Chip Select Timing Control Register 0	
CSTC 1	$11	Chip Select Timing Control Register 1	
CSTC 2	$12	Chip Select Timing Control Register 2	
CSTC 3	$13	Chip Select Timing Control Register 3	
CSTC 4	$14	Chip Select Timing Control Register 4	
CSTC 5	$15	Chip Select Timing Control Register 5	
CSTC 6	$16	Chip Select Timing Control Register 6	
CSTC 7	$17	Chip Select Timing Control Register 7	
BCR	$18	Bus Control Register	

56F8365 Technical Data, Rev. 6.0

Table 4-11 Quad Timer A Registers Address Map
(TMRA_BASE = $00 F040)

Register Acronym	Address Offset	Register Description
TMRA0_CMP1	$0	Compare Register 1
TMRA0_CMP2	$1	Compare Register 2
TMRA0_CAP	$2	Capture Register
TMRA0_LOAD	$3	Load Register
TMRA0_HOLD	$4	Hold Register
TMRA0_CNTR	$5	Counter Register
TMRA0_CTRL	$6	Control Register
TMRA0_SCR	$7	Status and Control Register
TMRA0_CMPLD1	$8	Comparator Load Register 1
TMRA0_CMPLD2	$9	Comparator Load Register 2
TMRA0_COMSCR	$A	Comparator Status and Control Register
		Reserved
TMRA1_CMP1	$10	Compare Register 1
TMRA1_CMP2	$11	Compare Register 2
TMRA1_CAP	$12	Capture Register
TMRA1_LOAD	$13	Load Register
TMRA1_HOLD	$14	Hold Register
TMRA1_CNTR	$15	Counter Register
TMRA1_CTRL	$16	Control Register
TMRA1_SCR	$17	Status and Control Register
TMRA1_CMPLD1	$18	Comparator Load Register 1
TMRA1_CMPLD2	$19	Comparator Load Register 2
TMRA1_COMSCR	$1A	Comparator Status and Control Register
		Reserved
TMRA2_CMP1	$20	Compare Register 1
TMRA2_CMP2	$21	Compare Register 2
TMRA2_CAP	$22	Capture Register
TMRA2_LOAD	$23	Load Register
TMRA2_HOLD	$24	Hold Register
TMRA2_CNTR	$25	Counter Register
TMRA2_CTRL	$26	Control Register
TMRA2_SCR	$27	Status and Control Register

56F8365 Technical Data, Rev. 6.0

Table 4-11 Quad Timer A Registers Address Map (Continued)
(TMRA_BASE = $00 F040)

Register Acronym	Address Offset	Register Description
TMRA2_CMPLD1	$28	Comparator Load Register 1
TMRA2_CMPLD2	$29	Comparator Load Register 2
TMRA2_COMSCR	$2A	Comparator Status and Control Register
		Reserved
TMRA3_CMP1	$30	Compare Register 1
TMRA3_CMP2	$31	Compare Register 2
TMRA3_CAP	$32	Capture Register
TMRA3_LOAD	$33	Load Register
TMRA3_HOLD	$34	Hold Register
TMRA3_CNTR	$35	Counter Register
TMRA3_CTRL	$36	Control Register
TMRA3_SCR	$37	Status and Control Register
TMRA3_CMPLD1	$38	Comparator Load Register 1
TMRA3_CMPLD2	$39	Comparator Load Register 2
TMRA3_COMSCR	$3A	Comparator Status and Control Register

Table 4-12 Quad Timer B Registers Address Map
(TMRB_BASE = $00 F080)
Quad Timer B is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
TMRB0_CMP1	$0	Compare Register 1
TMRB0_CMP2	$1	Compare Register 2
TMRB0_CAP	$2	Capture Register
TMRB0_LOAD	$3	Load Register
TMRB0_HOLD	$4	Hold Register
TMRB0_CNTR	$5	Counter Register
TMRB0_CTRL	$6	Control Register
TMRB0_SCR	$7	Status and Control Register
TMRB0_CMPLD1	$8	Comparator Load Register 1
TMRB0_CMPLD2	$9	Comparator Load Register 2
TMRB0_COMSCR	$A	Comparator Status and Control Register
		Reserved
TMRB1_CMP1	$10	Compare Register 1
TMRB1_CMP2	$11	Compare Register 2

56F8365 Technical Data, Rev. 6.0

Table 4-12 Quad Timer B Registers Address Map (Continued)
(TMRB_BASE = $00 F080)
Quad Timer B is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
TMRB1_CAP	$12	Capture Register
TMRB1_LOAD	$13	Load Register
TMRB1_HOLD	$14	Hold Register
TMRB1_CNTR	$15	Counter Register
TMRB1_CTRL	$16	Control Register
TMRB1_SCR	$17	Status and Control Register
TMRB1_CMPLD1	$18	Comparator Load Register 1
TMRB1_CMPLD2	$19	Comparator Load Register 2
TMRB1_COMSCR	$1A	Comparator Status and Control Register
		Reserved
TMRB2_CMP1	$20	Compare Register 1
TMRB2_CMP2	$21	Compare Register 2
TMRB2_CAP	$22	Capture Register
TMRB2_LOAD	$23	Load Register
TMRB2_HOLD	$24	Hold Register
TMRB2_CNTR	$25	Counter Register
TMRB2_CTRL	$26	Control Register
TMRB2_SCR	$27	Status and Control Register
TMRB2_CMPLD1	$28	Comparator Load Register 1
TMRB2_CMPLD2	$29	Comparator Load Register 2
TMRB2_COMSCR	$2A	Comparator Status and Control Register
		Reserved
TMRB3_CMP1	$30	Compare Register 1
TMRB3_CMP2	$31	Compare Register 2
TMRB3_CAP	$32	Capture Register
TMRB3_LOAD	$33	Load Register
TMRB3_HOLD	$34	Hold Register
TMRB3_CNTR	$35	Counter Register
TMRB3_CTRL	$36	Control Register
TMRB3_SCR	$37	Status and Control Register
TMRB3_CMPLD1	$38	Comparator Load Register 1
TMRB3_CMPLD2	$39	Comparator Load Register 2
TMRB3_COMSCR	$3A	Comparator Status and Control Register

56F8365 Technical Data, Rev. 6.0

Table 4-13 Quad Timer C Registers Address Map
(TMRC_BASE = $00 F0C0)

Register Acronym	Address Offset	Register Description
TMRC0_CMP1	$0	Compare Register 1
TMRC0_CMP2	$1	Compare Register 2
TMRC0_CAP	$2	Capture Register
TMRC0_LOAD	$3	Load Register
TMRC0_HOLD	$4	Hold Register
TMRC0_CNTR	$5	Counter Register
TMRC0_CTRL	$6	Control Register
TMRC0_SCR	$7	Status and Control Register
TMRC0_CMPLD1	$8	Comparator Load Register 1
TMRC0_CMPLD2	$9	Comparator Load Register 2
TMRC0_COMSCR	$A	Comparator Status and Control Register
		Reserved
TMRC1_CMP1	$10	Compare Register 1
TMRC1_CMP2	$11	Compare Register 2
TMRC1_CAP	$12	Capture Register
TMRC1_LOAD	$13	Load Register
TMRC1_HOLD	$14	Hold Register
TMRC1_CNTR	$15	Counter Register
TMRC1_CTRL	$16	Control Register
TMRC1_SCR	$17	Status and Control Register
TMRC1_CMPLD1	$18	Comparator Load Register 1
TMRC1_CMPLD2	$19	Comparator Load Register 2
TMRC1_COMSCR	$1A	Comparator Status and Control Register
		Reserved
TMRC2_CMP1	$20	Compare Register 1
TMRC2_CMP2	$21	Compare Register 2
TMRC2_CAP	$22	Capture Register
TMRC2_LOAD	$23	Load Register
TMRC2_HOLD	$24	Hold Register
TMRC2_CNTR	$25	Counter Register
TMRC2_CTRL	$26	Control Register

56F8365 Technical Data, Rev. 6.0

Table 4-13 Quad Timer C Registers Address Map (Continued)
(TMRC_BASE = $00 F0C0)

Register Acronym	Address Offset	Register Description
TMRC2_SCR	$27	Status and Control Register
TMRC2_CMPLD1	$28	Comparator Load Register 1
TMRC2_CMPLD2	$29	Comparator Load Register 2
TMRC2_COMSCR	$2A	Comparator Status and Control Register
		Reserved
TMRC3_CMP1	$30	Compare Register 1
TMRC3_CMP2	$31	Compare Register 2
TMRC3_CAP	$32	Capture Register
TMRC3_LOAD	$33	Load Register
TMRC3_HOLD	$34	Hold Register
TMRC3_CNTR	$35	Counter Register
TMRC3_CTRL	$36	Control Register
TMRC3_SCR	$37	Status and Control Register
TMRC3_CMPLD1	$38	Comparator Load Register 1
TMRC3_CMPLD2	$39	Comparator Load Register 2
TMRC3_COMSCR	$3A	Comparator Status and Control Register

Table 4-14 Quad Timer D Registers Address Map
(TMRD_BASE = $00 F100)
Quad Timer D is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
TMRD0_CMP1	$0	Compare Register 1
TMRD0_CMP2	$1	Compare Register 2
TMRD0_CAP	$2	Capture Register
TMRD0_LOAD	$3	Load Register
TMRD0_HOLD	$4	Hold Register
TMRD0_CNTR	$5	Counter Register
TMRD0_CTRL	$6	Control Register
TMRD0_SCR	$7	Status and Control Register
TMRD0_CMPLD1	$8	Comparator Load Register 1
TMRD0_CMPLD2	$9	Comparator Load Register 2
TMRD0_COMSCR	$A	Comparator Status and Control Register

Table 4-14 Quad Timer D Registers Address Map (Continued)
(TMRD_BASE = $00 F100)
Quad Timer D is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
		Reserved
TMRD1_CMP1	$10	Compare Register 1
TMRD1_CMP2	$11	Compare Register 2
TMRD1_CAP	$12	Capture Register
TMRD1_LOAD	$13	Load Register
TMRD1_HOLD	$14	Hold Register
TMRD1_CNTR	$15	Counter Register
TMRD1_CTRL	$16	Control Register
TMRD1_SCR	$17	Status and Control Register
TMRD1_CMPLD1	$18	Comparator Load Register 1
TMRD1_CMPLD2	$19	Comparator Load Register 2
TMRD1_COMSCR	$1A	Comparator Status and Control Register
		Reserved
TMRD2_CMP1	$20	Compare Register 1
TMRD2_CMP2	$21	Compare Register 2
TMRD2_CAP	$22	Capture Register
TMRD2_LOAD	$23	Load Register
TMRD2_HOLD	$24	Hold Register
TMRD2_CNTR	$25	Counter Register
TMRD2_CTRL	$26	Control Register
TMRD2_SCR	$27	Status and Control Register
TMRD2_CMPLD1	$28	Comparator Load Register 1
TMRD2_CMPLD2	$29	Comparator Load Register 2
TMRD2_COMSCR	$2A	Comparator Status and Control Register
		Reserved
TMRD3_CMP1	$30	Compare Register 1
TMRD3_CMP2	$31	Compare Register 2
TMRD3_CAP	$32	Capture Register
TMRD3_LOAD	$33	Load Register
TMRD3_HOLD	$34	Hold Register
TMRD3_CNTR	$35	Counter Register

Table 4-14 Quad Timer D Registers Address Map (Continued)
(TMRD_BASE = $00 F100)
Quad Timer D is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
TMRD3_CTRL	$36	Control Register
TMRD3_SCR	$37	Status and Control Register
TMRD3_CMPLD1	$38	Comparator Load Register 1
TMRD3_CMPLD2	$39	Comparator Load Register 2
TMRD3_COMSCR	$3A	Comparator Status and Control Register

Table 4-15 Pulse Width Modulator A Registers Address Map
(PWMA_BASE = $00 F140)
PWMA is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
PWMA_PMCTL	$0	Control Register
PWMA_PMFCTL	$1	Fault Control Register
PWMA_PMFSA	$2	Fault Status Acknowledge Register
PWMA_PMOUT	$3	Output Control Register
PWMA_PMCNT	$4	Counter Register
PWMA_PWMCM	$5	Counter Modulo Register
PWMA_PWMVAL0	$6	Value Register 0
PWMA_PWMVAL1	$7	Value Register 1
PWMA_PWMVAL2	$8	Value Register 2
PWMA_PWMVAL3	$9	Value Register 3
PWMA_PWMVAL4	$A	Value Register 4
PWMA_PWMVAL5	$B	Value Register 5
PWMA_PMDEADTM	$C	Dead Time Register
PWMA_PMDISMAP1	$D	Disable Mapping Register 1
PWMA_PMDISMAP2	$E	Disable Mapping Register 2
PWMA_PMCFG	$F	Configure Register
PWMA_PMCCR	$10	Channel Control Register
PWMA_PMPORT	$11	Port Register
PWMA_PMICCR	$12	PWM Internal Correction Control Register

56F8365 Technical Data, Rev. 6.0

**Table 4-16 Pulse Width Modulator B Registers Address Map
(PWMB_BASE = $00 F160)**

Register Acronym	Address Offset	Register Description
PWMB_PMCTL	$0	Control Register
PWMB_PMFCTL	$1	Fault Control Register
PWMB_PMFSA	$2	Fault Status Acknowledge Register
PWMB_PMOUT	$3	Output Control Register
PWMB_PMCNT	$4	Counter Register
PWMB_PWMCM	$5	Counter Modulo Register
PWMB_PWMVAL0	$6	Value Register 0
PWMB_PWMVAL1	$7	Value Register 1
PWMB_PWMVAL2	$8	Value Register 2
PWMB_PWMVAL3	$9	Value Register 3
PWMB_PWMVAL4	$A	Value Register 4
PWMB_PWMVAL5	$B	Value Register 5
PWMB_PMDEADTM	$C	Dead Time Register
PWMB_PMDISMAP1	$D	Disable Mapping Register 1
PWMB_PMDISMAP2	$E	Disable Mapping Register 2
PWMB_PMCFG	$F	Configure Register
PWMB_PMCCR	$10	Channel Control Register
PWMB_PMPORT	$11	Port Register
PWMB_PMICCR	$12	PWM Internal Correction Control Register

**Table 4-17 Quadrature Decoder 0 Registers Address Map
(DEC0_BASE = $00 F180)**

Register Acronym	Address Offset	Register Description
DEC0_DECCR	$0	Decoder Control Register
DEC0_FIR	$1	Filter Interval Register
DEC0_WTR	$2	Watchdog Time-out Register
DEC0_POSD	$3	Position Difference Counter Register
DEC0_POSDH	$4	Position Difference Counter Hold Register
DEC0_REV	$5	Revolution Counter Register
DEC0_REVH	$6	Revolution Hold Register
DEC0_UPOS	$7	Upper Position Counter Register
DEC0_LPOS	$8	Lower Position Counter Register

56F8365 Technical Data, Rev. 6.0

Table 4-17 Quadrature Decoder 0 Registers Address Map (Continued)
(DEC0_BASE = $00 F180)

Register Acronym	Address Offset	Register Description
DEC0_UPOSH	$9	Upper Position Hold Register
DEC0_LPOSH	$A	Lower Position Hold Register
DEC0_UIR	$B	Upper Initialization Register
DEC0_LIR	$C	Lower Initialization Register
DEC0_IMR	$D	Input Monitor Register

Table 4-18 Quadrature Decoder 1 Registers Address Map
(DEC1_BASE = $00 F190)
Quadrature Decoder 1 is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
DEC1_DECCR	$0	Decoder Control Register
DEC1_FIR	$1	Filter Interval Register
DEC1_WTR	$2	Watchdog Time-out Register
DEC1_POSD	$3	Position Difference Counter Register
DEC1_POSDH	$4	Position Difference Counter Hold Register
DEC1_REV	$5	Revolution Counter Register
DEC1_REVH	$6	Revolution Hold Register
DEC1_UPOS	$7	Upper Position Counter Register
DEC1_LPOS	$8	Lower Position Counter Register
DEC1_UPOSH	$9	Upper Position Hold Register
DEC1_LPOSH	$A	Lower Position Hold Register
DEC1_UIR	$B	Upper Initialization Register
DEC1_LIR	$C	Lower Initialization Register
DEC1_IMR	$D	Input Monitor Register

Table 4-19 Interrupt Control Registers Address Map
(ITCN_BASE = $00 F1A0)

Register Acronym	Address Offset	Register Description
IPR 0	$0	Interrupt Priority Register 0
IPR 1	$1	Interrupt Priority Register 1
IPR 2	$2	Interrupt Priority Register 2
IPR 3	$3	Interrupt Priority Register 3
IPR 4	$4	Interrupt Priority Register 4

Table 4-19 Interrupt Control Registers Address Map (Continued)
(ITCN_BASE = $00 F1A0)

Register Acronym	Address Offset	Register Description
IPR 5	$5	Interrupt Priority Register 5
IPR 6	$6	Interrupt Priority Register 6
IPR 7	$7	Interrupt Priority Register 7
IPR 8	$8	Interrupt Priority Register 8
IPR 9	$9	Interrupt Priority Register 9
VBA	$A	Vector Base Address Register
FIM0	$B	Fast Interrupt Match Register 0
FIVAL0	$C	Fast Interrupt Vector Address Low 0 Register
FIVAH0	$D	Fast Interrupt Vector Address High 0 Register
FIM1	$E	Fast Interrupt Match Register 1
FIVAL1	$F	Fast Interrupt Vector Address Low 1 Register
FIVAH1	$10	Fast Interrupt Vector Address High 1 Register
IRQP 0	$11	IRQ Pending Register 0
IRQP 1	$12	IRQ Pending Register 1
IRQP 2	$13	IRQ Pending Register 2
IRQP 3	$14	IRQ Pending Register 3
IRQP 4	$15	IRQ Pending Register 4
IRQP 5	$16	IRQ Pending Register 5
Reserved		
ICTL	$1D	Interrupt Control Register
Reserved		
IPR10	$1F	Interrupt Priority Register 10

Table 4-20 Analog-to-Digital Converter Registers Address Map
(ADCA_BASE = $00 F200)

Register Acronym	Address Offset	Register Description
ADCA_CR1	$0	Control Register 1
ADCA_CR2	$1	Control Register 2
ADCA_ZCC	$2	Zero Crossing Control Register
ADCA_LST 1	$3	Channel List Register 1
ADCA_LST 2	$4	Channel List Register 2
ADCA_SDIS	$5	Sample Disable Register

56F8365 Technical Data, Rev. 6.0

Table 4-20 Analog-to-Digital Converter Registers Address Map (Continued)
(ADCA_BASE = $00 F200)

Register Acronym	Address Offset	Register Description
ADCA_STAT	$6	Status Register
ADCA_LSTAT	$7	Limit Status Register
ADCA_ZCSTAT	$8	Zero Crossing Status Register
ADCA_RSLT 0	$9	Result Register 0
ADCA_RSLT 1	$A	Result Register 1
ADCA_RSLT 2	$B	Result Register 2
ADCA_RSLT 3	$C	Result Register 3
ADCA_RSLT 4	$D	Result Register 4
ADCA_RSLT 5	$E	Result Register 5
ADCA_RSLT 6	$F	Result Register 6
ADCA_RSLT 7	$10	Result Register 7
ADCA_LLMT 0	$11	Low Limit Register 0
ADCA_LLMT 1	$12	Low Limit Register 1
ADCA_LLMT 2	$13	Low Limit Register 2
ADCA_LLMT 3	$14	Low Limit Register 3
ADCA_LLMT 4	$15	Low Limit Register 4
ADCA_LLMT 5	$16	Low Limit Register 5
ADCA_LLMT 6	$17	Low Limit Register 6
ADCA_LLMT 7	$18	Low Limit Register 7
ADCA_HLMT 0	$19	High Limit Register 0
ADCA_HLMT 1	$1A	High Limit Register 1
ADCA_HLMT 2	$1B	High Limit Register 2
ADCA_HLMT 3	$1C	High Limit Register 3
ADCA_HLMT 4	$1D	High Limit Register 4
ADCA_HLMT 5	$1E	High Limit Register 5
ADCA_HLMT 6	$1F	High Limit Register 6
ADCA_HLMT 7	$20	High Limit Register 7
ADCA_OFS 0	$21	Offset Register 0
ADCA_OFS 1	$22	Offset Register 1
ADCA_OFS 2	$23	Offset Register 2
ADCA_OFS 3	$24	Offset Register 3
ADCA_OFS 4	$25	Offset Register 4

56F8365 Technical Data, Rev. 6.0

Table 4-20 Analog-to-Digital Converter Registers Address Map (Continued) (ADCA_BASE = $00 F200)

Register Acronym	Address Offset	Register Description
ADCA_OFS 5	$26	Offset Register 5
ADCA_OFS 6	$27	Offset Register 6
ADCA_OFS 7	$28	Offset Register 7
ADCA_POWER	$29	Power Control Register
ADCA_CAL	$2A	ADC Calibration Register

Table 4-21 Analog-to-Digital Converter Registers Address Map (ADCB_BASE = $00 F240)

Register Acronym	Address Offset	Register Description
ADCB_CR1	$0	Control Register 1
ADCB_CR2	$1	Control Register 2
ADCB_ZCC	$2	Zero Crossing Control Register
ADCB_LST 1	$3	Channel List Register 1
ADCB_LST 2	$4	Channel List Register 2
ADCB_SDIS	$5	Sample Disable Register
ADCB_STAT	$6	Status Register
ADCB_LSTAT	$7	Limit Status Register
ADCB_ZCSTAT	$8	Zero Crossing Status Register
ADCB_RSLT 0	$9	Result Register 0
ADCB_RSLT 1	$A	Result Register 1
ADCB_RSLT 2	$B	Result Register 2
ADCB_RSLT 3	$C	Result Register 3
ADCB_RSLT 4	$D	Result Register 4
ADCB_RSLT 5	$E	Result Register 5
ADCB_RSLT 6	$F	Result Register 6
ADCB_RSLT 7	$10	Result Register 7
ADCB_LLMT 0	$11	Low Limit Register 0
ADCB_LLMT 1	$12	Low Limit Register 1
ADCB_LLMT 2	$13	Low Limit Register 2
ADCB_LLMT 3	$14	Low Limit Register 3
ADCB_LLMT 4	$15	Low Limit Register 4
ADCB_LLMT 5	$16	Low Limit Register 5

56F8365 Technical Data, Rev. 6.0

Register Acronym	Address Offset	Register Description
ADCB_LLMT 6	$17	Low Limit Register 6
ADCB_LLMT 7	$18	Low Limit Register 7
ADCB_HLMT 0	$19	High Limit Register 0
ADCB_HLMT 1	$1A	High Limit Register 1
ADCB_HLMT 2	$1B	High Limit Register 2
ADCB_HLMT 3	$1C	High Limit Register 3
ADCB_HLMT 4	$1D	High Limit Register 4
ADCB_HLMT 5	$1E	High Limit Register 5
ADCB_HLMT 6	$1F	High Limit Register 6
ADCB_HLMT 7	$20	High Limit Register 7
ADCB_OFS 0	$21	Offset Register 0
ADCB_OFS 1	$22	Offset Register 1
ADCB_OFS 2	$23	Offset Register 2
ADCB_OFS 3	$24	Offset Register 3
ADCB_OFS 4	$25	Offset Register 4
ADCB_OFS 5	$26	Offset Register 5
ADCB_OFS 6	$27	Offset Register 6
ADCB_OFS 7	$28	Offset Register 7
ADCB_POWER	$29	Power Control Register
ADCB_CAL	$2A	ADC Calibration Register

**Table 4-22 Temperature Sensor Register Address Map
(TSENSOR_BASE = $00 F270)**
Temperature Sensor is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
TSENSOR_CNTL	$0	Control Register

56F8365 Technical Data, Rev. 6.0

**Table 4-23 Serial Communication Interface 0 Registers Address Map
(SCI0_BASE = $00 F280)**

Register Acronym	Address Offset	Register Description
SCI0_SCIBR	$0	Baud Rate Register
SCI0_SCICR	$1	Control Register
		Reserved
SCI0_SCISR	$3	Status Register
SCI0_SCIDR	$4	Data Register

**Table 4-24 Serial Communication Interface 1 Registers Address Map
(SCI1_BASE = $00 F290)**

Register Acronym	Address Offset	Register Description
SCI1_SCIBR	$0	Baud Rate Register
SCI1_SCICR	$1	Control Register
		Reserved
SCI1_SCISR	$3	Status Register
SCI1_SCIDR	$4	Data Register

**Table 4-25 Serial Peripheral Interface 0 Registers Address Map
(SPI0_BASE = $00 F2A0)**

Register Acronym	Address Offset	Register Description
SPI0_SPSCR	$0	Status and Control Register
SPI0_SPDSR	$1	Data Size Register
SPI0_SPDRR	$2	Data Receive Register
SPI0_SPDTR	$3	Data Transmitter Register

**Table 4-26 Serial Peripheral Interface 1 Registers Address Map
(SPI1_BASE = $00 F2B0)**

Register Acronym	Address Offset	Register Description
SPI1_SPSCR	$0	Status and Control Register
SPI1_SPDSR	$1	Data Size Register
SPI1_SPDRR	$2	Data Receive Register
SPI1_SPDTR	$3	Data Transmitter Register

56F8365 Technical Data, Rev. 6.0

Table 4-27 Computer Operating Properly Registers Address Map
(COP_BASE = $00 F2C0)

Register Acronym	Address Offset	Register Description
COPCTL	$0	Control Register
COPTO	$1	Time Out Register
COPCTR	$2	Counter Register

Table 4-28 Clock Generation Module Registers Address Map
(CLKGEN_BASE = $00 F2D0)

Register Acronym	Address Offset	Register Description
PLLCR	$0	Control Register
PLLDB	$1	Divide-By Register
PLLSR	$2	Status Register
		Reserved
SHUTDOWN	$4	Shutdown Register
OSCTL	$5	Oscillator Control Register

Table 4-29 GPIOA Registers Address Map
(GPIOA_BASE = $00 F2E0)

Register Acronym	Address Offset	Register Description	Reset Value
GPIOA_PUR	$0	Pull-up Enable Register	0 x 3FFF
GPIOA_DR	$1	Data Register	0 x 0000
GPIOA_DDR	$2	Data Direction Register	0 x 0000
GPIOA_PER	$3	Peripheral Enable Register	0 x 3FFF
GPIOA_IAR	$4	Interrupt Assert Register	0 x 0000
GPIOA_IENR	$5	Interrupt Enable Register	0 x 0000
GPIOA_IPOLR	$6	Interrupt Polarity Register	0 x 0000
GPIOA_IPR	$7	Interrupt Pending Register	0 x 0000
GPIOA_IESR	$8	Interrupt Edge-Sensitive Register	0 x 0000
GPIOA_PPMODE	$9	Push-Pull Mode Register	0 x 3FFF
GPIOA_RAWDATA	$A	Raw Data Input Register	—

56F8365 Technical Data, Rev. 6.0

Table 4-30 GPIOB Registers Address Map
(GPIOB_BASE = $00 F300)

Register Acronym	Address Offset	Register Description	Reset Value
GPIOB_PUR	$0	Pull-up Enable Register	0 x 00FF
GPIOB_DR	$1	Data Register	0 x 0000
GPIOB_DDR	$2	Data Direction Register	0 x 0000
GPIOB_PER	$3	Peripheral Enable Register	0 x 0000
GPIOB_IAR	$4	Interrupt Assert Register	0 x 0000
GPIOB_IENR	$5	Interrupt Enable Register	0 x 0000
GPIOB_IPOLR	$6	Interrupt Polarity Register	0 x 0000
GPIOB_IPR	$7	Interrupt Pending Register	0 x 0000
GPIOB_IESR	$8	Interrupt Edge-Sensitive Register	0 x 0000
GPIOB_PPMODE	$9	Push-Pull Mode Register	0 x 00FF
GPIOB_RAWDATA	$A	Raw Data Input Register	—

Table 4-31 GPIOC Registers Address Map
(GPIOC_BASE = $00 F310)

Register Acronym	Address Offset	Register Description	Reset Value
GPIOC_PUR	$0	Pull-up Enable Register	0 x 07FF
GPIOC_DR	$1	Data Register	0 x 0000
GPIOC_DDR	$2	Data Direction Register	0 x 0000
GPIOC_PER	$3	Peripheral Enable Register	0 x 07FF
GPIOC_IAR	$4	Interrupt Assert Register	0 x 0000
GPIOC_IENR	$5	Interrupt Enable Register	0 x 0000
GPIOC_IPOLR	$6	Interrupt Polarity Register	0 x 0000
GPIOC_IPR	$7	Interrupt Pending Register	0 x 0000
GPIOC_IESR	$8	Interrupt Edge-Sensitive Register	0 x 0000
GPIOC_PPMODE	$9	Push-Pull Mode Register	0 x 07FF
GPIOC_RAWDATA	$A	Raw Data Input Register	—

Table 4-32 GPIOD Registers Address Map
(GPIOD_BASE = $00 F320)

Register Acronym	Address Offset	Register Description	Reset Value
GPIOD_PUR	$0	Pull-up Enable Register	0 x 1FFF
GPIOD_DR	$1	Data Register	0 x 0000
GPIOD_DDR	$2	Data Direction Register	0 x 0000
GPIOD_PER	$3	Peripheral Enable Register	0 x 1FC0
GPIOD_IAR	$4	Interrupt Assert Register	0 x 0000
GPIOD_IENR	$5	Interrupt Enable Register	0 x 0000
GPIOD_IPOLR	$6	Interrupt Polarity Register	0 x 0000
GPIOD_IPR	$7	Interrupt Pending Register	0 x 0000
GPIOD_IESR	$8	Interrupt Edge-Sensitive Register	0 x 0000
GPIOD_PPMODE	$9	Push-Pull Mode Register	0 x 1FFF
GPIOD_RAWDATA	$A	Raw Data Input Register	—

Table 4-33 GPIOE Registers Address Map
(GPIOE_BASE = $00 F330)

Register Acronym	Address Offset	Register Description	Reset Value
GPIOE_PUR	$0	Pull-up Enable Register	0 x 3FFF
GPIOE_DR	$1	Data Register	0 x 0000
GPIOE_DDR	$2	Data Direction Register	0 x 0000
GPIOE_PER	$3	Peripheral Enable Register	0 x 3FFF
GPIOE_IAR	$4	Interrupt Assert Register	0 x 0000
GPIOE_IENR	$5	Interrupt Enable Register	0 x 0000
GPIOE_IPOLR	$6	Interrupt Polarity Register	0 x 0000
GPIOE_IPR	$7	Interrupt Pending Register	0 x 0000
GPIOE_IESR	$8	Interrupt Edge-Sensitive Register	0 x 0000
GPIOE_PPMODE	$9	Push-Pull Mode Register	0 x 3FFF
GPIOE_RAWDATA	$A	Raw Data Input Register	—

Table 4-34 GPIOF Registers Address Map
(GPIOF_BASE = $00 F340)

Register Acronym	Address Offset	Register Description	Reset Value
GPIOF_PUR	$0	Pull-up Enable Register	0 x FFFF
GPIOF_DR	$1	Data Register	0 x 0000
GPIOF_DDR	$2	Data Direction Register	0 x 0000
GPIOF_PER	$3	Peripheral Enable Register	0 x FFFF
GPIOF_IAR	$4	Interrupt Assert Register	0 x 0000
GPIOF_IENR	$5	Interrupt Enable Register	0 x 0000
GPIOF_IPOLR	$6	Interrupt Polarity Register	0 x 0000
GPIOF_IPR	$7	Interrupt Pending Register	0 x 0000
GPIOF_IESR	$8	Interrupt Edge-Sensitive Register	0 x 0000
GPIOF_PPMODE	$9	Push-Pull Mode Register	0 x FFFF
GPIOF_RAWDATA	$A	Raw Data Input Register	—

Table 4-35 System Integration Module Registers Address Map
(SIM_BASE = $00 F350)

Register Acronym	Address Offset	Register Description
SIM_CONTROL	$0	Control Register
SIM_RSTSTS	$1	Reset Status Register
SIM_SCR0	$2	Software Control Register 0
SIM_SCR1	$3	Software Control Register 1
SIM_SCR2	$4	Software Control Register 2
SIM_SCR3	$5	Software Control Register 3
SIM_MSH_ID	$6	Most Significant Half JTAG ID
SIM_LSH_ID	$7	Least Significant Half JTAG ID
SIM_PUDR	$8	Pull-up Disable Register
		Reserved
SIM_CLKOSR	$A	Clock Out Select Register
SIM_GPS	$B	Quad Decoder 1 / Timer B / SPI 1 Select Register
SIM_PCE	$C	Peripheral Clock Enable Register
SIM_ISALH	$D	I/O Short Address Location High Register
SIM_ISALL	$E	I/O Short Address Location Low Register
SIM_PCE2	$F	Peripheral Clock Enable Register 2

56F8365 Technical Data, Rev. 6.0

Table 4-36 Power Supervisor Registers Address Map
(LVI_BASE = $00 F360)

Register Acronym	Address Offset	Register Description
LVI_CONTROL	$0	Control Register
LVI_STATUS	$1	Status Register

Table 4-37 Flash Module Registers Address Map
(FM_BASE = $00 F400)

Register Acronym	Address Offset	Register Description
FMCLKD	$0	Clock Divider Register
FMMCR	$1	Module Control Register
		Reserved
FMSECH	$3	Security High Half Register
FMSECL	$4	Security Low Half Register
		Reserved
		Reserved
FMPROT	$10	Protection Register (Banked)
FMPROTB	$11	Protection Boot Register (Banked)
		Reserved
FMUSTAT	$13	User Status Register (Banked)
FMCMD	$14	Command Register (Banked)
		Reserved
		Reserved
FMOPT 0	$1A	16-Bit Information Option Register 0 Hot temperature ADC reading of Temperature Sensor; value set during factory test
FMOPT 1	$1B	16-Bit Information Option Register 1 Not used
FMOPT 2	$1C	16-Bit Information Option Register 2 Room temperature ADC reading of Temperature Sensor; value set during factory test

Table 4-38 FlexCAN Registers Address Map
(FC_BASE = $00 F800)
FlexCAN is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
FCMCR	$0	Module Configuration Register
		Reserved
FCCTL0	$3	Control Register 0 Register
FCCTL1	$4	Control Register 1 Register
FCTMR	$5	Free-Running Timer Register
FCMAXMB	$6	Maximum Message Buffer Configuration Register
		Reserved
FCRXGMASK_H	$8	Receive Global Mask High Register
FCRXGMASK_L	$9	Receive Global Mask Low Register
FCRX14MASK_H	$A	Receive Buffer 14 Mask High Register
FCRX14MASK_L	$B	Receive Buffer 14 Mask Low Register
FCRX15MASK_H	$C	Receive Buffer 15 Mask High Register
FCRX15MASK_L	$D	Receive Buffer 15 Mask Low Register
		Reserved
FCSTATUS	$10	Error and Status Register
FCIMASK1	$11	Interrupt Masks 1 Register
FCIFLAG1	$12	Interrupt Flags 1 Register
FCR/T_ERROR_CNTRS	$13	Receive and Transmit Error Counters Register
		Reserved
		Reserved
		Reserved
FCMB0_CONTROL	$40	Message Buffer 0 Control / Status Register
FCMB0_ID_HIGH	$41	Message Buffer 0 ID High Register
FCMB0_ID_LOW	$42	Message Buffer 0 ID Low Register
FCMB0_DATA	$43	Message Buffer 0 Data Register
FCMB0_DATA	$44	Message Buffer 0 Data Register
FCMB0_DATA	$45	Message Buffer 0 Data Register
FCMB0_DATA	$46	Message Buffer 0 Data Register
		Reserved
FCMSB1_CONTROL	$48	Message Buffer 1 Control / Status Register

56F8365 Technical Data, Rev. 6.0

Table 4-38 FlexCAN Registers Address Map (Continued)
(FC_BASE = $00 F800)
FlexCAN is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
FCMSB1_ID_HIGH	$49	Message Buffer 1 ID High Register
FCMSB1_ID_LOW	$4A	Message Buffer 1 ID Low Register
FCMB1_DATA	$4B	Message Buffer 1 Data Register
FCMB1_DATA	$4C	Message Buffer 1 Data Register
FCMB1_DATA	$4D	Message Buffer 1 Data Register
FCMB1_DATA	$4E	Message Buffer 1 Data Register
		Reserved
FCMB2_CONTROL	$50	Message Buffer 2 Control / Status Register
FCMB2_ID_HIGH	$51	Message Buffer 2 ID High Register
FCMB2_ID_LOW	$52	Message Buffer 2 ID Low Register
FCMB2_DATA	$53	Message Buffer 2 Data Register
FCMB2_DATA	$54	Message Buffer 2 Data Register
FCMB2_DATA	$55	Message Buffer 2 Data Register
FCMB2_DATA	$56	Message Buffer 2 Data Register
		Reserved
FCMB3_CONTROL	$58	Message Buffer 3 Control / Status Register
FCMB3_ID_HIGH	$59	Message Buffer 3 ID High Register
FCMB3_ID_LOW	$5A	Message Buffer 3 ID Low Register
FCMB3_DATA	$5B	Message Buffer 3 Data Register
FCMB3_DATA	$5C	Message Buffer 3 Data Register
FCMB3_DATA	$5D	Message Buffer 3 Data Register
FCMB3_DATA	$5E	Message Buffer 3 Data Register
		Reserved
FCMB4_CONTROL	$60	Message Buffer 4 Control / Status Register
FCMB4_ID_HIGH	$61	Message Buffer 4 ID High Register
FCMB4_ID_LOW	$62	Message Buffer 4 ID Low Register
FCMB4_DATA	$63	Message Buffer 4 Data Register
FCMB4_DATA	$64	Message Buffer 4 Data Register
FCMB4_DATA	$65	Message Buffer 4 Data Register
FCMB4_DATA	$66	Message Buffer 4 Data Register
		Reserved

Table 4-38 FlexCAN Registers Address Map (Continued)
(FC_BASE = $00 F800)
FlexCAN is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
FCMB5_CONTROL	$68	Message Buffer 5 Control / Status Register
FCMB5_ID_HIGH	$69	Message Buffer 5 ID High Register
FCMB5_ID_LOW	$6A	Message Buffer 5 ID Low Register
FCMB5_DATA	$6B	Message Buffer 5 Data Register
FCMB5_DATA	$6C	Message Buffer 5 Data Register
FCMB5_DATA	$6D	Message Buffer 5 Data Register
FCMB5_DATA	$6E	Message Buffer 5 Data Register
		Reserved
FCMB6_CONTROL	$70	Message Buffer 6 Control / Status Register
FCMB6_ID_HIGH	$71	Message Buffer 6 ID High Register
FCMB6_ID_LOW	$72	Message Buffer 6 ID Low Register
FCMB6_DATA	$73	Message Buffer 6 Data Register
FCMB6_DATA	$74	Message Buffer 6 Data Register
FCMB6_DATA	$75	Message Buffer 6 Data Register
FCMB6_DATA	$76	Message Buffer 6 Data Register
		Reserved
FCMB7_CONTROL	$78	Message Buffer 7 Control / Status Register
FCMB7_ID_HIGH	$79	Message Buffer 7 ID High Register
FCMB7_ID_LOW	$7A	Message Buffer 7 ID Low Register
FCMB7_DATA	$7B	Message Buffer 7 Data Register
FCMB7_DATA	$7C	Message Buffer 7 Data Register
FCMB7_DATA	$7D	Message Buffer 7 Data Register
FCMB7_DATA	$7E	Message Buffer 7 Data Register
		Reserved
FCMB8_CONTROL	$80	Message Buffer 8 Contro l /Status Register
FCMB8_ID_HIGH	$81	Message Buffer 8 ID High Register
FCMB8_ID_LOW	$82	Message Buffer 8 ID Low Register
FCMB8_DATA	$83	Message Buffer 8 Data Register
FCMB8_DATA	$84	Message Buffer 8 Data Register
FCMB8_DATA	$85	Message Buffer 8 Data Register
FCMB8_DATA	$86	Message Buffer 8 Data Register
		Reserved

56F8365 Technical Data, Rev. 6.0

Register Acronym	Address Offset	Register Description
FCMB9_CONTROL	$88	Message Buffer 9 Control / Status Register
FCMB9_ID_HIGH	$89	Message Buffer 9 ID High Register
FCMB9_ID_LOW	$8A	Message Buffer 9 ID Low Register
FCMB9_DATA	$8B	Message Buffer 9 Data Register
FCMB9_DATA	$8C	Message Buffer 9 Data Register
FCMB9_DATA	$8D	Message Buffer 9 Data Register
FCMB9_DATA	$8E	Message Buffer 9 Data Register
		Reserved
FCMB10_CONTROL	$90	Message Buffer 10 Control / Status Register
FCMB10_ID_HIGH	$91	Message Buffer 10 ID High Register
FCMB10_ID_LOW	$92	Message Buffer 10 ID Low Register
FCMB10_DATA	$93	Message Buffer 10 Data Register
FCMB10_DATA	$94	Message Buffer 10 Data Register
FCMB10_DATA	$95	Message Buffer 10 Data Register
FCMB10_DATA	$96	Message Buffer 10 Data Register
		Reserved
FCMB11_CONTROL	$98	Message Buffer 11 Control / Status Register
FCMB11_ID_HIGH	$99	Message Buffer 11 ID High Register
FCMB11_ID_LOW	$9A	Message Buffer 11 ID Low Register
FCMB11_DATA	$9B	Message Buffer 11 Data Register
FCMB11_DATA	$9C	Message Buffer 11 Data Register
FCMB11_DATA	$9D	Message Buffer 11 Data Register
FCMB11_DATA	$9E	Message Buffer 11 Data Register
		Reserved
FCMB12_CONTROL	$A0	Message Buffer 12 Control / Status Register
FCMB12_ID_HIGH	$A1	Message Buffer 12 ID High Register
FCMB12_ID_LOW	$A2	Message Buffer 12 ID Low Register
FCMB12_DATA	$A3	Message Buffer 12 Data Register
FCMB12_DATA	$A4	Message Buffer 12 Data Register
FCMB12_DATA	$A5	Message Buffer 12 Data Register
FCMB12_DATA	$A6	Message Buffer 12 Data Register
		Reserved

56F8365 Technical Data, Rev. 6.0

Table 4-38 FlexCAN Registers Address Map (Continued)
(FC_BASE = $00 F800)
FlexCAN is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
FCMB13_CONTROL	$A8	Message Buffer 13 Control / Status Register
FCMB13_ID_HIGH	$A9	Message Buffer 13 ID High Register
FCMB13_ID_LOW	$AA	Message Buffer 13 ID Low Register
FCMB13_DATA	$AB	Message Buffer 13 Data Register
FCMB13_DATA	$AC	Message Buffer 13 Data Register
FCMB13_DATA	$AD	Message Buffer 13 Data Register
FCMB13_DATA	$AE	Message Buffer 13 Data Register
		Reserved
FCMB14_CONTROL	$B0	Message Buffer 14 Control / Status Register
FCMB14_ID_HIGH	$B1	Message Buffer 14 ID High Register
FCMB14_ID_LOW	$B2	Message Buffer 14 ID Low Register
FCMB14_DATA	$B3	Message Buffer 14 Data Register
FCMB14_DATA	$B4	Message Buffer 14 Data Register
FCMB14_DATA	$B5	Message Buffer 14 Data Register
FCMB14_DATA	$B6	Message Buffer 14 Data Register
		Reserved
FCMB15_CONTROL	$B8	Message Buffer 15 Control / Status Register
FCMB15_ID_HIGH	$B9	Message Buffer 15 ID High Register
FCMB15_ID_LOW	$BA	Message Buffer 15 ID Low Register
FCMB15_DATA	$BB	Message Buffer 15 Data Register
FCMB15_DATA	$BC	Message Buffer 15 Data Register
FCMB15_DATA	$BD	Message Buffer 15 Data Register
FCMB15_DATA	$BE	Message Buffer 15 Data Register
		Reserved

56F8365 Technical Data, Rev. 6.0

Table 4-39 FlexCAN2 Registers Address Map
(FC2_BASE = $00 FA00)
FlexCAN2 is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
FC2MCR	$0	Module Configuration Register
		Reserved
FC2CTL0	$3	Control Register 0 Register
FC2CTL1	$4	Control Register 1 Register
FC2TMR	$5	Free-Running Timer Register
FC2MAXMB	$6	Maximum Message Buffer Configuration Register
FC2IMASK2	$7	Interrupt Masks 2 Register
FC2RXGMASK_H	$8	Receive Global Mask High Register
FC2RXGMASK_L	$9	Receive Global Mask Low Register
FC2RX14MASK_H	$A	Receive Buffer 14 Mask High Register
FC2RX14MASK_L	$B	Receive Buffer 14 Mask Low Register
FC2RX15MASK_H	$C	Receive Buffer 15 Mask High Register
FC2RX15MASK_L	$D	Receive Buffer 15 Mask Low Register
		Reserved
FC2STATUS	$10	Error and Status Register
FC2IMASK1	$11	Interrupt Masks 1 Register
FC2IFLAG1	$12	Interrupt Flags 1 Register
FC2R/T_ERROR_CNTRS	$13	Receive and Transmit Error Counters Register
		Reserved
FC2IFLAG 2	$1B	Interrupt Flags 2 Register
		Reserved
FC2MB0_CONTROL	$40	Message Buffer 0 Control / Status Register
FC2MB0_ID_HIGH	$41	Message Buffer 0 ID High Register
FC2MB0_ID_LOW	$42	Message Buffer 0 ID Low Register
FC2MB0_DATA	$43	Message Buffer 0 Data Register
FC2MB0_DATA	$44	Message Buffer 0 Data Register
FC2MB0_DATA	$45	Message Buffer 0 Data Register
FC2MB0_DATA	$46	Message Buffer 0 Data Register
		Reserved
FC2MSB1_CONTROL	$48	Message Buffer 1 Control / Status Register

56F8365 Technical Data, Rev. 6.0

Freescale Semiconductor
Preliminary

Table 4-39 FlexCAN2 Registers Address Map (Continued)
(FC2_BASE = $00 FA00)
FlexCAN2 is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
FC2MSB1_ID_HIGH	$49	Message Buffer 1 ID High Register
FC2MSB1_ID_LOW	$4A	Message Buffer 1 ID Low Register
FC2MB1_DATA	$4B	Message Buffer 1 Data Register
FC2MB1_DATA	$4C	Message Buffer 1 Data Register
FC2MB1_DATA	$4D	Message Buffer 1 Data Register
FC2MB1_DATA	$4E	Message Buffer 1 Data Register
		Reserved
FC2MB2_CONTROL	$50	Message Buffer 2 Control / Status Register
FC2MB2_ID_HIGH	$51	Message Buffer 2 ID High Register
FC2MB2_ID_LOW	$52	Message Buffer 2 ID Low Register
FC2MB2_DATA	$53	Message Buffer 2 Data Register
FC2MB2_DATA	$54	Message Buffer 2 Data Register
FC2MB2_DATA	$55	Message Buffer 2 Data Register
FC2MB2_DATA	$56	Message Buffer 2 Data Register
		Reserved
FC2MB3_CONTROL	$58	Message Buffer 3 Control / Status Register
FC2MB3_ID_HIGH	$59	Message Buffer 3 ID High Register
FC2MB3_ID_LOW	$5A	Message Buffer 3 ID Low Register
FC2MB3_DATA	$5B	Message Buffer 3 Data Register
FC2MB3_DATA	$5C	Message Buffer 3 Data Register
FC2MB3_DATA	$5D	Message Buffer 3 Data Register
FC2MB3_DATA	$5E	Message Buffer 3 Data Register
		Reserved
FC2MB4_CONTROL	$60	Message Buffer 4 Control / Status Register
FC2MB4_ID_HIGH	$61	Message Buffer 4 ID High Register
FC2MB4_ID_LOW	$62	Message Buffer 4 ID Low Register
FC2MB4_DATA	$63	Message Buffer 4 Data Register
FC2MB4_DATA	$64	Message Buffer 4 Data Register
FC2MB4_DATA	$65	Message Buffer 4 Data Register
FC2MB4_DATA	$66	Message Buffer 4 Data Register
		Reserved
FC2MB5_CONTROL	$68	Message Buffer 5 Control / Status Register

56F8365 Technical Data, Rev. 6.0

Register Acronym	Address Offset	Register Description
FC2MB5_ID_HIGH	$69	Message Buffer 5 ID High Register
FC2MB5_ID_LOW	$6A	Message Buffer 5 ID Low Register
FC2MB5_DATA	$6B	Message Buffer 5 Data Register
FC2MB5_DATA	$6C	Message Buffer 5 Data Register
FC2MB5_DATA	$6D	Message Buffer 5 Data Register
FC2MB5_DATA	$6E	Message Buffer 5 Data Register
		Reserved
FC2MB6_CONTROL	$70	Message Buffer 6 Control / Status Register
FC2MB6_ID_HIGH	$71	Message Buffer 6 ID High Register
FC2MB6_ID_LOW	$72	Message Buffer 6 ID Low Register
FC2MB6_DATA	$73	Message Buffer 6 Data Register
FC2MB6_DATA	$74	Message Buffer 6 Data Register
FC2MB6_DATA	$75	Message Buffer 6 Data Register
FC2MB6_DATA	$76	Message Buffer 6 Data Register
		Reserved
FC2MB7_CONTROL	$78	Message Buffer 7 Control / Status Register
FC2MB7_ID_HIGH	$79	Message Buffer 7 ID High Register
FC2MB7_ID_LOW	$7A	Message Buffer 7 ID Low Register
FC2MB7_DATA	$7B	Message Buffer 7 Data Register
FC2MB7_DATA	$7C	Message Buffer 7 Data Register
FC2MB7_DATA	$7D	Message Buffer 7 Data Register
FC2MB7_DATA	$7E	Message Buffer 7 Data Register
		Reserved
FC2MB8_CONTROL	$80	Message Buffer 8 Contro l /Status Register
FC2MB8_ID_HIGH	$81	Message Buffer 8 ID High Register
FC2MB8_ID_LOW	$82	Message Buffer 8 ID Low Register
FC2MB8_DATA	$83	Message Buffer 8 Data Register
FC2MB8_DATA	$84	Message Buffer 8 Data Register
FC2MB8_DATA	$85	Message Buffer 8 Data Register
FC2MB8_DATA	$86	Message Buffer 8 Data Register
		Reserved
FC2MB9_CONTROL	$88	Message Buffer 9 Control / Status Register

Table 4-39 FlexCAN2 Registers Address Map (Continued)
(FC2_BASE = $00 FA00)
FlexCAN2 is NOT available in the 56F8165 device

Register Acronym	Address Offset	Register Description
FC2MB9_ID_HIGH	$89	Message Buffer 9 ID High Register
FC2MB9_ID_LOW	$8A	Message Buffer 9 ID Low Register
FC2MB9_DATA	$8B	Message Buffer 9 Data Register
FC2MB9_DATA	$8C	Message Buffer 9 Data Register
FC2MB9_DATA	$8D	Message Buffer 9 Data Register
FC2MB9_DATA	$8E	Message Buffer 9 Data Register
		Reserved
FC2MB10_CONTROL	$90	Message Buffer 10 Control / Status Register
FC2MB10_ID_HIGH	$91	Message Buffer 10 ID High Register
FC2MB10_ID_LOW	$92	Message Buffer 10 ID Low Register
FC2MB10_DATA	$93	Message Buffer 10 Data Register
FC2MB10_DATA	$94	Message Buffer 10 Data Register
FC2MB10_DATA	$95	Message Buffer 10 Data Register
FC2MB10_DATA	$96	Message Buffer 10 Data Register
		Reserved
FC2MB11_CONTROL	$98	Message Buffer 11 Control / Status Register
FC2MB11_ID_HIGH	$99	Message Buffer 11 ID High Register
FC2MB11_ID_LOW	$9A	Message Buffer 11 ID Low Register
FC2MB11_DATA	$9B	Message Buffer 11 Data Register
FC2MB11_DATA	$9C	Message Buffer 11 Data Register
FC2MB11_DATA	$9D	Message Buffer 11 Data Register
FC2MB11_DATA	$9E	Message Buffer 11 Data Register
		Reserved
FC2MB12_CONTROL	$A0	Message Buffer 12 Control / Status Register
FC2MB12_ID_HIGH	$A1	Message Buffer 12 ID High Register
FC2MB12_ID_LOW	$A2	Message Buffer 12 ID Low Register
FC2MB12_DATA	$A3	Message Buffer 12 Data Register
FC2MB12_DATA	$A4	Message Buffer 12 Data Register
FC2MB12_DATA	$A5	Message Buffer 12 Data Register
FC2MB12_DATA	$A6	Message Buffer 12 Data Register
		Reserved

56F8365 Technical Data, Rev. 6.0

Register Acronym	Address Offset	Register Description
FC2MB13_CONTROL	$A8	Message Buffer 13 Control / Status Register
FC2MB13_ID_HIGH	$A9	Message Buffer 13 ID High Register
FC2MB13_ID_LOW	$AA	Message Buffer 13 ID Low Register
FC2MB13_DATA	$AB	Message Buffer 13 Data Register
FC2MB13_DATA	$AC	Message Buffer 13 Data Register
FC2MB13_DATA	$AD	Message Buffer 13 Data Register
FC2MB13_DATA	$AE	Message Buffer 13 Data Register
		Reserved
FC2MB14_CONTROL	$B0	Message Buffer 14 Control / Status Register
FC2MB14_ID_HIGH	$B1	Message Buffer 14 ID High Register
FC2MB14_ID_LOW	$B2	Message Buffer 14 ID Low Register
FC2MB14_DATA	$B3	Message Buffer 14 Data Register
FC2MB14_DATA	$B4	Message Buffer 14 Data Register
FC2MB14_DATA	$B5	Message Buffer 14 Data Register
FC2MB14_DATA	$B6	Message Buffer 14 Data Register
		Reserved
FC2MB15_CONTROL	$B8	Message Buffer 15 Control / Status Register
FC2MB15_ID_HIGH	$B9	Message Buffer 15 ID High Register
FC2MB15_ID_LOW	$BA	Message Buffer 15 ID Low Register
FC2MB15_DATA	$BB	Message Buffer 15 Data Register
FC2MB15_DATA	$BC	Message Buffer 15 Data Register
FC2MB15_DATA	$BD	Message Buffer 15 Data Register
FC2MB15_DATA	$BE	Message Buffer 15 Data Register
		Reserved

4.8 Factory Programmed Memory

The Boot Flash memory block is programmed during manufacturing with a default Serial Bootloader program. The Serial Bootloader application can be used to load a user application into the Program and *Data Flash* (*NOT available in the 56F8165*) memories of the device. The **56F83xx SCI/CAN Bootloader User Manual (MC56F83xxBLUM)** provides detailed information on this firmware. An application note, **Production Flash Programming (AN1973),** details how the Serial Bootloader program can be used to perform production Flash programming of the on-board Flash memories, as well as other potential methods.

Like all the Flash memory blocks the Boot Flash can be erased and programmed by the user. The Serial Bootloader application is programmed as an aid to the end user, but is not required to be used or maintained in the Boot Flash memory.

Part 5 Interrupt Controller (ITCN)

5.1 Introduction

The Interrupt Controller (ITCN) module is used to arbitrate between various interrupt requests (IRQs), to signal to the 56800E core when an interrupt of sufficient priority exists, and to what address to jump in order to service this interrupt.

5.2 Features

The ITCN module design includes these distinctive features:

- Programmable priority levels for each IRQ
- Two programmable Fast Interrupts
- Notification to SIM module to restart clocks out of Wait and Stop modes
- Drives initial address on the address bus after reset

For further information, see **Table 4-5**, Interrupt Vector Table Contents.

5.3 Functional Description

The Interrupt Controller is a slave on the IPBus. It contains registers allowing each of the 86 interrupt sources to be set to one of four priority levels, excluding certain interrupts of fixed priority. Next, all of the interrupt requests of a given level are priority encoded to determine the lowest numerical value of the active interrupt requests for that level. Within a given priority level, 0 is the highest priority, while number 85 is the lowest.

5.3.1 Normal Interrupt Handling

Once the ITCN has determined that an interrupt is to be serviced and which interrupt has the highest priority, an interrupt vector address is generated. Normal interrupt handling concatenates the VBA and the vector number to determine the vector address. In this way, an offset is generated into the vector table for each interrupt.

5.3.2 Interrupt Nesting

Interrupt exceptions may be nested to allow an IRQ of higher priority than the current exception to be serviced. The following tables define the nesting requirements for each priority level.

Table 5-1 Interrupt Mask Bit Definition

SR[9][1]	SR[8][1]	Permitted Exceptions	Masked Exceptions
0	0	Priorities 0, 1, 2, 3	None
0	1	Priorities 1, 2, 3	Priority 0
1	0	Priorities 2, 3	Priorities 0, 1
1	1	Priority 3	Priorities 0, 1, 2

1. Core status register bits indicating current interrupt mask within the core.

Table 5-2. Interrupt Priority Encoding

IPIC_LEVEL[1:0][1]	Current Interrupt Priority Level	Required Nested Exception Priority
00	No Interrupt or SWILP	Priorities 0, 1, 2, 3
01	Priority 0	Priorities 1, 2, 3
10	Priority 1	Priorities 2, 3
11	Priorities 2 or 3	Priority 3

1. See IPIC field definition in **Part 5.6.30.2**

5.3.3 Fast Interrupt Handling

Fast interrupts are described in the **DSP56800E Reference Manual**. The interrupt controller recognizes fast interrupts before the core does.

A fast interrupt is defined (to the ITCN) by:

1. Setting the priority of the interrupt as level 2, with the appropriate field in the IPR registers
2. Setting the FIMn register to the appropriate vector number.
3. Setting the FIVALn and FIVAHn registers with the address of the code for the fast interrupt

When an interrupt occurs, its vector number is compared with the FIM0 and FIM1 register values. If a match occurs, and it is a level 2 interrupt, the ITCN handles it as a fast interrupt. The ITCN takes the vector address from the appropriate FIVALn and FIVAHn registers, instead of generating an address that is an offset from the VBA.

The core then fetches the instruction from the indicated vector adddress and if it is not a JSR, the core starts its fast interrupt handling.
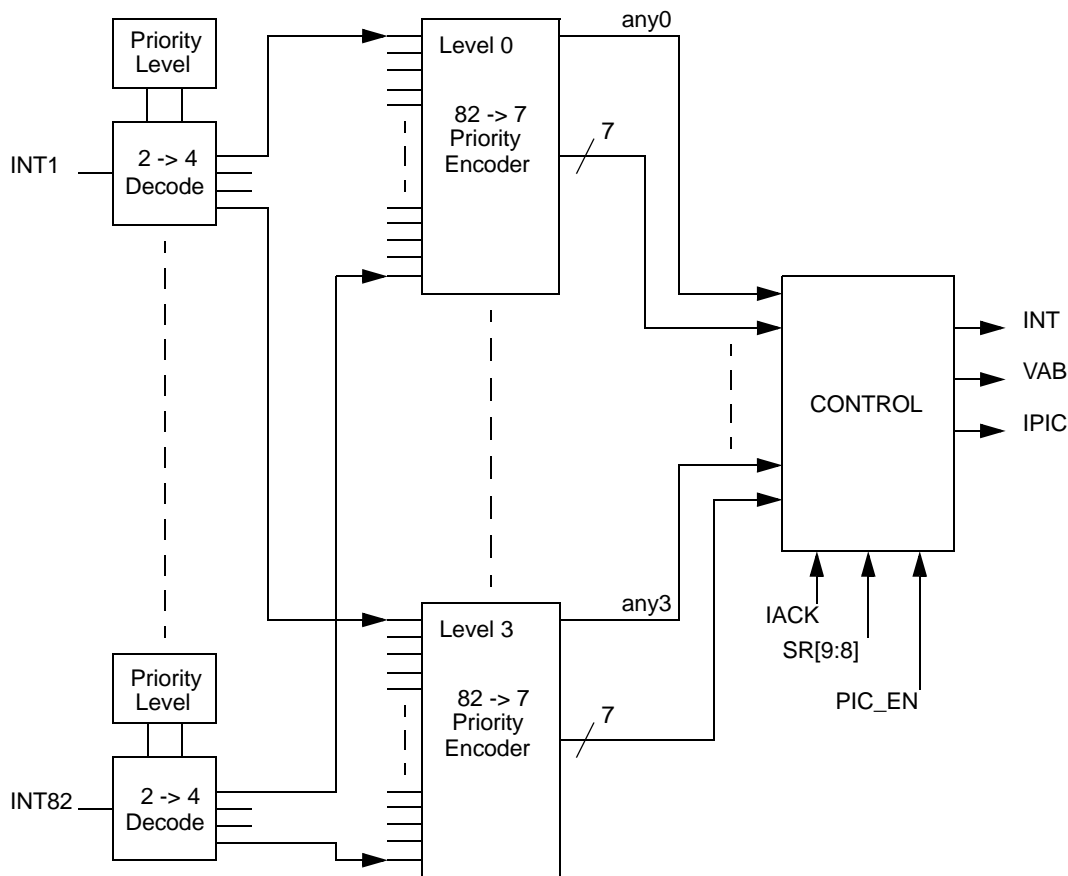
5.4 Block Diagram

Figure 5-1 Interrupt Controller Block Diagram

5.5 Operating Modes

The ITCN module design contains two major modes of operation:

- **Functional Mode**
  The ITCN is in this mode by default.

- **Wait and Stop Modes**
  During Wait and Stop modes, the system clocks and the 56800E core are turned off. The ITCN will signal a pending IRQ to the System Integration Module (SIM) to restart the clocks and service the IRQ. An IRQ can only wake up the core if the IRQ is enabled prior to entering the Wait or Stop mode. Also, the IRQA and IRQB signals automatically become low-level sensitive in these modes, even if the control register bits are set to make them falling-edge sensitive. This is because there is no clock available to detect the falling edge.

  A peripheral which requires a clock to generate interrupts will not be able to generate interrupts during Stop mode. The FlexCAN module can wake the device from Stop, and a reset will do just that, or IRQA and IRQB can wake it up.

5.6 Register Descriptions

A register address is the sum of a base address and an address offset. The base address is defined at the system level and the address offset is defined at the module level. The ITCN peripheral has 24 registers.

Table 5-3 ITCN Register Summary
(ITCN_BASE = $00F1A0)

Register Acronym	Base Address +	Register Name	Section Location
IPR0	$0	Interrupt Priority Register 0	**5.6.1**
IPR1	$1	Interrupt Priority Register 1	**5.6.2**
IPR2	$2	Interrupt Priority Register 2	**5.6.3**
IPR3	$3	Interrupt Priority Register 3	**5.6.4**
IPR4	$4	Interrupt Priority Register 4	**5.6.5**
IPR5	$5	Interrupt Priority Register 5	**5.6.6**
IPR6	$6	Interrupt Priority Register 6	**5.6.7**
IPR7	$7	Interrupt Priority Register 7	**5.6.8**
IPR8	$8	Interrupt Priority Register 8	**5.6.9**
IPR9	$9	Interrupt Priority Register 9	**5.6.10**
VBA	$A	Vector Base Address Register	**5.6.11**
FIM0	$B	Fast Interrupt 0 Match Register	**5.6.12**
FIVAL0	$C	Fast Interrupt 0 Vector Address Low Register	**5.6.13**
FIVAH0	$D	Fast Interrupt 0 Vector Address High Register	**5.6.14**
FIM1	$E	Fast Interrupt 1 Match Register	**5.6.15**
FIVAL1	$F	Fast Interrupt 1 Vector Address Low Register	**5.6.16**
FIVAH1	$10	Fast Interrupt 1 Vector Address High Register	**5.6.17**
IRQP0	$11	IRQ Pending Register 0	**5.6.18**
IRQP1	$12	IRQ Pending Register 1	**5.6.19**
IRQP2	$13	IRQ Pending Register 2	**5.6.20**
IRQP3	$14	IRQ Pending Register 3	**5.6.21**
IRQP4	$15	IRQ Pending Register 4	**5.6.22**
IRQP5	$16	IRQ Pending Register 5	**5.6.23**
Reserved			
ICTL	$1D	Interrupt Control Register	**5.6.30**
Reserved			
IPR10	$1F	Interrupt Priority Register 10	**5.6.32**

Note: IPR10 is NOT available in the 56F8165 device.

56F8365 Technical Data, Rev. 6.0

Add. Offset	Register Name		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
$0	IPR0	R	0	0	BKPT_U0 IPL		STPCNT IPL		0	0	0	0	0	0	0	0	0	0
		W																
$1	IPR1	R	0	0	0	0	0	0	0	0	0	0	RX_REG IPL		TX_REG IPL		TRBUF IPL	
		W																
$2	IPR2	R	FMCBE IPL		FMCC IPL		FMERR IPL		LOCK IPL		LVI IPL		0	0	IRQB IPL		IRQA IPL	
		W																
$3	IPR3	R	GPIOD IPL		GPIOE IPL		GPIOF IPL		FCMSGBUF IPL		FCWKUP IPL		FCERR IPL		FCBOFF IPL		0	0
		W																
$4	IPR4	R	SPI0_RCV IPL		SPI1_XMIT IPL		SPI1_RCV IPL		0	0	0	0	GPIOA IPL		GPIOB IPL		GPIOC IPL	
		W																
$5	IPR5	R	DEC1_XIRQ IPL		DEC1_HIRQ IPL		SCI1_RCV IPL		SCI1_RERR IPL		0	0	SCI1_TIDL IPL		SCI1_XMIT IPL		SPI0_XMIT IPL	
		W																
$6	IPR6	R	TMRC0 IPL		TMRD3 IPL		TMRD2 IPL		TMRD1 IPL		TMRD0 IPL		0	0	DEC0_XIRQ IPL		DEC0_HIRQ IPL	
		W																
$7	IPR7	R	TMRA0 IPL		TMRB3 IPL		TMRB2 IPL		TMRB1 IPL		TMRB0 IPL		TMRC3 IPL		TMRC2 IPL		TMRC1 IPL	
		W																
$8	IPR8	R	SCI0_RCV IPL		SCI0_RERR IPL		0	0	SCI0_TIDL IPL		SCI0_XMIT IPL		TMRA3 IPL		TMRA2 IPL		TMRA1 IPL	
		W					0	0										
$9	IPR9	R	PWMA_F IPL		PWMB_F IPL		PWMA_RL IPL		PWMB_RL IPL		ADCA_ZC IPL		ABCB_ZC IPL		ADCA_CC IPL		ADCB_CC IPL	
		W																
$A	VBA	R	0	0	0	VECTOR BASE ADDRESS												
		W																
$B	FIM0	R	0	0	0	0	0	0	0	0	0	FAST INTERRUPT 0						
		W																
$C	FIVAL0	R	FAST INTERRUPT 0 VECTOR ADDRESS LOW															
		W																
$D	FIVAH0	R	0	0	0	0	0	0	0	0	0	0	0	FAST INTERRUPT 0 VECTOR ADDRESS HIGH				
		W																
$E	FIM1	R	0	0	0	0	0	0	0	0	0	FAST INTERRUPT 1						
		W	0	0	0	0	0	0	0	0	0							
$F	FIVAL1	R	FAST INTERRUPT 1 VECTOR ADDRESS LOW															
		W																
$10	FIVAH1	R	0	0	0	0	0	0	0	0	0	0	0	FAST INTERRUPT 1 VECTOR ADDRESS HIGH				
		W	0	0	0	0	0	0	0	0	0	0	0					
$11	IRQP0	R	PENDING [16:2]															1
		W																
$12	IRQP1	R	PENDING [32:17]															
		W																
$13	IRQP2	R	PENDING [48:33]															
		W																
$14	IRQP3	R	PENDING [64:49]															
		W																
$15	IRQP4	R	PENDING [80:65]															
		W																
$16	IRQP5	R	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	PENDING [81]
		W																
	Reserved																	
$1D	ICTL	R	INT	IPIC		VAB							INT_DIS	1	IRQB STATE	IRQA STATE	$\overline{\text{IRQB}}$ EDG	$\overline{\text{IRQA}}$ EDG
		W																
	Reserved																	
$1F	IPR10	R	0	0	0	0	0	0	0	0	FLEXCAN2 MSGBUF IPL		FLEXCAN2 WKUP IPL		FLEXCAN2 ERR IPL		FLEXCAN2 BOFF IPL	
		W																

= Reserved

Figure 5-2 ITCN Register Map Summary

5.6.1 Interrupt Priority Register 0 (IPR0)

Base + $0	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	BKPT_U0IPL		STPCNT IPL		0	0	0	0	0	0	0	0	0	0
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-3 Interrupt Priority Register 0 (IPR0)

5.6.1.1 Reserved—Bits 15–14

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.1.2 EOnCE Breakpoint Unit 0 Interrupt Priority Level (BKPT_U0 IPL)— Bits13–12

This field is used to set the interrupt priority levels for IRQs. This IRQ is limited to priorities 1 through 3. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 1
- 10 = IRQ is priority level 2
- 11 = IRQ is priority level 3

5.6.1.3 EOnCE Step Counter Interrupt Priority Level (STPCNT IPL)— Bits 11–10

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 1 through 3. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 1
- 10 = IRQ is priority level 2
- 11 = IRQ is priority level 3

5.6.1.4 Reserved—Bits 9–0

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.2 Interrupt Priority Register 1 (IPR1)

Base + $1	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0	0	0	0	0	0	0	0	RX_REG IPL		TX_REG IPL		TRBUF IPL	
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-4 Interrupt Priority Register 1 (IPR1)

5.6.2.1 Reserved—Bits 15–6

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.2.2 EOnCE Receive Register Full Interrupt Priority Level (RX_REG IPL)—Bits 5–4

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 1 through 3. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 1
- 10 = IRQ is priority level 2
- 11 = IRQ is priority level 3

5.6.2.3 EOnCE Transmit Register Empty Interrupt Priority Level (TX_REG IPL)—Bits 3–2

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 1 through 3. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 1
- 10 = IRQ is priority level 2
- 11 = IRQ is priority level 3

5.6.2.4 EOnCE Trace Buffer Interrupt Priority Level (TRBUF IPL)— Bits 1–0

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 1 through 3. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 1
- 10 = IRQ is priority level 2
- 11 = IRQ is priority level 3

5.6.3 Interrupt Priority Register 2 (IPR2)

Base + $2	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	FMCBE IPL		FMCC IPL		FMERR IPL		LOCK IPL		LVI IPL		0	0	IRQB IPL		IRQA IPL	
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-5 Interrupt Priority Register 2 (IPR2)

5.6.3.1 Flash Memory Command, Data, Address Buffers Empty Interrupt Priority Level (FMCBE IPL)—Bits 15–14

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.3.2 Flash Memory Command Complete Priority Level (FMCC IPL)—Bits 13–12

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.3.3 Flash Memory Error Interrupt Priority Level (FMERR IPL)—Bits 11–10

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.3.4 PLL Loss of Lock Interrupt Priority Level (LOCK IPL)—Bits 9–8

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.3.5   Low Voltage Detector Interrupt Priority Level (LVI IPL)—Bits 7–6

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.3.6   Reserved—Bits 5–4

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.3.7   External IRQ B Interrupt Priority Level (IRQB IPL)—Bits 3–2

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.3.8   External IRQ A Interrupt Priority Level (IRQA IPL)—Bits 1–0

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. It is disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.4   Interrupt Priority Register 3 (IPR3)

Base + $3	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	GPIOD IPL		GPIOE IPL		GPIOF IPL		FCMSGBUF IPL		FCWKUP IPL		FCERR IPL		FCBOFF IPL		0	0
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-6 Interrupt Priority Register 3 (IPR3)

5.6.4.1   GPIOD Interrupt Priority Level (GPIOD IPL)—Bits 15–14

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.4.2   GPIOE Interrupt Priority Level (GPIOE IPL)—Bits 13–12

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.4.3   GPIOF Interrupt Priority Level (GPIOF IPL)—Bits 11–10

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.4.4   FlexCAN Message Buffer Interrupt Priority Level (FCMSGBUF IPL)—
Bits 9–8

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.4.5   FlexCAN Wake Up Interrupt Priority Level (FCWKUP IPL)—Bits 7–6

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.4.6   FlexCAN Error Interrupt Priority Level (FCERR IPL)— Bits 5–4

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.4.7   FlexCAN Bus Off Interrupt Priority Level (FCBOFF IPL)— Bits 3–2

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.4.8   Reserved—Bits 1–0

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.5   Interrupt Priority Register 4 (IPR4)

Base + $4	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	SPI0_RCV IPL		SPI1_XMIT IPL		SPI1_RCV IPL		0	0	0	0	GPIOA IPL		GPIOB IPL		GPIOC IPL	
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-7 Interrupt Priority Register 4 (IPR4)

5.6.5.1   SPI 0 Receiver Full Interrupt Priority Level (SPI0_RCV IPL)—Bits 15–14

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.5.2   SPI 1 Transmit Empty Interrupt Priority Level (SPI1_XMIT IPL)— Bits 13–12

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.5.3   SPI 1 Receiver Full Interrupt Priority Level (SPI1_RCV IPL)— Bits 11–10

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.5.4   Reserved—Bits 9–6

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.5.5   GPIOA Interrupt Priority Level (GPIOA IPL)—Bits 5–4

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.5.6 GPIOB Interrupt Priority Level (GPIOB IPL)—Bits 3–2

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.5.7 GPIOC Interrupt Priority Level (GPIOC IPL)—Bits 1–0

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.6 Interrupt Priority Register 5 (IPR5)

Base + $5	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	DEC1_XIRQ IPL		DEC1_HIRQ IPL		SCI1_RCV IPL		SCI1_RERR IPL		0	0	SCI1_TIDL IPL		SCI1_XMIT IPL		SPI0_XMIT IPL	
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-8 Interrupt Priority Register 5 (IPR5)

5.6.6.1 Quadrature Decoder 1 INDEX Pulse Interrupt Priority Level (DEC1_XIRQ IPL)—Bits 15–14

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

56F8365 Technical Data, Rev. 6.0

5.6.6.2 Quadrature Decoder 1 HOME Signal Transition or Watchdog Timer Interrupt Priority Level (DEC1_HIRQ IPL)—Bits 13–12

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.6.3 SCI 1 Receiver Full Interrupt Priority Level (SCI1_RCV IPL)—Bits 11–10

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.6.4 SCI 1 Receiver Error Interrupt Priority Level (SCI1_RERR IPL)— Bits 9–8

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.6.5 Reserved—Bits 7–6

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.6.6 SCI 1 Transmitter Idle Interrupt Priority Level (SCI1_TIDL IPL)— Bits 5–4

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.6.7 SCI 1 Transmitter Empty Interrupt Priority Level (SCI1_XMIT IPL)— Bits 3–2

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.6.8 SPI 0 Transmitter Empty Interrupt Priority Level (SPI0_XMIT IPL)— Bits 1–0

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.7 Interrupt Priority Register 6 (IPR6)

Base + $6	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	TMRC0 IPL		TMRD3 IPL		TMRD2 IPL		TMRD1 IPL		TMRD0 IPL		0	0	DEC0_XIRQ IPL		DEC0_HIRQ IPL	
Write	TMRC0 IPL		TMRD3 IPL		TMRD2 IPL		TMRD1 IPL		TMRD0 IPL				DEC0_XIRQ IPL		DEC0_HIRQ IPL	
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-9 Interrupt Priority Register 6 (IPR6)

5.6.7.1 Timer C, Channel 0 Interrupt Priority Level (TMRC0 IPL)—Bits 15–14

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.7.2 Timer D, Channel 3 Interrupt Priority Level (TMRD3 IPL)—Bits 13–12

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

56F8365 Technical Data, Rev. 6.0

5.6.7.3 Timer D, Channel 2 Interrupt Priority Level (TMRD2 IPL)—Bits 11–10

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.7.4 Timer D, Channel 1 Interrupt Priority Level (TMRD1 IPL)—Bits 9–8

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.7.5 Timer D, Channel 0 Interrupt Priority Level (TMRD0 IPL)—Bits 7–6

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.7.6 Reserved—Bits 5–4

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.7.7 Quadrature Decoder 0 INDEX Pulse Interrupt Priority Level (DEC0_XIRQ IPL)—Bits 3–2

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.7.8 Quadrature Decoder 0, HOME Signal Transition or Watchdog Timer Interrupt Priority Level (DEC0_HIRQ IPL)—Bits 1–0

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.8 Interrupt Priority Register 7 (IPR7)

Base + $7	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	TMRA0 IPL		TMRB3 IPL		TMRB2 IPL		TMRB1 IPL		TMRB0 IPL		TMRC3 IPL		TMRC2 IPL		TMRC1 IPL	
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-10 Interrupt Priority Register (IPR7)

5.6.8.1 Timer A, Channel 0 Interrupt Priority Level (TMRA0 IPL)— Bits 15–14

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.8.2 Timer B, Channel 3 Interrupt Priority Level (TMRB3 IPL)—Bits 13–12

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.8.3   Timer B, Channel 2 Interrupt Priority Level (TMRB2 IPL)—Bits 11–10

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.8.4   Timer B, Channel 1 Interrupt Priority Level (TMRB1 IPL)—Bits 9–8

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.8.5   Timer B, Channel 0 Interrupt Priority Level (TMRB0 IPL)—Bits 7–6

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.8.6   Timer C, Channel 3 Interrupt Priority Level (TMRC3 IPL)—Bits 5–4

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.8.7   Timer C, Channel 2 Interrupt Priority Level (TMRC2 IPL)—Bits 3–2

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.8.8   Timer C, Channel 1 Interrupt Priority Level (TMRC1 IPL)—Bits 1–0

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.9   Interrupt Priority Register 8 (IPR8)

Base + $8	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	SCI0_RCV IPL		SCI0_RERR IPL		0	0	SCI0_TIDL IPL		SCI0_XMIT IPL		TMRA3 IPL		TMRA2 IPL		TMRA1 IPL	
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-11 Interrupt Priority Register 8 (IPR8)

5.6.9.1   SCI0 Receiver Full Interrupt Priority Level (SCI0_RCV IPL)—Bits 15–14

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.9.2   SCI0 Receiver Error Interrupt Priority Level (SCI0_RERR IPL)— Bits 13–12

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.9.3   Reserved—Bits 11–10

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

56F8365 Technical Data, Rev. 6.0

5.6.9.4 SCI0 Transmitter Idle Interrupt Priority Level (SCI0_TIDL IPL)— Bits 9–8

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.9.5 SCI0 Transmitter Empty Interrupt Priority Level (SCI0_XMIT IPL)— Bits 7–6

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.9.6 Timer A, Channel 3 Interrupt Priority Level (TMRA3 IPL)—Bits 5–4

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.9.7 Timer A, Channel 2 Interrupt Priority Level (TMRA2 IPL)—Bits 3–2

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.9.8 Timer A, Channel 1 Interrupt Priority Level (TMRA1 IPL)—Bits 1–0

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.10   Interrupt Priority Register 9 (IPR9)

Base + $9	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	PWMA_F IPL		PWMB_F IPL		PWMA_RL IPL		PWMB_RL IPL		ADCA_ZC IPL		ABCB_ZC IPL		ADCA_CC IPL		ADCB_CC IPL	
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-12 Interrupt Priority Register 9 (IPR9)

5.6.10.1   PWM A Fault Interrupt Priority Level (PWMA_F IPL)—Bits 15–14

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.10.2   PWM B Fault Interrupt Priority Level (PWMB_F IPL)—Bits 13–12

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.10.3   Reload PWM A Interrupt Priority Level (PWMA_RL IPL)—Bits 11–10

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.10.4   Reload PWM B Interrupt Priority Level (PWMB_RL IPL)—Bits 9–8

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.10.5 ADC A Zero Crossing or Limit Error Interrupt Priority Level (ADCA_ZC IPL)—Bits 7–6

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.10.6 ADC B Zero Crossing or Limit Error Interrupt Priority Level (ADCB_ZC IPL)—Bits 5–4

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.10.7 ADC A Conversion Complete Interrupt Priority Level (ADCA_CC IPL)—Bits 3–2

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.10.8 ADC B Conversion Complete Interrupt Priority Level (ADCB_CC IPL)—Bits 1–0

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.11   Vector Base Address Register (VBA)

Base + $A	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0						VECTOR BASE ADDRESS							
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-13 Vector Base Address Register (VBA)

5.6.11.1   Reserved—Bits 15–13

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.11.2   Interrupt Vector Base Address (VECTOR BASE ADDRESS)—Bits 12–0

The contents of this register determine the location of the Vector Address Table. The value in this register is used as the upper 13 bits of the interrupt Vector Address Bus (VAB[20:0]). The lower eight bits are determined based upon the highest-priority interrupt. They are then appended onto VBA before presenting the full interrupt address to the 56800E core; see **Part 5.3.1** for details.

5.6.12   Fast Interrupt 0 Match Register (FIM0)

Base + $B	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0	0	0	0	0	0	0	FAST INTERRUPT 0						
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-14 Fast Interrupt 0 Match Register (FIM0)

5.6.12.1   Reserved—Bits 15–7

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.12.2   Fast Interrupt 0 Vector Number (FAST INTERRUPT 0)—Bits 6–0

This value determines which IRQ will be a Fast Interrupt 0. Fast interrupts vector directly to a service routine based on values in the Fast Interrupt Vector Address registers without having to go to a jump table first; see **Part 5.3.3**. IRQs used as fast interrupts *must* be set to priority level 2. Unexpected results will occur if a fast interrupt vector is set to any other priority. Fast interrupts automatically become the highest-priority level 2 interrupt, regardless of their location in the interrupt table, prior to being declared as fast interrupt. Fast Interrupt 0 has priority over Fast Interrupt 1. To determine the vector number of each IRQ, refer to **Table 4-5**.

5.6.13 Fast Interrupt 0 Vector Address Low Register (FIVAL0)

Base + $C	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read								FAST INTERRUPT 0								
Write								VECTOR ADDRESS LOW								
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-15 Fast Interrupt 0 Vector Address Low Register (FIVAL0)

5.6.13.1 Fast Interrupt 0 Vector Address Low (FIVAL0)—Bits 15–0

The lower 16 bits of the vector address used for Fast Interrupt 0. This register is combined with FIVAH0 to form the 21-bit vector address for Fast Interrupt 0 defined in the FIM0 register.

5.6.14 Fast Interrupt 0 Vector Address High Register (FIVAH0)

Base + $D	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0	0	0	0	0	0	0	0	0	FAST INTERRUPT 0				
Write												VECTOR ADDRESS HIGH				
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-16 Fast Interrupt 0 Vector Address High Register (FIVAH0)

5.6.14.1 Reserved—Bits 15–5

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.14.2 Fast Interrupt 0 Vector Address High (FIVAH0)—Bits 4–0

The upper five bits of the vector address used for Fast Interrupt 0. This register is combined with FIVAL0 to form the 21-bit vector address for Fast Interrupt 0 defined in the FIM0 register.

5.6.15 Fast Interrupt 1 Match Register (FIM1)

Base + $E	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0	0	0	0	0	0	0	FAST INTERRUPT 1						
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-17 Fast Interrupt 1 Match Register (FIM1)

5.6.15.1 Reserved—Bits 15–7

This bit field is reserved or not implemented. It is read as 0, but cannot be modified by writing.

5.6.15.2   Fast Interrupt 1 Vector Number (FAST INTERRUPT 1)—Bits 6–0

This value determines which IRQ will be a Fast Interrupt 1. Fast interrupts vector directly to a service routine based on values in the Fast Interrupt Vector Address registers without having to go to a jump table first; see **Part 5.3.3**. IRQs used as fast interrupts *must* be set to priority level 2. Unexpected results will occur if a fast interrupt vector is set to any other priority. Fast interrupts automatically become the highest-priority level 2 interrupt, regardless of their location in the interrupt table, prior to being declared as fast interrupt. Fast Interrupt 0 has priority over Fast Interrupt 1. To determine the vector number of each IRQ, refer to **Table 4-5**.

5.6.16   Fast Interrupt 1 Vector Address Low Register (FIVAL1)

Base + $F	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read								FAST INTERRUPT 1								
Write								VECTOR ADDRESS LOW								
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-18 Fast Interrupt 1 Vector Address Low Register (FIVAL1)

5.6.16.1   Fast Interrupt 1 Vector Address Low (FIVAL1)—Bits 15–0

The lower 16 bits of the vector address are used for Fast Interrupt 1. This register is combined with FIVAH1 to form the 21-bit vector address for Fast Interrupt 1 defined in the FIM1 register.

5.6.17   Fast Interrupt 1 Vector Address High Register (FIVAH1)

Base + $10	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0	0	0	0	0	0	0	0	0	FAST INTERRUPT 1				
Write												VECTOR ADDRESS HIGH				
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-19 Fast Interrupt 1 Vector Address High Register (FIVAH1)

5.6.17.1   Reserved—Bits 15–5

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.17.2   Fast Interrupt 1 Vector Address High (FIVAH1)—Bits 4–0

The upper five bits of the vector address are used for Fast Interrupt 1. This register is combined with FIVAL1 to form the 21-bit vector address for Fast Interrupt 1 defined in the FIM1 register.

5.6.18   IRQ Pending 0 Register (IRQP0)

Base + $11	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	PENDING [16:2]															1
Write																
RESET	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Figure 5-20 IRQ Pending 0 Register (IRQP0)

56F8365 Technical Data, Rev. 6.0

5.6.18.1 IRQ Pending (PENDING)—Bits 16–2

This register combines with the other five to represent the pending IRQs for interrupt vector numbers two through 81.

- 0 = IRQ pending for this vector number
- 1 = No IRQ pending for this vector number

5.6.18.2 Reserved—Bit 0

This bit is reserved or not implemented. It is read as 1 and cannot be modified by writing.

5.6.19 IRQ Pending 1 Register (IRQP1)

$Base + $12	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	PENDING [32:17]															
Write																
RESET	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Figure 5-21 IRQ Pending 1 Register (IRQP1)

5.6.19.1 IRQ Pending (PENDING)—Bits 32–17

This register combines with the other five to represent the pending IRQs for interrupt vector numbers 2 through 81.

- 0 = IRQ pending for this vector number
- 1 = No IRQ pending for this vector number

5.6.20 IRQ Pending 2 Register (IRQP2)

Base + $13	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	PENDING [48:33]															
Write																
RESET	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Figure 5-22 IRQ Pending 2 Register (IRQP2)

5.6.20.1 IRQ Pending (PENDING)—Bits 48–33

This register combines with the other five to represent the pending IRQs for interrupt vector numbers 2 through 81.

- 0 = IRQ pending for this vector number
- 1 = No IRQ pending for this vector number

5.6.21 IRQ Pending 3 Register (IRQP3)

Base + $14	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	PENDING [64:49]															
Write																
RESET	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Figure 5-23 IRQ Pending 3 Register (IRQP3)

5.6.21.1 IRQ Pending (PENDING)—Bits 64–49

This register combines with the other five to represent the pending IRQs for interrupt vector numbers 2 through 81.

- 0 = IRQ pending for this vector number
- 1 = No IRQ pending for this vector number

5.6.22 IRQ Pending 4 Register (IRQP4)

Base + $15	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	PENDING [80:65]															
Write																
RESET	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Figure 5-24 IRQ Pending 4 Register (IRQP4)

5.6.22.1 IRQ Pending (PENDING)—Bits 80–65

This register combines with the other five to represent the pending IRQs for interrupt vector numbers 2 through 81.

- 0 = IRQ pending for this vector number
- 1 = No IRQ pending for this vector number

5.6.23 IRQ Pending 5 Register (IRQP5)

Base + $16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	1	1	1	1	1	1	1	1	1	1	1	PENDING[85:81]				
Write																
RESET	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Figure 5-25 IRQ Pending Register 5 (IRQP5)

5.6.23.1 Reserved—Bits 96–86

This bit field is reserved or not implemented. The bits are read as 1 and cannot be modified by writing.

56F8365 Technical Data, Rev. 6.0

5.6.23.2 IRQ Pending (PENDING)—Bits 81–85

This register combines with the other five to represent the pending IRQs for interrupt vector numbers 2 through 85.

- 0 = IRQ pending for this vector number
- 1 = No IRQ pending for this vector number

5.6.24 Reserved—Base + 17

5.6.25 Reserved—Base + 18

5.6.26 Reserved—Base + 19

5.6.27 Reserved—Base + 1A

5.6.28 Reserved—Base + 1B

5.6.29 Reserved—Base + 1C

5.6.30 ITCN Control Register (ICTL)

Base + $1D	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	INT	IPIC		VAB							INT_DIS	1	$\overline{\text{IRQB}}$ STATE	$\overline{\text{IRQA}}$ STATE	$\overline{\text{IRQB}}$ EDG	$\overline{\text{IRQA}}$ EDG
Write											INT_DIS				$\overline{\text{IRQB}}$ EDG	$\overline{\text{IRQA}}$ EDG
RESET	0	0	0	1	0	0	0	0	0	0	0	1	1	1	0	0

Figure 5-26 ITCN Control Register (ICTL)

5.6.30.1 Interrupt (INT)—Bit 15

This *read-only* bit reflects the state of the interrupt to the 56800E core.

- 0 = No interrupt is being sent to the 56800E core
- 1 = An interrupt is being sent to the 56800E core

5.6.30.2 Interrupt Priority Level (IPIC)—Bits 14–13

These *read-only* bits reflect the state of the new interrupt priority level bits being presented to the 56800E core at the time the last IRQ was taken. This field is only updated when the 56800E core jumps to a new interrupt service routine.

Note: Nested interrupts may cause this field to be updated before the original interrupt service routine can read it.

- 00 = Required nested exception priority levels are 0, 1, 2, or 3
- 01 = Required nested exception priority levels are 1, 2, or 3
- 10 = Required nested exception priority levels are 2 or 3
- 11 = Required nested exception priority level is 3

5.6.30.3   Vector Number - Vector Address Bus (VAB)—Bits 12–6

This *read-only* field shows the vector number (VAB[7:1]) used at the time the last IRQ was taken. This field is only updated when the 56800E core jumps to a new interrupt service routine.

Note: Nested interrupts may cause this field to be updated before the original interrupt service routine can read it.

5.6.30.4   Interrupt Disable (INT_DIS)—Bit 5

This bit allows all interrupts to be disabled.

- 0 = Normal operation (default)
- 1 = All interrupts disabled

5.6.30.5   Reserved—Bit 4

This bit field is reserved or not implemented. It is read as 1 and cannot be modified by writing.

5.6.30.6 $\overline{\text{IRQB}}$ State Pin (IRQB STATE)—Bit 3

This *read-only* bit reflects the state of the external $\overline{\text{IRQB}}$ pin.

5.6.30.7 $\overline{\text{IRQA}}$ State Pin (IRQA STATE)—Bit 2

This *read-only* bit reflects the state of the external $\overline{\text{IRQA}}$ pin.

5.6.30.8 $\overline{\text{IRQB}}$ Edge Pin (IRQB Edg)—Bit 1

This bit controls whether the external $\overline{\text{IRQB}}$ interrupt is edge or level sensitive. During Stop and Wait modes, it is automatically level-sensitive.

- 0 = $\overline{\text{IRQB}}$ interrupt is a low-level sensitive (default)
- 1 = $\overline{\text{IRQB}}$ interrupt is falling-edge sensitive.

5.6.30.9 $\overline{\text{IRQA}}$ Edge Pin (IRQA Edg)—Bit 0

This bit controls whether the external $\overline{\text{IRQA}}$ interrupt is edge or level sensitive. During Stop and Wait modes, it is automatically level-sensitive.

- 0 = $\overline{\text{IRQA}}$ interrupt is a low-level sensitive (default)
- 1 = $\overline{\text{IRQA}}$ interrupt is falling-edge sensitive.

5.6.31   Reserved—Base + $1E

5.6.32   Interrupt Priority Register 10 (IPR10)

Base + $1F	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0	0	0	0	0	0	FLEXCAN2_ MSGBUF IPL		FLEXCAN2_ WKUP IPL		FLEXCAN2_ ERR IPL		FLEXCAN2_ BOFF IPL	
Write																
RESET	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0

Figure 5-27 Interrupt Priority Register 10 (IPR10)

Note: This register is NOT available in the 56F8165 device.

5.6.32.1   Reserved—Bits 15 - 8

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

5.6.32.2   FlexCAN2 Message Buffer Interrupt Priority Level (FlexCAN2_MSGBUF IPL)—Bits 7 - 6

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.32.3   FlexCAN2 Wake Up Interrupt Priority Level (FlexCAN2_WKUP IPL)—Bits 5 - 4

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.32.4   FlexCAN2 Error Interrupt Priority Level (FlexCAN2_ERR IPL)—Bits 3 - 2

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.6.32.5 FlexCAN2 Bus-Off Interrupt Priority Level (FlexCAN2_BOFF IPL)— Bits 1 - 0

This field is used to set the interrupt priority level for IRQs. This IRQ is limited to priorities 0 through 2. They are disabled by default.

- 00 = IRQ disabled (default)
- 01 = IRQ is priority level 0
- 10 = IRQ is priority level 1
- 11 = IRQ is priority level 2

5.7 Resets

5.7.1 Reset Handshake Timing

The ITCN provides the 56800E core with a reset vector address whenever $\overline{\text{RESET}}$ is asserted. The reset vector will be presented until the second rising clock edge after $\overline{\text{RESET}}$ is released.

5.7.2 ITCN After Reset

After reset, all of the ITCN registers are in their default states. This means all interrupts are disabled except the core IRQs with fixed priorities:

- Illegal Instruction
- SW Interrupt 3
- HW Stack Overflow
- Misaligned Long Word Access
- SW Interrupt 2
- SW Interrupt 1
- SW Interrupt 0
- SW Interrupt LP

These interrupts are enabled at their fixed priority levels.

Part 6 System Integration Module (SIM)

6.1 Introduction

The SIM module is a system catchall for the glue logic that ties together the system-on-chip. It controls distribution of resets and clocks and provides a number of control features. The system integration module is responsible for the following functions:

- Reset sequencing
- Clock generation & distribution
- Stop/Wait control
- Pull-up enables for selected peripherals
- System status registers
- Registers for software access to the JTAG ID of the chip
- Enforcing Flash security

These are discussed in more detail in the sections that follow.

6.2 Features

The SIM has the following features:

- Flash security feature prevents unauthorized access to code/data contained in on-chip Flash memory
- Power-saving clock gating for peripheral
- Three power modes (Run, Wait, Stop) to control power utilization
  - Stop mode shuts down the 56800E core, system clock, peripheral clock, and PLL operation
  - Stop mode entry can optionally disable PLL and Oscillator (low power vs. fast restart); must be explicitly done
  - Wait mode shuts down the 56800E core and unnecessary system clock operation
  - Run mode supports full part operation
- Controls to enable/disable the 56800E core WAIT and STOP instructions
- Calculates base delay for reset extension based upon POR or $\overline{\text{RESET}}$ operations. Reset delay will be 3 x 32 clocks (phased release of reset) for reset, except for POR, which is 2^{21} clock cycles
- Controls reset sequencing after reset
- Software-initiated reset
- Four 16-bit registers reset only by a Power-On Reset usable for general-purpose software control
- System Control Register
- Registers for software access to the JTAG ID of the chip

6.3 Operating Modes

Since the SIM is responsible for distributing clocks and resets across the chip, it must understand the various chip operating modes and take appropriate action. These are:

- **Reset Mode,** which has two submodes:
    - POR and $\overline{\text{RESET}}$ operation
      The 56800E core and all peripherals are reset. This occurs when the internal POR is asserted or the $\overline{\text{RESET}}$ pin is asserted.

    - COP reset and software reset operation
      The 56800E core and all peripherals are reset. The MA bit within the OMR is not changed. This allows the software to determine the boot mode (internal or external boot) to be used on the next reset.

- **Run Mode**
  This is the primary mode of operation for this device. In this mode, the 56800E controls chip operation.

- **Debug Mode**
  The 56800E is controlled via JTAG/EOnCE when in debug mode. All peripherals, except the COP and PWMs, continue to run. COP is disabled and PWM outputs are optionally switched off to disable any motor from being driven; see the PWM chapter in the **56F8300 Peripheral User Manual** for details.

- **Wait Mode**
  In Wait mode, the core clock and memory clocks are disabled. Optionally, the COP can be stopped. Similarly, it is an option to switch off PWM outputs to disable any motor from being driven. All other peripherals continue to run.

- **Stop Mode**
  When in Stop mode, the 56800E core, memory and most peripheral clocks are shut down. Optionally, the COP and CAN can be stopped. For lowest power consumption in Stop mode, the PLL can be shut down. This must be done explicitly before entering Stop mode, since there is no automatic mechanism for this. The CAN (along with any non-gated interrupt) is capable of waking the chip up from Stop mode, but is not fully functional in Stop mode.

6.4 Operating Mode Register

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	NL							CM	XP	SD	R	SA	EX	0	MB	MA
Type	R/W							R/W	R/W	R/W	R/W	R/W	R/W		R/W	R/W
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	X	X

Figure 6-1 OMR

The reset state for MB and MA will depend on the Flash secured state. See **Part 4.2** and **Part 7** for detailed information on how the Operating Mode Register (OMR) MA and MB bits operate in this device. For additional information on the EX bit, see **Part 4.4**. For all other bits, see the **DSP56F800E Reference Manual**.

Note: The OMR is not a Memory Map register; it is directly accessible in code through the acronym OMR.

56F8365 Technical Data, Rev. 6.0

6.5 Register Descriptions

Table 6-1 SIM Registers (SIM_BASE = $00 F350)

Address Offset	Address Acronym	Register Name	Section Location
Base + $0	SIM_CONTROL	Control Register	**6.5.1**
Base + $1	SIM_RSTSTS	Reset Status Register	**6.5.2**
Base + $2	SIM_SCR0	Software Control Register 0	**6.5.3**
Base + $3	SIM_SCR1	Software Control Register 1	**6.5.3**
Base + $4	SIM_SCR2	Software Control Register 2	**6.5.3**
Base + $5	SIM_SCR3	Software Control Register 3	**6.5.3**
Base + $6	SIM_MSH_ID	Most Significant Half of JTAG ID	**6.5.4**
Base + $7	SIM_LSH_ID	Least Significant Half of JTAG ID	**6.5.5**
Base + $8	SIM_PUDR	Pull-up Disable Register	**6.5.6**
		Reserved	
Base + $A	SIM_CLKOSR	CLKO Select Register	**6.5.7**
Base + $B	SIM_GPS	GPIO Peripheral Select Register	**6.5.8**
Base + $C	SIM_PCE	Peripheral Clock Enable Register	**6.5.9**
Base + $D	SIM_ISALH	I/O Short Address Location High Register	**6.5.10**
Base + $E	SIM_ISALL	I/O Short Address Location Low Register	**6.5.10**
Base + $F	SIM_PCE2	Peripheral Clock Enable Register 2	**6.5.11**

Add. Offset	Register Name	R/W	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
$0	SIM_ CONTROL	R	0	0	0	0	0	0	0	0	0	0	ONCE EBL	SW RST	STOP_ DISABLE		WAIT_ DISABLE	
		W																
$1	SIM_ RSTSTS	R	0	0	0	0	0	0	0	0	0	0	SWR	COPR	EXTR	POR	0	0
		W																
$2	SIM_SCR0	R	FIELD															
		W																
$3	SIM_SCR1	R	FIELD															
		W																
$4	SIM_SCR2	R	FIELD															
		W																
$5	SIM_SCR3	R	FIELD															
		W																
$6	SIM_MSH_ ID	R	0	0	0	0	0	0	0	1	1	1	0	1	0	1	1	0
		W																
$7	SIM_LSH_ID	R	1	1	0	1	0	0	0	0	0	0	0	1	1	1	0	1
		W																
$8	SIM_PUDR	R	0	PWMA1	CAN	EMI_ MODE	RESET	IRQ	XBOOT	PWMB	PWMA0	0	CTRL	0	JTAG	0	0	0
		W																
Reserved																		
$A	SIM_ CLKOSR	R	0	0	0	0	0	0	$\overline{A23}$	$\overline{A22}$	$\overline{A21}$	$\overline{A20}$	CLKDIS	CLKOSEL				
		W																
$B	SIM_GPS	R	0	0	0	0	0	0	0	0	0	0	D1	D0	C3	C2	C1	C0
		W																
$C	SIM_PCE	R	EMI	ADCB	ADCA	CAN	DEC1	DEC 0	TMRD	TMRC	TMRB	TMRA	SCI1	SCI0	SPI1	SPI0	PWMB	PWMA
		W																
$D	SIM_ISALH	R	1	1	1	1	1	1	1	1	1	1	1	1	1	1	ISAL[23:22]	
		W																
$E	SIM_ISALL	R	ISAL[21:6]															
		W																
$F	SIM_PCE2	R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	CAN2
		W																

■ = Reserved

Figure 6-2 SIM Register Map Summary

6.5.1 SIM Control Register (SIM_CONTROL)

Base + $0	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0	0	0	0	0	0	0	0	ONCE EBL	SW RST	STOP_ DISABLE		WAIT_ DISABLE	
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-3 SIM Control Register (SIM_CONTROL)

6.5.1.1 Reserved—Bits 15–6

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

6.5.1.2 OnCE Enable (OnCE EBL)—Bit 5

- 0 = OnCE clock to 56800E core enabled when core TAP is enabled
- 1 = OnCE clock to 56800E core is always enabled

56F8365 Technical Data, Rev. 6.0

6.5.1.3 Software Reset (SW RST)—Bit 4

This bit is always read as 0. Writing a 1 to this bit will cause the part to reset.

6.5.1.4 Stop Disable (STOP_DISABLE)—Bits 3–2

- 00 = Stop mode will be entered when the 56800E core executes a STOP instruction
- 01 = The 56800E STOP instruction will not cause entry into Stop mode; STOP_DISABLE can be reprogrammed in the future
- 10 = The 56800E STOP instruction will not cause entry into Stop mode; STOP_DISABLE can then only be changed by resetting the device
- 11 = Same operation as 10

6.5.1.5 Wait Disable (WAIT_DISABLE)—Bits 1–0

- 00 = Wait mode will be entered when the 56800E core executes a WAIT instruction
- 01 = The 56800E WAIT instruction will not cause entry into Wait mode; WAIT_DISABLE can be reprogrammed in the future
- 10 = The 56800E WAIT instruction will not cause entry into Wait mode; WAIT_DISABLE can then only be changed by resetting the device
- 11 = Same operation as 10

6.5.2 SIM Reset Status Register (SIM_RSTSTS)

Bits in this register are set upon any system reset and are initialized only by a Power-On Reset (POR). A reset (other than POR) will only set bits in the register; bits are not cleared. Only software should clear this register.

Base + $1	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	O	0	0	0	0	0	0	0	SWR	COPR	EXTR	POR	0	0
Write																
RESET	0	0	0	0	0	0	0	0	0	0					0	0

Figure 6-4 SIM Reset Status Register (SIM_RSTSTS)

6.5.2.1 Reserved—Bits 15–6

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

6.5.2.2 Software Reset (SWR)—Bit 5

When 1, this bit indicates that the previous reset occurred as a result of a software reset (write to SW RST bit in the SIM_CONTROL register). This bit will be cleared by any hardware reset or by software. Writing a 0 to this bit position will set the bit, while writing a 1 to the bit will clear it.

6.5.2.3 COP Reset (COPR)—Bit 4

When 1, the COPR bit indicates the Computer Operating Properly (COP) timer-generated reset has occurred. This bit will be cleared by a Power-On Reset or by software. Writing a 0 to this bit position will set the bit, while writing a 1 to the bit will clear it.

6.5.2.4 External Reset (EXTR)—Bit 3

If 1, the EXTR bit indicates an external system reset has occurred. This bit will be cleared by a Power-On Reset or by software. Writing a 0 to this bit position will set the bit, while writing a 1 to the bit position will clear it. Basically, when the EXTR bit is 1, the previous system reset was caused by the external RESET pin being asserted low.

6.5.2.5 Power-On Reset (POR)—Bit 2

When 1, the POR bit indicates a Power-On Reset occurred some time in the past. This bit can only be cleared by software or by another type of reset. Writing a 0 to this bit will set the bit, while writing a 1 to the bit position will clear the bit. In summary, if the bit is 1, the previous system reset was due to a Power-On Reset.

6.5.2.6 Reserved—Bits 1–0

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

6.5.3 SIM Software Control Registers (SIM_SCR0, SIM_SCR1, SIM_SCR2, and SIM_SCR3)

Only SIM_SCR0 is shown in this section. SIM_SCR1, SIM_SCR2, and SIM_SCR3 are identical in functionality.

Base + $2	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read								FIELD								
Write																
POR	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-5 SIM Software Control Register 0 (SIM_SCR0)

6.5.3.1 Software Control Data 1 (FIELD)—Bits 15–0

This register is reset only by the Power-On Reset (POR). It has no part-specific functionality and is intended for use by a software developer to contain data that will be unaffected by the other reset sources (RESET pin, software reset, and COP reset).

6.5.4 Most Significant Half of JTAG ID (SIM_MSH_ID)

This read-only register displays the most significant half of the JTAG ID for the chip. This register reads $01D6.

56F8365 Technical Data, Rev. 6.0

Base + $6	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0	0	0	0	0	1	1	1	0	1	0	1	1	0
Write																
RESET	0	0	0	0	0	0	0	1	1	1	0	1	0	1	1	0

Figure 6-6 Most Significant Half of JTAG ID (SIM_MSH_ID)

6.5.5 Least Significant Half of JTAG ID (SIM_LSH_ID)

This read-only register displays the least significant half of the JTAG ID for the chip. This register reads $D01D.

Base + $7	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	1	1	0	1	0	0	0	0	0	0	0	1	1	1	0	1
Write																
RESET	1	1	0	1	0	0	0	0	0	0	0	1	1	1	0	1

Figure 6-7 Least Significant Half of JTAG ID (SIM_LSH_ID)

6.5.6 SIM Pull-up Disable Register (SIM_PUDR)

Most of the pins on the chip have on-chip pull-up resistors. Pins which can operate as GPIO can have these resistors disabled via the GPIO function. Non-GPIO pins can have their pull-ups disabled by setting the appropriate bit in this register. Disabling pull-ups is done on a peripheral-by-peripheral basis (for pins not muxed with GPIO). Each bit in the register (see **Figure 6-8**) corresponds to a functional group of pins. See **Table 2-2** to identify which pins can deactivate the internal pull-up resistor.

Base + $8	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	PWMA1	CAN	EMI_MODE	RESET	IRQ	XBOOT	PWMB	PWMA0	0	CTRL	0	JTAG	0	0	0
Write		PWMA1	CAN	EMI_MODE	RESET	IRQ	XBOOT	PWMB	PWMA0		CTRL		JTAG			
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-8 SIM Pull-up Disable Register (SIM_PUDR)

6.5.6.1 Reserved—Bit 15

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

6.5.6.2 PWMA1—Bit 14

This bit controls the pull-up resistors on the FAULTA3 pin.

6.5.6.3 CAN—Bit 13

This bit controls the pull-up resistors on the CAN_RX pin.

6.5.6.4　EMI_MODE—Bit 12

This bit controls the pull-up resistors on the EMI_MODE pin.

Note:　In this package, this input pin is double-bonded with the adjacent V_{SS} pin and this bit should be changed to a 1 in order to reduce power consumption.

6.5.6.5　$\overline{\text{RESET}}$—Bit 11

This bit controls the pull-up resistors on the $\overline{\text{RESET}}$ pin.

6.5.6.6　IRQ—Bit 10

This bit controls the pull-up resistors on the $\overline{\text{IRQA}}$ and $\overline{\text{IRQB}}$ pins.

6.5.6.7　XBOOT—Bit 9

This bit controls the pull-up resistors on the EXTBOOT pin.

Note:　In this package, this input pin is double-bonded with the adjacent V_{SS} pin and this bit should be changed to a 1 in order to reduce power consumption.

6.5.6.8　PWMB—Bit 8

This bit controls the pull-up resistors on the FAULTB0, FAULTB1, FAULTB2, and FAULTB3 pins.

6.5.6.9　PWMA0—Bit 7

This bit controls the pull-up resistors on the FAULTA0, FAULTA1, and FAULTA2 pins.

6.5.6.10　Reserved—Bit 6

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

6.5.6.11　CTRL—Bit 5

This bit controls the pull-up resistors on the $\overline{\text{WR}}$ and $\overline{\text{RD}}$ pins.

6.5.6.12　Reserved—Bit 4

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

6.5.6.13　JTAG—Bit 3

This bit controls the pull-up resistors on the $\overline{\text{TRST}}$, TMS and TDI pins.

6.5.6.14　Reserved—Bit 2–0

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

6.5.7　CLKO Select Register (SIM_CLKOSR)

The CLKO select register can be used to multiplex out any one of the clocks generated inside the clock generation and SIM modules. The default value is SYS_CLK. This path has been optimized in order to minimize any delay and clock duty cycle distortion. All other clocks primarily muxed out are for test purposes only, and are subject to significant phase shift at high frequencies.

56F8365 Technical Data, Rev. 6.0

The upper four bits of the GPIOB register can function as GPIO, [A23:A20], or as additional clock output signals. GPIO has priority and is enabled/disabled via the GPIOB_PER. If GPIOB[7:4] are programmed to operate as peripheral outputs, then the choice between [A23:A20] and additional clock outputs is done here in the CLKOSR. The default state is for the peripheral function of GPIOB[7:4] to be programmed as [A23:A20]. This can be changed by altering [A23:A20], as shown in **Figure 6-9**.

Base + $A	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0	0	0	0	A23	A22	A21	A20	CLK DIS	CLKOSEL				
Write																
RESET	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0

Figure 6-9 CLKO Select Register (SIM_CLKOSR)

6.5.7.1   Reserved—Bits 15–10

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

6.5.7.2   Alternate GPIO_B Peripheral Function for A23 (A23)—Bit 9

- 0 = Peripheral output function of GPIOB[7] is defined to be A[23]
- 1 = Peripheral output function of GPIOB[7] is defined to be the oscillator_clock (MSTR_OSC, see **Figure 3-4**)

6.5.7.3   Alternate GPIO_B Peripheral Function for A22 (A22)—Bit 8

- 0 = Peripheral output function of GPIOB[6] is defined to be A[22]
- 1 = Peripheral output function of GPIOB[6] is defined to be SYS_CLK2

6.5.7.4   Alternate GPIO_B Peripheral Function for A21 (A21)—Bit 7

- 0 = Peripheral output function of GPIOB[5] is defined to be A[21]
- 1 = Peripheral output function of GPIOB[5] is defined to be SYS_CLK

6.5.7.5   Alternate GPIO_B Peripheral Function for A20 (A20)—Bit 6

- 0 = Peripheral output function of GPIOB[4] is defined to be A[20]
- 1 = Peripheral output function of GPIOB[4] is defined to be the prescaler_clock (FREF, see **Figure 3-4**)

6.5.7.6   Clockout Disable (CLKDIS)—Bit 5

- 0 = CLKOUT output is enabled and will output the signal indicated by CLKOSEL
- 1 = CLKOUT is tri-stated

6.5.7.7   CLockout Select (CLKOSEL)—Bits 4–0

Selects clock to be muxed out on the CLKO pin.

- 00000 = SYS_CLK (from OCCS - DEFAULT)
- 00001 = Reserved for factory test—56800E clock
- 00010 = Reserved for factory test—XRAM clock

- 00011 = Reserved for factory test—PFLASH odd clock
- 00100 = Reserved for factory test—PFLASH even clock
- 00101 = Reserved for factory test—BFLASH clock
- 00110 = Reserved for factory test—DFLASH clock
- 00111 = Oscillator output
- 01000 = F_{out} (from OCCS)
- 01001 = Reserved for factory test—IPB clock
- 01010 = Reserved for factory test—Feedback (from OCCS, this is path to PLL)
- 01011 = Reserved for factory test—Prescaler clock (from OCCS)
- 01100 = Reserved for factory test—Postscaler clock (from OCCS)
- 01101 = Reserved for factory test—SYS_CLK2 (from OCCS)
- 01110 = Reserved for factory test—SYS_CLK_DIV2
- 01111 = Reserved for factory test—SYS_CLK_D
- 10000 = ADCA clock
- 10001 = ADCB clock

6.5.8   GPIO Peripheral Select Register (SIM_GPS)

Some GPIO pads can have more than one peripheral selected as the alternate function instead of GPIO. For these pads, this register selects which of the alternate peripherals are actually selected for the GPIO peripheral function. This applies to GPIOC, pins 0-3, and to GPIOD, pins 0 and 1.

The GPIOC Peripheral Select Register can be used to multiplex out any one of the three alternate peripherals for GPIOC. The default peripheral is *Quad Decoder 1* and *Quad Timer B* (NOT available in the 56F8165 device); these peripherals work together.

The four I/O pins associated with GPIOC can function as GPIO, *Quad Decoder 1/Quad Timer B*, or as SPI 1 signals. GPIO is not the default and is enabled/disabled via the GPIOC_PER, as shown in **Figure 6-10** and **Table 6-2**. When GPIOC[3:0] are programmed to operate as peripheral I/O, then the choice between decoder/timer and SPI inputs/outputs is made in the SIM_GPS and in conjunction with the Quad Timer Status and Control Registers (SCR). The default state is for the peripheral function of GPIOC[3:0] to be programmed as decoder functions. This can be changed by altering the appropriate controls in the indicated registers.

56F8365 Technical Data, Rev. 6.0
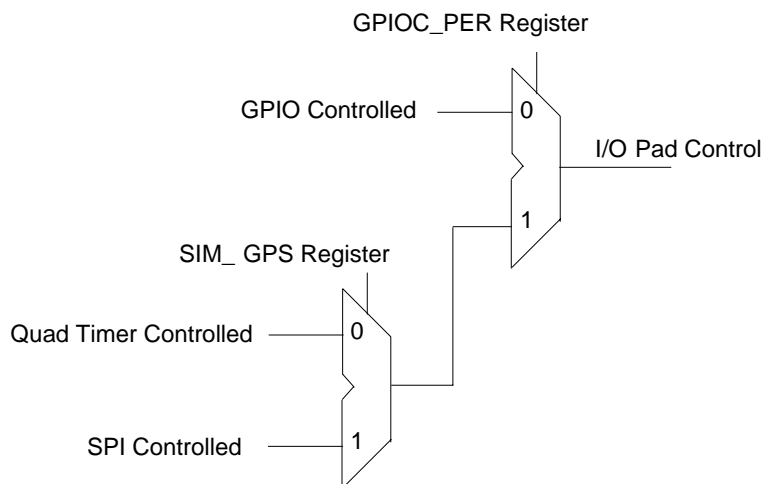
Figure 6-10 Overall Control of GPIOC Pads Using SIM_GPS Control

Table 6-2 Control of GPIOC Pads Using SIM_GPS Control [1]

Pin Function	Control Registers				Comments
	GPIOC_PER	GPIOC_DTR	SIM_GPS	Quad Timer SCR Register OEN bits	
GPIO Input	0	0	—	—	
GPIO Output	0	1	—	—	
Quad Timer Input / Quad Decoder Input [2]	1	—	0	0	See the "Switch Matrix for Inputs to the Timer" table in the **56F8300 Peripheral User Manual** for the definition of timer inputs based on the Quad Decoder mode configuration.
Quad Timer Output / Quad Decoder Input [3]	1	—	0	1	
SPI input	1	—	1	—	See SPI controls for determining the direction of each of the SPI pins.
SPI output	1	—	1	—	

1. This applies to the four pins that serve as Quad Decoder / Quad Timer / SPI / GPIOC functions. A separate set of control bits is used for each pin.

2. Reset configuration

3. Quad Decoder pins are always inputs and function in conjunction with the Quad Timer pins.

Two Input/Output pins associated with GPIOD can function as GPIO, EMI (default peripheral) or CAN2 signals. GPIO is the default and is enabled/disabled via the GPIOD_PER, as shown in **Figure 6-11** and **Table 6-3**. When GPIOD[1:0] are programmed to operate as peripheral input/output, then the choice between EMI and CAN2 inputs/outputs is made here in the GPS.
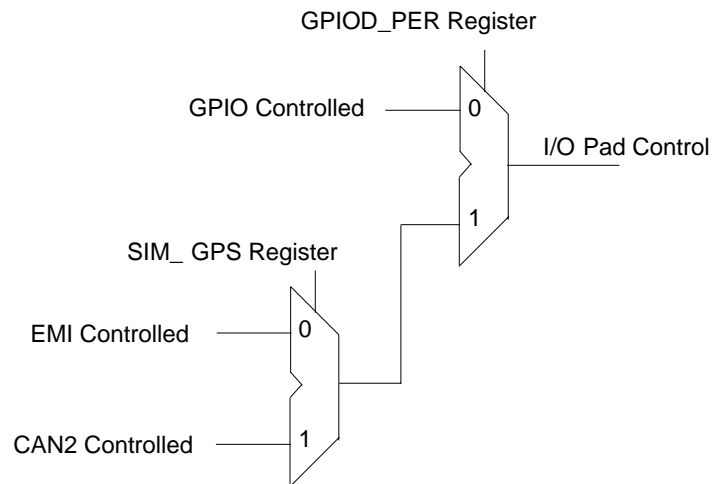
Figure 6-11 Overall Control of GPIOD Pads Using SIM_GPS Control

Table 6-3 Control of GPIOD Pads Using SIM_GPS Control [1]

Pin Function	Control Registers			Comments
	GPIOD_PER	GPIOD_DDR	SIM_GPS	
GPIO Input	0	0	—	
GPIO Output	0	1	—	
EMI I/O	1	—	0	EMI $\overline{CSn}$ pins are always outputs
CAN2	1	—	1	CAN2_TX is always an output CAN2_RX is always an input

1. This applies to the two pins that serve as EMI $\overline{CSn}$ / CAN2 / GPIOD functions. A separate set of control bits is used for each pin.

Base + $B	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0	0	0	0	0	0	0	0	D1	D0	C3	C2	C1	C0
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-12 GPIO Peripheral Select Register (SIM_GPS)

6.5.8.1 Reserved—Bits 15–6

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

56F8365 Technical Data, Rev. 6.0

6.5.8.2   GPIOD1 (D1)—Bit 5

This bit selects the alternate function for GPIOD1.

- $0 = \overline{CS3}$
- 1 = CAN2_RX

6.5.8.3   GPIOD0 (D0)—Bit 4

- $0 = \overline{CS2}$
- 1 = CAN2_TX

6.5.8.4   GPIOC3 (C3)—Bit 3

This bit selects the alternate function for GPIOC3.

- 0 = HOME1/TB3 (default - see "Switch Matrix Mode" bits of the Quad Decoder DECCR register in the **56F8300 Peripheral User Manual**)
- $1 = \overline{SS1}$

6.5.8.5   GPIOC2 (C2)—Bit 2

This bit selects the alternate function for GPIOC2.

- 0 = INDEX1/TB2 (default)
- 1 = MISO1

6.5.8.6   GPIOC1 (C1)—Bit 1

This bit selects the alternate function for GPIOC1.

- 0 = PHASEB1/TB1 (default)
- 1 = MOSI1

6.5.8.7   GPIOC0 (C0)—Bit 0

This bit selects the alternate function for GPIOC0.

- 0 = PHASEA1/TB0 (default)
- 1 = SCLK1

6.5.9   Peripheral Clock Enable Register (SIM_PCE)

The Peripheral Clock Enable register is used to enable or disable clocks to the peripherals as a power savings feature. The clocks can be individually controlled for each peripheral on the chip.

Base + $C	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	EMI	ADCB	ADCA	CAN	DEC1	DEC0	TMRD	TMRC	TMRB	TMRA	SCI1	SCI0	SPI1	SPI0	PWMB	PWMA
Write																
RESET	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Figure 6-13 Peripheral Clock Enable Register (SIM_PCE)

6.5.9.1   External Memory Interface Enable (EMI)—Bit 15

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.2   Analog-to-Digital Converter B Enable (ADCB)—Bit 14

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.3   Analog-to-Digital Converter A Enable (ADCA)—Bit 13

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.4   FlexCAN Enable (CAN)—Bit 12

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.5   Decoder 1 Enable (DEC1)—Bit 11

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.6   Decoder 0 Enable (DEC0)—Bit 10

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.7   Quad Timer D Enable (TMRD)—Bit 9

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.8   Quad Timer C Enable (TMRC)—Bit 8

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.9   Quad Timer B Enable (TMRB)—Bit 7

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.10   Quad Timer A Enable (TMRA)—Bit 6

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.11   Serial Communications Interface 1 Enable (SCI1)—Bit 5

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.12   Serial Communications Interface 0 Enable (SCI0)—Bit 4

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.13   Serial Peripheral Interface 1 Enable (SPI1)—Bit 3

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.14   Serial Peripheral Interface 0 Enable (SPI0)—Bit 2

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.15 Pulse Width Modulator B Enable (PWMB)—Bit 1

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.9.16 Pulse Width Modulator A Enable (PWMA)—Bit 0

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.5.10 I/O Short Address Location Register (SIM_ISALH and SIM_ISALL)

The I/O Short Address Location registers are used to specify the memory referenced via the I/O short address mode. The I/O short address mode allows the instruction to specify the lower six bits of address; the upper address bits are not directly controllable. This register set allows limited control of the full address, as shown in **Figure 6-14**.

Note: If this register is set to something other than the top of memory (EOnCE register space) and the EX bit in the OMR is set to 1, the JTAG port cannot access the on-chip EOnCE registers, and debug functions will be affected.
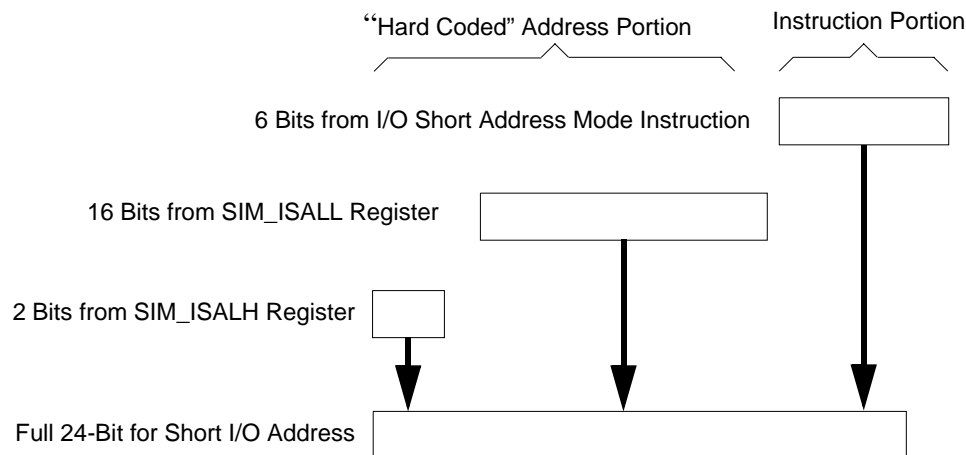
Figure 6-14 I/O Short Address Determination

With this register set, an interrupt driver can set the SIM_ISALL register pair to point to its peripheral registers and then use the I/O Short addressing mode to reference them. The ISR should restore this register to its previous contents prior to returning from interrupt.

Note: The default value of this register set points to the EOnCE registers.

Note: The pipeline delay between setting this register set and using short I/O addressing with the new value is three cycles.

Base + $D	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	1	1	1	1	1	1	1	1	1	1	1	1	1	1	ISAL[23:22]	
Write																
RESET	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Figure 6-15 I/O Short Address Location High Register (SIM_ISALH)

6.5.10.1 Input/Output Short Address Low (ISAL[23:22])—Bit 1–0

This field represents the upper two address bits of the "hard coded" I/O short address.

Base + $E	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read								ISAL[21:6]								
Write																
RESET	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Figure 6-16 I/O Short Address Location Low Register (SIM_ISAL)

6.5.10.2 Input/Output Short Address Low (ISAL[21:6])—Bit 15–0

This field represents the lower 16 address bits of the "hard coded" I/O short address.

6.5.11 Peripheral Clock Enable Register 2 (SIM_PCE2)

The Peripheral Clock Enable Register 2 is used to enable or disable clocks to the peripherals as a power-saving feaure. The clocks can be individually controller for each peripheral on the chip.

Base + $D	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Read	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	CAN 2
Write																
RESET	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1

6.5.11.1 Reserved—Bits 15–1

This bit field is reserved or not implemented. It is read as 0 and cannot be modified by writing.

6.5.11.2 CAN2 Enable—Bit 0

Each bit controls clocks to the indicated peripheral.

- 1 = Clocks are enabled
- 0 = The clock is not provided to the peripheral (the peripheral is disabled)

6.6 Clock Generation Overview

The SIM uses an internal master clock from the OCCS (CLKGEN) module to produce the peripheral and system (core and memory) clocks. The maximum master clock frequency is 120MHz. Peripheral and system clocks are generated at half the master clock frequency and therefore at a maximum 60MHz. The SIM provides power modes (Stop, Wait) and clock enables (SIM_PCE register, CLK_DIS, ONCE_EBL) to control which clocks are in operation. The OCCS, power modes, and clock enables provide a flexible means to manage power consumption.

Power utilization can be minimized in several ways. In the OCCS, crystal oscillator, and PLL may be shut down when not in use. When the PLL is in use, its prescaler and postscaler can be used to limit PLL and master clock frequency. Power modes permit system and/or peripheral clocks to be disabled when unused. Clock enables provide the means to disable individual clocks. Some peripherals provide further controls to disable unused subfunctions. Refer to **Part 3 On-Chip Clock Synthesis (OCCS)**, and the **56F8300 Peripheral User Manual** for further details.

6.7 Power-Down Modes Overview

The 56F8365/56F8165 operates in one of three power-down modes, as shown in **Table 6-4**.

Table 6-4 Clock Operation in Power-Down Modes

Mode	Core Clocks	Peripheral Clocks	Description
Run	Active	Active	Device is fully functional
Wait	Core and memory clocks disabled	Active	Peripherals are active and can produce interrupts if they have not been masked off. Interrupts will cause the core to come out of its suspended state and resume normal operation. Typically used for power-conscious applications.
Stop	System clocks continue to be generated in the SIM, but most are gated prior to reaching memory, core and peripherals.		The only possible recoveries from Stop mode are: 1. CAN traffic (1st message will be lost) 2. Non-clocked interrupts 3. COP reset 4. External reset 5. Power-on reset

All peripherals, except the COP/watchdog timer, run off the IPbus clock frequency, which is the same as the main processor frequency in this architecture. The maximum frequency of operation is $SYS\_CLK = 60MHz$.

56F8365 Technical Data, Rev. 6.0

6.8 Stop and Wait Mode Disable Function
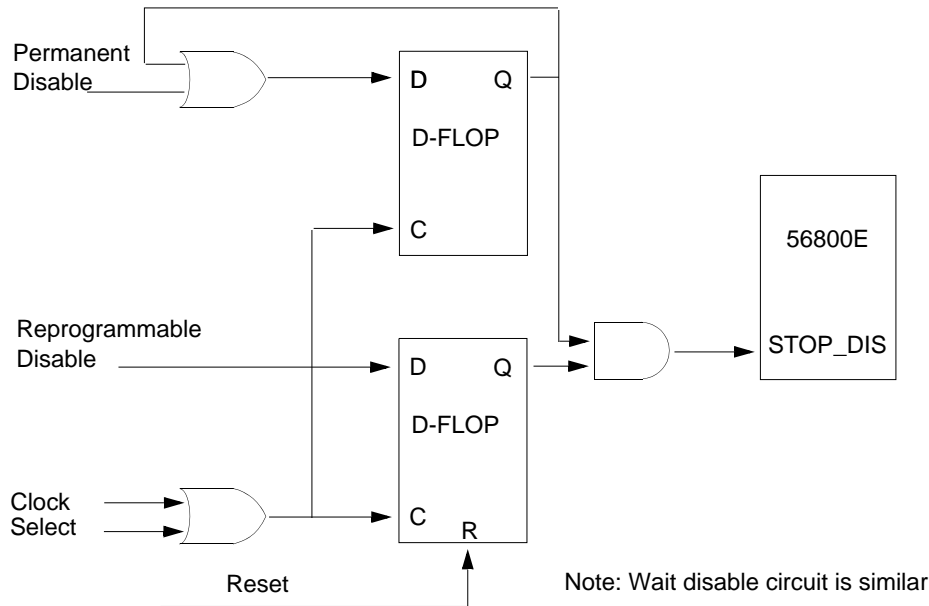
Figure 6-17 Internal Stop Disable Circuit

The 56800E core contains both STOP and WAIT instructions. Both put the CPU to sleep. For lowest power consumption in Stop mode, the PLL can be shut down. This must be done explicitly before entering Stop mode, since there is no automatic mechanism for this. When the PLL is shut down, the 56800E system clock must be set equal to the oscillator output.

Some applications require the 56800E STOP and WAIT instructions be disabled. To disable those instructions, write to the SIM control register (SIM_CONTROL), described in **Part 6.5.1**. This procedure can be on either a permanent or temporary basis. Permanently assigned applications last only until their next reset.

6.9 Resets

The SIM supports four sources of reset. The two asynchronous sources are the external $\overline{\text{RESET}}$ pin and the Power-On Reset (POR). The two synchronous sources are the software reset, which is generated within the SIM itself by writing to the SIM_CONTROL register, and the COP reset.

Reset begins with the assertion of any of the reset sources. Release of reset to various blocks is sequenced to permit proper operation of the device. A POR reset is first extended for 2^{21} clock cycles to permit stabilization of the clock source, followed by a 32 clock window in which SIM clocking is initiated. It is then followed by a 32 clock window in which peripherals are released to implement Flash security, and, finally, followed by a 32 clock window in which the core is initialized. After completion of the described reset sequence, application code will begin execution.

Resets may be asserted asynchronously, but are always released internally on a rising edge of the system clock.

Part 7 Security Features

The 56F8365/56F8165 offers security features intended to prevent unauthorized users from reading the contents of the Flash Memory (FM) array. The Flash security consists of several hardware interlocks that block the means by which an unauthorized user could gain access to the Flash array.

However, part of the security must lie with the user's code. An extreme example would be user's code that dumps the contents of the internal program, as this code would defeat the purpose of security. At the same time, the user may also wish to put a "backdoor" in his program. As an example, the user downloads a security key through the SCI, allowing access to a programming routine that updates parameters stored in another section of the Flash.

7.1 Operation with Security Enabled

Once the user has programmed the Flash with his application code, the device can be secured by programming the security bytes located in the FM configuration field, which occupies a portion of the FM array. These non-volatile bytes will keep the part secured through reset and through power-down of the device. Only two bytes within this field are used to enable or disable security. Refer to the Flash Memory section in the **56F8300 Peripheral User Manual** for the state of the security bytes and the resulting state of security. When Flash security mode is enabled in accordance with the method described in the Flash Memory module specification, the device will disable the core EOnCE debug capabilities. Normal program execution is otherwise unaffected.

7.2 Flash Access Blocking Mechanisms

The 56F8365/56F8165 have several operating functional and test modes. Effective Flash security must address operating mode selection and anticipate modes in which the on-chip Flash can be compromised and read without explicit user permission. Methods to block these are outlined in the next subsections.

7.2.1 Forced Operating Mode Selection

At boot time, the SIM determines in which functional modes the device will operate. These are:

- Unsecured Mode
- Secure Mode (EOnCE disabled)

When Flash security is enabled as described in the Flash Memory module specification, the device will disable the EOnCE debug interface.

7.2.2 Disabling EOnCE Access

On-chip Flash can be read by issuing commands across the EOnCE port, which is the debug interface for the 56800E core. The $\overline{\text{TRST}}$, TCLK, TMS, TDO, and TDI pins comprise a JTAG interface onto which the EOnCE port functionality is mapped. When the device boots, the chip-level JTAG TAP (Test Access Port) is active and provides the chip's boundary scan capability and access to the ID register.

Proper implementation of Flash security requires that no access to the EOnCE port is provided when security is enabled. The 56800E core has an input which disables reading of internal memory via the JTAG/EOnCE. The FM sets this input at reset to a value determined by the contents of the FM security bytes.

56F8365 Technical Data, Rev. 6.0

7.2.3　Flash Lockout Recovery

If a user inadvertently enables Flash security on the device, a built-in lockout recovery mechanism can be used to reenable access to the device. This mechanism completely reases all on-chip Flash, thus disabling Flash security. Access to this recovery mechanism is built into CodeWarrior via an instruction in memory configuration (*.cfg*) files. Add, or uncomment the following configuration command:

unlock_flash_on_connect 1

For more information, please see **CodeWarrior MC56F83xx/DSP5685x Family Targeting Manual**.

The LOCKOUT_RECOVERY instruction has an associated 7-bit Data Register (DR) that is used to control the clock divider circuit within the FM module. This divider, FM_CLKDIV[6:0], is used to control the period of the clock used for timed events in the FM erase algorithm. This register must be set with appropriate values before the lockout sequence can begin. Refer to the JTAG section of the **56F8300 Peripheral User Manual** for more details on setting this register value.

The value of the JTAG FM_CLKDIV[6:0] will replace the value of the FM register FMCLKD that divides down the system clock for timed events, as illustrated in **Figure 7-1**. FM_CLKDIV[6] will map to the PRDIV8 bit, and FM_CLKDIV[5:0] will map to the DIV[5:0] bits. The combination of PRDIV8 and DIV must divide the FM input clock down to a frequency of 150kHz-200kHz. The **"Writing the FMCLKD Register"** section in the Flash Memory chapter of the **56F8300 Peripheral User Manual** gives specific equations for calculating the correct values.
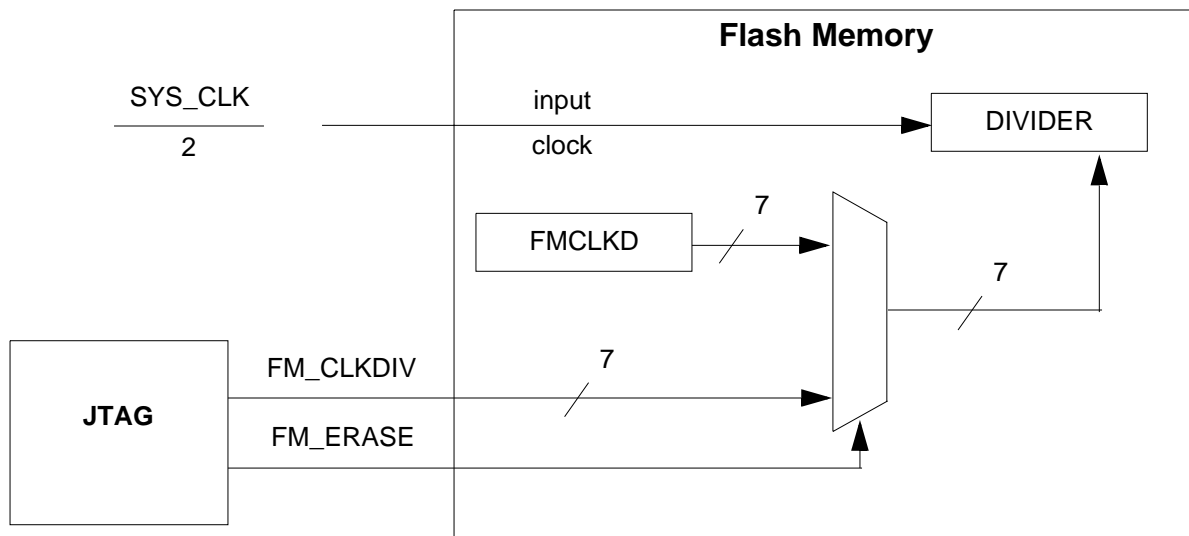
Figure 7-1 JTAG to FM Connection for Lockout Recovery

Two examples of FM_CLKDIV calculations follow.

EXAMPLE 1: If the system clock is the 8MHz crystal frequency because the PLL has not been set up, the input clock will be below 12.8MHz, so PRDIV8 = FM_CLKDIV[6] = 0. Using the following equation yields a DIV value of 19 for a clock of 200kHz, and a DIV value of 20 for a clock of 190kHz. This translates into an FM_CLKDIV[6:0] value of $13 or $14, respectively.

$$150[\text{kHz}] \quad < \quad \frac{\left(\dfrac{\text{SYS\_CLK}}{(2)}\right)}{(\text{DIV} + 1)} < \quad 200[\text{kHz}]$$

EXAMPLE 2: In this example, the system clock has been set up with a value of 32MHz, making the FM input clock 16MHz. Because that is greater than 12.8MHz, PRDIV = FM_CLKDIV[6] = 1. Using the following equation yields a DIV value of 9 for a clock of 200kHz, and a DIV value of 10 for a clock of 181kHz. This translates to an FM_CLKDIV[6:0] value of $49 or $4A, respectively.

$$150[\text{kHz}] \quad < \quad \frac{\left(\dfrac{\text{SYS\_CLK}}{(2)(8)}\right)}{(\text{DIV} + 1)} < \quad 200[\text{kHz}]$$

Once the LOCKOUT_RECOVERY instruction has been shifted into the instruction register, the clock divider value must be shifted into the corresponding 7-bit data register. After the data register has been updated, the user must transition the TAP controller into the RUN-TEST/IDLE state for the lockout sequence to commence. The controller must remain in this state until the erase sequence has completed. For details, see the JTAG Section in the **56F8300 Peripheral User Manual**.

Note: Once the lockout recovery sequence has completed, the user must reset both the JTAG TAP controller (by asserting $\overline{\text{TRST}}$) and the device (by asserting external chip reset) to return to normal unsecured operation.

7.2.4 Product Analysis

The recommended method of unsecuring a programmed device for product analysis of field failures is via the backdoor key access. The customer would need to supply Technical Support with the backdoor key and the protocol to access the backdoor routine in the Flash. Additionally, the KEYEN bit that allows backdoor key access must be set.

An alternative method for performing analysis on a secured hybrid controller would be to mass-erase and reprogram the Flash with the original code, but to modify the security bytes.

To insure that a customer does not inadvertently lock himself out of the device during programming, it is recommended that he program the backdoor access key first, his application code second, and the security bytes within the FM configuration field last.

Part 8 General Purpose Input/Output (GPIO)

8.1 Introduction

This section is intended to supplement the GPIO information found in the **56F8300 Peripheral User Manual** and contains only chip-specific information. This information supercedes the generic information in the **56F8300 Peripheral User Manual**.

8.2 Memory Maps

The width of the GPIO port defines how many bits are implemented in each of the GPIO registers. Based on this and the default function of each of the GPIO pins, the reset values of the GPIOx_PUR and GPIOx_PER registers change from port to port. Tables **4-29** through **4-34** define the actual reset values of these registers.

8.3 Configuration

There are six GPIO ports defined on the 56F8365/56F8165. The width of each port and the associated peripheral function is shown in **Table 8-1** and **Table 8-2**. The specific mapping of GPIO port pins is shown in **Table 8-3**.

Table 8-1 56F8365 GPIO Ports Configuration

GPIO Port	Port Width	Available Pins in 56F8365	Peripheral Function	Reset Function
A	14	6	6 pins - EMI Address pins - Can only be used as GPIO 8 pins - EMI Address pins - Not available in this package	EMI Address N/A
B	8	5	5 pins - EMI Address pins - Can only be used as GPIO 3 pins - EMI Address pins - Not available in this package	GPIO N/A
C	11	11	4 pins -DEC1 / TMRB / SPI1 4 pins -DEC0 / TMRA 3 pins -PWMA current sense	DEC1 / TMRB DEC0 / TMRA PWMA current sense
D	13	11	2 pins - EMI $\overline{CSn}$ 4 pins - EMI $\overline{CSn}$ - Can only be used as GPIO 2 pins - SCI1 2 pins - EMI $\overline{CSn}$ - Not available in this package 3 pins -PWMB current sense	EMI Chip Selects EMI Chip Selects SCI1 N/A PWMB current sense
E	14	12	2 pins - SCI0 2 pins - EMI Address pins - Not available in this package 4 pins - SPI0 2 pins - TMRC 4 pins - TMRD	SCI0 N/A SPI0 TMRC TMRD
F	16	4	4 pins - EMI Data - Can only be used as GPIO 12 pins - EMI Data - Not available in this package	EMI Data N/A

56F8365 Technical Data, Rev. 6.0

Table 8-2 56F8165 GPIO Ports Configuration

GPIO Port	Port Width	Available Pins in 56F8165	Peripheral Function	Reset Function
A	14	6	6 pins - EMI Address pins - Can only be used as GPIO 8 pins - EMI Address pins - Not available in this package	EMI Address N/A
B	8	5	5 pins - EMI Address pins - Can only be used as GPIO 3 pins - EMI Address pins - Not available in this package	GPIO N/A
C	11	11	4 pins - SPI1 4 pins - DEC0 / TMRA 3 pins - Dedicated GPIO	DEC1 / TMRB DEC0 / TMRA GPIO
D	13	11	6 pins - EMI $\overline{\text{CSn}}$ - Can only be used as GPIO 2 pins - SCI1 2 pins - EMI $\overline{\text{CSn}}$ - Not available in this package 3 pins - PWMB current sense	EMI Chip Selects SCI1 N/A PWMB current sense
E	14	12	2 pins - SCI0 2 pins - EMI Address pins - Not available in this package 4 pins - SPI0 2 pins - TMRC 4 pins - Dedicated GPIO	SCI0 N/A SPI0 TMRC GPIO
F	16	4	4 pins - EMI Data - Can only be used as GPIO 12 pins - EMI Data - Not available in this package	EMI Data N/A

56F8365 Technical Data, Rev. 6.0

Table 8-3 GPIO External Signals Map
Pins in shaded rows are not available in 56F8365 / 56F8165
Pins in italics are NOT available in the 56F8165 device

GPIO Port	GPIO Bit	Reset Function	Functional Signal	Package Pin #
GPIOA	0	Peripheral	A8[1]	15
	1	Peripheral	A9[1]	16
	2	Peripheral	A10[1]	17
	3	Peripheral	A11[1]	18
	4	Peripheral	A12[1]	19
	5	Peripheral	A13[1]	20
	6	N/A		
	7	N/A		
	8	N/A		
	9	N/A		
	10	N/A		
	11	N/A		
	12	N/A		
	13	N/A		
GPIOB	0	GPIO	A16[1]	27
	1	GPIO	A17[1]	28
	2	GPIO	A18[1]	29
	3	GPIO	A19[1]	30
	4	GPIO	A20 / Prescaler_clock	31
	5	N/A		
	6	N/A		
	7	N/A		

56F8365 Technical Data, Rev. 6.0

Table 8-3 GPIO External Signals Map (Continued)
Pins in shaded rows are not available in 56F8365 / 56F8165
Pins in italics are NOT available in the 56F8165 device

GPIO Port	GPIO Bit	Reset Function	Functional Signal	Package Pin #
GPIOC	0	Peripheral	*PhaseA1 / TB0* / SCLK1[2]	9
	1	Peripheral	*PhaseB1 / TB1* / MOSI1[2]	10
	2	Peripheral	*Index1 / TB2* / MISO1[2]	11
	3	Peripheral	*Home1 / TB3* / $\overline{\text{SS1}}$[2]	12
	4	Peripheral	PhaseA0 / TA0	127
	5	Peripheral	PhaseB0 / TA1	128
	6	Peripheral	Index0 / TA2	1
	7	Peripheral	Home0 / TA3	2
	8	Peripheral	*ISA0*	104
	9	Peripheral	*ISA1*	105
	10	Peripheral	*ISA2*	106
GPIO D	0	GPIO	$\overline{\text{CS2}}$ / *CAN2_TX*	42
	1	GPIO	$\overline{\text{CS3}}$ / *CAN2_RX*	43
	2	GPIO	$\overline{\text{CS4}}$[1]	44
	3	GPIO	$\overline{\text{CS5}}$[1]	45
	4	GPIO	$\overline{\text{CS6}}$[1]	46
	5	GPIO	$\overline{\text{CS7}}$[1]	47
	6	Peripheral	TXD1	40
	7	Peripheral	RXD1	41
	8	N/A		
	9	N/A		
	10	Peripheral	ISB0	48
	11	Peripheral	ISB1	50
	12	Peripheral	ISB2	51

56F8365 Technical Data, Rev. 6.0

Table 8-3 GPIO External Signals Map (Continued)
Pins in shaded rows are not available in 56F8365 / 56F8165
Pins in italics are NOT available in the 56F8165 device

GPIO Port	GPIO Bit	Reset Function	Functional Signal	Package Pin #
GPIOE	0	Peripheral	TXD0	7
	1	Peripheral	RXD0	8
	2	N/A		
	3	N/A		
	4	Peripheral	SCLK0	124
	5	Peripheral	MOSI0	126
	6	Peripheral	MISO0	125
	7	Peripheral	$\overline{SS0}$	123
	8	Peripheral	TC0	111
	9	Peripheral	TC1	113
	10	Peripheral	*TD0*	107
	11	Peripheral	*TD1*	108
	12	Peripheral	*TD2*	109
	13	Peripheral	*TD3*	110

56F8365 Technical Data, Rev. 6.0

Table 8-3 GPIO External Signals Map (Continued)
Pins in shaded rows are not available in 56F8365 / 56F8165
Pins in italics are NOT available in the 56F8165 device

GPIO Port	GPIO Bit	Reset Function	Functional Signal	Package Pin #
GPIOF	0	Peripheral	D7[1]	22
	1	Peripheral	D8[1]	23
	2	Peripheral	D9[1]	24
	3	Peripheral	D10[1]	26
	4	N/A		
	5	N/A		
	6	N/A		
	7	N/A		
	8	N/A		
	9	N/A		
	10	N/A		
	11	N/A		
	12	N/A		
	13	N/A		
	14	N/A		
	15	N/A		

1. Not useful in reset configuration in this package - reconfigure as GPIO

2. See **Part 6.5.8** to determine how to select peripherals from this set; DEC1 is the selected peripheral at reset

Part 9 Joint Test Action Group (JTAG)

9.1 JTAG Information

Please contact your Freescale marketing representative or authorized distributor for device/package-specific BSDL information.

56F8365 Technical Data, Rev. 6.0

Part 10 Specifications

10.1 General Characteristics

The 56F8365/56F8165 are fabricated in high-density CMOS with 5V-tolerant TTL-compatible digital inputs. The term "5V-tolerant" refers to the capability of an I/O pin, built on a 3.3V-compatible process technology, to withstand a voltage up to 5.5V without damaging the device. Many systems have a mixture of devices designed for 3.3V and 5V power supplies. In such systems, a bus may carry both 3.3V- and 5V-compatible I/O voltage levels (a standard 3.3V I/O is designed to receive a maximum voltage of 3.3V ± 10% during normal operation without causing damage). This 5V-tolerant capability therefore offers the power savings of 3.3V I/O levels combined with the ability to receive 5V levels without damage.

Absolute maximum ratings in **Table 10-1** are stress ratings only, and functional operation at the maximum is not guaranteed. Stress beyond these ratings may affect device reliability or cause permanent damage to the device.

Note: All specifications meet both Automotive and Industrial requirements unless individual specifications are listed.

Note: *The 56F8165 device is guaranteed to 40MHz and specified to meet Industrial requirements only.*

CAUTION

This device contains protective circuitry to guard against damage due to high static voltage or electrical fields. However, normal precautions are advised to avoid application of any voltages higher than maximum-rated voltages to this high-impedance circuit. Reliability of operation is enhanced if unused inputs are tied to an appropriate voltage level.

Note: *The 56F8165 device is specified to meet Industrial requirements only; CAN is NOT available on the 56F8165 device.*

Table 10-1 Absolute Maximum Ratings

$(V_{SS} = V_{SSA\_ADC} = 0)$

Characteristic	Symbol	Notes	Min	Max	Unit
Supply voltage	V_{DD_IO}		- 0.3	4.0	V
ADC Supply Voltage	V_{DDA_ADC}, V_{REFH}	V_{REFH} must be less than or equal to V_{DDA_ADC}	- 0.3	4.0	V
Oscillator / PLL Supply Voltage	$V_{DDA\_OSC\_PLL}$		- 0.3	4.0	V
Internal Logic Core Supply Voltage	V_{DD_CORE}	OCR_DIS is High	- 0.3	3.0	V
Input Voltage (digital)	V_{IN}	Pin Groups 1, 2, 5, 6, 9, 10	-0.3	6.0	V
Input Voltage (analog)	V_{INA}	Pin Groups 11, 12, 13	-0.3	4.0	V
Output Voltage	V_{OUT}	Pin Groups 1, 2, 3, 4, 5, 6, 7, 8	-0.3	4.0 6.0[1]	V
Output Voltage (open drain)	V_{OD}	Pin Group 4	-0.3	6.0	V
Ambient Temperature (Automotive)	T_A		-40	125	°C
Ambient Temperature (Industrial)	T_A		-40	105	°C
Junction Temperature (Automotive)	T_J		-40	150	°C
Junction Temperature (Industrial)	T_J		-40	125	°C
Storage Temperature (Automotive)	T_{STG}		-55	150	°C
Storage Temperature (Industrial)	T_{STG}		-55	150	°C

1. If corresponding GPIO pin is configured as open drain.

Note: *Pins in italics are NOT available in the 56F8165 device.*

Pin Group 1: TXD0-1, RXD0-1, $\overline{SS0}$, MISO0, MOSI0

Pin Group 2: PHASEA0, *PHASEA1*, PHASEB0, *PHASEB1*, INDEX0, *INDEX1*, HOME0, *HOME1*, ISB0-2, *ISA0-2*, *TD2-3*, TC0-1, TDO, SCLK0

Pin Group 3: $\overline{RSTO}$, TDO

Pin Group 4: *CAN_TX*

Pin Group 5: D0-15, GPIOD0-5

Pin Group 6: A8-15, GPIOB0-4, TD0-1

Pin Group 7: CLKO

Pin Group 8: *PWMA0-5*, PWMB0-5

Pin Group 9: $\overline{IRQA}$, $\overline{IRQB}$, $\overline{RESET}$, EXTBOOT, $\overline{TRST}$, TMS, TDI, *CAN_RX*, EMI_MODE, *FAULTA0-3*, FAULTB0-3

Pin Group 10: TCK

Pin Group 11: XTAL, EXTAL

Pin Group 12: ANA0-7, ANB0-7

Pin Group 13: OCR_DIS, CLKMODE

56F8365 Technical Data, Rev. 6.0

Table 10-2 56F8365/56F8165 ElectroStatic Discharge (ESD) Protection

Characteristic	Min	Typ	Max	Unit
ESD for Human Body Model (HBM)	2000	—	—	V
ESD for Machine Model (MM)	200	—	—	V
ESD for Charge Device Model (CDM)	500	—	—	V

Table 10-3 Thermal Characteristics[6]

Characteristic	Comments	Symbol	Value 128-pin LQFP	Unit	Notes
Junction to ambient Natural convection		$R_{\theta JA}$	50.8	°C/W	2
Junction to ambient (@1m/sec)		$R_{\theta JMA}$	46.5	°C/W	2
Junction to ambient Natural convection	Four layer board (2s2p)	$R_{\theta JMA}$ (2s2p)	43.9	°C/W	1,2
Junction to ambient (@1m/sec)	Four layer board (2s2p)	$R_{\theta JMA}$	41.7	°C/W	1,2
Junction to case		$R_{\theta JC}$	13.9	°C/W	3
Junction to center of case		Ψ_{JT}	1.2	°C/W	4, 5
I/O pin power dissipation		$P_{I/O}$	User-determined	W	
Power dissipation		P_D	$P_D = (I_{DD} \times V_{DD} + P_{I/O})$	W	
Maximum allowed P_D		P_{DMAX}	$(TJ - TA) / R\theta JA$[7]	W	

1. Theta-JA determined on 2s2p test boards is frequently lower than would be observed in an application. Determined on 2s2p thermal test board.

2. Junction to ambient thermal resistance, Theta-JA ($R_{\theta JA}$) was simulated to be equivalent to the JEDEC specification JESD51-2 in a horizontal configuration in natural convection. Theta-JA was also simulated on a thermal test board with two internal planes (2s2p, where "s" is the number of signal layers and "p" is the number of planes) per JESD51-6 and JESD51-7. The correct name for Theta-JA for forced convection or with the non-single layer boards is Theta-JMA.

3. Junction to case thermal resistance, Theta-JC ($R_{\theta JC}$), was simulated to be equivalent to the measured values using the cold plate technique with the cold plate temperature used as the "case" temperature. The basic cold plate measurement technique is described by MIL-STD 883D, Method 1012.1. This is the correct thermal metric to use to calculate thermal performance when the package is being used with a heat sink.

4. Thermal Characterization Parameter, Psi-JT (Ψ_{JT}), is the "resistance" from junction to reference point thermocouple on top center of case as defined in JESD51-2. Ψ_{JT} is a useful value to use to estimate junction temperature in steady-state customer environments.

5. Junction temperature is a function of on-chip power dissipation, package thermal resistance, mounting site (board) temperature, ambient temperature, air flow, power dissipation of other components on the board, and board thermal resistance.

6. See **Part 12.1** for more details on thermal design considerations.

7. TJ = Junction temperature
   TA = Ambient temperature

Note: *The 56F8165 device is guaranteed to 40MHz and specified to meet Industrial requirements only; CAN is NOT available on the 56F8165 device.*

Table 10-4 Recommended Operating Conditions

($V_{REFLO} = 0V$, $V_{SS} = V_{SSA\_ADC} = 0V$, $V_{DDA} = V_{DDA\_ADC} = V_{DDA\_OSC\_PLL}$)

Characteristic	Symbol	Notes	Min	Typ	Max	Unit
Supply voltage	V_{DD_IO}		3	3.3	3.6	V
ADC Supply Voltage	V_{DDA_ADC}, V_{REFH}	V_{REFH} must be less than or equal to V_{DDA_ADC}	3	3.3	3.6	V
Oscillator / PLL Supply Voltage	$V_{DDA\_OSC\_PLL}$		3	3.3	3.6	V
Internal Logic Core Supply Voltage	V_{DD_CORE}	OCR_DIS is High	2.25	2.5	2.75	V
Device Clock Frequency	FSYSCLK		0	—	60	MHz
Input High Voltage (digital)	V_{IN}	Pin Groups 1, 2, 5, 6, 9, 10	2	—	5.5	V
Input High Voltage (analog)	V_{IHA}	Pin Group 13	2	—	V_{DDA}+0.3	V
Input High Voltage (XTAL/EXTAL, XTAL is not driven by an external clock)	V_{IHC}	Pin Group 11	V_{DDA}-0.8	—	V_{DDA}+0.3	V
Input high voltage (XTAL/EXTAL, XTAL is driven by an external clock)	V_{IHC}	Pin Group 11	2	—	V_{DDA}+0.3	V
Input Low Voltage	V_{IL}	Pin Groups 1, 2, 5, 6, 9, 10, 11, 13	-0.3	—	.8	V
Output High Source Current V_{OH} = 2.4V (V_{OH} min.)	I_{OH}	Pin Groups 1, 2, 3	—	—	-4	mA
		Pin Groups 5, 6, 7	—	—	-8	
		Pin Groups 8	—	—	-12	
Output Low Sink Current V_{OL} = 0.4V (V_{OL} max)	I_{OL}	Pin Groups 1, 2, 3, 4	—	—	4	mA
		Pin Groups 5, 6, 7	—	—	8	
		Pin Group 8	—	—	12	
Ambient Operating Temperature (Automotive)	T_A		-40	—	125	°C
Ambient Operating Temperature (Industrial)	T_A		-40	—	105	°C
Flash Endurance (Automotive) (Program Erase Cycles)	N_F	T_A = -40°C to 125°C	10,000	—	—	Cycles
Flash Endurance (Industrial) (Program Erase Cycles)	N_F	T_A = -40°C to 105°C	10,000	—	—	Cycles
Flash Data Retention (Automotive)	T_R	T_J <= 85°C avg	15	—	—	Years

Note: Total chip source or sink current cannot exceed 200mA

See Pin Groups listed in **Table 10-1**

56F8365 Technical Data, Rev. 6.0

10.2 DC Electrical Characteristics

Note: *The 56F8165 device is specified to meet Industrial requirements only; CAN is NOT available on the 56F8165 device.*

Table 10-5 DC Electrical Characteristics

At Recommended Operating Conditions; see **Table 10-4**

Characteristic	Symbol	Notes	Min	Typ	Max	Unit	Test Conditions
Output High Voltage	V_{OH}		2.4	—	—	V	$I_{OH} = I_{OHmax}$
Output Low Voltage	V_{OL}		—	—	0.4	V	$I_{OL} = I_{OLmax}$
Digital Input Current High pull-up enabled or disabled	I_{IH}	Pin Groups 1, 2, 5, 6, 9	—	0	+/- 2.5	µA	V_{IN} = 3.0V to 5.5V
Digital Input Current High with pull-down	I_{IH}	Pin Group 10	40	80	160	µA	V_{IN} = 3.0V to 5.5V
Analog Input Current High	I_{IHA}	Pin Group 13	—	0	+/- 2.5	µA	$V_{IN} = V_{DDA}$
ADC Input Current High	I_{IHADC}	Pin Group 12	—	0	+/- 3.5	µA	$V_{IN} = V_{DDA}$
Digital Input Current Low pull-up enabled	I_{IL}	Pin Groups 1, 2, 5, 6, 9	-200	-100	-50	µA	V_{IN} = 0V
Digital Input Current Low pull-up disabled	I_{IL}	Pin Groups 1, 2, 5, 6, 9	—	0	+/- 2.5	µA	V_{IN} = 0V
Digital Input Current Low with pull-down	I_{IL}	Pin Group 10	—	0	+/- 2.5	µA	V_{IN} = 0V
Analog Input Current Low	I_{ILA}	Pin Group 13	—	0	+/- 2.5	µA	V_{IN} = 0V
ADC Input Current Low	I_{ILADC}	Pin Group 12	—	0	+/- 3.5	µA	V_{IN} = 0V
EXTAL Input Current Low clock input	I_{EXTAL}		—	0	+/- 2.5	µA	$V_{IN} = V_{DD}$ or 0V
XTAL Input Current Low clock input	I_{XTAL}	CKLMODE = High	—	0	+/- 2.5	µA	$V_{IN} = V_{DDA}$ or 0V
		CKLMODE = Low	—	—	200	µA	$V_{IN} = V_{DDA}$ or 0V
Output Current High Impedance State	I_{OZ}	Pin Groups 1, 2, 3, 4, 5, 6, 7, 8	—	0	+/- 2.5	µA	V_{OUT} = 3.0V to 5.5V or 0V
Schmitt Trigger Input Hysteresis	V_{HYS}	Pin Groups 2, 6, 9,10	—	0.3	—	V	—
Input Capacitance (EXTAL/XTAL)	C_{INC}		—	4.5	—	pF	—
Output Capacitance (EXTAL/XTAL)	C_{OUTC}		—	5.5	—	pF	—
Input Capacitance	C_{IN}		—	6	—	pF	—
Output Capacitance	C_{OUT}		—	6	—	pF	—

See Pin Groups listed in **Table 10-1**

56F8365 Technical Data, Rev. 6.0

Freescale Semiconductor
Preliminary

Table 10-6 Power-On Reset Low Voltage Parameters

Characteristic	Symbol	Min	Typ	Max	Units
POR Trip Point	POR	1.75	1.8	1.9	V
LVI, 2.5 volt Supply, trip point[1]	$V_{EI2.5}$	—	2.14	—	V
LVI, 3.3 volt supply, trip point[2]	$V_{EI3.3}$	—	2.7	—	V
Bias Current	I_{bias}	—	110	130	µA

1. When V_{DD_CORE} drops below $V_{EI2.5}$, an interrupt is generated.

2. When V_{DD_CORE} drops below $V_{EI3.3}$, an interrupt is generated.

Table 10-7 Current Consumption per Power Supply Pin (Typical)
On-Chip Regulator Enabled (OCR_DIS = Low)

Mode	I_{DD_IO}[1]	I_{DD_ADC}	$I_{DD\_OSC\_PLL}$	Test Conditions
RUN1_MAC	155mA	50mA	2.5mA	• 60MHz Device Clock • All peripheral clocks are enabled • All peripherals running • Continuous MAC instructions with fetches from Data RAM • ADC powered on and clocked
Wait3	91mA	70µA	2.5mA	• 60MHz Device Clock • All peripheral clocks are enabled • ADC powered off
Stop1	6mA	0µA	165µA	• 8MHz Device Clock • All peripheral clocks are off • ADC powered off • PLL powered off
Stop2	5.1mA	0µA	155µA	• External Clock is off • All peripheral clocks are off • ADC powered off • PLL powered off

1. No Output Switching

2. Includes Processor Core current supplied by internal voltage regulator

56F8365 Technical Data, Rev. 6.0

Table 10-8 Current Consumption per Power Supply Pin (Typical)
On-Chip Regulator Disabled (OCR_DIS = High)

Mode	I_{DD_Core}	I_{DD_IO}[1]	I_{DD_ADC}	$I_{DD\_OSC\_PLL}$	Test Conditions
RUN1_MAC	150mA	13μA	50mA	2.5mA	• 60MHz Device Clock • All peripheral clocks are enabled • All peripherals running • Continuous MAC instructions with fetches from Data RAM • ADC powered on and clocked
Wait3	86mA	13μA	70μA	2.5mA	• 60MHz Device Clock • All peripheral clocks are enabled • ADC powered off
Stop1	950μA	13μA	0μA	165μA	• 8MHz Device Clock • All peripheral clocks are off • ADC powered off • PLL powered off
Stop2	100μA	13μA	0μA	155μA	• External Clock is off • All peripheral clocks are off • ADC powered off • PLL powered off

1. No Output Switching

Table 10-9.   Regulator Parameters

Characteristic	Symbol	Min	Typical	Max	Unit
Unloaded Output Voltage (0mA Load)	V_{RNL}	2.25	—	2.75	V
Loaded Output Voltage (200mA load)	V_{RL}	2.25	—	2.75	V
Line Regulation @ 250mA load ($V_{DD}33$ ranges from 3.0V to 3.6V)	V_R	2.25	—	2.75	V
Short Circuit Current (output shorted to ground)	Iss	—	—	700	mA
Bias Current	I_{bias}	—	5.8	7	mA
Power-down Current	I_{pd}	—	0	2	μA
Short-Circuit Tolerance (output shorted to ground)	T_{RSC}	—	—	30	minutes

56F8365 Technical Data, Rev. 6.0

Table 10-10. PLL Parameters

Characteristics	Symbol	Min	Typical	Max	Unit
PLL Start-up time	T_{PS}	0.3	0.5	10	ms
Resonator Start-up time	T_{RS}	0.1	0.18	1	ms
Min-Max Period Variation	T_{PV}	120	—	200	ps
Peak-to-Peak Jitter	T_{PJ}	—	—	175	ps
Bias Current	I_{BIAS}	—	1.5	2	mA
Quiescent Current, power-down mode	I_{PD}	—	100	150	μA

10.2.1 Temperature Sensor

Note: *Temperature Sensor is NOT available in the 56F8165 device.*

Table 10-11 Temperature Sense Parametrics

Characteristics	Symbol	Min	Typical	Max	Unit
Slope (Gain)[1]	m	—	7.762	—	mV/°C
Room Trim Temp. [1,2]	T_{RT}	24	26	28	°C
Hot Trim Temp. (Industrial)[1,2]	T_{HT}	122	125	128	°C
Hot Trim Temp. (Automotive)[1,2]	T_{HT}	147	150	153	°C
Output Voltage @ V_{DDA_ADC} = 3.3V, T_J =0°C[1]	V_{TS0}	—	1.370	—	V
Supply Voltage	V_{DDA_ADC}	3.0	3.3	3.6	V
Supply Current - OFF	$I_{DD\text{-}OFF}$	—	—	10	μA
Supply Current - ON	$I_{DD\text{-}ON}$	—	—	250	μA
Accuracy[3,1] from -40°C to 150°C Using $V_{TS} = mT + V_{TS0}$	T_{ACC}	-6.7	0	6.7	°C
Resolution[4,5,1]	R_{ES}	—	0.104	—	°C / bit

1. Includes the ADC conversion of the analog Temperature Sense voltage.
2. The ADC is not calibrated for the conversion of the Temperature Sensor trim value stored in the Flash Memory at FMOPT0 and FMOPT1.
3. See Application Note, AN1980, for methods to increase accuracy.
4. Assuming a 12-bit range from 0V to 3.3V.
5. Typical resolution calculated using equation, $R_{ES} = \dfrac{(V_{REFH} - V_{REFLO})}{2^{12}} \times \dfrac{1}{m}$

56F8365 Technical Data, Rev. 6.0

10.3 AC Electrical Characteristics

Tests are conducted using the input levels specified in **Table 10-5**. Unless otherwise specified, propagation delays are measured from the 50% to the 50% point, and rise and fall times are measured between the 10% and 90% points, as shown in **Figure 10-1**.
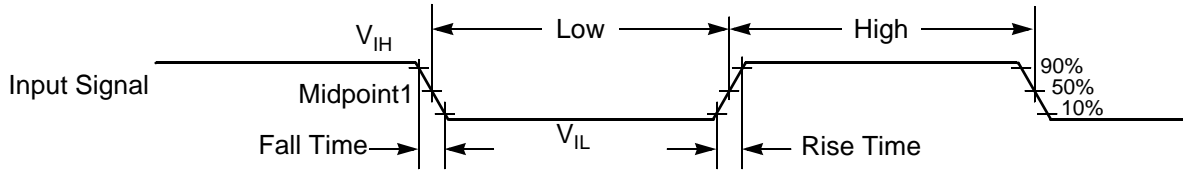
Note: The midpoint is $V_{IL} + (V_{IH} - V_{IL})/2$.

Figure 10-1 Input Signal Measurement References

Figure 10-2 shows the definitions of the following signal states:

- Active state, when a bus or signal is driven, and enters a low impedance state
- Tri-stated, when a bus or signal is placed in a high impedance state
- Data Valid state, when a signal level has reached V_{OL} or V_{OH}
- Data Invalid state, when a signal level is in transition between V_{OL} and V_{OH}
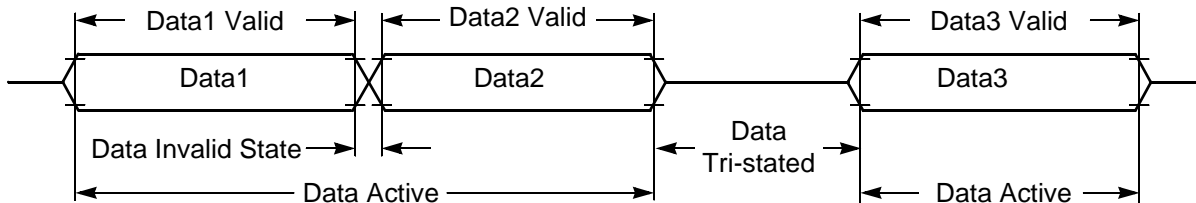
Figure 10-2 Signal States

10.4 Flash Memory Characteristics

Table 10-12 Flash Timing Parameters

Characteristic	Symbol	Min	Typ	Max	Unit
Program time[1]	T_{prog}	20	—	—	μs
Erase time[2]	T_{erase}	20	—	—	ms
Mass erase time	T_{me}	100	—	—	ms

1. There is additional overhead which is part of the programming sequence. See the **56F8300 Peripheral User Manual** for details. Program time is per 16-bit word in Flash memory. Two words at a time can be programmed within the Program Flash module, as it contains two interleaved memories.

2. Specifies page erase time. There are 512 bytes per page in the Data and Boot Flash memories. The Program Flash module uses two interleaved Flash memories, increasing the effective page size to 1024 bytes.

10.5 External Clock Operation Timing

Table 10-13 External Clock Operation Timing Requirements[1]

Characteristic	Symbol	Min	Typ	Max	Unit
Frequency of operation (external clock driver)[2]	f_{osc}	0	—	120	MHz
Clock Pulse Width[3]	t_{PW}	3.0	—	—	ns
External clock input rise time[4]	t_{rise}	—	—	10	ns
External clock input fall time[5]	t_{fall}	—	—	10	ns

1. Parameters listed are guaranteed by design.

2. See **Figure 10-3** for details on using the recommended connection of an external clock driver.

3. The high or low pulse width must be no smaller than 8.0ns or the chip will not function.

4. External clock input rise time is measured from 10% to 90%.

5. External clock input fall time is measured from 90% to 10%.
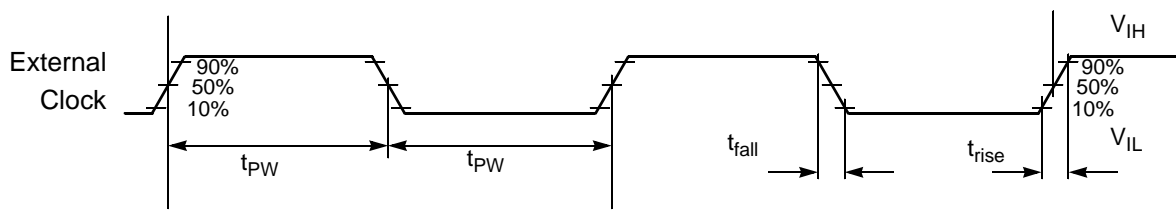
Note: The midpoint is $V_{IL} + (V_{IH} - V_{IL})/2$.

Figure 10-3 External Clock Timing

10.6 Phase Locked Loop Timing

Table 10-14 PLL Timing

Characteristic	Symbol	Min	Typ	Max	Unit
External reference crystal frequency for the PLL[1]	f_{osc}	4	8	8.4	MHz
PLL output frequency[2] (f_{OUT})	f_{op}	160	—	260	MHz
PLL stabilization time[3] -40° to +125°C	t_{plls}	—	1	10	ms

1. An externally supplied reference clock should be as free as possible from any phase jitter for the PLL to work correctly. The PLL is optimized for 8MHz input crystal.

2. ZCLK may not exceed 60MHz. For additional information on ZCLK and (f_{OUT}/2), please refer to the OCCS chapter in the **56F8300 Peripheral User Manual**.

3. This is the minimum time required after the PLL set up is changed to ensure reliable operation.

10.7 Crystal Oscillator Timing

Table 10-15 Crystal Oscillator Parameters

Characteristic	Symbol	Min	Typ	Max	Unit
Crystal Start-up time	T_{CS}	4	5	10	ms
Resonator Start-up time	T_{RS}	0.1	0.18	1	ms
Crystal ESR	R_{ESR}	—	—	120	ohms
Crystal Peak-to-Peak Jitter	T_D	70	—	250	ps
Crystal Min-Max Period Variation	T_{PV}	0.12	—	1.5	ns
Resonator Peak-to-Peak Jitter	T_{RJ}	—	—	300	ps
Resonator Min-Max Period Variation	T_{RP}	—	—	300	ps
Bias Current, high-drive mode	I_{BIASH}	—	250	290	μA
Bias Current, low-drive mode	I_{BIASL}	—	80	110	μA
Quiescent Current, power-down mode	I_{PD}	—	0	1	μA

10.8 Reset, Stop, Wait, Mode Select, and Interrupt Timing

Table 10-16 Reset, Stop, Wait, Mode Select, and Interrupt Timing[1,2]

Characteristic	Symbol	Typical Min	Typical Max	Unit	See Figure
Minimum $\overline{\text{RESET}}$ Assertion Duration	t_{RA}	16T	—	ns	**10-4**
Edge-sensitive Interrupt Request Width	t_{IRW}	1.5T	—	ns	**10-5**
$\overline{\text{IRQA}}$, $\overline{\text{IRQB}}$ Assertion to General Purpose Output Valid, caused by first instruction execution in the interrupt service routine	t_{IG}	18T	—	ns	**10-6**
	t_{IG} - FAST	14T	—		
$\overline{\text{IRQA}}$ Width Assertion to Recover from Stop State[3]	t_{IW}	1.5T	—	ns	**10-8**

1. In the formulas, T = clock cycle. For an operating frequency of 60MHz, T = 16.67ns. At 8MHz (used during Reset and Stop modes), T = 125ns.

2. Parameters listed are guaranteed by design.

3. The interrupt instruction fetch is visible on the pins only in Mode 3.
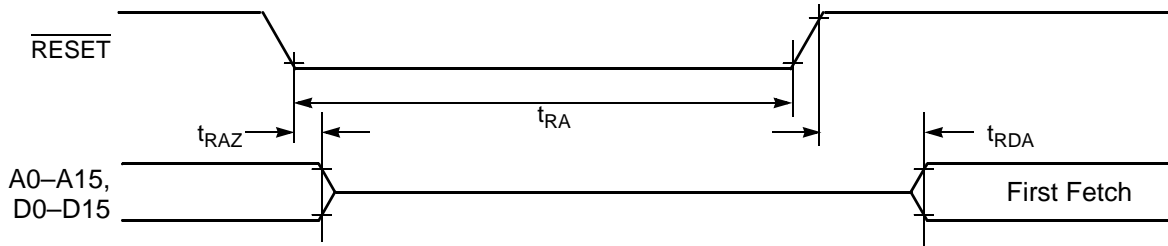
Figure 10-4 Asynchronous Reset Timing
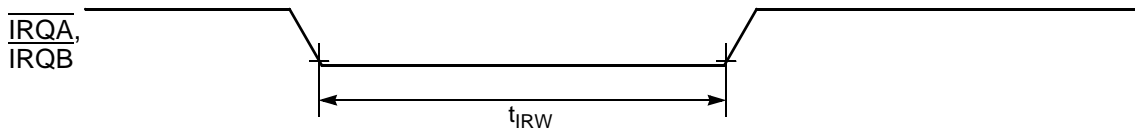
Figure 10-5 External Interrupt Timing (Negative Edge-Sensitive)

a) First Interrupt Instruction Execution

b) General Purpose I/O
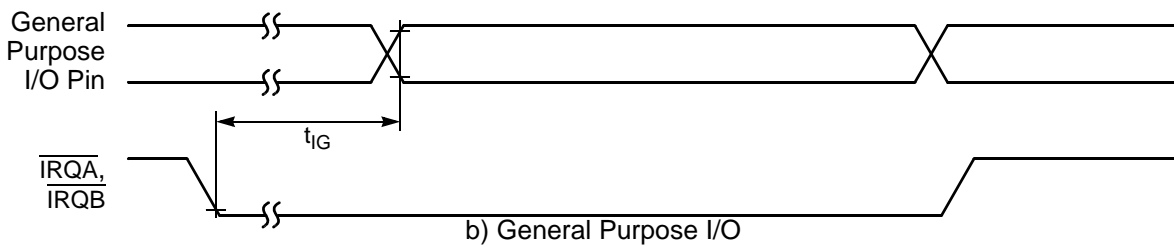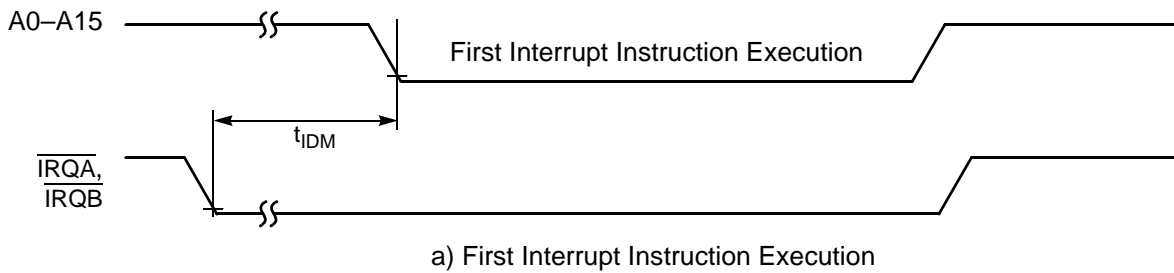
Figure 10-6 External Level-Sensitive Interrupt Timing
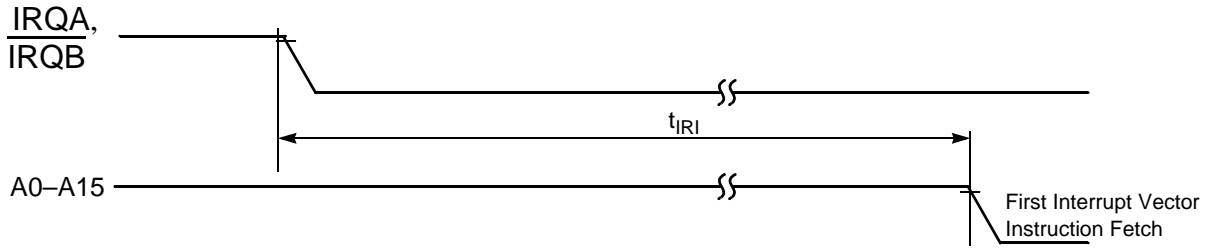
Figure 10-7 Interrupt from Wait State Timing
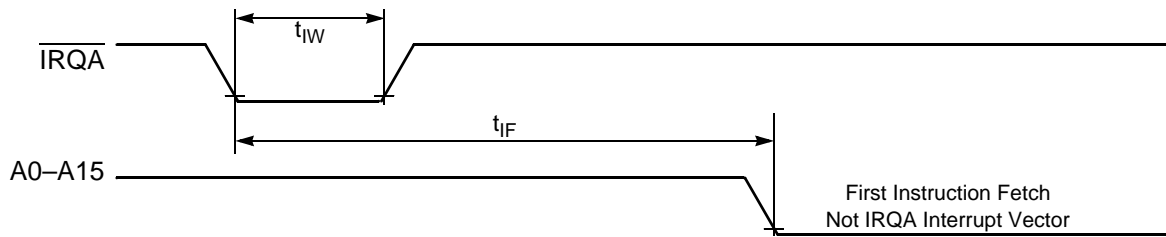
Figure 10-8 Recovery from Stop State Using Asynchronous Interrupt Timing

10.9 Serial Peripheral Interface (SPI) Timing

Table 10-17 SPI Timing[1]

Characteristic	Symbol	Min	Max	Unit	See Figure
Cycle time Master Slave	t_C	 50 50	 — —	 ns ns	**10-9**, **10-10**, **10-11**, **10-12**
Enable lead time Master Slave	t_{ELD}	 — 25	 — —	 ns ns	**10-12**
Enable lag time Master Slave	t_{ELG}	 — 100	 — —	 ns ns	**10-12**
Clock (SCK) high time Master Slave	t_{CH}	 17.6 25	 — —	 ns ns	**10-9**, **10-10**, **10-11**, **10-12**
Clock (SCK) low time Master Slave	t_{CL}	 24.1 25	 — —	 ns ns	**10-12**
Data set up time required for inputs Master Slave	t_{DS}	 20 0	 — —	 ns ns	**10-9**, **10-10**, **10-11**, **10-12**
Data hold time required for inputs Master Slave	t_{DH}	 0 2	 — —	 ns ns	**10-9**, **10-10**, **10-11**, **10-12**
Access time (time to data active from high-impedance state) Slave	t_A	4.8	15	ns	**10-12**
Disable time (hold time to high-impedance state) Slave	t_D	3.7	15.2	ns	**10-12**
Data Valid for outputs Master Slave (after enable edge)	t_{DV}	 — —	 4.5 20.4	 ns ns	**10-9**, **10-10**, **10-11**, **10-12**
Data invalid Master Slave	t_{DI}	 0 0	 — —	 ns ns	**10-9**, **10-10**, **10-11**
Rise time Master Slave	t_R	 — —	 11.5 10.0	 ns ns	**10-9**, **10-10**, **10-11**, **10-12**
Fall time Master Slave	t_F	 — —	 9.7 9.0	 ns ns	**10-9**, **10-10**, **10-11**, **10-12**

1. Parameters listed are guaranteed by design.
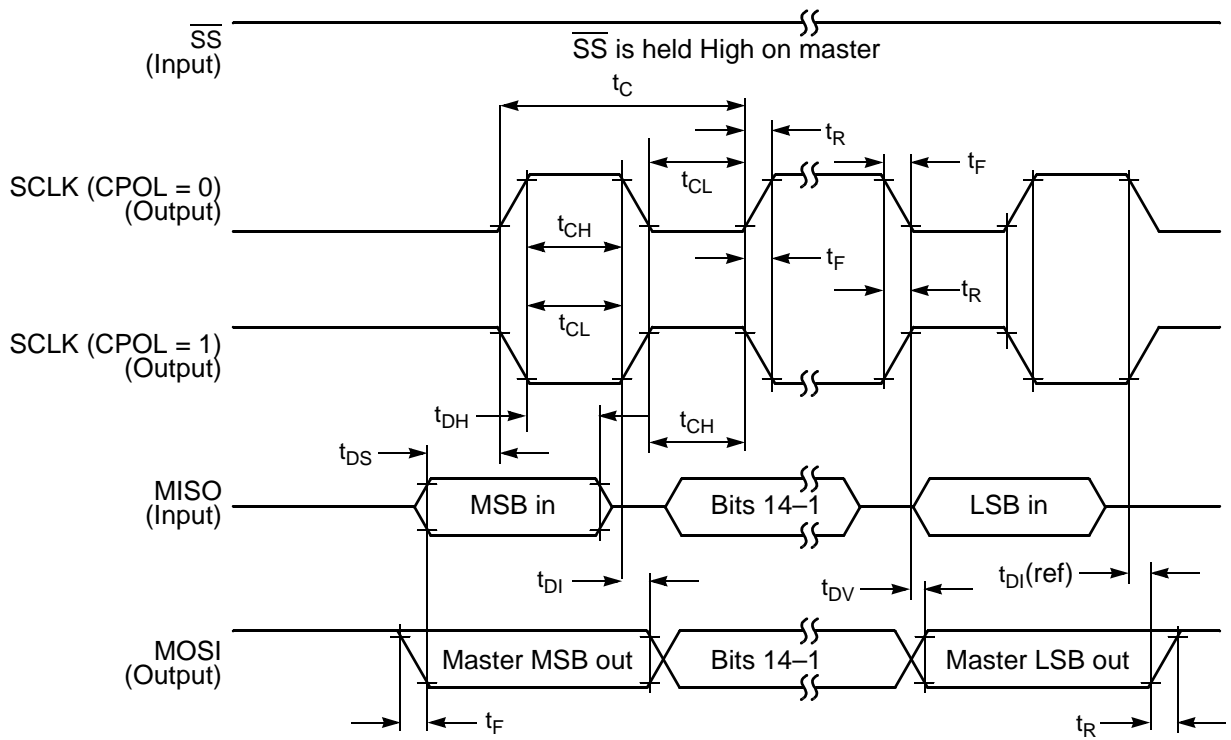
Figure 10-9 SPI Master Timing (CPHA = 0)
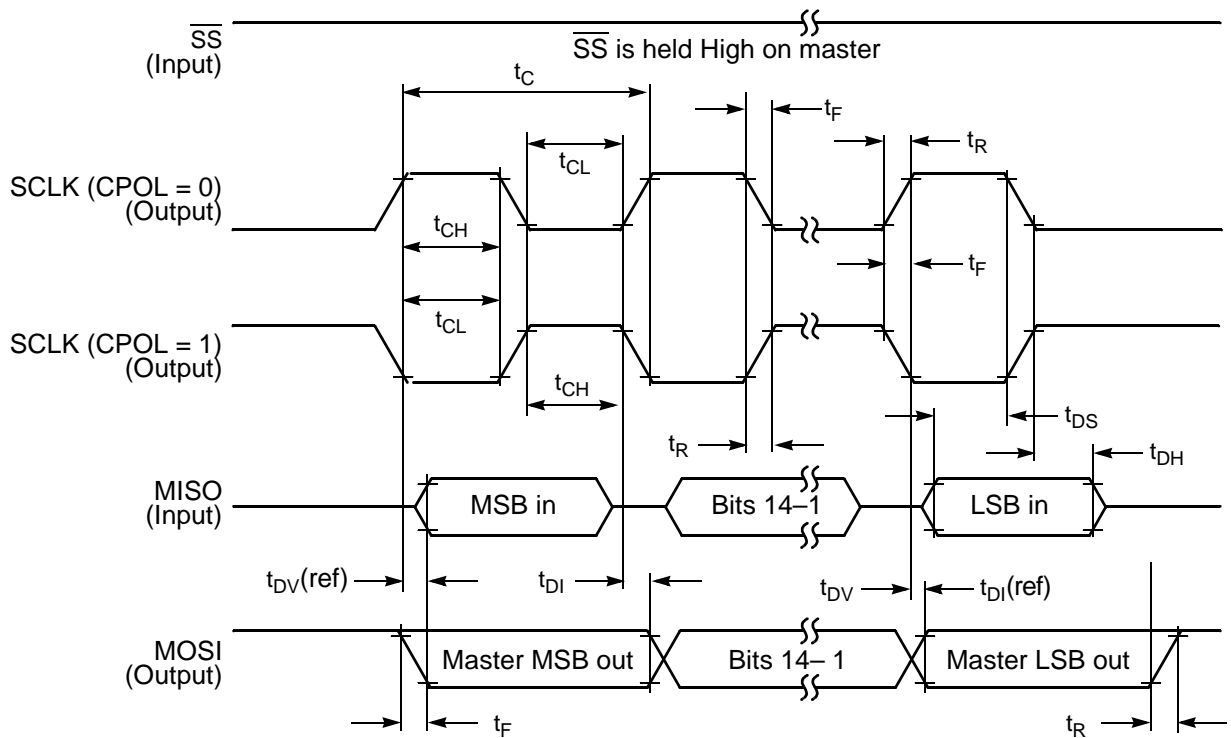
Figure 10-10 SPI Master Timing (CPHA = 1)

56F8365 Technical Data, Rev. 6.0
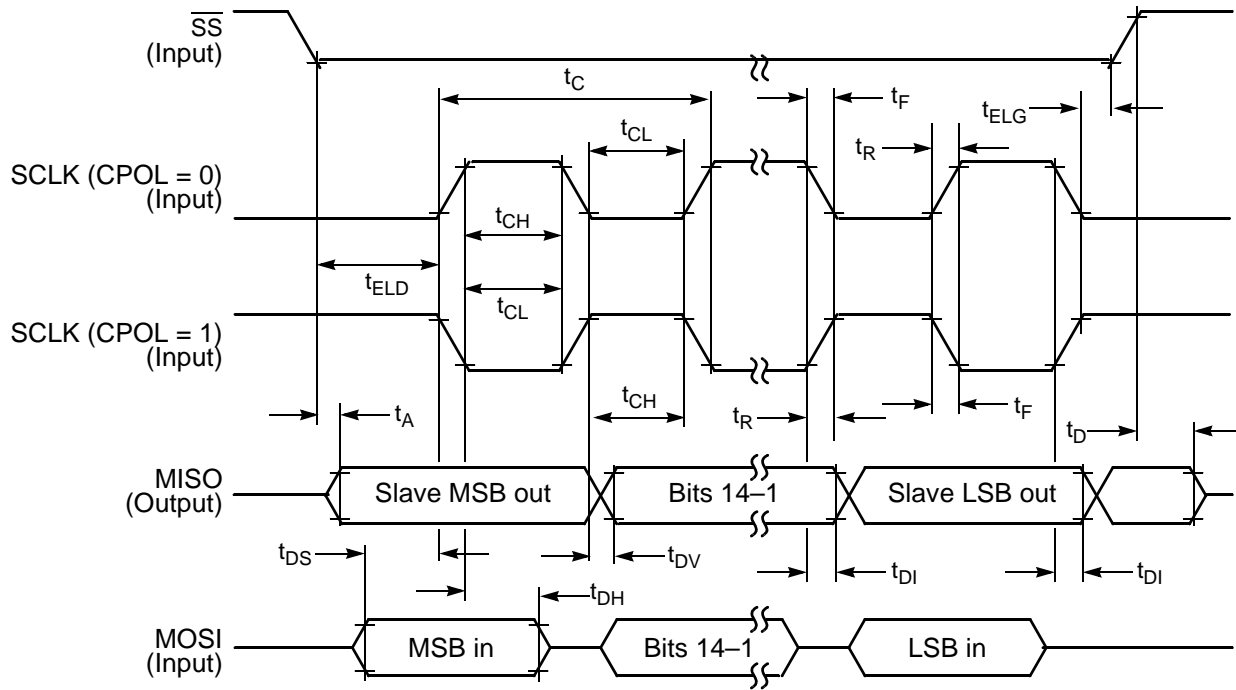
Figure 10-11 SPI Slave Timing (CPHA = 0)
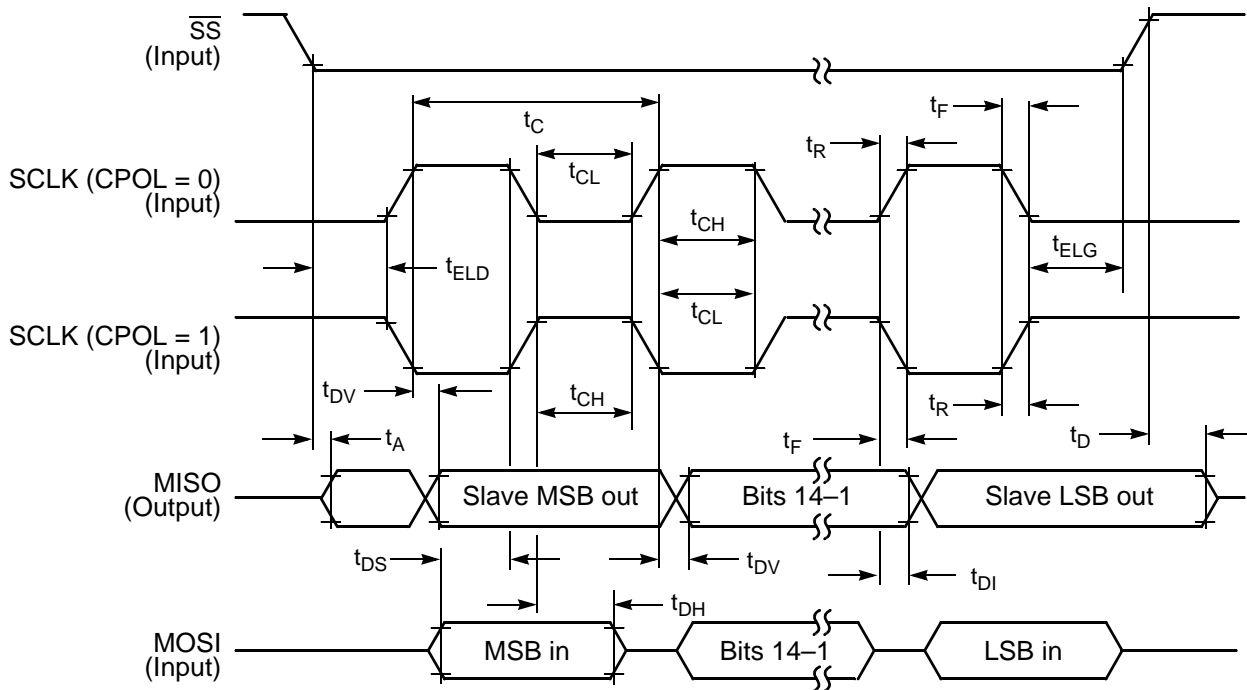
Figure 10-12 SPI Slave Timing (CPHA = 1)

56F8365 Technical Data, Rev. 6.0

10.10 Quad Timer Timing

Table 10-18 Timer Timing[1, 2]

Characteristic	Symbol	Min	Max	Unit	See Figure
Timer input period	P_{IN}	2T + 6	—	ns	**10-13**
Timer input high / low period	P_{INHL}	1T + 3	—	ns	**10-13**
Timer output period	P_{OUT}	1T - 3	—	ns	**10-13**
Timer output high / low period	P_{OUTHL}	0.5T - 3	—	ns	**10-13**

1. In the formulas listed, T = the clock cycle. For 60MHz operation, T = 16.67ns.

2. Parameters listed are guaranteed by design.
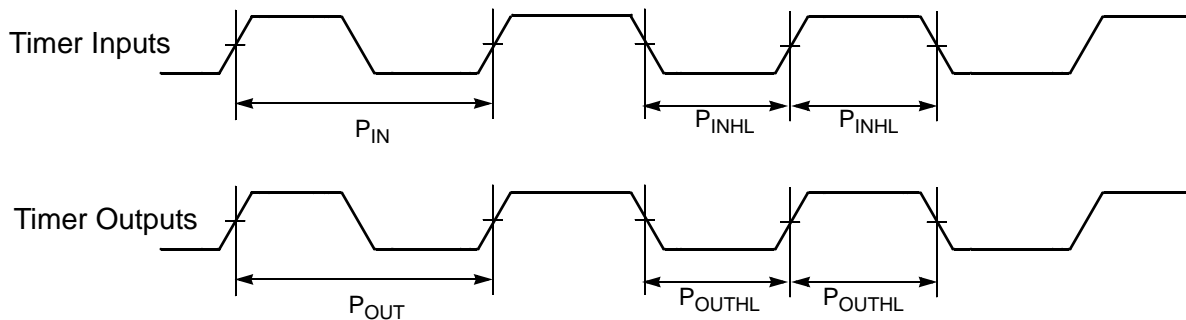
Figure 10-13 Timer Timing

10.11 Quadrature Decoder Timing

Table 10-19 Quadrature Decoder Timing[1, 2]

Characteristic	Symbol	Min	Max	Unit	See Figure
Quadrature input period	P_{IN}	4T + 12	—	ns	**10-14**
Quadrature input high / low period	P_{HL}	2T + 6	—	ns	**10-14**
Quadrature phase period	P_{PH}	1T + 3	—	ns	**10-14**

1. In the formulas listed, T = the clock cycle. For 60MHz operation, T=16.67ns.

2. Parameters listed are guaranteed by design.
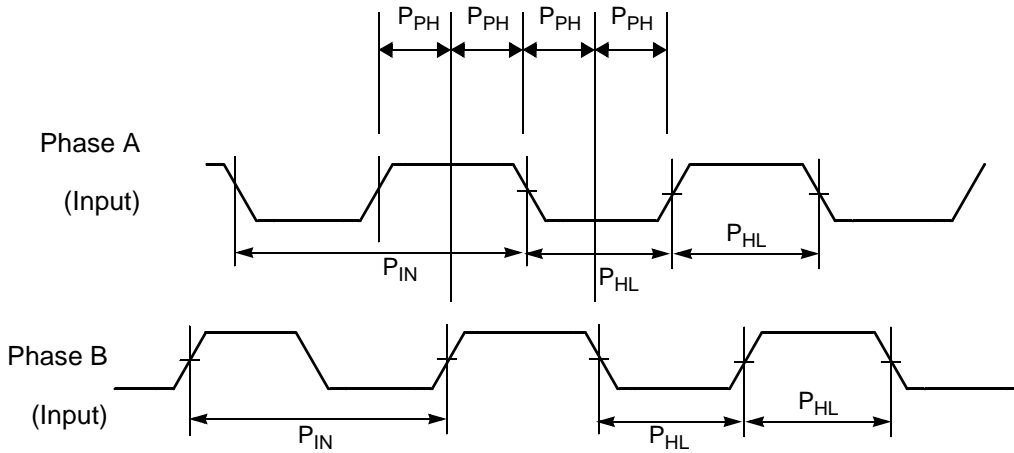
Figure 10-14 Quadrature Decoder Timing

10.12 Serial Communication Interface (SCI) Timing

Table 10-20 SCI Timing[1]

Characteristic	Symbol	Min	Max	Unit	See Figure
Baud Rate[2]	BR	—	$(f_{MAX}/16)$	Mbps	—
RXD[3] Pulse Width	RXD_{PW}	0.965/BR	1.04/BR	ns	**10-15**
TXD[4] Pulse Width	TXD_{PW}	0.965/BR	1.04/BR	ns	**10-16**

1. Parameters listed are guaranteed by design.

2. f_{MAX} is the frequency of operation of the system clock, ZCLK, in MHz, which is 60MHz for the 56F8365 device and 40MHz for the 56F8165 device.

3. The RXD pin in SCI0 is named RXD0 and the RXD pin in SCI1 is named RXD1.

4. The TXD pin in SCI0 is named TXD0 and the TXD pin in SCI1 is named TXD1.

Figure 10-15 RXD Pulse Width

Figure 10-16 TXD Pulse Width

56F8365 Technical Data, Rev. 6.0

10.13 Controller Area Network (CAN) Timing

Note: *CAN is NOT available in the 56F8165 device.*

Table 10-21 CAN Timing[1]

Characteristic	Symbol	Min	Max	Unit	See Figure
Baud Rate	BR_{CAN}	—	1	Mbps	—
Bus Wake Up detection	T_{WAKEUP}	5	—	μs	**10-17**

1. Parameters listed are guaranteed by design
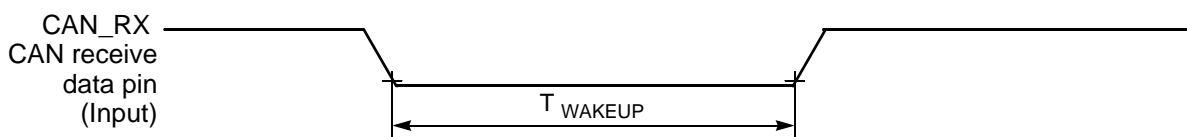
Figure 10-17 Bus Wake Up Detection

10.14 JTAG Timing

Table 10-22 JTAG Timing

Characteristic	Symbol	Min	Max	Unit	See Figure
TCK frequency of operation using EOnCE[1]	f_{OP}	DC	SYS_CLK/8	MHz	**10-18**
TCK frequency of operation not using EOnCE[1]	f_{OP}	DC	SYS_CLK/4	MHz	**10-18**
TCK clock pulse width	t_{PW}	50	—	ns	**10-18**
TMS, TDI data set-up time	t_{DS}	5	—	ns	**10-19**
TMS, TDI data hold time	t_{DH}	5	—	ns	**10-19**
TCK low to TDO data valid	t_{DV}	—	30	ns	**10-19**
TCK low to TDO tri-state	t_{TS}	—	30	ns	**10-19**
$\overline{TRST}$ assertion time	t_{TRST}	$2T^2$	—	ns	**10-20**

1. TCK frequency of operation must be less than 1/8 the processor rate.

2. T = processor clock period (nominally 1/60MHz)
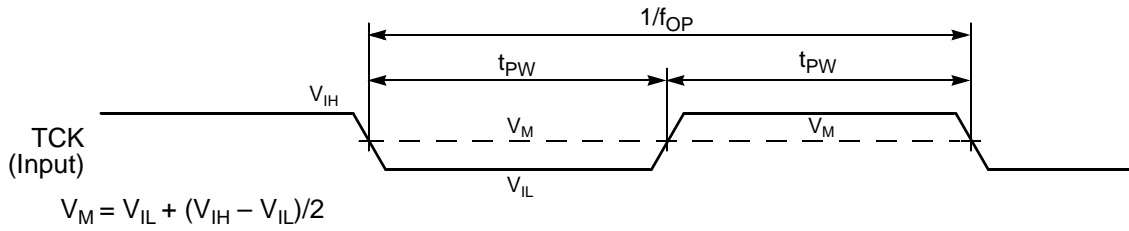
Figure 10-18 Test Clock Input Timing Diagram
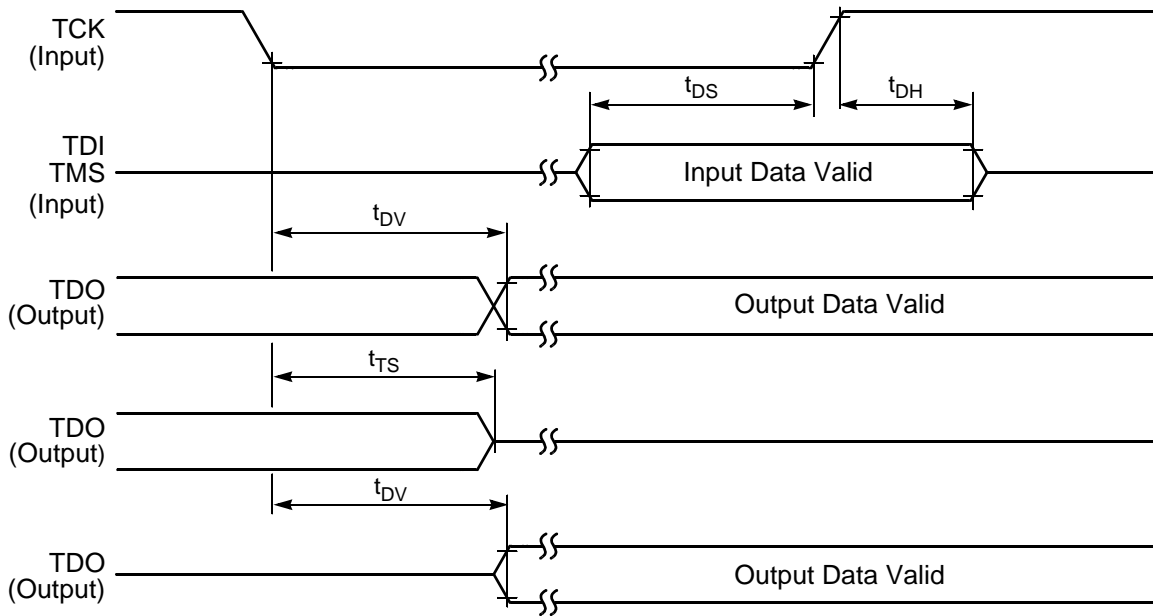
Figure 10-19 Test Access Port Timing Diagram

Figure 10-20 TRST Timing Diagram

10.15 Analog-to-Digital Converter (ADC) Parameters

Table 10-23 ADC Parameters

Characteristic	Symbol	Min	Typ	Max	Unit
Input voltages	V_{ADIN}	V_{REFL}	—	V_{REFH}	V
Resolution	R_{ES}	12	—	12	Bits
Integral Non-Linearity[1]	INL	—	+/- 2.4	+/- 3.2	LSB^2
Differential Non-Linearity	DNL	—	+/- 0.7	< +1	LSB^2
Monotonicity	GUARANTEED				
ADC internal clock	f_{ADIC}	0.5	—	5	MHz
Conversion range	R_{AD}	V_{REFL}	—	V_{REFH}	V
ADC channel power-up time	t_{ADPU}	5	6	16	t_{AIC} cycles[3]
ADC reference circuit power-up time[4]	t_{VREF}	—	—	25	ms
Conversion time	t_{ADC}	—	6	—	t_{AIC} cycles[3]
Sample time	t_{ADS}	—	1	—	t_{AIC} cycles[3]
Input capacitance	C_{ADI}	—	5	—	pF
Input injection current[5], per pin	I_{ADI}	—	—	3	mA
Input injection current, total	I_{ADIT}	—	—	20	mA
V_{REFH} current	I_{VREFH}	—	1.2	3	mA
ADC A current	I_{ADCA}	—	25	—	mA
ADC B current	I_{ADCB}	—	25	—	mA
Quiescent current	I_{ADCQ}	—	0	10	μA
Uncalibrated Gain Error (ideal = 1)	E_{GAIN}	—	+/- .004	+/- .01	—
Uncalibrated Offset Voltage	V_{OFFSET}	—	+/- 27	+/- 40	mV
Calibrated Absolute Error[6]	AE_{CAL}	—	See **Figure 10-22**	—	LSBs
Calibration Factor 1[7]	CF1	—	0.002289	—	—
Calibration Factor 2[7]	CF2	—	-25.6	—	—
Crosstalk between channels	—	—	-60	—	dB
Common Mode Voltage	V_{common}	—	$(V_{REFH} - V_{REFLO}) / 2$	—	V
Signal-to-noise ratio	SNR	—	64.6	—	db
Signal-to-noise plus distortion ratio	SINAD	—	59.1	—	db

Table 10-23 ADC Parameters (Continued)

Characteristic	Symbol	Min	Typ	Max	Unit
Total Harmonic Distortion	THD	—	60.6	—	db
Spurious Free Dynamic Range	SFDR	—	61.1	—	db
Effective Number Of Bits[8]	ENOB	—	9.6	—	Bits

1. INL measured from V_{in} = .1V_{REFH} to V_{in} = .9V_{REFH}
   10% to 90% Input Signal Range

2. LSB = Least Significant Bit

3. ADC clock cycles

4. Assumes each voltage reference pin is bypassed with 0.1μF ceramic capacitors to ground

5. The current that can be injected or sourced from an unselected ADC signal input without impacting the performance of the ADC. This allows the ADC to operate in noisy industrial environments where inductive flyback is possible.

6. Absolute error includes the effects of both gain error and offset error.

7. Please see the **56F8300Peripheral User's Manual** for additional information on ADC calibration.

8. ENOB = (SINAD - 1.76)/6.02
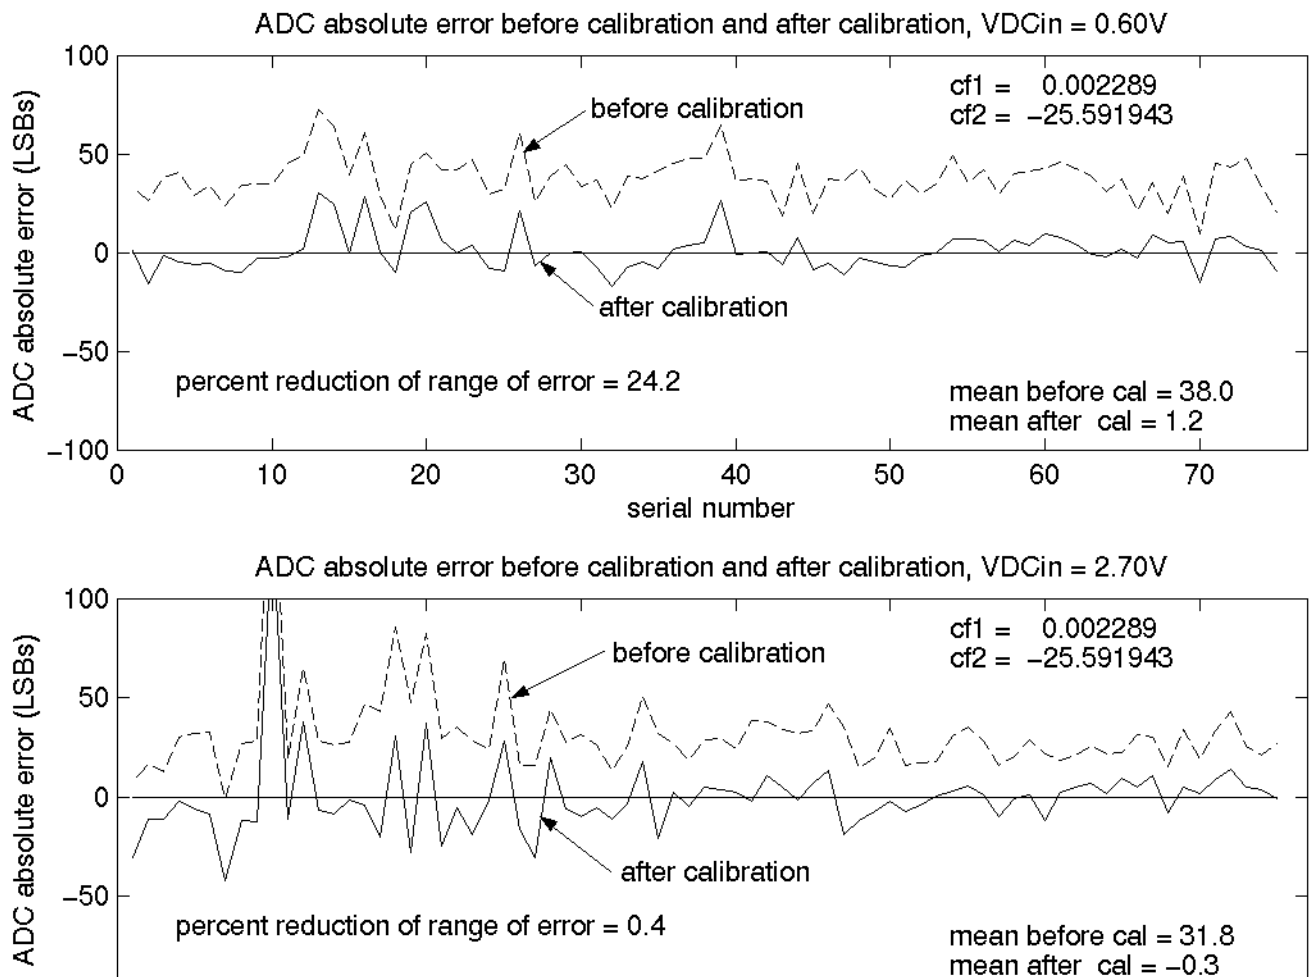
Figure 10-21 ADC Absolute Error Over Processing and Temperature Extremes Before and After Calibration for VDC$_{in}$ = 0.60V and 2.70V

Note: The absolute error data shown in the graphs above reflects the effects of both gain error and offset error. The data was taken on 25 parts: five each from four processing corner lots as well as five from one nominally processed lot, each at three temperatures: -40°C, 27°C, and 150°C (giving the 75 data points shown above), for two input DC voltages: 0.60V and 2.70V. The data indicates that for the given population of parts, calibration significantly reduced (by as much as 24%) the collective variation (spread) of the absolute error of the population. It also significantly reduced (by as much as 38%) the mean (average) of the absolute error and thereby brought it significantly closer to the ideal value of zero. Although not guaranteed, it is believed that calibration will produce results similar to those shown above for any population of parts including those which represent processing and temperature extremes.

10.16 Equivalent Circuit for ADC Inputs

Figure 10-22 illustrates the ADC input circuit during sample and hold. S1 and S2 are always open/closed at the same time that S3 is closed/open. When S1/S2 are closed & S3 is open, one input of the sample and hold circuit moves to $V_{REFH} - V_{REFH} / 2$, while the other charges to the analog input voltage. When the switches are flipped, the charge on C1 and C2 are averaged via S3, with the result that a single-ended analog input is switched to a differential voltage centered about $V_{REFH} - V_{REFH} / 2$. The switches switch on every cycle of the ADC clock (open one-half ADC clock, closed one-half ADC clock). Note that there are additional capacitances associated with the analog input pad, routing, etc., but these do not filter into the S/H output voltage, as S1 provides isolation during the charge-sharing phase.

One aspect of this circuit is that there is an on-going input current, which is a function of the analog input voltage, V_{REF} and the ADC clock frequency.
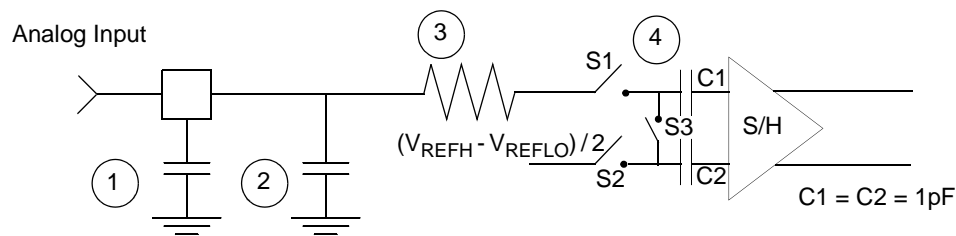
1. Parasitic capacitance due to package, pin-to-pin and pin-to-package base coupling; 1.8pf
2. Parasitic capacitance due to the chip bond pad, ESD protection devices and signal routing; 2.04pf
3. Equivalent resistance for the ESD isolation resistor and the channel select mux; 500 ohms
4. Sampling capacitor at the sample and hold circuit. Capacitor C1 is normally disconnected from the input and is only connected to it at sampling time; 1pf

Figure 10-22 Equivalent Circuit for A/D Loading

10.17 Power Consumption

This section provides additional detail which can be used to optimize power consumption for a given application.

Power consumption is given by the following equation:

Total power =   A: internal [static component]
+B: internal [state-dependent component]
+C: internal [dynamic component]
+D: external [dynamic component]
+E: external [static]

A, the internal [static component], is comprised of the DC bias currents for the oscillator, leakage current, PLL, and voltage references. These sources operate independently of processor state or operating frequency.

B, the internal [state-dependent component], reflects the supply current required by certain on-chip resources only when those resources are in use. These include RAM, Flash memory and the ADCs.

56F8365 Technical Data, Rev. 6.0

C, the internal [dynamic component], is classic $C*V^2*F$ CMOS power dissipation corresponding to the 56800E core and standard cell logic.

D, the external [dynamic component], reflects power dissipated on-chip as a result of capacitive loading on the external pins of the chip. This is also commonly described as $C*V^2*F$, although simulations on two of the IO cell types used on the device reveal that the power-versus-load curve does have a non-zero Y-intercept.

Table 10-24 IO Loading Coefficients at 10MHz

	Intercept	Slope
PDU08DGZ_ME	1.3	0.11mW / pF
PDU04DGZ_ME	1.15mW	0.11mW / pF

Power due to capacitive loading on output pins is (first order) a function of the capacitive load and frequency at which the outputs change. **Table 10-24** provides coefficients for calculating power dissipated in the IO cells as a function of capacitive load. In these cases:

Total Power = Σ((Intercept +Slope*Cload)*frequency/10MHz)

where:

- Summation is performed over all output pins with capacitive loads
- Total Power is expressed in mW
- Cload is expressed in pF

Because of the low duty cycle on most device pins, power dissipation due to capacitive loads was found to be fairly low when averaged over a period of time.

E, the external [static component], reflects the effects of placing resistive loads on the outputs of the device. Sum the total of all V^2/R or IV to arrive at the resistive load contribution to power. Assume V = 0.5 for the purposes of these rough calculations. For instance, if there is a total of eight PWM outputs driving 10mA into LEDs, then P = 8*.5*.01 = 40mW.

In previous discussions, power consumption due to parasitics associated with pure input pins is ignored, as it is assumed to be negligible.

Part 11 Packaging

11.1 56F8365 Package and Pin-Out Information

This section contains package and pin-out information for the 56F8365. This device comes in a 128-pin Low-profile Quad Flat Pack (LQFP). **Figure 11-1**. shows the package outline for the 128-pin LQFP; **Figure 11-3** shows the mechanical parameters for this package, and **Table 11-1**. lists the pin-out for the 128-pin LQFP.
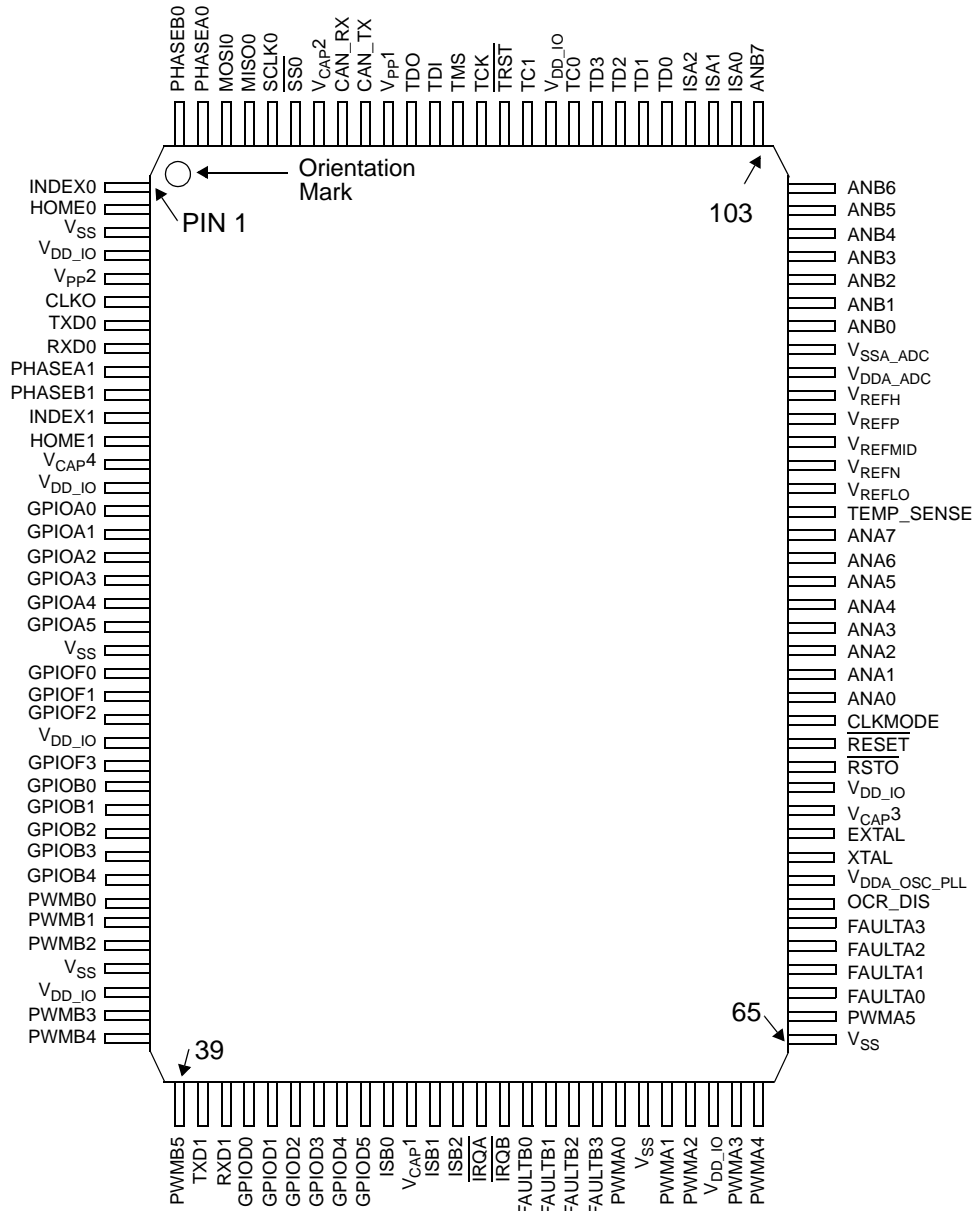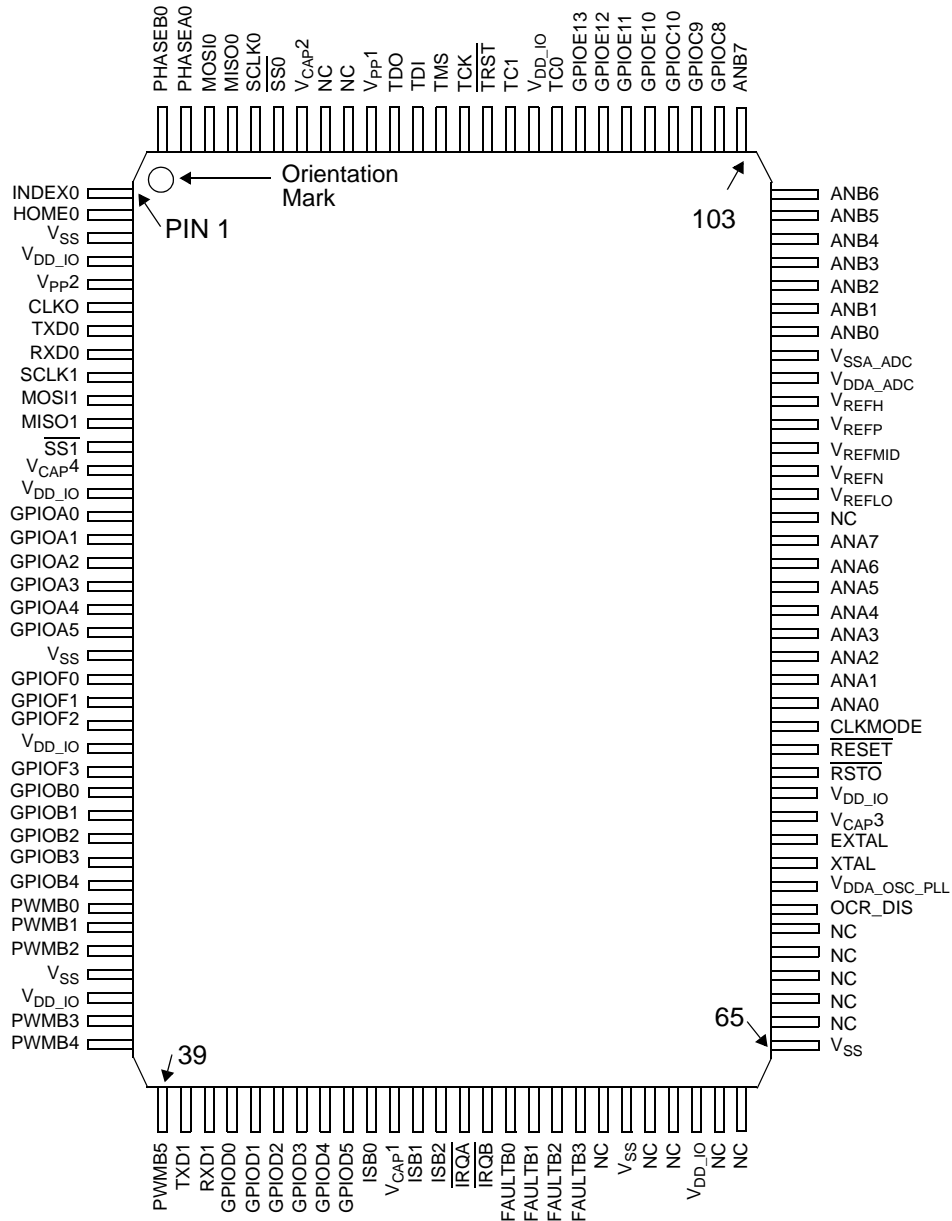

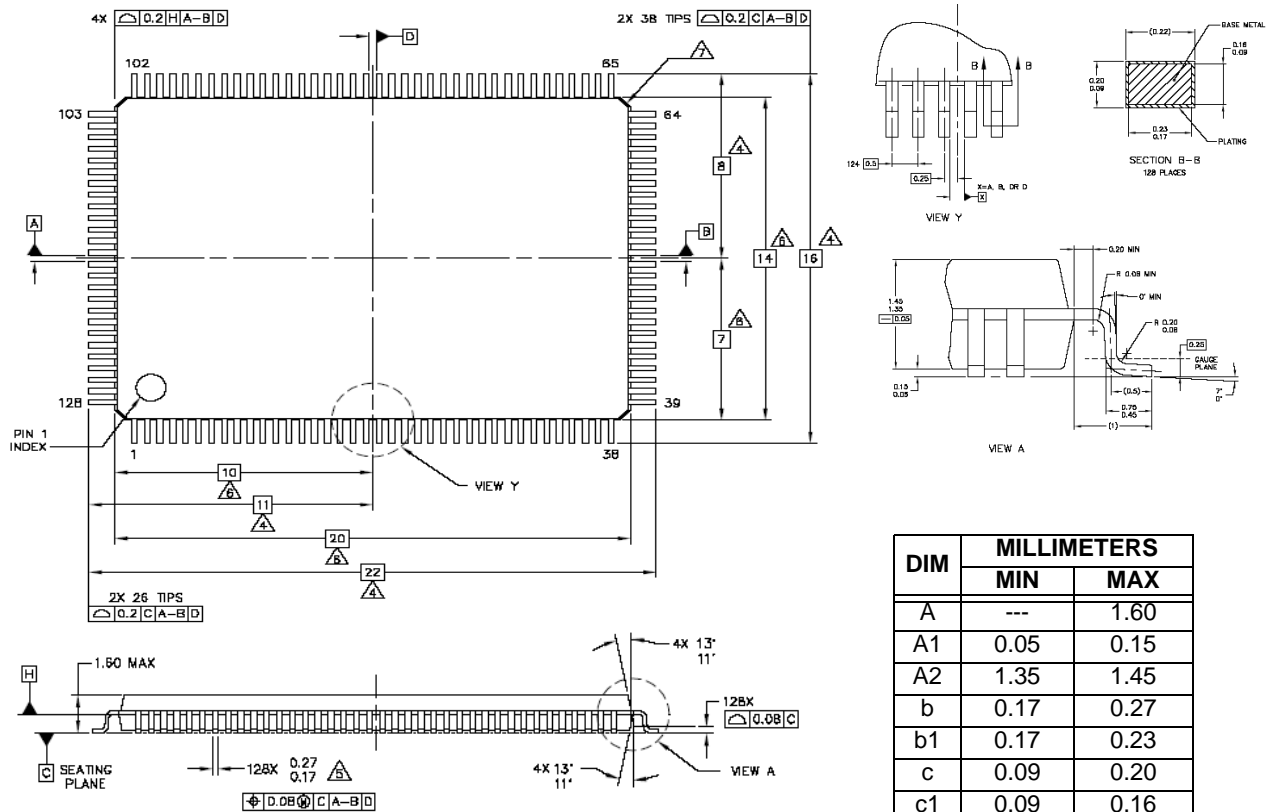**Figure 11-1 Top View, 56F8365 128-pin LQFP Package**

56F8365 Technical Data, Rev. 6.0

Table 11-1 56F8365 128-Pin LQFP Package Identification by Pin Number

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	INDEX0	33	PWMB1	65	V_{SS}	97	ANB1
2	HOME0	34	PWMB2	66	PWMA5	98	ANB2
3	V_{SS}	35	V_{SS}	67	FAULTA0	99	ANB3
4	V_{DD_IO}	36	V_{DD_IO}	68	FAULTA1	100	ANB4
5	$V_{PP}2$	37	PWMB3	69	FAULTA2	101	ANB5
6	CLKO	38	PWMB4	70	FAULTA3	102	ANB6
7	TXD0	39	PWMB5	71	OCR_DIS	103	ANB7
8	RXD0	40	TXD1	72	$V_{DDA\_OSC\_PLL}$	104	ISA0
9	PHASEA1	41	RXD1	73	XTAL	105	ISA1
10	PHASEB1	42	GPIOD0	74	EXTAL	106	ISA2
11	INDEX1	43	GPIOD1	75	$V_{CAP}3$	107	TD0
12	HOME1	44	GPIOD2	76	V_{DD_IO}	108	TD1
13	$V_{CAP}4$	45	GPIOD3	77	$\overline{RSTO}$	109	TD2
14	V_{DD_IO}	46	GPIOD4	78	$\overline{RESET}$	110	TD3
15	GPIOA0[1]	47	GPIOD5	79	CLKMODE	111	TC0
16	GPIOA1[1]	48	ISB0	80	ANA0	112	V_{DD_IO}
17	GPIOA2[1]	49	$V_{CAP}1$	81	ANA1	113	TC1
18	GPIOA3[1]	50	ISB1	82	ANA2	114	$\overline{TRST}$
19	GPIOA4[1]	51	ISB2	83	ANA3	115	TCK
20	GPIOA5[1]	52	$\overline{IRQA}$	84	ANA4	116	TMS
21	V_{SS}	53	$\overline{IRQB}$	85	AN5	117	TDI
20	GPIOF0[1]	54	FAULTB0	86	ANA6	118	TDO
23	GPIOF1[1]	55	FAULTB1	87	ANA7	119	$V_{PP}1$
24	GPIOF2[1]	56	FAULTB2	88	TEMP_SENSE	120	CAN_TX
25	V_{DD_IO}	57	FAULTB3	89	V_{REFLO}	121	CAN_RX

1. Primary function is not available in this package configuration; GPIO function must be used instead

56F8365 Technical Data, Rev. 6.0

Freescale Semiconductor
Preliminary

Table 11-1 56F8365 128-Pin LQFP Package Identification by Pin Number (Continued)

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
26	GPIOF3[1]	58	PWMA0	90	V_{REFN}	122	$V_{CAP}2$
27	GPIOB0	59	V_{SS}	91	V_{REFMID}	123	$\overline{SS0}$
28	GPIOB1	60	PWMA1	92	V_{REFP}	124	SCLK0
29	GPIOB2	61	PWMA2	93	V_{REFH}	125	MISO0
30	GPIOB3	62	V_{DD_IO}	94	V_{DDA_ADC}	126	MOSI0
31	GPIOB4	63	PWMA3	95	V_{SSA_ADC}	127	PHASEA0
32	PWMB0	64	PWMA4	96	ANB0	128	PHASEB0

56F8365 Technical Data, Rev. 6.0

11.2 56F8165 Package and Pin-Out Information

This section contains package and pin-out information for the 56F8165. This device comes in a 128-pin Low-profile Quad Flat Pack (LQFP). **Figure 11-1**. shows the package outline for the 128-pin LQFP, **Figure 11-3** shows the mechanical parameters for this package, and **Table 11-1** lists the pin-out for the 128-pin LQFP.

Figure 11-2 Top View, 56F8165 128-pin LQFP Package

Table 11-2 56F8165 128-Pin LQFP Package Identification by Pin Number

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	INDEX0	33	PWMB1	65	V_{SS}	97	ANB1
2	HOME0	34	PWMB2	66	NC	98	ANB2
3	V_{SS}	35	V_{SS}	67	NC	99	ANB3
4	V_{DD_IO}	36	V_{DD_IO}	68	NC	100	ANB4
5	$V_{PP}2$	37	PWMB3	69	NC	101	ANB5
6	CLKO	38	PWMB4	70	NC	102	ANB6
7	TXD0	39	PWMB5	71	OCR_DIS	103	ANB7
8	RXD0	40	TXD1	72	$V_{DDA\_OSC\_PLL}$	104	GPIOC8
9	SCLK1	41	RXD1	73	XTAL	105	GPIOC9
10	MOSI1	42	GPIOD0	74	EXTAL	106	GPIOC10
11	MISO1	43	GPIOD1	75	$V_{CAP}3$	107	GPIOE10
12	$\overline{SS1}$	44	GPIOD2	76	V_{DD_IO}	108	GPIOE11
13	$V_{CAP}4$	45	GPIOD3	77	$\overline{RSTO}$	109	GPIOE12
14	V_{DD_IO}	46	GPIOD4	78	$\overline{RESET}$	110	GPIOE13
15	GPIOA0[1]	47	GPIOD5	79	CLKMODE	111	TC0
16	GPIOA1[1]	48	ISB0	80	ANA0	112	V_{DD_IO}
17	GPIOA2[1]	49	$V_{CAP}1$	81	ANA1	113	TC1
18	GPIOA3[1]	50	ISB1	82	ANA2	114	$\overline{TRST}$
19	GPIOA4[1]	51	ISB2	83	ANA3	115	TCK
20	GPIOA5[1]	52	$\overline{IRQA}$	84	ANA4	116	TMS
21	V_{SS}	53	$\overline{IRQB}$	85	AN5	117	TDI
220	GPIOF0[1]	54	FAULTB0	86	ANA6	118	TDO
23	GPIOF1[1]	55	FAULTB1	87	ANA7	119	$V_{PP}1$
24	GPIOF2[1]	56	FAULTB2	88	NC	120	NC
25	V_{DD_IO}	57	FAULTB3	89	V_{REFLO}	121	NC
1. Primary function is not available in this package configuration; GPIO function must be used instead							

56F8365 Technical Data, Rev. 6.0

Table 11-2 56F8165 128-Pin LQFP Package Identification by Pin Number (Continued)

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
26	GPIOF3[1]	58	NC	90	V_{REFN}	122	$V_{CAP}2$
27	GPIOB0	59	V_{SS}	91	V_{REFMID}	123	$\overline{SS0}$
28	GPIOB1	60	NC	92	V_{REFP}	124	SCLK0
29	GPIOB2	61	NC	93	V_{REFH}	125	MISO0
30	GPIOB3	62	V_{DD_IO}	94	V_{DDA_ADC}	126	MOSI0
31	GPIOB4	63	NC	95	V_{SSA_ADC}	127	PHASEA0
32	PWMB0	64	NC	96	ANB0	128	PHASEB0

56F8365 Technical Data, Rev. 6.0

Figure 11-3 128-pin LQFP Mechanical Information

NOTES:
1. DIMENSIONING AND TOLERANCING PER ASME Y14.5M, 1994.
2. CONTROLLING DIMENSION: MILLIMETER.
3. DATUM PLANE H IS LOCATED AT BOTTOM OF LEAD AND IS COINCIDENT WITH THE LEAD WHERE THE LEAD EXITS THE PLASTIC BODY AT THE BOTTOM OF THE PARTING LINE.
4. DATUMS A, B, AND D TO BE DETERMINED AT DATUM PLANE H.
5. DIMENSIONS D AND E TO BE DETERMINED AT SEATING PLANE C.
6. DIMENSIONS D1 AND E1 DO NOT INCLUDE MOLD PROTRUSION. ALLOWABLE PROTRUSION IS 0.25 PER SIDE. DIMENSIONS D1 AND E1 DO INCLUDE MOLD MISMATCH AND ARE DETERMINED AT DATUM PLANE H.
7. DIMENSION b DOES NOT INCLUDE DAMBAR PROTRUSION. DAMBAR PROTRUSION SHALL NOT CAUSE THE b DIMENSION TO EXCEED 0.35.

DIM	MILLIMETERS	
	MIN	MAX
A	---	1.60
A1	0.05	0.15
A2	1.35	1.45
b	0.17	0.27
b1	0.17	0.23
c	0.09	0.20
c1	0.09	0.16
D	22.00 BSC	
D1	20.00BSC	
e	0.50 BSC	
E	16.00 BSC	
E1	14.00 BSC	
L	0.45	0.75
L1	1.00 REF	
L2	0.50 REF	
S	0.20	---
R1	0.08	---
R2	0.08	0.20
0	0°	7°
01	0°	---
02	11°	13°

Please see **www.freescale.com** for the most current case outline.

56F8365 Technical Data, Rev. 6.0

Part 12 Design Considerations

12.1 Thermal Design Considerations

An estimation of the chip junction temperature, T_J, can be obtained from the equation:

$$T_J = T_A + (R_{\theta JA} \times P_D)$$

where:

T_A = Ambient temperature for the package (^oC)

$R_{\theta JA}$ = Junction-to-ambient thermal resistance ($^oC/W$)

P_D = Power dissipation in the package (W)

The junction-to-ambient thermal resistance is an industry-standard value that provides a quick and easy estimation of thermal performance. Unfortunately, there are two values in common usage: the value determined on a single-layer board and the value obtained on a board with two planes. For packages such as the PBGA, these values can be different by a factor of two. Which value is closer to the application depends on the power dissipated by other components on the board. The value obtained on a single-layer board is appropriate for the tightly packed printed circuit board. The value obtained on the board with the internal planes is usually appropriate if the board has low-power dissipation and the components are well separated.

When a heat sink is used, the thermal resistance is expressed as the sum of a junction-to-case thermal resistance and a case-to-ambient thermal resistance:

$$R_{\theta JA} = R_{\theta JC} + R_{\theta CA}$$

where:

$R_{\theta JA}$ = Package junction-to-ambient thermal resistance °C/W

$R_{\theta JC}$ = Package junction-to-case thermal resistance °C/W

$R_{\theta CA}$ = Package case-to-ambient thermal resistance °C/W

$R_{\theta JC}$ is device-related and cannot be influenced by the user. The user controls the thermal environment to change the case-to-ambient thermal resistance, $R_{\theta CA}$. For instance, the user can change the size of the heat sink, the air flow around the device, the interface material, the mounting arrangement on printed circuit board, or change the thermal dissipation on the printed circuit board surrounding the device.

To determine the junction temperature of the device in the application when heat sinks are not used, the Thermal Characterization Parameter (Ψ_{JT}) can be used to determine the junction temperature with a measurement of the temperature at the top center of the package case using the following equation:

$$T_J = T_T + (\Psi_{JT} \times P_D)$$

where:

T_T = Thermocouple temperature on top of package (^oC)

Ψ_{JT} = Thermal characterization parameter (^oC)/W

P_D = Power dissipation in package (W)

The thermal characterization parameter is measured per JESD51-2 specification using a 40-gauge type T thermocouple epoxied to the top center of the package case. The thermocouple should be positioned so that the thermocouple junction rests on the package. A small amount of epoxy is placed over the thermocouple junction and over about 1mm of wire extending from the junction. The thermocouple wire is placed flat against the package case to avoid measurement errors caused by cooling effects of the thermocouple wire.

When heat sink is used, the junction temperature is determined from a thermocouple inserted at the interface between the case of the package and the interface material. A clearance slot or hole is normally required in the heat sink. Minimizing the size of the clearance is important to minimize the change in thermal performance caused by removing part of the thermal interface to the heat sink. Because of the experimental difficulties with this technique, many engineers measure the heat sink temperature and then back-calculate the case temperature using a separate measurement of the thermal resistance of the interface. From this case temperature, the junction temperature is determined from the junction-to-case thermal resistance.

12.2 Electrical Design Considerations

CAUTION

This device contains protective circuitry to guard against damage due to high static voltage or electrical fields. However, normal precautions are advised to avoid application of any voltages higher than maximum-rated voltages to this high-impedance circuit. Reliability of operation is enhanced if unused inputs are tied to an appropriate voltage level.

Use the following list of considerations to assure correct operation of the 56F8365/56F8165:

- Provide a low-impedance path from the board power supply to each V_{DD} pin on the device, and from the board ground to each V_{SS} (GND) pin

- The minimum bypass requirement is to place six 0.01–0.1μF capacitors positioned as close as possible to the package supply pins. The recommended bypass configuration is to place one bypass capacitor on each of the V_{DD}/V_{SS} pairs, including V_{DDA}/V_{SSA}. Ceramic and tantalum capacitors tend to provide better performance tolerances.

- Ensure that capacitor leads and associated printed circuit traces that connect to the chip V_{DD} and V_{SS} (GND) pins are less than 0.5 inch per capacitor lead

- Use at least a four-layer Printed Circuit Board (PCB) with two inner layers for V_{DD} and V_{SS}

- Bypass the V_{DD} and V_{SS} layers of the PCB with approximately 100μF, preferably with a high-grade capacitor such as a tantalum capacitor

- Because the device's output signals have fast rise and fall times, PCB trace lengths should be minimal
- Consider all device loads as well as parasitic capacitance due to PCB traces when calculating capacitance. This is especially critical in systems with higher capacitive loads that could create higher transient currents in the V_{DD} and V_{SS} circuits.
- Take special care to minimize noise levels on the V_{REF}, V_{DDA} and V_{SSA} pins
- Designs that utilize the $\overline{TRST}$ pin for JTAG port or OnCE module functionality (such as development or debugging systems) should allow a means to assert $\overline{TRST}$ whenever $\overline{RESET}$ is asserted, as well as a means to assert $\overline{TRST}$ independently of $\overline{RESET}$. Designs that do not require debugging functionality, such as consumer products, should tie these pins together.
- Because the Flash memory is programmed through the JTAG/OnCE port, the designer should provide an interface to this port to allow in-circuit Flash programming

12.3 Power Distribution and I/O Ring Implementation

Figure 12-1 illustrates the general power control incorporated in the 56F8365/56F8165. This chip contains two internal power regulators. One of them is powered from the $V_{DDA\_OSC\_PLL}$ pin and cannot be turned off. This regulator controls power to the internal clock generation circuitry. The other regulator is powered from the V_{DD_IO} pins and provides power to all of the internal digital logic of the core, all peripherals and the internal memories. This regulator can be turned off, if an external V_{DD_CORE} voltage is externally applied to the V_{CAP} pins.

In summary, the entire chip can be supplied from a single 3.3 volt supply if the large core regulator is enabled. If the regulator is not enabled, a dual supply 3.3V/2.5V configuration can also be used.

Notes:

- Flash, RAM and internal logic are powered from the core regulator output
- $V_{PP}1$ and $V_{PP}2$ are not connected in the customer system
- All circuitry, analog *and* digital, shares a common V_{SS} bus
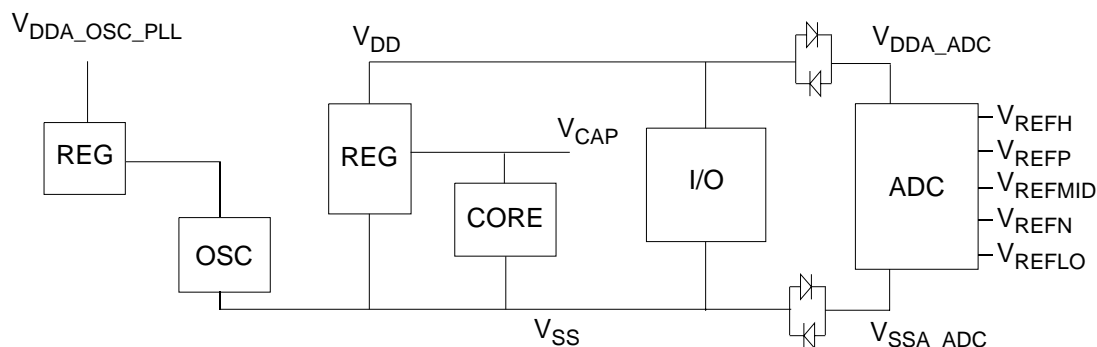
Figure 12-1 Power Management

Part 13 Ordering Information

Table 13-1 lists the pertinent information needed to place an order. Consult a Freescale Semiconductor sales office or authorized distributor to determine availability and to order parts.

Table 13-1 Ordering Information

Part	Supply Voltage	Package Type	Pin Count	Frequency (MHz)	Ambient Temperature Range	Order Number
MC56F8365	3.0–3.6 V	Low-Profile Quad Flat Pack (LQFP)	128	60	-40° to + 105° C	MC56F8365VFG60
MC56F8365	3.0–3.6 V	Low-Profile Quad Flat Pack (LQFP)	128	60	-40° to + 125° C	MC56F8365MFG60
MC56F8165	3.0–3.6 V	Low-Profile Quad Flat Pack (LQFP)	128	40	-40° to + 105° C	MC56F8165VFG
MC56F8365	3.0–3.6 V	Low-Profile Quad Flat Pack (LQFP)	128	60	-40° to + 105° C	MC56F8365VFGE*
MC56F8365	3.0–3.6 V	Low-Profile Quad Flat Pack (LQFP)	128	60	-40° to + 125° C	MC56F8365MFGE*
MC56F8165	3.0–3.6 V	Low-Profile Quad Flat Pack (LQFP)	128	40	-40° to + 105° C	MC56F8165VFGE*

*This package is RoHS compliant.

56F8365 Technical Data, Rev. 6.0

How to Reach Us:

Home Page:
www.freescale.com

E-mail:
support@freescale.com

USA/Europe or Locations Not Listed:
Freescale Semiconductor
Technical Information Center, CH370
1300 N. Alma School Road
Chandler, Arizona 85224
+1-800-521-6274 or +1-480-768-2130
support@freescale.com

Europe, Middle East, and Africa:
Freescale Halbleiter Deutschland GmbH
Technical Information Center
Schatzbogen 7
81829 Muenchen, Germany
+44 1296 380 456 (English)
+46 8 52200080 (English)
+49 89 92103 559 (German)
+33 1 69 35 48 48 (French)
support@freescale.com

Japan:
Freescale Semiconductor Japan Ltd.
Headquarters
ARCO Tower 15F
1-8-1, Shimo-Meguro, Meguro-ku,
Tokyo 153-0064, Japan
0120 191014 or +81 3 5437 9125
support.japan@freescale.com

Asia/Pacific:
Freescale Semiconductor Hong Kong Ltd.
Technical Information Center
2 Dai King Street
Tai Po Industrial Estate
Tai Po, N.T., Hong Kong
+800 2666 8080
support.asia@freescale.com

For Literature Requests Only:
Freescale Semiconductor Literature Distribution Center
P.O. Box 5405
Denver, Colorado 80217
1-800-441-2447 or 303-675-2140
Fax: 303-675-2150
LDCForFreescaleSemiconductor@hibbertgroup.com

MC56F8365
Rev. 6.0
06/2006