# InGaAs-APD/Preamp Receiver

## FEATURES

- 2.5Gb/s APD Receiver module in an industry standard mini-DIL package
- High Sensitivity: -34 dBm (typ.)
- High Differential Electrical Output
- Power Overload: -4dBm (typ.)
- Integral Thermistor and GaAs IC Preamp
- Wide operating temperature range (-40 to +85°C)

## APPLICATIONS

This APD detector preamp is intended to function as an optical receiver in long haul SONET, SDH, and DWDM systems operating up to 2.7Gb/s. The device operates in both the 1,310 and 1,550nm wavelength windows. The nominal  $10K\Omega$  integral thermistor allows accurate monitoring of the APD temperature and facilitates the design of the APD bias control circuits. The detector preamplifier is DC coupled and has a differential electrical output.

### DESCRIPTION

The FRM5W232BS incorporates a 30 micron InGaAs Avalanche Photodiode (APD) detector, a GaAs IC transimpedance preamplifier, and a thermistor in a mini-DIL type package. The APD is processed with modern MOVPE techniques resulting in reliable performance over a wide range of operating conditions. The lens coupling system and the single mode fiber are assembled using Nd: YAG welding techniques. The BS package is designed for a surface mount PC board assembly.

### ABSOLUTE MAXIMUM RATINGS (T<sub>c</sub>=25°C, unless otherwise specified)

Parameter	Symbol	Ratings	Unit			
Storage Temperature	T <sub>stg</sub>	-40 to +85	°C			
Operating Case Temperature	Т <sub>ор</sub>	-40 to +85	°C			
Supply Voltage	V <sub>DD</sub>	0 to +4.5	V			
APD Reverse Voltage	VR	0 to VB (Note)	V			
APD Reverse Current	IR(peak)	2	mA			

Note: Since the VB may vary from device to device, VB data is attached to each device for reference.





FRM5W232BS

# FRM5W232BS -

# InGaAs-APD/Preamp Receiver

#### **OPTICAL & ELECTRICAL CHARACTERISTICS**


(T<sub>C</sub>=25°C,  $\lambda$ =1,310/1,550nm, V<sub>DD</sub>=+3.3V unless otherwise specified)

Doromotor	Symbol	Test Conditions	Limits			
Parameter	Symbol	rest conditions	Min.	Тур.	Max.	Unit
APD Responsivity	R15	1,550nm, M=1	0.8	0.85	-	A/W
	R13	1,310nm, M=1	0.75	0.85	-	A/W
APD Breakdown Voltage	VB	ID=10μA	40	50	65	V
Temperature Coefficient of VB	γ	(Note 1)	0.08	0.12	0.15	V/°C
AC Transimpedance	Zt	$\begin{array}{l} \text{AC-coupled, f=100MHz,} \\ \text{RL=50}\Omega \end{array}$	-	2.0	-	kΩ
Bandwidth	BW	AC-Coupled, RL=50Ω, M=10, -3dBm from 1MHz	2.2	2.5	-	GHz
Equivalent Input Noise Current Density	in	AC-Coupled, RL=50Ω, Average in 1.8GHz	-	7.0	8.5	pA√Hz
Sensitivity	Pr	2.5Gb/s, NRZ, PRBS=2 <sup>23</sup> -1, B.E.R.=10 <sup>-10,</sup> Rext=-13dB, VR is set at optimum value Ta=25°C	-	-34.0	-33.0	dBm
		Ta=-40 to +85°C	-	-33.0	-32.0	dBm
Maximum Overload	Po	2.5Gb/s, NRZ, PRBS=2 <sup>23</sup> -1, B.E.R.=10 <sup>-10,</sup> Rext=-13dB, VR is set at M=3, Ta=-40 to +85°C	-5	-4	-	dBm
Optical Return Loss	ORL		30	-	-	dB
Power Supply Current	ISS		-	-	70	mA
Power Supply Voltage	V <sub>DD</sub>		3.15	3.3	3.45	v
Thermistor Resistance	Rth		9.5	10	10.5	kΩ
Thermistor B Constant	В		3800	3900	4000	к

Note: (1)  $\gamma = \Delta VB/\Delta Tc$ 




Notes





# InGaAs-APD/Preamp Receiver

# FRM5W232BS

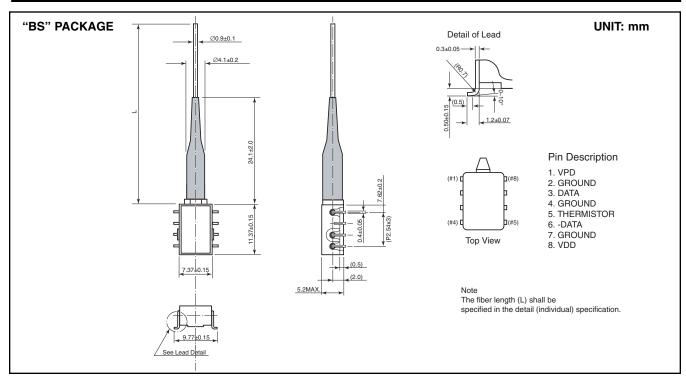

For further information please contact:

#### FUJITSU COMPOUND SEMICONDUCTOR, INC.

2355 Zanker Rd. San Jose, CA 95131-1138, U.S.A. Phone: (408) 232-9500 FAX: (408) 428-9111 www.fcsi.fujitsu.com

### FUJITSU QUANTUM DEVICES EUROPE LTD.

Network House Norreys Drive Maidenhead, Berkshire SL6 4FJ United Kingdom TEL: +44 (0) 1628 504800 FAX: +44 (0) 1628 504888

### FUJITSU QUANTUM DEVICES SINGAPORE PTE LTD.

Hong Kong Branch Rm. 1101, Ocean Centre, 5 Canton Rd. Tsim Sha Tsui, Kowloon, Hong Kong TEL: +852-23770226 FAX: +852-23763269

#### CAUTION

Fujitsu Compound Semiconductor Products contain **gallium arsenide** (GaAs) which can be hazardous to the human body and the environment. For safety, observe the following procedures:

• Do not put this product into the mouth.

- Do not alter the form of this product into a gas, powder, or liquid through burning, crushing, or chemical processing as these by-products are dangerous to the human body if inhaled, ingested, or swallowed.
- Observe government laws and company regulations when discarding this product. This product must be discarded in accordance with methods specified by applicable hazardous waste procedures.

### FUJITSU QUANTUM DEVICES LIMITED

Business Development Division 11th Floor, Hachioji Daiichi-Seimei Bldg. 3-20-6 Myojin-cho Hachioji-city, Tokyo 192-0046, Japan TEL: +81-426-43-5885 FAX: +81-426-43-5582

Fujitsu Limited reserves the right to change products and specifications without notice. The information does not convey any license under rights of Fujitsu Limited or others.

© 2002 FUJITSU COMPOUND SEMICONDUCTOR, INC. Printed in U.S.A. FCSI0302M200

