


GaAsP photodiode

Diffusion type

Photodiode for visible light detection

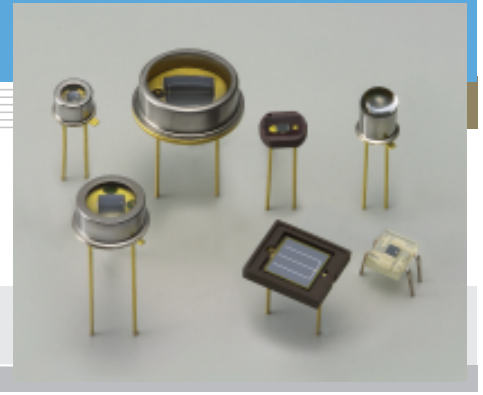

Features

- Low dark current
- High stability

Applications

- Analytical instrument
- Color identification

■ General ratings / Absolute maximum ratings


Type No.	Dimensional outline/ Window material *	Package	Active area size (mm)	Effective active area (mm ²)	Absolute maximum ratings		
					Reverse voltage VR Max. (V)	Operating temperature Topr (°C)	Storage temperature Tstg (°C)
G1115	①/K	TO-18	1.3 × 1.3	1.66	5	-30 to +80	-40 to +85
G1116	②/K	TO-5	2.7 × 2.7	7.26			
G1117	③/K	TO-8	5.6 × 5.6	29.3			
G1118	④/R	Ceramic	1.3 × 1.3	1.66			
G1120	⑤/R	Ceramic	5.6 × 5.6	29.3			
G3067	⑥/L	TO-18	1.3 × 1.3	1.66			
G2711-01	⑦/R	Plastic	1.3 × 1.3	1.66			

■ Electrical and optical characteristics (Typ. Ta=25 °C, unless otherwise noted)

Type No.	Spectral response range λ (nm)	Peak sensitivity wavelength λ_p (nm)	Photo sensitivity S (A/W)			Short circuit current Isc 100 μ A		Dark current Id Max. VR=10 mV VR=1 V (pA) (pA)		Temp. coefficient of Id TCID (times/°C)	Rise time tr VR=0 V RL=1 k Ω (μ s)	Terminal capacitance Ct VR=0 V f=10 kHz (pF)	Shunt resistance Rsh VR=10 mV		NEP (W/Hz ^{1/2})
			λ_p	GaP LED 560 nm	He-Ne laser 633 nm								Min. (μ A)	Typ. (μ A)	
G1115	300 to 680	640	0.3	0.29	0.29	0.12	0.15	1	10	1.07	1	300	10	80	1.5×10^{-15}
G1116						0.45	0.6	2.5	25		4	1400	4	30	2.5×10^{-15}
G1117						2	2.5	5	50		15	6000	2	15	3.5×10^{-15}
G1118						0.12	0.15	1	10		1	300	10	80	1.5×10^{-15}
G1120						2	2.5	5	50		15	6000	2	15	3.5×10^{-15}
G3067						0.75	0.95	1	10		1	300	10	80	1.5×10^{-15}
G2711-01						0.15	0.18	1	10		1	300	10	80	1.5×10^{-15}


* Window material K: borosilicate glass, L: lens type borosilicate glass, R: resin coating

■ Spectral response

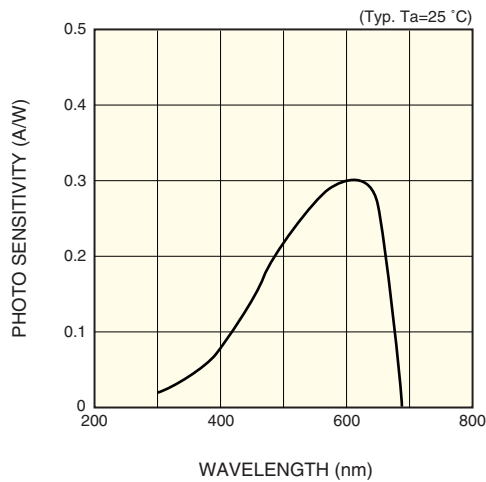


KGPDB0019EA

■ Photo sensitivity temperature characteristic

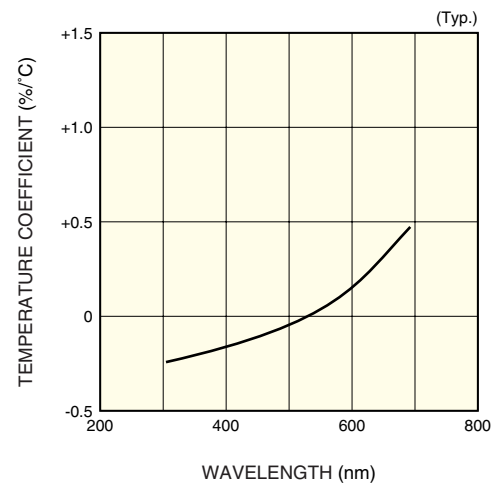


KGPDB0020EA

■ Rise time vs. load resistance

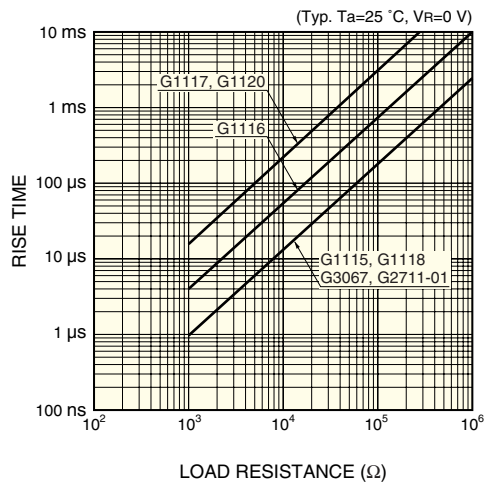


KGPDB0021EA

■ Dark current vs. reverse voltage

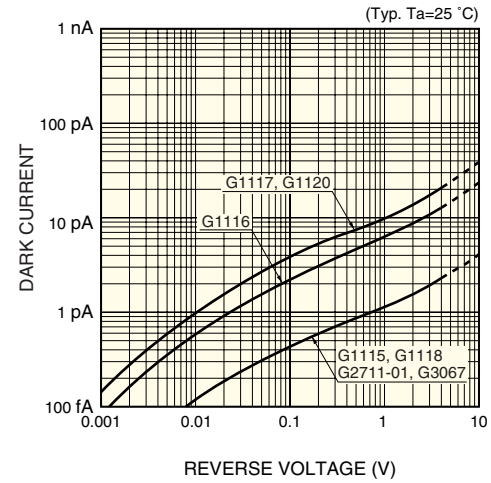


KGPDB0022EA

■ Shunt resistance vs. ambient temperature

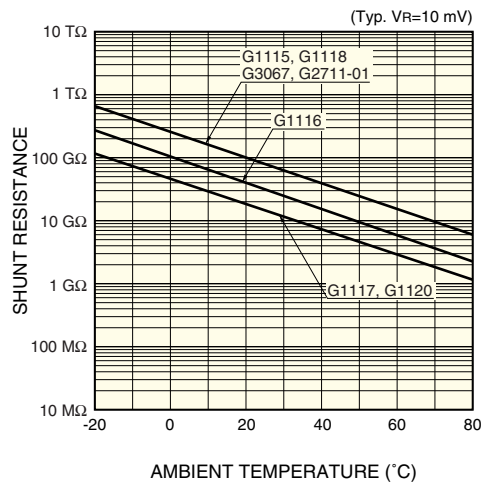

KGPDB0023EA


■ Short circuit current linearity

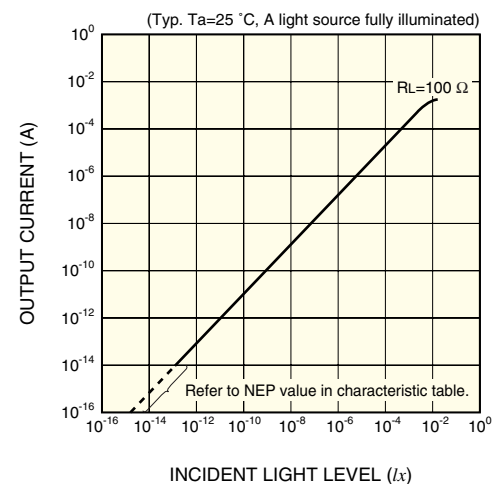


KGPDB0008EA

■ Dimensional outlines (unit: mm)

① G1115

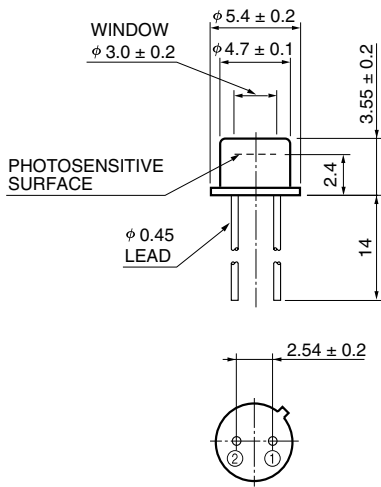


CONNECTED
TO CASE



Borosilicate glass window may extend a maximum of 0.1 mm beyond the upper surface of the cap.

KGPD A0012EA

② G1116

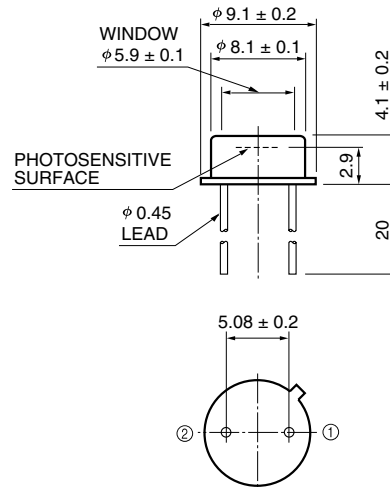


CONNECTED
TO CASE



Borosilicate glass window may extend a maximum of 0.2 mm beyond the upper surface of the cap.

KGPD A0013EA

③ G1117

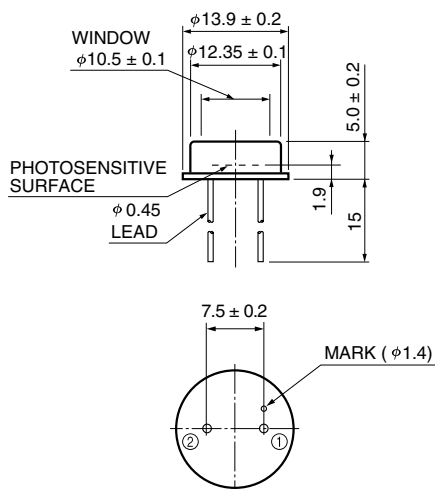


CONNECTED
TO CASE



Borosilicate glass window may extend a maximum of 0.2 mm beyond the upper surface of the cap.


KGPD A0014EA

④ G1118

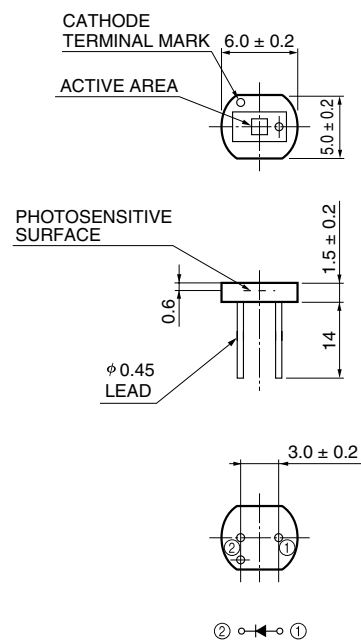


KGPD A0002EA

⑤ G1120

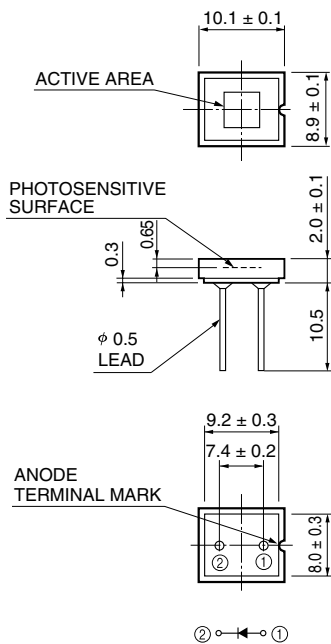


KGPDA0008EA

⑥ G3067

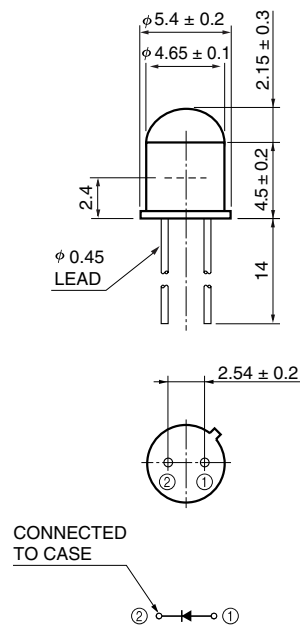

KGPDA0008EA

⑦ G2711-01

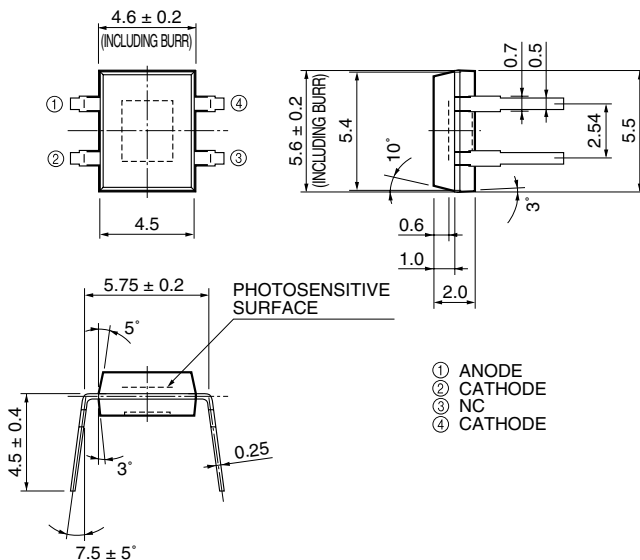

KGPDA0003EA

HAMAMATSU

Information furnished by HAMAMATSU is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions. Specifications are subject to change without notice. No patent rights are granted to any of the circuits described herein. ©2001 Hamamatsu Photonics K.K.

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Hamamatsu City, 435-8558 Japan, Telephone: (81) 053-434-3311, Fax: (81) 053-434-5184, <http://www.hamamatsu.com>

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, P.O. Box 6910, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1) 908-231-0960, Fax: (1) 908-231-1218

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49) 08152-3750, Fax: (49) 08152-2658

France: Hamamatsu Photonics France S.A.R.L.: 8, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: 33-(1) 69 53 71 00, Fax: 33-(1) 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44) 1707-294888, Fax: (44) 1707-325777

North Europe: Hamamatsu Photonics Norden AB: Smidesvägen 12, SE-171 41 Solna, Sweden, Telephone: (46) 8-509-031-00, Fax: (46) 8-509-031-01

Italy: Hamamatsu Photonics Italia S.R.L.: Strada della Moia, 1/E, 20020 Arese, (Milano), Italy, Telephone: (39) 02-935-81-733, Fax: (39) 02-935-81-741