#### 查询BD6389FM供应商

#### 捷多邦,专业PCB打样工厂,24小时加急出货

## 

STRUCTURE

Silicon monolithic integrated circuits

Bipolar stepping motor driver

**PRODUCT SERIES** 

TYPE

FUNCTION

#### · PWM constant current controllable two H bridge driver

- Built-in translator circuit for CLK-IN control
- · Full, Half, Quarter step
- Mixed Decay control

**BD6389FM** 

Parallel IN control

Item	Symbol	Limit	Unit
Supply voltage	V <sub>CC0,1,2</sub>	-0.2~+36.0	V
W2		2.8 <sup>*1</sup>	W
Power dissipation	Pd	5.2 <sup>*2</sup>	W
Input voltage for control pin	V <sub>IN</sub>	-0.2~+5.5	V
RNF maximum voltage	V <sub>RNF</sub>	0.5	V
Maximum output current	I <sub>OUT</sub>	2.2 <sup>*3</sup>	A/phase
Operating temperature range	Topr	-25~+75	°C
Storage temperature range	T <sub>stg</sub>	-55~+150	°C
Junction temperature	Tjmax	150	°C

70mm × 70mm × 1.6mm glass epoxy board. Derating in done at 22.4mW/°C for operating above Ta=25°C.

\*2 4-layer recommended board. Derating in done at 41.6mW/°C for operating above Ta=25°C.

\*3 Do not, however exceed Pd, ASO and Tjmax=150°C.

#### $\bigcirc$ Operating conditions (Ta=-25~+75°C)

Item	Symbol	Min	Тур	Max	Unit
Supply voltage	V <sub>CC0,1,2</sub>	10	24	28	V
Output current	lout	. ·	1.7	1.9*4	A/phase
*4 -					

\*\* Do not, however exceed Pd, ASO.

This product isn't designed for protection against radioactive rays.

Status of this document

The Japanese version of this document is the formal specification.

A customer may use this translation version only for a reference to help reading the formal version.

If there are any differences in translation version of this document, formal version takes priority.



1/4


# ROHM

lào	Oumbal		Limit		1.1	0	
Item	Symbol	Min	Тур	Max	Unit	Conditions	
Whole							
Circuit current at standby	ICCST	-	1.0	3.0	mA	PS=L	
Circuit current	Icc	-	4.5	10	mA	PS=H, VREFX=2V	
Control input (SELECT, CW_CC	W, CLK, PS,	MODEO, N	IODE1, EN	ABLE)			
H level input voltage	VINH	2.0	-	-	V		
L level input voltage	VINL	-	-	0.8	V		
H level input current	l <sub>iNH</sub>	35	50	85	μA	V <sub>IN</sub> =5V	
L level input current	l <sub>inl</sub>	-10	0	-	μA	V <sub>IN</sub> =0V	
Output (OUT1A, OUT1B, OUT2A	Output (OUT1A, OUT1B, OUT2A, OUT2B)						
Output ON registeres	R <sub>ON</sub>	-	0.7	0.91	Ω	I <sub>OUT</sub> =1.7A,	
Output ON resistance						Sum of upper and lower	
Output leak current	ILEAK	-	-	10	μA		
Current control							
RNFXS input current	I <sub>RNFS</sub>	-2.0	-0.2	-	μA	RNFXS =0V	
RNFX input current	I <sub>RNF</sub>	-40	-20	-	μA	RNFX=0V	
VREFX input current	IVREF	-2.0	-0.1	-	μA	VREFX=0V	
VREFX input voltage range	V <sub>REF</sub>	0	-	2.0	V		
MTHX input current	I <sub>MTH</sub>	-2.0	-0.1	-	μA	MTHX=0V	
MTHX input voltage range	V <sub>MTH</sub>	0	-	3.5	V		
Comparator threshold	V <sub>CTH</sub>	0.36	0.40	0.44	V	VREFX=2V	
Minimum on time	<b>t</b> ONMIN	0.3	0.7	1.2	μs	R=39kΩ,C=1000pF	


OElectrical characteristics (Unless otherwise specified Ta=25°C, VCC0,1,2=24V)



#### OPackage outline

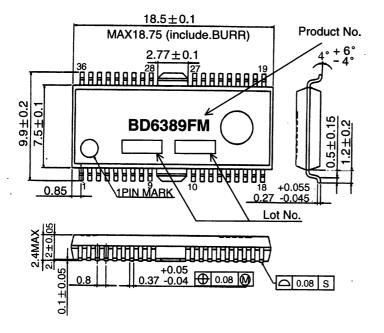

#### OBlock diagram

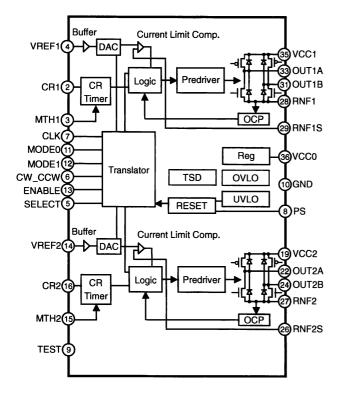

OPin No. / Pin name

		T	
Pin No.	Pin name	Pin No.	Pin name
1	N.C	19	VCC2
2	CR1	20	N.C
3	MTH1	21	N.C
4	VREF1	22	OUT2A
5	SELECT	23	N.C
6	CW_CCW	24	OUT2B
7	CLK	25	N.C.
8	PS	26	RNF2S
9	TEST	27	RNF2
FIN	FIN	FIN	FIN
10	GND	28	RNF1
11	MODE0	29	RNF1S
12	MODE1	30	N.C.
13	ENABLE	31	OUT1B
14	VREF2	32	N.C
15	MTH2	33	OUT1A
16	CR2	34	N.C
17	N.C	35	VCC1
18	N.C	36	VCC0

NC : Non Connection FIN : Connect to GND



#### Operation Notes

(1) Absolute maximum ratings

An excess in the absolute maximum ratings, such as supply voltage, temperature range of operating conditions, etc., can break down the devices, thus making impossible to identify breaking mode, such as a short circuit or an open circuit. If any over rated values will expect to exceed the absolute maximum ratings, consider adding circuit protection devices, such as fuses.

(2) Power supply lines

As return of current regenerated by back EMF of motor happens, take steps such as putting capacitor between power supply and GND as an electric pathway for the regenerated current. Be sure that there is no problem with each property such as emptied capacity at lower temperature regarding electrolytic capacitor to decide capacity value. If the connected power supply does not have sufficient current absorption capacity, regenerative current will cause the voltage on the power supply line to rise, which combined with the product and its peripheral circuitry may exceed the absolute maximum ratings. It is recommended to implement a physical safety measure such as the insertion of a voltage clamp diode between the power supply and GND pins.

(3) GND potential

The potential of GND pin must be minimum potential in all operating conditions.

(4) Thermal design

Use a thermal design that allows for a sufficient margin in light of the power dissipation (Pd) in actual operating conditions. This IC is equipped with FIN heat dissipation terminals, but dissipation efficiency can be improved by applying heat dissipation treatment in this area. It is important to consider actual usage conditions and to take as large a dissipation pattern as possible.

(5) Actions in strong electromagnetic field

Use caution when using the IC in the presence of a strong electromagnetic field as doing so may cause the IC to malfunction.

(6) ASO

When using the IC, set the output transistor so that it does not exceed absolute maximum ratings or ASO. (7) Thermal shutdown circuit

The IC has a built-in thermal shutdown circuit (TSD circuit). If the chip temperature becomes Tjmax=150°C, and higher, coil output to the motor will be open. The TSD circuit is designed only to shut the IC off to prevent runaway thermal operation. It is not designed to protect or indemnify peripheral equipment. Do not use the TSD function to protect peripheral equipment.

(8) Ground Wiring Pattern

When using both small signal and large current GND patterns, it is recommended to isolate the two ground patterns, placing a single ground point at the ground potential of application so that the pattern wiring resistance and voltage variations caused by large currents do not cause variations in the small signal ground voltage. Be careful not to change the GND wiring pattern of any external components, either.

(9) TEST pin

Be sure to connect TEST pin to GND.

#### Appendix

### Notes No technical content pages of this document may be reproduced in any form or transmitted by any means without prior permission of ROHM CO., LTD. The contents described herein are subject to change without notice. The specifications for the product described in this document are for reference only. Upon actual use, therefore, please request that specifications to be separately delivered. Application circuit diagrams and circuit constants contained herein are shown as examples of standard use and operation. Please pay careful attention to the peripheral conditions when designing circuits and deciding upon circuit constants in the set. Any data, including, but not limited to application circuit diagrams information, described herein are intended only as illustrations of such devices and not as the specifications for such devices. ROHM CO.,LTD. disclaims any warranty that any use of such devices shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such devices. Upon the sale of any such devices, other than for buyer's right to use such devices itself, resell or otherwise dispose of the same, no express or implied right or license to practice or commercially exploit any intellectual property rights or other proprietary rights owned or controlled by ROHM CO., LTD. is granted to any such buyer. Products listed in this document are no antiradiation design. The products listed in this document are designed to be used with ordinary electronic equipment or devices (such as audio visual equipment, office-automation equipment, communications devices, electrical appliances and electronic toys). Should you intend to use these products with equipment or devices which require an extremely high level of reliability and the malfunction of with would directly endanger human life (such as medical instruments, transportation equipment, aerospace machinery, nuclear-reactor controllers, fuel controllers and other safety devices), please be sure to consult with our sales representative in advance.

About Export Control Order in Japan

Products described herein are the objects of controlled goods in Annex 1 (Item 16) of Export Trade Control Order in Japan.

In case of export from Japan, please confirm if it applies to "objective" criteria or an "informed" (by MITI clause) on the basis of "catch all controls for Non-Proliferation of Weapons of Mass Destruction.

Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact your nearest sales office.

Please contact our sales offices for details ;

U.S.A / San Diego Atlanta Dallas	TEL : +1(858)625-3630 TEL : +1(770)754-5972 TEL : +1(972)312-8818	FAX : +1(858)625-3670 FAX : +1(770)754-0691 FAX : +1(972)312-0330
Germany / Dusseldorf	TEL : +49(2154)9210	FAX : +49(2154)921400
United Kingdom / London	TEL:+44(1)908-282-666	FAX : +44(1)908-282-528
France / Paris	TEL : +33(0)1 56 97 30 60	FAX : +33(0) 1 56 97 30 80
China / Hong Kong Shanghai Dilian Beijing	TEL:+852(2)740-6262 TEL:+86(21)6279-2727 TEL:+86(411)8230-8549 TEL:+86(10)8525-2483	FAX : +852(2)375-8971 FAX : +86(21)6247-2066 FAX : +86(411)8230-8537 FAX : +86(10)8525-2489
Taiwan / Taipei	TEL : +866(2)2500-6956	FAX : +866(2)2503-2869
Korea / Seoul	TEL : +82(2)8182-700	FAX : +82(2)8182-715
Singapore	TEL : +65-6332-2322	FAX : +65-6332-5662
Malaysia / Kuala Lumpur	TEL : +60(3)7958-8355	FAX : +60(3)7958-8377
Philippines / Manila	TEL : +63(2)807-6872	FAX : +63(2)809-1422
Thailand / Bangkok	TEL:+66(2)254-4890	FAX : +66(2)256-6334

#### Japan /

(Internal Sales	3)			
Tokyo	2-1-1, Yaesu, Chuo-ku, Tokyo 104-0082 TEL : +81(3)5203-0321 FAX : +81(3)5203-0300			
Yokohama	2-4-8, Shin Yokohama, Kohoku-ku, Yokohama, Kanagawa 222-8575 TEL : +81(45)476-2131 FAX : +81(45)476-2128			
Nagoya	Dainagayo Building 9F 3-28-12, Meieki, Nakamura-ku, Nagoya, Aichi 450-0002 TEL : +81(52)581-8521 FAX : +81(52)561-2173			
Kyoto	579-32 Higashi Shiokouji-cho, Karasuma Nishi-iru, Shiokoujidori, Shimogyo-ku, Kyoto 600-8216 TEL : +81(75)311-2121 FAX : +81(75)314-6559			
(Contact address for overseas customers in Japan)				
Yokohama	TEL : +81(45)476-9270 FAX : +81(045)476-9271			