SENSOR PRODUCTS

APPLICATIONS

- Compassing
- Navigation Systems
- Attitude Reference
- Traffic Detection
- Medical Devices
- Non-Contact Switch

1- and 2-Axis Magnetic Sensors

HMC1001 / 1002 HMC1021 / 1022





wheatstone bridge, these magnetoresistive sensors convert magnetic fields to a differential output voltage, capable of sensing magnetic fields as low as 30 µgauss. These MRs offer a small, low cost, high sensitivity and high reliability solution for low

field magnetic sensing.

onfigured as a 4-element









Not actual size

FEATURES AND BENEFITS

Wide Field Range Field range up to ± 6 gauss, (earth's field = 0.5 gauss)

Small Package

- Designed for 1- and 2-axis to work together to provide 3-axis (x, y, z) sensing
- 1-axis part in an 8-pin SIP or an 8-pin SOIC or a ceramic 8-pin DIP package
- 2-axis part in a 16-pin or 20-pin SOIC package

Solid State

These small devices reduce board assembly costs, improve reliability and ruggedness compared to mechanical fluxgates.

On-Chip Coils

Patented on-chip set/reset straps to reduce effects of temperature drift, non-linearity errors and loss of signal output due to the presence of high magnetic fields

Patented on-chip offset straps for elimination of the effects of hard iron distortion

The sensors were specifically designed to be affordable for high volume OEM applications.



HMC1001/1002 SPECIFICATIONS

| Characteristics | Conditions* | Min | Тур | Max | Unit |
|--|--|-------|-----------------|-----------|------------|
| Bridge Supply | Vbridge referenced to GND | | 5 | 12 | Volts |
| Bridge Resistance | Bridge current = 10mA | 600 | 850 | 1200 | ohm |
| Operating Temperature (4) | | -55 | | 150 | °C |
| Storage Temperature (4) | Unbiased | -55 | | 175 | °C |
| Field Range (4) | Full scale (FS), total applied field | -2 | | +2 | gauss |
| Linearity Error (4) | Best fit straight line ±1 gauss ±2 gauss | | 0.1 1 | 0.5 2 | %FS |
| Hysteresis Error (4) | 3 sweeps across ±2 gauss | | 0.05 | 0.10 | %FS |
| Repeatability Error (4) | 3 sweeps across ±2 gauss | | 0.05 | 0.10 | %FS |
| S/R Repeatability (1) S/R Repeatability (2) | Output variation after alternate S/R pulses | | 2 | 10 100 | μV |
| Bridge Offset | Offset = (OUT+) - (OUT-), Field=0 gauss after Set pulse, Vbridge=8V | -60 | -15 | 30 | mV |
| Sensitivity | S/R Current = 3A | 2.5 | 3.2 | 4.0 | mV/V/gauss |
| Noise Density (4) | Noise at 1 Hz, Vbridge=5V | | 29 | | nV/ Hz |
| Resolution (4) | Bandwidth=10Hz, Vbridge=5V | | 27 | | μgauss |
| Bandwidth (4) | Magnetic signal (lower limit = DC) | | 5 | | MHz |
| OFFSET Strap | Measured from OFFSET+ to OFFSET- | | 2.5 | 3.5 | ohm |
| OFFSET Strap Ω Tempco (4) | TA = -40 to 125° C | | 0.39 | | %/° C |
| OFFSET Field (4) | Field applied in sensitive direction | 46 | 51 | 56 | mA/gauss |
| Set/Reset Strap | Measured from S/R+ to S/R- | | 1.5 | 1.8 | ohm |
| Set/Reset Current (2) (3) (4) | 2 μs current pulse, 1% duty cycle | 3.0 | 3.2 | 5 | Amp |
| Set/Reset Ω Tempco (4) | T A = -40 to 125° C | | 0.37 | | %/° C |
| Disturbing Field (4) | Sensitivity starts to degrade. Use S/R pulse to restore sensitivity. | 3 | | | gauss |
| Sensitivity Tempco (4) | T A = -40 to 125° C Vbridge=8V Ibridge=5mA | -0.32 | -0.3 -0.06 | -0.28 | %/° C |
| Bridge Offset Tempco (4) | T A = -40 to 125° C no Set/Reset Vbridge=5V with Set/Reset | | ±0.03 ±0.001 | | %/° C |
| Resistance Tempco (4) | T A = -40 to 125° C | | 0.25 | | %/° C |
| Cross-Axis Effect (4) | Cross field=1gauss no Set/Reset (see AN-205) with Set/Reset | | ±3 +0.5 | | %FS |
| Max. Exposed Field (4) | No perming effect on zero reading | | | 10000 | gauss |
| Weight | HMC1001 HMC1002 | | 0.14 0.53 | gram | |

⁽¹⁾ VBridge = 4.3V, IS/R = 3.2A, VOUT = VSET - VRESET

⁽²⁾ If VBridge = 8.0V, IS/R = 2.0A, lower S/R current leads to greater output variation.

⁽³⁾ Effective current from power supply is less than 1mA.

⁽⁴⁾ Not tested in production, guaranteed by characterization.

^(*) Tested at 25° C except otherwise stated.

HMC1021/1022 SPECIFICATIONS

| Characteristic | Conditions** | Min | Тур | Max | Unit |
|---------------------------|--|-------------|--------------------|-------------|------------|
| Bridge Supply | Vbridge referenced to GND | | 5 | 25 | Volts |
| Bridge Resistance | Bridge current = 5mA | 800 | 1100 | 1300 | Ω |
| Operating Temperature (1) | HMC1021S, 1021Z, 1022 HMC1021D* | -55 - 55 | | 150 300* | °C |
| Storage Temperature (1) | Unbiased | -55 | | 175 | °C |
| Field Range (1) | Full scale (FS), — total applied field | -6 | | +6 | gauss |
| Linearity Error (1) | Best fit straight line ±1 gauss ±3 gauss ±6 gauss | | 0.05 0.4 1.6 | | %FS |
| Hysteresis Error (1) | 3 sweeps across ±3 gauss | | 0.08 | | %FS |
| Repeatability Error (1) | 3 sweeps across ±3 gauss | | 0.08 | | %FS |
| Bridge Offset | Offset = (OUT+) - (OUT-), Field = 0 gauss After Set pulse, Vbridge=5V | -10 | ±2.5 | 11.25 | mV |
| Sensitivity | S/R Current = 0.5A | 0.8 | 1.0 | 1.25 | mV/V/gauss |
| Noise Density (1) | Noise at 1Hz, Vbridge=5V | | 48 | | nV/√Hz |
| Resolution (1) | Bandwidth=10Hz, Vbridge=5V | | 85 | | μgauss |
| Bandwidth (1) | Magnetic signal (lower limit = DC) | | 5 | | MHz |
| OFFSET Strap | Measured from OFFSET+ to OFFSET- | 38 | 50 | 60 | Ω |
| OFFSET Strap Ω Tempco (1) | Ta = -40 to 125° C | | 0.39 | | %/° C |
| OFFSET Field (1) | Field applied in sensitive direction | 4.0 | 4.6 | 6.0 | mA/gauss |
| Set/Reset Strap | Measured from S/R+ to S/R- | 5.5 | 7.7 | 9 | Ω |
| Set/Reset Current | 2μs current pulse, 1% duty cycle | 0.5 | 0.5 | 4.0 | Amp |
| Set/Reset Ω Tempco (1) | Ta = -40 to 125° C | | 0.37 | | %/° C |
| Disturbing Field (1) | Sensitivity starts to degrade. Use S/R pulse to restore sensitivity. | 20 | | | gauss |
| Sensitivity Tempco (1) | TA = -40 to 125° C Vbridge=5V Ibridge=5mA | -0.32 | -0.3 -0.06 | -0.28 | %/° C |
| Bridge Offset Tempco (1) | TA = -40 to 125° C no Set/Reset Vbridge=5V with Set/Reset | | ±0.05 ±0.001 | | %/° C |
| Resistance Tempco (1) | Vbridge=5V, Ta = −40 to 125° C | | 0.25 | | %/° C |
| Cross-Axis Effect (1) | Ss-Axis Effect (1) Cross field=1 gauss (see AN-205) Happlied=±1 gauss | | +0.3 | | %FS |
| Max. Exposed Field (1) | No perming effect on zero reading | | | 10000 | gauss |
| Set/Reset (1) | S/R current ≥ 0.5 Amps | | | 30 | μV |


^{*}Please reference data sheet, HTMC1021D for specifications.


Units: 1 gauss (G) = 1 Oersted (in air), 1G = 79.58 A/m, 1G = 10E-4 Tesla, 1G = 10E5 gamma

⁽¹⁾ Not tested in production, guaranteed by characterization.


^{**}Tested at 25° C except otherwise stated.


KEY PERFORMANCE DATA

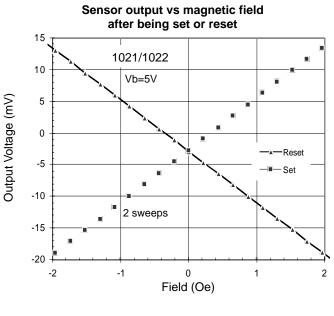


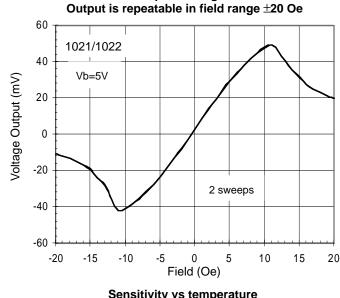


Sensor output vs magnetic field

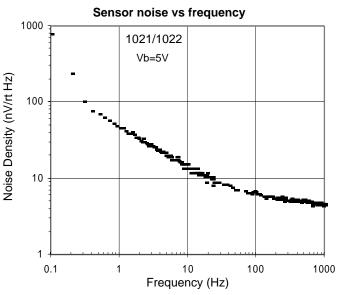

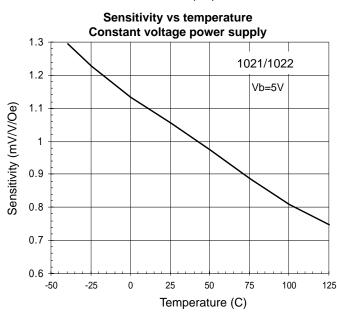


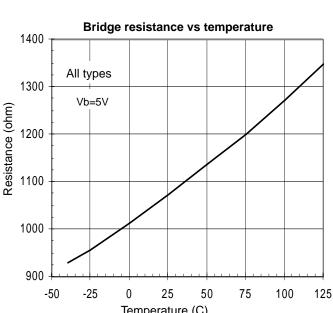

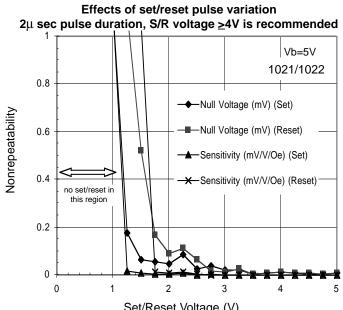


PACKAGE / PINOUT SPECIFICATIONS


HMC1002—Two-Axis MR Microcircuit

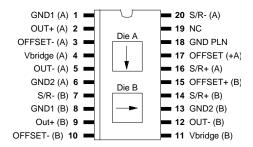


HMC1001—One Axis MR Microcircuit

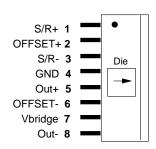


HMC1022—Two-Axis MR Circuit

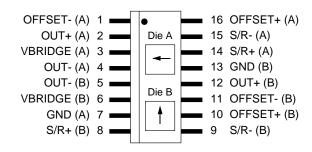


HMC1021S—One-Axis MR Circuit

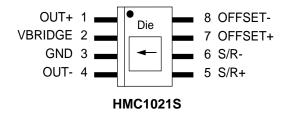

HMC1021D—One-Axis MR Circuit



HMC1021Z—One-Axis MR Circuit

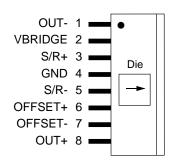

Arrow indicates direction of applied field that generates a positive output voltage after a SET pulse.

BASIC DEVICE OPERATION

Honeywell magnetoresistive sensors are simple resistive bridge devices (Figure 1) that only require a supply voltage to measure magnetic fields. When a voltage from 0 to 10 volts is connected to Vbridge, the sensor begins measuring any ambient, or applied, magnetic field in the sensitive axis. In addition to the bridge circuit, the sensor has two on-chip magnetically coupled straps—the OFFSET strap and the Set/Reset strap. These straps are patented by Honeywell and eliminate the need for external coils around the devices.

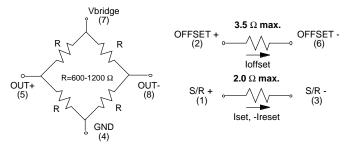


Figure 1—On-Chip components (HMC1001)

Magnetoresistive sensors are made of a nickel-iron (Permalloy) thin film deposited on a silicon wafer and patterned as a resistive strip. In the presence of an applied magnetic field, a change in the bridge resistance causes a corresponding change in voltage output.

An external magnetic field applied normal to the side of the film causes the magnetization vector to rotate and change angle. This in turn will cause the resistance value to vary (ΔR / R) and produce a voltage output change in the Wheatstone bridge. This change in the Permalloy resistance is termed the magnetoresistive effect and is directly related to the angle of the current flow and the magnetization vector.

During manufacture, the easy axis (preferred direction of magnetic field) is set to one direction along the length of the film. This allows the maximum change in resistance for an applied field within the permalloy film. However, the influence of a strong magnetic field (more than 10 gauss) along the easy axis could upset, or flip, the polarity of film magnetization, thus changing the sensor characteristics. Following such an upset field, a strong restoring magnetic field must be applied momentarily to restore, or set, the sensor characteristics. This effect will be referred to as applying a set pulse or reset pulse. Polarity of the bridge output signal depends upon the direction of this internal film magnetization and is symmetric about the zero field output.

The OFFSET strap allows for several modes of operation when a dc current is driven through it.

- · An unwanted magnetic field can be subtracted out
- · The bridge offset can be set to zero
- The bridge output can drive the OFFSET strap to cancel out the field being measured in a closed loop configuration
- The bridge gain can be auto-calibrated in the system on command.

The Set/Reset (S/R) strap can be pulsed with a high current to:

- Force the sensor to operate in the high sensitivity mode
- Flip the polarity of the output response curve
- Be cycled during normal operation to improve linearity and reduce cross-axis effects and temperature effects.

The output response curves shown in Figure 2 illustrate the effects of the S/R pulse. When a SET current pulse (Iset) is driven into the SR+pin, the output response follow the curve with the positive slope. When a RESET current pulse (Ireset) is driven into the SR-pin, the output response follow the curve with the negative slope. These curves are mirror images about the origin except for two offset effects.

In the vertical direction, the bridge offset shown in Figure 2, is around -25mV. This is due to the resistor mismatch during the manufacture process. This offset can be trimmed to zero by one of several techniques. The most straight forward technique is to add a shunt (parallel) resistor across one leg of the bridge to force both outputs to the same voltage. This must be done in a zero magnetic field environment, usually in a zero gauss chamber.

The offset of Figure 2 in the horizontal direction is referred to here as the external offset. This may be due to a nearby ferrous object or an unwanted magnetic field that is interfering with the applied field being measured. A dc current in the OFFSET strap can adjust this offset to zero. Other methods such as shielding the unwanted field can also be used to zero the external offset. The output response curves due to the SET and RESET pulses are reflected about these two offsets.

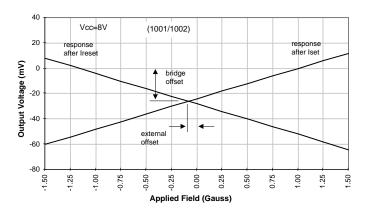


Figure 2—Output Voltage vs. Applied Magnetic Field

NOISE CHARACTERISTICS

The noise density curve for a typical MR sensor is shown in Figure 3. The 1/f slope has a corner frequency near 10 Hz and flattens out to 3.8 nV/ $\sqrt{\text{Hz}}$. This is approximately equivalent to the Johnson noise (or white noise) for an 850 Ω resistor—the typical bridge resistance. To relate the noise density voltage in Figure 3 to the magnetic fields, use the following expressions:

For Vsupply=5V and Sensitivity=3.2mV/V/gauss,
Bridge output response = 16 mV/gauss

or 16 nV/µgauss

The noise density at 1Hz \approx 30nV/ $\sqrt{\text{Hz}}$ and corresponds to 1.8 µgauss/ $\sqrt{\text{Hz}}$

For the noise components, use the following expressions:

1/f noise(0.1-10Hz) = $30 * \sqrt{(\ln(10/.1))} \text{ nV}$ 64 nV (rms) 4 µgauss (rms) 27 µgauss (p-p)

white noise (BW=1KHz) = $3.8 * \sqrt{BW} \text{ nV}$ 120 nV (rms) 50 µgauss (p-p)

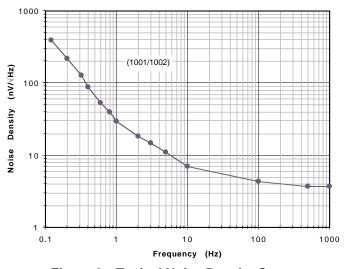


Figure 3—Typical Noise Density Curve

WHAT IS OFFSET STRAP?

Any ambient magnetic field can be canceled by driving a defined current through the OFFSET strap. This is useful for eliminating the effects of stray hard iron distortion of the earth's magnetic field. For example, reducing the effects of a car body on the earth's magnetic field in an automotive compass application. If the MR sensor has a fixed position within the automobile, the effect of the car on the earth's magnetic field can be approximated as a shift, or offset, in this field. If this shift in the earth's field can be determined,

then it can be compensated for by applying an equal and opposite field using the OFFSET strap. Another use for the OFFSET strap would be to drive a current through the strap that will exactly cancel out the field being measured. This is called a closed loop configuration where the current feedback signal is a direct measure of the applied field.

The field offset strap (OFFSET+ and OFFSET-) will generate a magnetic field in the same direction as the applied field being measured. This strap provides a 1 Oersted (Oe) field per 50 mA of current through it in HMC1001/2 and 1 Oe/5mA in HMC1021/2. (Note: 1 gauss=1 Oersted in air). For example, if 25 mA were driven from the OFFSET+ pin to the OFFSET- pin in HMC1001/2, a field of 0.5 gauss would be added to any ambient field being measured. Also, a current of -25 mA would subtract 0.5 gauss from the ambient field. The OFFSET strap looks like as a nominal resistance between the OFFSET+ and OFFSET- pins.

The OFFSET strap can be used as a feedback element in a closed loop circuit. Using the OFFSET strap in a current feedback loop can produce desirable results for measuring magnetic fields. To do this, connect the output of the bridge amplifier to a current source that drives the OFFSET strap. Using high gain and negative feedback in the loop, this will drive the MR bridge output to zero, (OUT+) = (OUT-). This method gives extremely good linearity and temperature characteristics. The idea here is to always operate the MR bridge in the balanced resistance mode. That is, no matter what magnetic field is being measured, the current through the OFFSET strap will cancel it out. The bridge always "sees" a zero field condition. The resultant current used to cancel the applied field is a direct measure of that field strength and can be translated into the field value.

The OFFSET strap can also be used to auto-calibrate the MR bridge while in the application during normal operation. This is useful for occasionally checking the bridge gain for that axis or to make adjustments over a large temperature swing. This can be done during power-up or anytime during normal operation. The concept is simple; take two point along a line and determine the slope of that line—the gain. When the bridge is measuring a steady applied magnetic field the output will remain constant. Record the reading for the steady field and call it H1. Now apply a known current through the OFFSET strap and record that reading as H2. The current through the OFFSET strap will cause a change in the field the MR sensor measures—call that delta applied field (Δ Ha). The MR sensor gain is then computed as:


MRgain =
$$(H2-H1) / \Delta Ha$$

There are many other uses for the OFFSET strap than those described here. The key point is that ambient field and the OFFSET field simply add to one another and are measured by the MR sensor as a single field.

WHAT IS SET/RESET STRAP?

Most low field magnetic sensors will be affected by large magnetic disturbing fields (>4 - 20 gauss) that may lead to output signal degradation. In order to reduce this effect, and maximize the signal output, a magnetic switching technique can be applied to the MR bridge that eliminates the effect of past magnetic history. The purpose of the Set/Reset (S/R) strap is to restore the MR sensor to its high sensitivity state for measuring magnetic fields. This is done by pulsing a large current through the S/R strap. The Set/Reset (S/R) strap looks like a resistance between the SR+ and SR-pins. This strap differs from the OFFSET strap in that it is magnetically coupled to the MR sensor in the cross-axis, or insensitive, direction. Once the sensor is set (or reset), low noise and high sensitivity field measurement can occur. In the discussion that follows, the term "set" refers to either a set or reset current.

When MR sensors exposed to a magnetic disturbing field, the sensor elements are broken up into ramdonly oriented magnetic domains (Figure 4A) that leads to sensitivity degrading. A current pulse (set) with a peak current above minimum current in spec through the Set/Reset strap will generate a strong magnetic field that realigns the magnetic domains in one direction (Figure 4B). This will ensure a high sensitivity and repeatable reading. A negative pulse (Reset) will rotate the magnetic domain orientation in the opposite direction (Figure 4C), and change the polarity of the sensor outputs. The state of these magnetic domains can retain for years as long as there is no magnetic disturbing field present.

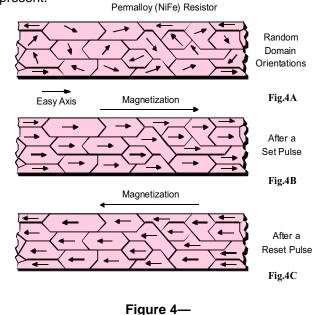

The on-chip S/R should be pulsed with a current to realign, or "flip", the magnetic domains in the sensor. This pulse can be as short as two microsecond and on average consumes less than 1 mA dc when pulsing continuously. The duty cycle can be selected for a $2\,\mu sec$ pulse every 50 msec, or

longer, to conserve power. The only requirement is that each pulse only drive in one direction. That is, if a +3.5 amp pulse is used to "set" the sensor, the pulse decay should not drop below zero current. Any undershoot of the current pulse will tend to "un-set" the sensor and the sensitivity will not be optimum.

Using the S/R strap, many effects can be eliminated or reduced that include: temperature drift, non-linearity errors, cross-axis effects, and loss of signal output due to the presence of a high magnetic fields. This can be accomplished by the following process:

- A current pulse, Iset, can be driven from the S/R+ to the S/R- pins to perform a "SET" condition. The bridge output can then be measured and stored as Vout(set).
- Another pulse of equal and opposite current should be driven through the S/R pins to perform a "RESET" condition. The bridge output can then be measured and stored as Vout(reset).
- The bridge output, Vout, can be expressed as: Vout = [Vout(set) Vout(reset)]/2. This technique cancels out offset and temperature effects introduced by the electronics as well as the bridge temperature drift.

There are many ways to design the set/reset pulsing circuit, though, budgets and ultimate field resolution will determine which approach will be best for a given application. A simple set/reset circuit is shown in Figure 5.

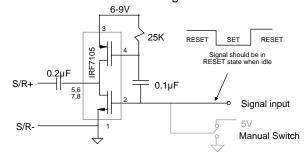


Figure 5—Single-Axis Set/Reset Pulse Circuit (1001)

The magnitude of the set/reset current pulse depends on the magnetic noise sensitivity of the system. If the minimum detectable field for a given application is roughly 500 $\mu gauss$ in HMC1001/2, then a 3 amp pulse (min) is adequate. If the minimum detectable field is less than 100 $\mu gauss$, then a 4 amp pulse (min) is required. The circuit that generates the S/R pulse should be located close to the MR sensor and have good power and ground connections.

The set/reset straps on the Honeywell magnetic sensors are labeled S/R+ and S/R-. There is no polarity implied since this is simply a metal strap resistance.

Single Clock Circuitry—Some form of clock is needed to trigger the set and reset pulses (Figure 6) to create the switching signal. The circuit shown in Figure 8 can be used to create a strong (>4Amp) pulse. The diodes, resistors, capacitors and inverters basically create the TRS and the TSR delays. Now a single signal (Clock) can trigger a set or reset pulse. The minimum timing between the rising and falling edges of Clock are determined by the 25KΩ and 1nF time constant. That is, the minimum high and low time for Clock is \approx 25 μs.

Micro Processor—The circuit in Figure 9 generates a strong set/reset pulse (>4 Amp) under microprocessor control. The

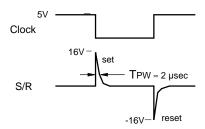


Figure 6—Single Clock Set/Reset Timing

SET and RESET signals are generated from a microprocessor and control the P and N channel HEXFET drivers (IRF7105). The purpose of creating the TRS and the TSR delays are to make sure that one HEXFET is off before the other one turns on. Basically, a break-before-make switching pattern. The current pulse is drawn from the 4.7 μF capacitor. If the 5V to 20V converter is used as shown in Figure 7, then the resultant noise and droop on the 16-20V supply is not an issue. But if the 16-20V supply is used elsewhere in the system, then a series dropping resistor $(\approx\!500\Omega)$ should be placed between the 4.7 μF capacitor and the supply.

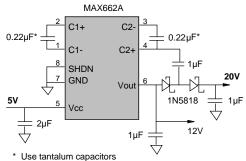


Figure 7—5V to 20V Converter


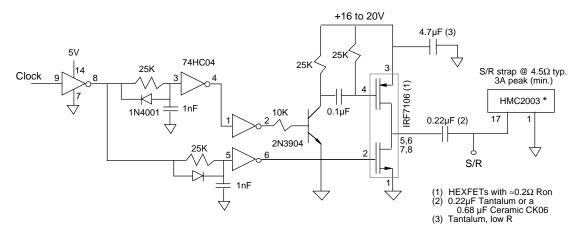


Figure 8—Single Clock Set/Reset Pulse Circuit (1001/1002)

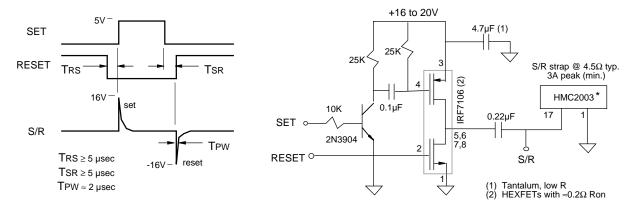

[•]HMC2003 contains one HMC1001 and one HMC1002; together they make the 3-axis sensor. Three S/R straps are in serial, the total resistance is \sim 4.5 Ω .

Figure 9—Set/Reset Circuit With Microprocessor Control (1001/1002)

Low Field Measurements—When measuring 100 µgauss resolution or less, the permalloy film must be completely set, or reset, to insure low noise and repeatable measurements. A current pulse of 4 amps, or more, for just a couple microseconds will ensure this. The circuits in Figures 8 and 9 are recommended for applications of HMC1001/2 that require low noise and high sensitivity magnetic readings.

Low Cost—For minimum field measurements above 500 µgauss, a less elaborate pulsing circuit can be used. In both Figures 10 and 11, the pulse signal is switched using lower cost Darlington transistors and fewer components. This circuit may have a more limited temperature range depending on the quality of transistors selected. If accuracy is not an issue and cost is, then the reset only circuit in Figure 11 will work.


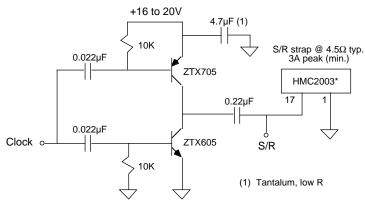


Figure 10—Single Clock Set/Reset Circuit (1001/1002)

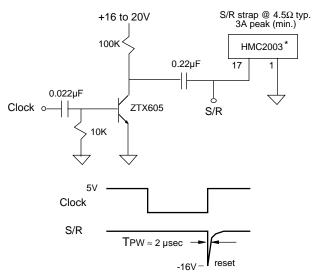

^{*}The HMC2003 has 3-axis S/R straps in series. These are the HMC1001 and HMC1002 sensors.

Figure 11—Single Clock Reset Only Circuit (1001/1002)

For any magnetic sensor application, if temperature drift is not an issue, then the reset pulse need only be occasionally applied. This will save power and enable the use of digital filtering techniques as shown in Figure 12. Circumstances for a reset pulse would be 1) power on or, 2) field over/under range condition. Any other time the sensor should perform normally.

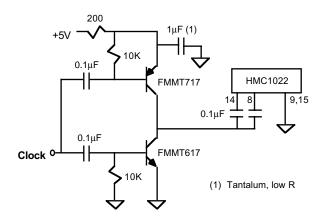


Figure 12—5V Circuit for SET/RESET (1021/1022)

The circuit in Figure 13 generates a strong set/reset pulse under a microprocessor clock driven control. A free running 555 timer can also be used to clock the circuit. The SET current pulse is drawn from the 1 μF capacitor and a 200 ohm dropping resistor should be placed in series with the supply to reduce noise.

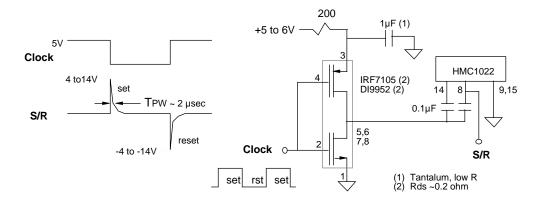


Figure 13—Set/Reset Pulse With Clock Control (1021/1022)

Low Power—For low power application, down to 3.3 volt supply, the circuit shown in Figure 15 can be used. These low threshold FETs provide low on-resistance (0.3Ω) at V_{GS}=2.7V. The set/reset pulsing does not need to be continuous. To save power, the SET pulse can be initially applied followed by a single RESET pulse. The offset (OS) can be calculated as:

$$OS = (Vset + Vrst)/2$$

This offset term will contain the DC offset of both the sensor bridge and interface electronics, as well as the temperature drift of the bridge and interface electronics. Store this value and subtract it from all future bridge output readings. Once the bridge is RESET, it will remain in that state for years—or until a disturbing field (>20 gauss) is applied. A timer can be set, say every 10 minutes, to periodically update the offset term. A flow chart is shown in Figure 14 along with a timing diagram in Figure 15 to illustrate this process.

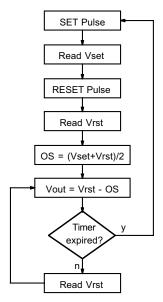


Figure 14—Low Power Set/Rst Flowchart

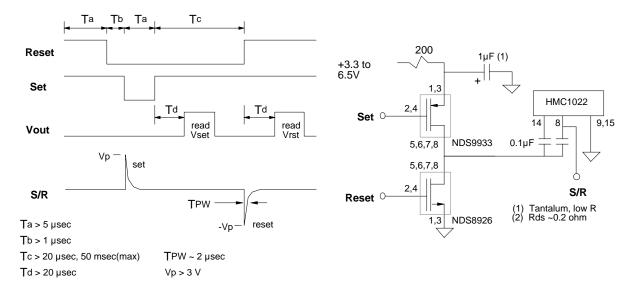


Figure 15—Single Clock Set/Reset Pulse Circuit (1021/1022)

Simple Circuit Application

The circuit in Figure 16 shows a simple application of a magnetic sensor. This circuit acts as a proximity sensor and will turn on the LED when a magnet is brought within 0.25 to 0.5 inch of the sensor. The amplifier acts as a simple comparator and switches low when the HMC1001 bridge output exceeds 30mV. The magnet must be

strong (200 gauss) and have one of its magnetic poles point along the sensitive direction of the sensor. This circuit can be used to detect a door open/closed status or the presence or absence of an item. Figures 17, 18, 19, 20 and 21 show other circuit examples.

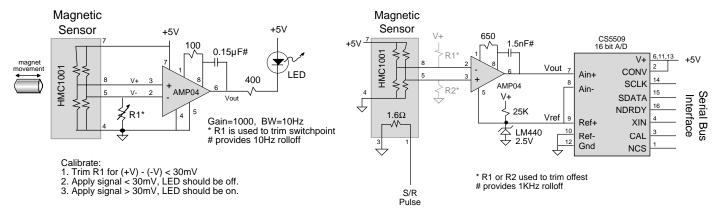


Figure 16—Magnetic Proximity Switch

Figure 17—One-Axis Sensor With Digital Interface


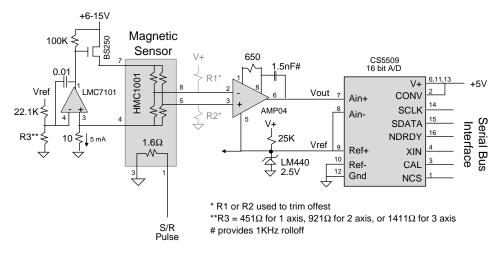


Figure 18—One-Axis Sensor With Constant Bridge Current and Digital Interface

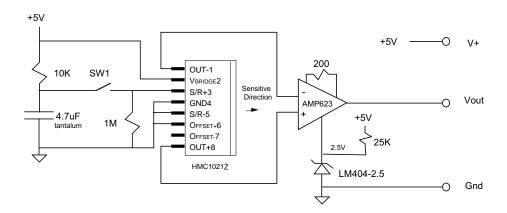

(1) Momentarily close switch SW1. This creates a SET pulse. (2) Measure bridge output (OUT+) - (OUT-) **NOTE**: Bridge output signal will be 5mV/gauss (3) Measure Vout after AD623 amplifier (G~500) **NOTE**: Vout signal will be 2.5V/gauss

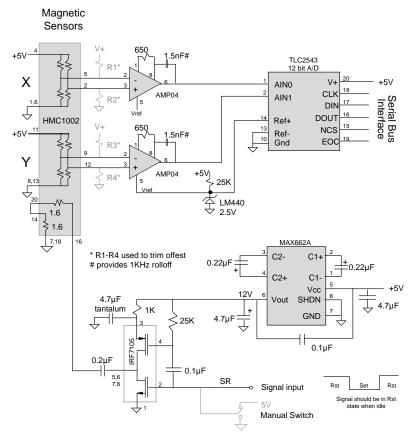


Figure 20—Two-Axis Sensor With Set/Reset Circuit and Digital Interface


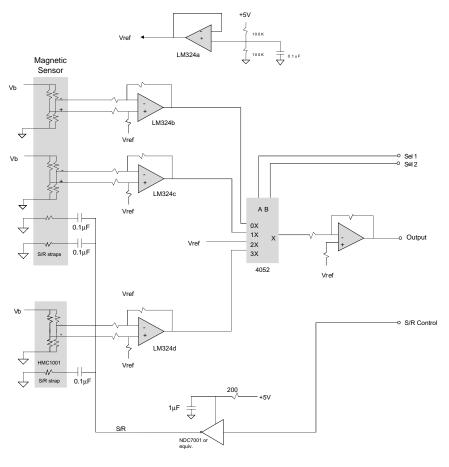


Figure 21—Three-Axis Low Cost Magnetic Sensor


PACKAGE OUTLINES

HMC1002—Package Outline

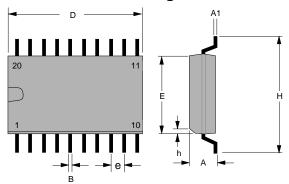


| | Millimeters | | Inches | |
|--------|-------------|--------|--------|------|
| Symbol | Min | Max | Min | Max |
| Α | 2.489 | 2.642 | .098 | .104 |
| A1 | 0.127 | 0.279 | .005 | .011 |
| В | 0.457 | 0.483 | .014 | .019 |
| D | 12.675 | 12.929 | .499 | .509 |
| E | 7.264 | 7.417 | .286 | .292 |
| е | 1.27 | 0 ref | .050 | ref |
| H | 1.270 | 10.566 | .396 | .416 |
| h | 0.381 | ref | .015 | .030 |

HMC1001—8-Pin SIP and HMC1021Z—8-Pin SIP

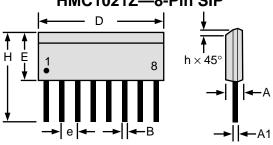


| | Millimeters | | Inch | es |
|--------|-------------|--------|-------|-------|
| Symbol | Min | Max | Min | Max |
| Α | 1.371 | 1.728 | .054 | .068 |
| A1 | 0.101 | 0.249 | .004 | .010 |
| В | 0.355 | 0.483 | .014 | .019 |
| D | 9.829 | 11.253 | .387 | .443 |
| E | 3.810 | 3.988 | .150 | .157 |
| е | 1.270 ref | | .050 | ref |
| Н | 6.850 | 7.300 | 0.270 | 0.287 |
| h | 0.381 | 0.762 | .015 | .030 |

HMC1021D—8-Pin Ceramic DIP

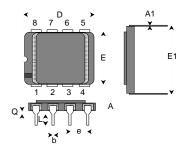


| | Millimeters | | Inches | |
|--------|-------------|--------|-----------|-------|
| Symbol | Min | Max | Min | Max |
| Α | 2.718 ref | | 0.107 ref | |
| A1 | 0.229 | 0.305 | 0.009 | 0.012 |
| b | 0.406 | 0.508 | 0.016 | 0.020 |
| D | _ | 10.287 | _ | 0.405 |
| E | 7.163 | 7.569 | 0.282 | 0.298 |
| E1 | 7.366 | 7.874 | 0.290 | 0.310 |
| е | 2.54 ref | | 0.10 | 0 ref |
| Q | 0.381 | 1.524 | 0.015 | 0.060 |
| L | 3.175 | 4.445 | 0.125 | 0.175 |

HMC1021S—8-Pin SOIC

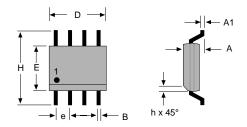

| | Millimeters | | Incl | nes |
|--------|-------------|-------|------|------|
| Symbol | Min | Max | Min | Max |
| Α | 1.371 | 1.728 | .054 | .068 |
| A1 | 0.101 | 0.249 | .004 | .010 |
| В | 0.355 | 0.483 | .014 | .019 |
| D | 4.800 | 4.979 | .189 | .196 |
| E | 3.810 | 3.988 | .150 | .157 |
| е | 1.27 | 0 ref | .050 | ref |
| Н | 5.816 | 6.198 | .229 | .244 |
| h | 0.381 | 0.762 | .015 | .030 |

HMC1022—16-Pin SOIC

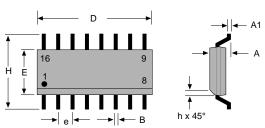

| | Millimeters | | Inches | |
|--------|-------------|--------|----------|------|
| Symbol | Min | Max | Min | Max |
| Α | 1.371 | 1.728 | .054 | .068 |
| A1 | 0.101 | 0.249 | .004 | .010 |
| В | 0.355 | 0.483 | .014 | .019 |
| D | 9.829 | 11.253 | .387 | .443 |
| E | 3.810 | 3.988 | .150 | .157 |
| е | 1.270 ref | | .050 ref | |
| Н | 5.816 | 6.198 | .229 | .244 |
| h | 0.381 | 0.762 | .015 | .030 |

DESIGN / PACKAGE OPTIONS

Honeywell offers a range of magnetic microcircuit products. Two different sensor designs and five package configurations are available:

- HMC1001/1002 series offers a higher sensitivity and lower field resolution.
- HMC1021/1022 series offers a wider field range, lower set/reset current and has a lower cost for higher volume applications.

Two-axis parts contain two sensors for the x- and y- field measurements. Single-axis variations include a SIP package for mounting through the circuit board to create a 3-axis solution, a SOIC for direct surface mount, and a ceramic DIP for high performance military and high temperature applications.

| | HMC1001/02 | HMC1021/22 | Units |
|-----------------|------------|----------------------|--------|
| Sensitivity | 3.1 | 1.0 | mV/V/G |
| Resolution | 27 | 85 | µgauss |
| Range | ± 2 | ± 6 | gauss |
| Set/Rst Current | 3.0 | 0.5 | Amps |
| Cost | | Lower in high volume | |

ORDERING INFORMATION

| Part Number | Axis Number | Sensitivity | Package Style |
|-------------|-------------|-------------|-------------------|
| HMC1001 | Single | 3mV/V/G | 8-Pin SIP |
| HMC1002 | Two | 3mV/V/G | 20-Pin SOIC |
| HMC1021D | Single | 1mV/V/G | 8-Pin Ceramic DIP |
| HMC1021Z | Single | 1mV/V/G | 8-Pin SIP |
| HMC1021S | Single | 1mV/V/G | 8-Pin SOIC |
| HMC1022 | Two | 1mV/V/G | 16-Pin SOIC |

Solid State Electronics Center • 12001 State Highway 55, Plymouth, MN 55441 • (800) 323-8295 • www.magneticsensors.com

Additional Product Details: Customer Service Representative (612) 954-2888 fax: (612) 954-2257 E-Mail: clr@mn14.ssec.honeywell.com