# **U847BST**

# 1.3-GHz Prescaler for CATV Tuners

Technology: Bipolar

#### **Features**

- TTL output
- ESD protected
- Low current consumption WIND 250
- High input sensitivity
- Slope steepness of the output level adjustable at Pin 6

**Case:** 8-pin dual-inline plastic

# **Block Diagram**

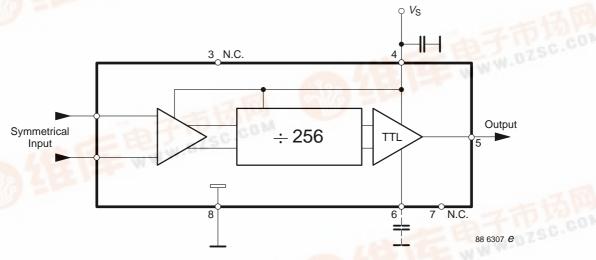


Figure 1. Block diagram



## **Absolute Maximum Ratings**

Paramete	Symbol	Value	Unit	
Supply voltage	Pin 4	$V_{S}$	6	V
Input-voltage range	Pins 1 and 2	V <sub>i</sub>	0 to V <sub>S</sub>	V
Junction temperature		Tj	125	°C
Storage-temperature range		T <sub>stg</sub>	-40 to +125	°C
Ambient-temperature range		Tamb	-25 to +70	°C

## **Thermal Resistance**

Parameters	Symbol	Maximum	Unit
Junction ambient	$R_{thJA}$	100	K/W

#### **Pin Connection**

Pin	Function
1, 2	Input
4	Supply voltage (V <sub>S</sub> )
5	Output

Pin	Function
6	Open or capacitor-to-ground
8	Ground
3, 7	Not connected

#### Note:

In order to avoid damage, the prescaler must be handled as a MOS device.

The device is self-oscillating without input signal.

#### **Electrical Characteristics**

 $V_S = 4.5$  to 5.5 V,  $T_{amb} = 0$  to +70 °C, unless otherwise specified

Parameters	Test Conditions / Pin	Symbol	Min.	Тур.	Max.	Unit
Supply current	$V_S = 5 V$ Pin 4	$I_S$		35	48	mA
Input sensitivity 1)	$R_G = 50 \Omega$ , $f_i = 70 MHz$					
	Pins 1 and 2	V <sub>i</sub>		6	10	mV
	$f_i = 150 \text{ to } 1000 \text{ MHz}$	$V_i$		1	5	mV
	$f_i = 1300 \text{ MHz}$	Vi		4	20	mV
Large-signal compatibility <sup>1)</sup>	$R_G = 50 \Omega$ Pins 1 and 2	Vi	300			mV
Frequency range		f <sub>imin</sub>			70	MHz
		f <sub>imax</sub>	1300			MHz
TTL output	Pin 5					
High level	$I_{OH} = 0.2 \text{ mA}$	$V_{OH}$	3.3			V
Low level	$I_{OL} = -2 \text{ mA}$	$V_{OL}$			0.4	V

<sup>1)</sup> RMS voltage calculated from the available power measured

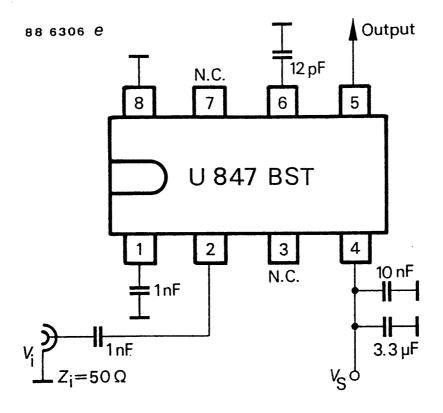


Figure 2. Test circuit


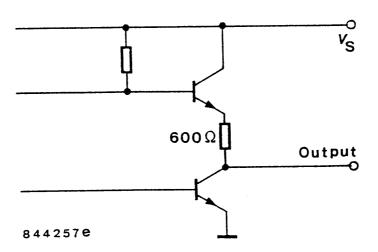


Figure 3. TTL output circuit



### **Dimensions in mm**

Package: DIP8

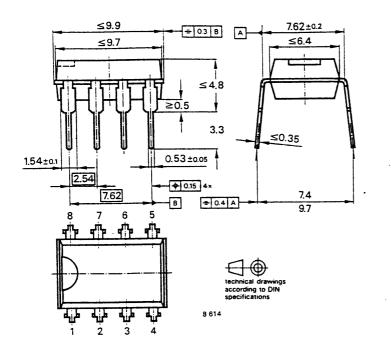



### **Ozone Depleting Substances Policy Statement**

It is the policy of TEMIC TELEFUNKEN microelectronic GmbH to

- 1. Meet all present and future national and international statutory requirements.
- 2. Regularly and continuously improve the performance of our products, processes, distribution and operating systems with respect to their impact on the health and safety of our employees and the public, as well as their impact on the environment.

It is particular concern to control or eliminate releases of those substances into the atmosphere which are known as ozone depleting substances (ODSs).

The Montreal Protocol (1987) and its London Amendments (1990) intend to severely restrict the use of ODSs and forbid their use within the next ten years. Various national and international initiatives are pressing for an earlier ban on these substances.

**TEMIC TELEFUNKEN microelectronic GmbH** semiconductor division has been able to use its policy of continuous improvements to eliminate the use of ODSs listed in the following documents.

- 1. Annex A, B and list of transitional substances of the Montreal Protocol and the London Amendments respectively
- 2. Class I and II ozone depleting substances in the Clean Air Act Amendments of 1990 by the Environmental Protection Agency (EPA) in the USA
- 3. Council Decision 88/540/EEC and 91/690/EEC Annex A, B and C (transitional substances) respectively.

**TEMIC** can certify that our semiconductors are not manufactured with ozone depleting substances and do not contain such substances.

We reserve the right to make changes to improve technical design and may do so without further notice.

Parameters can vary in different applications. All operating parameters must be validated for each customer application by the customer. Should the buyer use TEMIC products for any unintended or unauthorized application, the buyer shall indemnify TEMIC against all claims, costs, damages, and expenses, arising out of, directly or indirectly, any claim of personal damage, injury or death associated with such unintended or unauthorized use.

TEMIC TELEFUNKEN microelectronic GmbH, P.O.B. 3535, D-74025 Heilbronn, Germany Telephone: 49 (0)7131 67 2831, Fax number: 49 (0)7131 67 2423