

捷多邦,专业PCB打样工厂,24小时加急出货

Solid State Relays For Motor Control S/MOT/SMCW6151/A/23/07/99 1W240030

Раде 1/16 св

EXTERNALLY BYPASSED THREE PHASE INDUCTION MOTOR SOLID-STATE REDUCED VOLTAGE STARTER (SOFTSTARTER) WITH SOFTSTOP FEATURE

celduc relais[®] *SMCV* can be employed everywhere using a costly and relatively big variable speed controller is not required (pumps, fans, compressors, conveyors, ...).

Its <u>six thyristor</u> structure working like a full wave phase angle controller (both positive and negative cycles are controlled), allows to reduce efficiently the induction motor starting current as well as the motor starting torque. This <u>motor starting current reduction</u> allows to optimize the mains grid as well as its protections and <u>avoid having voltage fluctuations</u> leading to ambient light variations also called "flicker".

Built to help the user to get his assembly in compliance with the European directives and standards, this product easy fits in the existing application without any modification of the wiring field configuration. Thus, the *SMCV* can easily replace an electromechanical star-delta starter without changing the motor coupling! In a project including a three phase induction motor it can be implemented like a usual three phase electromechanical contactor. Furthermore, its ability to be installed inside the delta wiring allows this device to drive **1.73 times more current** than a standard on line softstarter,


The *SMCV* also have <u>diagnostic and self-test functions</u> to inform people involved in the machine maintenance and <u>to reduce the cost and the delay to restart the production.</u>

SMCW6151



Externally Bypassed 3 Phase Induction Motor Softstarter

> 200 - 480VAC ->15kW (Y) ->26kW (D)

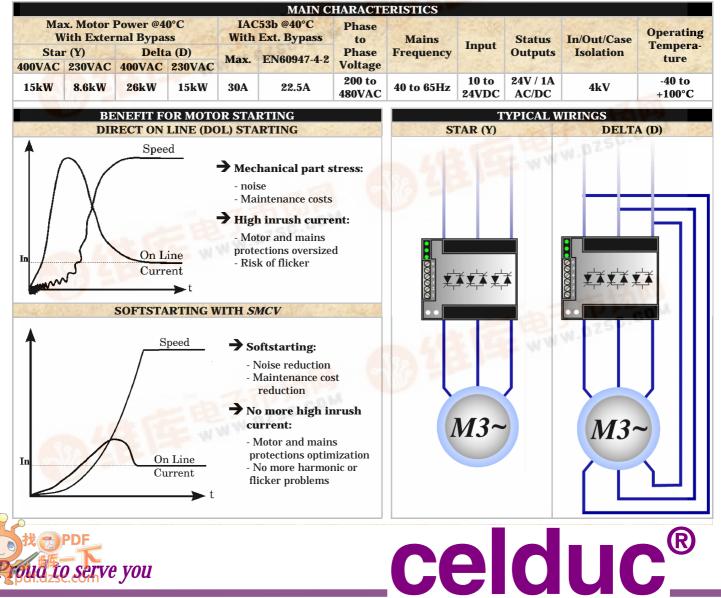


1W240030

Page 2/16 GB -

Solid State Relays For Motor Control




SETTINGS AND DIAGNOSTIC

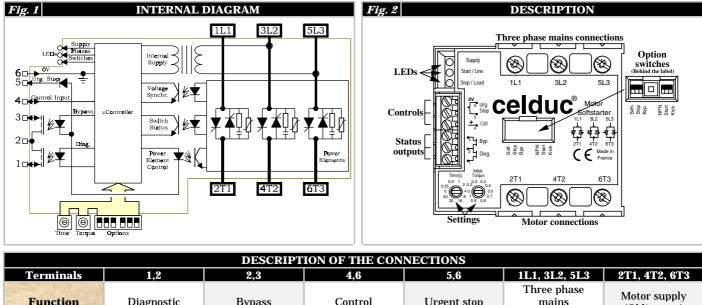

Function	Diagnostic	Bypass	Control	Urgent stop	Three phase mains (<u>Obligatory</u>)	Motor supply (<u>Obligatory</u>)
Input/Output	Output	Output	Input	Input	Input	Output
Activated when	Closed	Closed	High (PNP) or Low (NPN)	Open	Since 3x200VAC	100ms after control
Polarization	NO (AC or DC)	NO (AC or DC)	Yes (4+ / 6-)	Yes (5+ / 6-)	NO (AC)	NO (AC)

	DESCRIPTION OF THE SETTINGS AND OPTIONS									
Setting / Option	Time	Initial Torque	Soft-stop	Byp.	NPN / START	Kick				
Function	Increasing voltage ramp duration	Min. voltage applied to the motor at start	Decreasing voltage ramp duration	Bypass presence diagnostic (Do not remove)	Softstarter type of control option	Motor shaft breakaway				
Possibilities	Ts= 0 up to 64s	0 up to 100 %	0, 1/2, 1 or 2 x ts up to 64s max.	-	PNP, NPN or since the mains presence	0 up to 100ms depending on ts				
Proceeding	$ \begin{array}{c} \text{Time(s)} \\ 0.5 & 1 & 2 \\ 0.25 & 0 & 2 \\ 0 & 0 & 0 \\ 64 & 32 & 16 \\ \end{array} $	$\begin{bmatrix} \text{Initial} \\ \text{Torque} \\ 0.2 \\ 0.2 \\ 0.5 \\ 0.6 \\ 1.9 \\ 0.8 \end{bmatrix} = 0.6 \\ 0.7 \\ 0.6 \\ 0.7 \\ 0.7 \\ 0.9 \\ 0.8 \end{bmatrix}$: 0xts : 0.5xts : 0.5xts : ts : 2xts		: PNP : NPN : Mains					

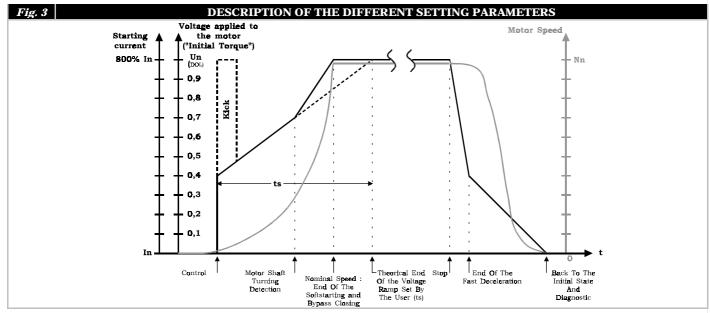



S/MOT/SMCW6151/A/23/07/99 1W240030

Раде 3/16 GB

SETTINGS AND DIAGNOSTIC

	DESCRIPTION OF THE DIAGNOSTIC INFORMATION IN NORMAL OPERATION								
Visualization Status Outputs		Motor	Cause probable						
Supply	Line	Load	Byp.	Diag.					
0	\bigcirc	\bigcirc			Stopped	No mains or device not correctly wired			
\bigcirc	\bigcirc	\bigcirc			Stopped	Mains voltage and phases OK, Motor detected, No control			
\bigcirc	\bigcirc	\bigcirc			Starting	Mains voltage and phases OK, Motor detected, Control detected and beginning of the softstarting ramp			
\bigcirc	\bigcirc	0	10 "		Running to nominal speed	Mains voltage and phases OK, Motor detected, Control detected and end of the softstarting ramp			
\bigcirc	0	$\bigcirc \bigcirc$			Decelerating	Mains voltage and phases OK, Motor detected, No control and beginning of the softstopping ramp			
					DIACNOS	TICS IN CASE OF FAILURE			

Visualization Status Outputs		DIAGNOSTICS IN CASE OF FAILURE Motor Possible Cause		Solution			
Supply	Line	Load	Byp.	Diag.			a second and the second
	0				Stopped	Mains voltage too low	Check the phases 3L2 and 5L3
0	•	0			Stopped	Phase(s) missing, Mains frequency out of range, Too much interference	Check the phases
\bigcirc		\bigcirc			Running	Phase(s) missing	Check the phases
0					Stopped	Load missing, Short-circuited thyristor	Check the motor connections and the solid state switches
\bigcirc					Stopped	Bypass missing	Check the bypass connections
	•0	•0			Stopped	The solid state switches can not close	Check if the connection between 5 and 6 of the control terminal block is correctly done. Check as well if the load current is sufficient.
					Stopped	Microcontroller malfunction	Disconnect the softstarter from the mains for a while
00		0			Stopped	A problem occurred on the mains (no voltage or a phase missing,) then disappeared but the control voltage was applied	Remove the control for a while
00	•0	•0			Stopped	A problem occurred on the load (temporary disconnection,) then disappeared but the control voltage was applied	Remove the control for a while

LEGEND

0	\bigcirc		\bigcirc	$\bigcirc \bullet$
Off	Green	Red	Flashing off/green	Flashing Off/red

IMPORTANT INFORMATION ABOUT THE DIAGNOSTIC

The device makes a complete diagnostic (mains, load and itself) since it has enough supply voltage (On the mains or on the control side).
 The device only checks the presence of the phases and the closing of the solid state switches during the voltage ramps (Softstart and

The device only checks the presence of the phases and the closing of the solid state switches during the voltage ramps (Softstart and softstop) and during the full on state period.
 The solid state switches the the state period.


3- The control overrides the diagnostic.

- If a problem occurs during the control period, the device will close all the solid state switches. If the problem goes on during the full on state period, the corresponding information will be given to the user according to the table above.

Likewise, if a problem occurs during the softstopping period, the device will stop immediately in order to reach the off state diagnostic period.

4- On a hard stop (no softstop) and case of driving a large motor, the device may temporary display a problem concerning the mains. This is due to an important residual voltage across the motor windings (Back EMF generated by the motor rotation and the remaining magnetic field). This security allows the user to avoid connecting the motor to the mains in bad conditions. This phenomenon can be cancelled by using the softstop feature that slowly reduces the remanent magnetic field inside the motor. This allows as well to avoid overvoltage across the solid state switches (increasing the lifetime expectancy of the integrated varistors). Therefore, softstop is recommended even with high inertia motor loads.


1W240030



Solid State Relays For Motor Control



CONTROL

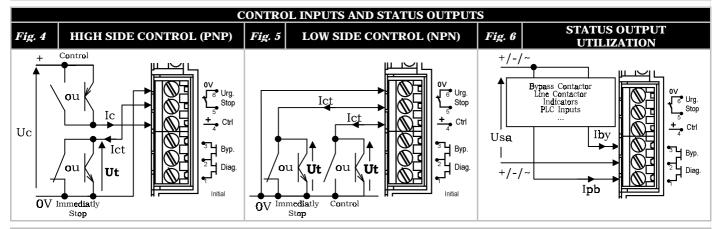

ELECTRICAL CHARACTERISTICS OF THE STARTING AND STOPPING INPUTS							
CHARACTERISTICS	LABELS	(Given at 20°C	VALUES (Given at 20°C ambient unless otherwise specified)				
Input		C	trl	Urg. Stop			
Function		Controlling the device		Immediately stop the device			
Control Type (Depending on the option switches)		High side control (PNP)	Low side control (NPN)	Opening the connection to zero volt			
Concerned Terminals		4 & 6	4 & 6	5 & 6			
Control Voltage Range (according to EN60947-4-2)	Uc	10->24VDC	-	-			
Min. Control Voltage	Ucmin.	8.5V	-	-			
Max. Voltage Drop	Ut	-	2.5VDC	1.5VDC			
Max. Input Voltage		Ucmax=28VDC	Utmax=28VDC	Utmax=6VDC			
Max. Reverse Voltage		-Ucmax=28VDC	-Utmax=28VDC	-Utmax=6VDC			
Release Voltage		Uc<1VDC	Ut>2.5VDC	Ut>1.5VDC			
Control Current	Ic	5->19mADC	-	-	See curve fig. 7 page 5		
Current To Switch	Ict	-	50->100µADC	20mADC	Depends on Ut		

CHARACTERISTICS	LABELS		VALUES (Given at 20°C ambient unless otherwise specified)		
Output		Diag.	Byp.		
Concerned Terminals	/	1 & 2	2 & 3		
Function		Environment problem detection or faulty device indication	Indicates the end of the starting period and can be used to control a bypass electromechanical contactor		
Nom. Operating Voltage	Usan	24VA	C/DC		
Operating Voltage Range	Usa	0->28\	/AC/DC		
Non-repetitive Max. Peak Voltage	Usapmax	60	OV		
Protection Against Overvoltage		Yes 25V size 7 varistors integrated		See curves fig. 11 & 12 page 5	
Min. Load Current	Ibymin Ipbmin	0			
Max. Permanent Current	Iby/Ipb	1A A	C/DC	See curve fig. 8 page 5	
Overload Current	Ibyp/Ipbp	2.4A	AC/DC	@100ms 10% of the cycle	
Protection Against Short-Circuits		Ν	lo		
On-state Resistance	Ron	500mΩ		See curve fig. 9 page 5	
Off-state Resistance	Roff	100	ΜΩ		
Off-state Capacitance	Coff	130pF		See curve fig. 10 page 5	
Turn-on Time	Toff	0.5	ims		
Turn-off Time	Ton	21	ms		




S/MOT/SMCW6151/A/23/07/99 1W240030




Page 5/16 GB

CONTROL

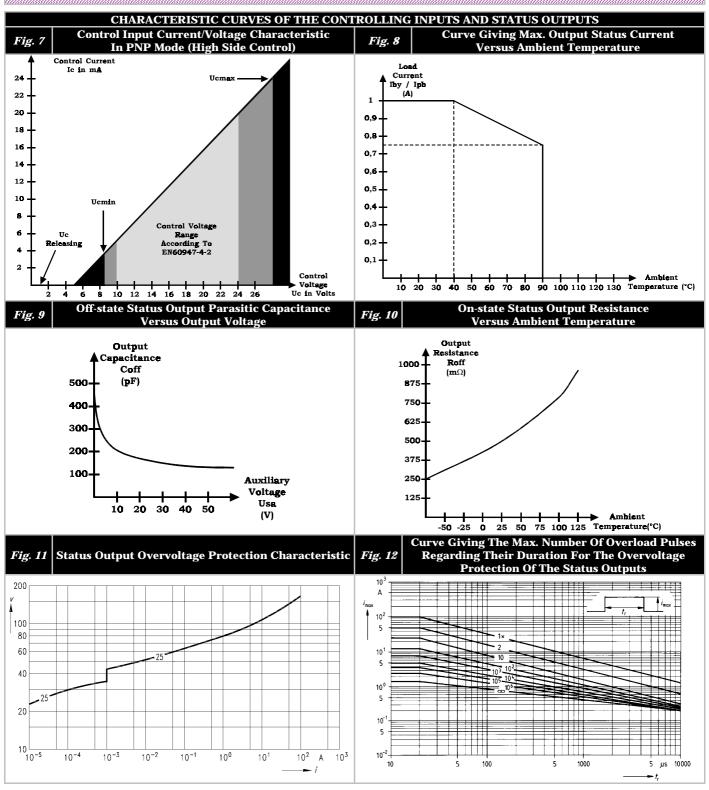

1 112 10030



01/28

Solid State Relays For Motor Control





POWER

TERNAL SU		
LABELS		REMARKS
Ue		See internal
		diagram fig. 1
		page 2
		P-8 -1
POW		
LABELS		REMARKS
_	15kW	
Pn	(With an external bypass contactor)	
Pn		
Pn		Device wired
		inside the delta
Pn		Device wired
	(With an external bypass contactor)	inside the delta
Uen	230VAC & 400VAC	
Ue	200->480VAC	
Uep	1200V	
	Vaa	See curves
		fig. 16 & 17
	STOV SIZE 14 VALISTOLS	page 7
Ie	99 5 A	Hard condition
-		See curve
(ACJJa)	(with an external bypass contactor)	fig. 15 page 7
		Normal
Ie		conditions
(AC53a)	(With an external bypass contactor)	See curve
		fig. 15 page 7
Ith		E.g. softstarting
		lamps
()	for each power terminal)	
ITSM	2000A	See Curve
		fig. 14 page 7
T ² t	20000 Å ² s	@10ms
		@400VAC50Hz
	40->65Hz	
dv/dt	500V/µs	
	YES	
	RC network	
di/dt	50A/µs	
Ud	1.4V	@Ith
rt	2m Ω	@125°C
Vto	0.9V	@125°C
Tjmax	125°U	m , 1 ~
Rthjc	0.25°K/W	Total = 3 power
		elements
	0.05°2/11/	
Rthcs	0.05°K/W	
	0.05°K/W 4°K/W	@∆Tra=60°C
	LABELSUeIsfffmPOWLABELSPIABELSPPPPPPUePUeUeIPIII <t< td=""><td>Image: Constraint of the state of</td></t<>	Image: Constraint of the state of




S/MOT/SMCW6151/A/23/07/99 1W240030



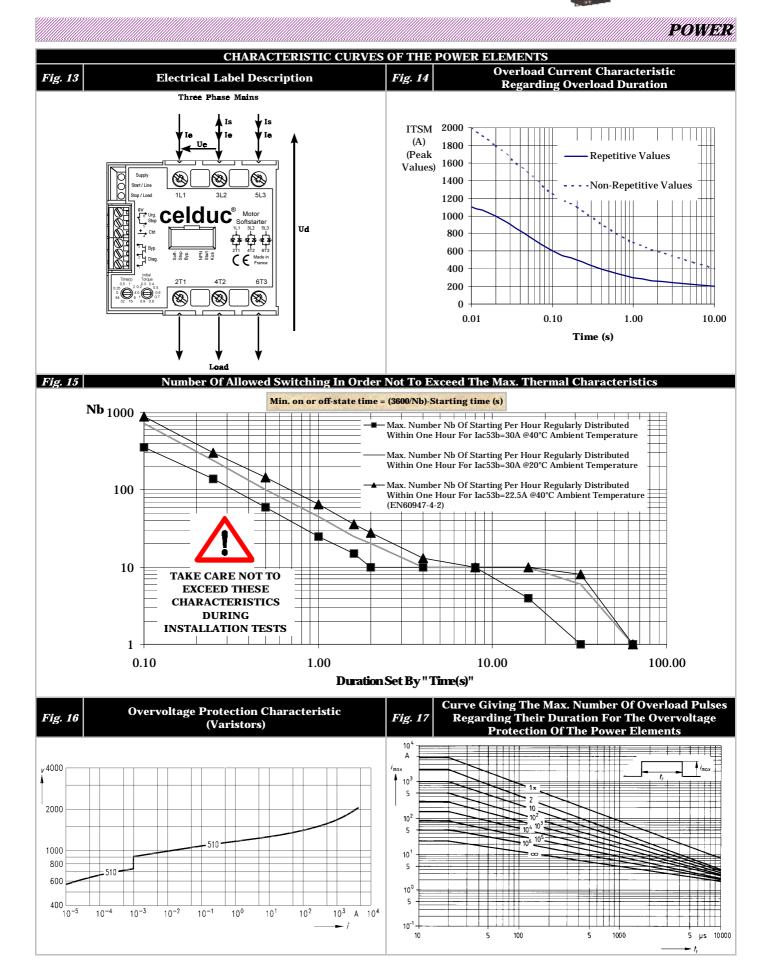

1 11240030



/07/99

Solid State Relays For Motor Control



GENERAL

	INPUT/OUT	PUT ISOLATION CHARACTERISTIC	
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS
Power Output/Input Isolation	Uimp	4kV	
Status Outputs / Input Isolation	Uied	2.5kV	
Plate/Input Isolation	Uimp	4kV	
Status Output/Plate Isolation	Uimp	4kV	
Isolation Resistance	Rio	1GΩ	
Isolation Capacitance	Cio	<8pF	

CLIMATIC OF ERATING ENVIRONMENT						
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS			
Storage Ambient Temperature	Tstg	-40->+100°C				
Ambient Operating Temperature	Tamb	-40->+90°C				
Max. Heatsink Temperature	Tc	100°C				
Wet Heat Resistance (continuous)		According to I.E.C. 68 parts 2 & 3				
Wet Heat Resistance (cyclical)		According to I.E.C. 68 parts 2 & 30				

CONNEXIONS AND REQUIRED TOOLS ON THE CONTROLSIDE						
CHARACTERISTICS	REMARKS					
Connections		Screwed				
Screwdriver		0.8 x 2mm				
Wire Cross Section		$2.5 \mathrm{mm}^2$				
Min. And Max. Tightening Torque						

CONNEXIONS AND REQUIRED TOOLS ON THE POWER SIDE					
CHARACTERISTICS LABELS		VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS		
Connections		Screwed			
Screwdriver		Posidriv 2 or 0.8 x 5.5mm			
Wire Cross Section		1,5->6mm ² (10mm ² without ferrule)			
Min. And Max. Tightening Torque		1.8->3N.m			
Possible Number Of Connected Wires For The Max. Cross Section		2			


CHARACTERISTICS AND REQUIRED TOOLS FOR THE SETTINGS				
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)		REMARKS
Setting		"Time" and "Initial Torque"	Option Switches	
Screwdriver				
Number Of Positions		10	2 for each switch	
Changing Position Required Torque		>1.5N.cm +/- 50%	>3N.cm +/- 50%	Rotary switches : No rotation stop
Angle Between Each Position		36°	0°	

MISCELLANEOUS CHARACTERISTICS			
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS
Housing		UL94V0	
Mounting		Omega DIN rail (DIN50022) or screwed	
Noise Level		Low audible vibration during the softstarting and softstopping periods	
Weight		600g	



S/MOT/SMCW6151/A/23/07/99 1W240030



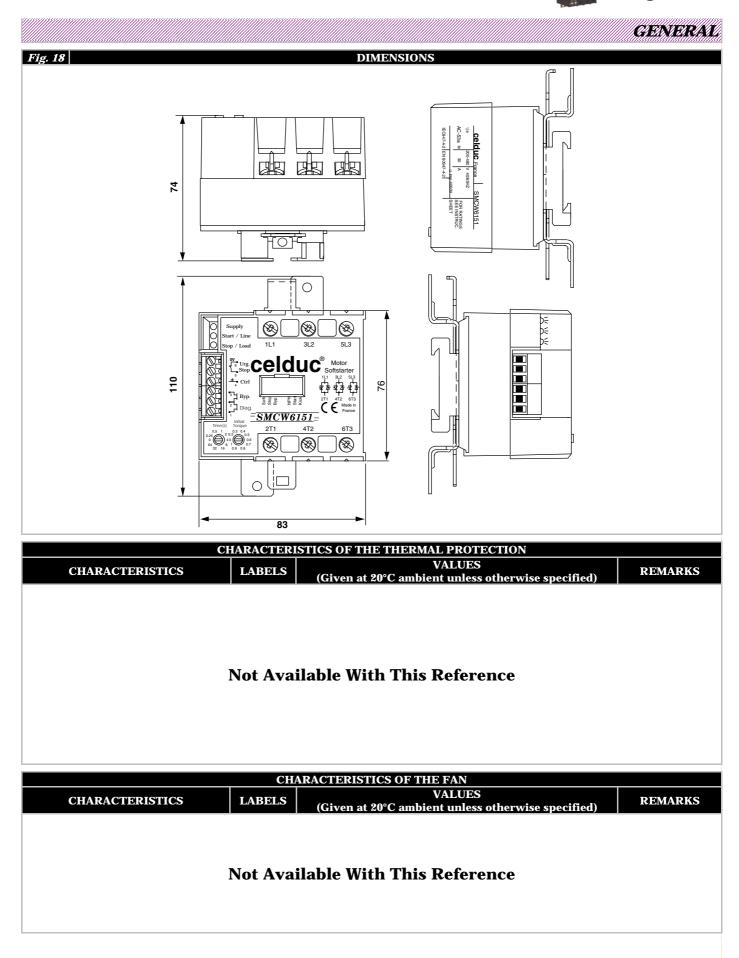

Раде 10/16 св



Solid State Relays For Motor Control



STANDARDS

IMMUNITY	LEVEL WITH	IIN ELECTROMAGNETIC COMPATIBILITY (E.M.C.)	
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS
Electrostatic discharges	EN 61000-4-2	8kV in the air 4kV contact	No state changing or destruction
Radiated Electromagnetic Fields	EN 61000-4-3	10V/m	No state changing or destruction
Fast Transient Bursts	EN 61000-4-4	2kV direct coupling on the power side 2kV clamped coupling on the input side	No state changing or destruction
Electric chocks	EN 61000-4-5	1kV direct coupling differential mode (Input and output sides) 2kV direct coupling common mode (Input and output sides)	No state changing or destruction
Voltage Drop	EN 61000-4-11		

EMISSION LEVEL WITHIN ELECTROMAGNETIC COMPATIBILITY (E.M.C.)			
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS
Conducted Disturbances	EN55011	In compliance with the standards for industrial field In compliance with the standards for domestic field with an external bypass contactor	
Radiated Disturbances	EN55011	<30dbµV for the frequency range 30->230MHz <37dbµV for the frequency range 230->1000MHz	
Remarks Concerning Filtering		The conducted or radiated disturbances generated by solid state relays depend on the wiring and load configuration. The test method recommended by the European standards and concerning electromagnetic compatibility leading to results far from reality, we decided to advise our customer in order to adapt their filtering scheme to their application. The European standard EN60947-4-2 requires the measurement to be done at full on state (end of the softstarting period). Therefore, our products are below the industrial field required levels on inductive load like the induction motor and no additional filter is needed. The starting period that may last several minutes generates enough interference to disturb sensitive devices located near the softstarter. If any, please contact us so that we can help you to choose the right filter.	

LOW VOLTAGE DIRECTIVE				
CHARACTERISTICS	LABELS VALUES (Given at 20°C ambient unless otherwise specified) REMARKS			
Standard		EN60947-4-2		
Protection Level	IP	2L0		
Protection For Direct Touch		According to V.D.E. 160 part 100 : Back hand and finger safety		

APPROVALS				
CHARACTERISTICS	LABELS	VALUES (Given at 20°C ambient unless otherwise specified)	REMARKS	
CE Marking	EN 60947-4-2	Yes		
c UL US	UL508	Pending		
VDE 0805	EN60950	Pending	Office environment	



S/MOT/SMCW6151/A/23/07/99 W240030

Раде 11/16 св

INSTALLATION

IMPORTANT

The installation of this product must be done by <u>qualified people</u>, informed about electric hazards (electrocution risks linked to the voltage levels in the circuit).

Any intervention on the installation must be operated the circuit disconnected from the electric grid by an electromechanical mean insuring a sufficient galvanic isolation.



DANGER!

The device concerned by this document is composed of silicon based solid state switches. <u>They never ensure a safe function when they</u> <u>are not controlled</u> (Important leakage current and untimely closing). Therefore, we advise you to use an electromechanical device in series with the softstarter, which can ensure a safe operation in the disconnected circuit.

The emergency stop must not be done by the softstarter. It must be done by an electromechanical with sufficient current breaking possibility.

In order to operate in the circuit in safe condition, the control part of the softstarter will have to be disconnected from the control or auxiliary supplies as well.

ATTENTION

<u>1- The SMCV does not correctly operate on three phase mains with the motor neutral connected to the neutral of the mains. If any, please contact us.</u>


2- The overload relay must be adapted to the motor.

3. Please take care not to make short-circuits while installing the by-pass contactor or the backward wires for delta wiring.

<u>4-</u> The control voltage will have to be held sufficiently to allow the by-pass to close. Take care not to remove the by-pass checking option "byp.".

5- In case of fast softstarting and softstopping controls without waiting for the end of the ramps, the motor may heat up. Please contact your motor supplier to choose an adapted model.


ENVIRONMENT OF THE SOFTSTARTER			
DEVICES	LABELS	DESCRIPTION	REMARKS
On Line Fuses (Hard conditions according to EN60947-4-2)		FERRAZ 14 x 51 am 50/500V	
On Line Fuses (Normal conditions)		To be determine by the user	
Overload Relay (Hard conditions according to EN60947-4-2)		Moeller Z00-24 class 10A	
Overload Relay (Normal conditions)		To be determine by the user	
Breaking Capability Of The By-pass Contactor	KM1	30A AC1	
By-pass Contactor Coil	A1/A2	15VAmax. / 15W max.	
Thermal Protection	T°C	Not available	
Wiring / Settings		Comply with the characteristics given in general information	



Solid State Relays For Motor Control




INSTALLATION

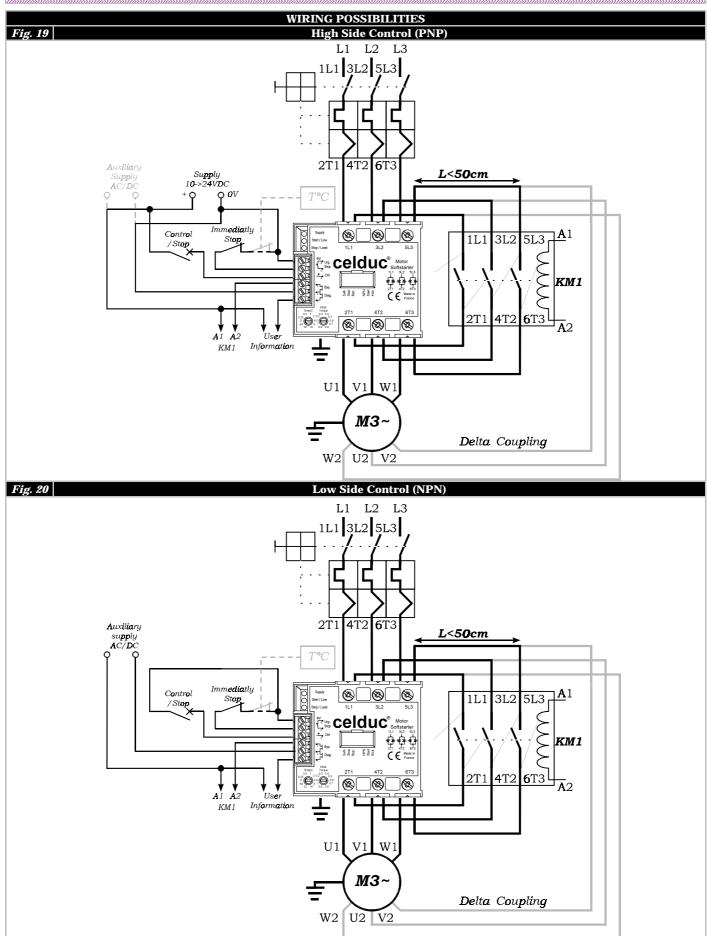



S/MOT/SMCW6151/A/23/07/99 1W240030



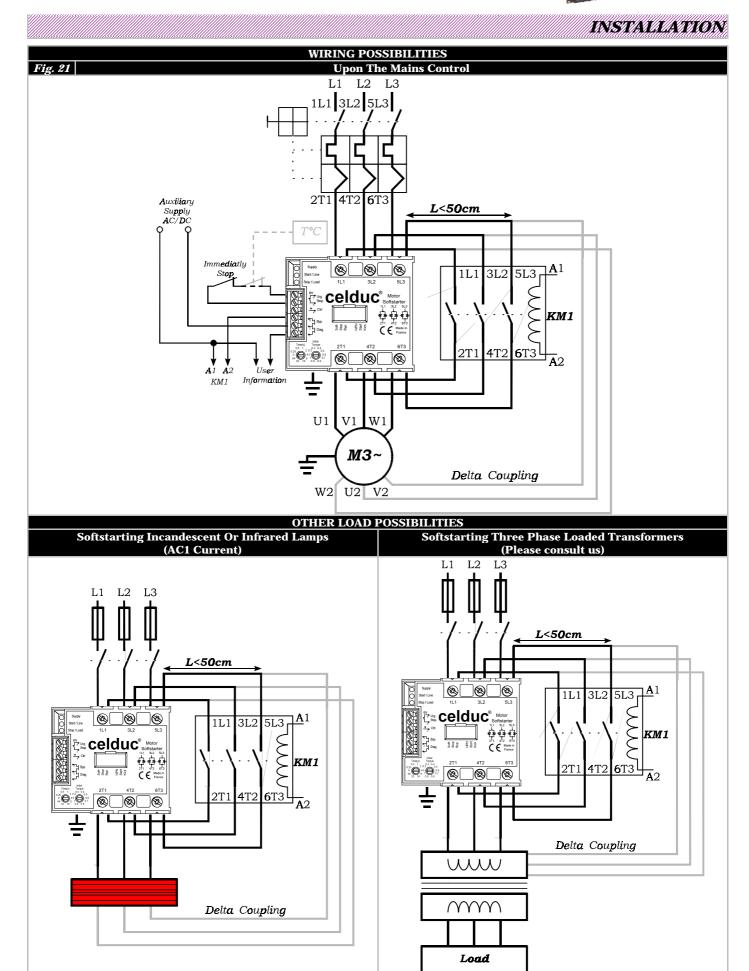




Solid State Relays For Motor Control



INSTALLATION

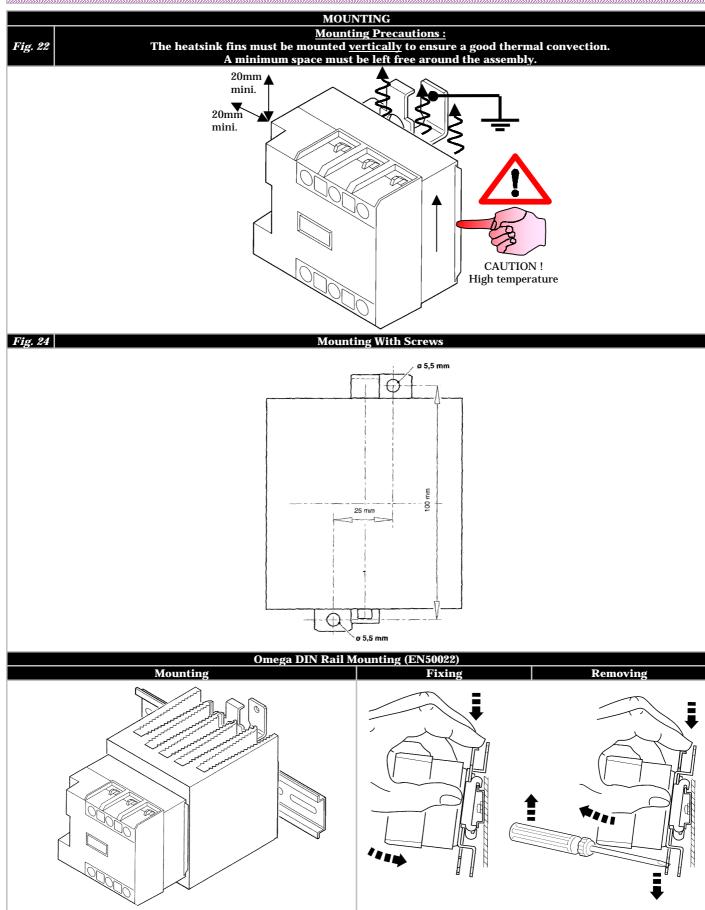



S/MOT/SMCW6151/A/23/07/99 1W240030

Раде 15/16 св


INSTALLATION

ADVISES FOR THE SETTINGS

ATTENTION

Obtaining a particular starting time value is only a consequence of the motor torque reduction and can not be guaranteed or easily repeatable. The rotary switch « Time (s) » setting values only give the duration of the voltage ramp applied to the motor but not necessarily its starting time. The main *SMCV* function is to obtain a motor torque reduction to take care of the motor load and the electric grid. The motor starting time is only a consequence and completely depends on the motor itself, its load and the settings done by the user.

The *SMCV* can not break a motor driving a load that has much inertia. The user can only obtain a stop time equal or longer than a simple disconnection from the electric grid. Using the softstop feature can only be justified when the motor load tends to break the motor (pumps, ...) or when the products treated by the machine need to be stop slowly (conveyors,...). In the case of load with high inertia, the softstop feature can help to reduce slowly the magnetic field inside the motor to avoid long time overvoltage in the circuit.

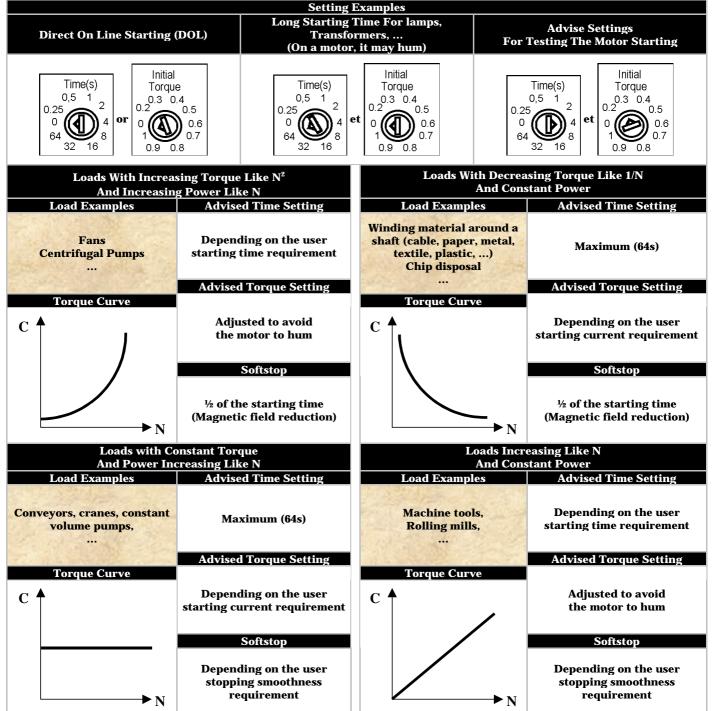

Раде 16/16 дв



Solid State Relays For Motor Control







– www.celduc.com

Rue Ampère B.P. 4 42290 SOBBIERS - FRANCE Email : celduc-relais@celduc.com