

2004-12-16



5011624901-4AE1

DVP04AD-H

Analog Input Module

Instruction Sheet

WARNING

Please carefully read this instruction thoroughly prior to use the DVP04AD-H.

The DC input power must be OFF before any maintenance.

This is an OPEN-TYPE built-in DVP04AD-H, and the DVP04AD-H is certified to meet the safety requirements of IEC 61131-2 (UL 508) when installed in the enclosure to prevent high temperature, high humidity, excessive vibration, corrosive gases, liquids, airborne dust or metallic particles. Also, it is equipped with protective methods such as some special tool or key to open the enclosure, in order to prevent the hazard to users and the damage to the DVP04AD-H.

Do not connect the AC power to any of the input/output terminals, or it may damage the DVP04AD-H. Make sure that all the wiring is well conducted prior to power on.

Do not touch the internal circuit for at least 1 minute after the power OFF.

Make sure that the DVP04AD-H is properly grounded, to prevent any electromagnetic noise.

INTRODUCTION

Model Explanation and Peripherals

Thank you for choosing DELTA's PLC DVP Series. The analog input module receives external 4-point analog signal input (voltage or current) and converts it into 14 bits digital signal. The analog input module of DVP04AD-H series can read/write the data of analog input module by using instructions FROM / TO via DVP-PLC EH Series MPU program. There are 49 CR (Control Register, each register has 16-bit) in each module.


Software version of DVP04AD-H analog input module can be updated via RS-485 communication.

Users can select input from voltage or current with wiring. Voltage input range is $\pm 10V$ DC (resolution is 1.25 mV). Current input range is ± 20 mA (resolution is 5 μA).


Nameplate Explanation



Model Explanation

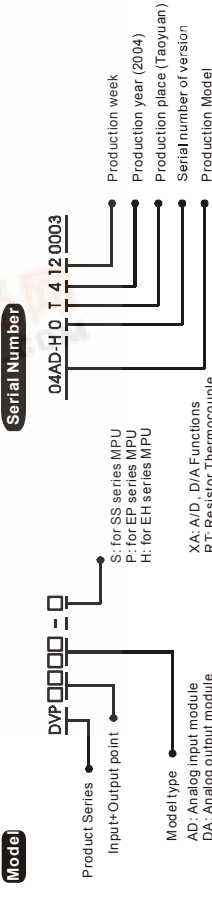


Product Profile and Outline

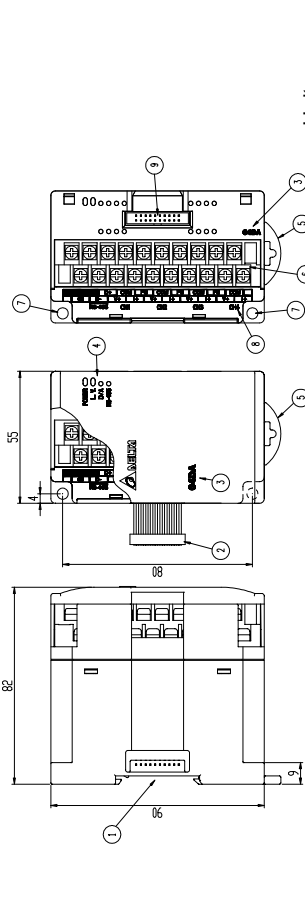

- 1. DIN rail track (35mm)
2. Mounting hole for wire to connect extension unit/extension module
3. Model name
4. Indicator for power, error and run status
5. DIN rail clip
6. Terminals
7. Mounting hole
8. Terminal layout
9. Mounting port to connect extension unit/extension module

2.3 External wiring

- Note 1: Please isolate analog input and other power wiring.
Note 2: If connect to current signal, please short out between V+ and I+ terminals.
Note 3: If noise is significant, please connect FG to ground.

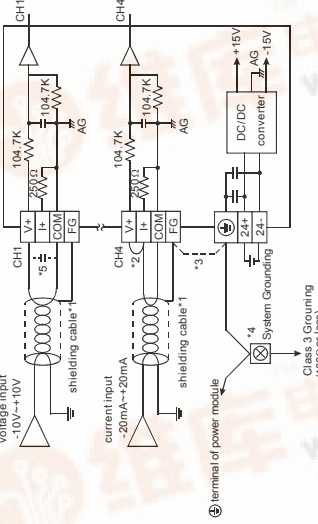

Note 4: Please connect terminal of power module and terminal of analog input module to system earth point and make system earth point be grounded or connects to machine cover.

Note 5: If the noise interference from loaded wire input terminal is significant, please connect a capacitor with 0.1~0.47 uF 25V for noise filtering.
Warning: DO NOT wire to the No function terminal.

3 STANDARD SPECIFICATIONS

Table with 3 columns: Function Specifications, Voltage input, Current input. Rows include Power supply voltage, Analog input channel, Resolution, Input impedance, Overall accuracy, Response time, Isolation Method, Absolute input range, Digital data format, Average function, Self diagnose function, Communication mode, and Connect to DVP-PLC MPU.

3.2 Other Specification

Table with 2 columns: Power Specification, Environment Condition. Rows include Max. Rated Consuming Power and Spec. of Prevent Static Electricity.

4 CR (Control Register)

Table with 10 columns: CR No., Parameter address, Latched, Register name, Model type, Input mode setting, and bit fields b0-b15. Rows include CH1 average times, CH2 average times, CH3 average times, CH4 average times, average value of CH1, average value of CH2, average value of CH3, average value of CH4, present value of CH1, and present value of CH2.

Table with 10 columns: CR No., Parameter address, Latched, Register name, Present value of CH2, Present value of CH3, Present value of CH4, and bit fields b0-b15. Rows include CH2, CH3, CH4, and various gain/offset registers.

Explanation:

- 1. CR#0: The content of CR#0 is model type, user can read the data from program to know if there is extension module.
2. CR#1: CR#1 is used to set 4 internal channels working mode of analog input module.
3. CR#2 ~ CR#5: it is used to set average times of CH1~CH4.
4. CR#6 to CR#9 are the average value that calculates according to the value that is set in CR#2~CR#5.
5. CR#10, CR#11, CR#16, CR#17, CR#22, CR#23, CR#28, CR#29 reserved.
6. CR#12 ~ CR#15: display present value of CH1~CH4 input signal.
7. CR#18 ~ CR#21: the content is the value of adjusting OFFSET value of CH1~CH4 if analog input voltage or current is 0 after it transfers from analog to digital.
8. CR#24 ~ CR#27: means analog input voltage or current when conversion value from analog signal to digital is 4000.
9. CR#30 is the fault code. Please refer to the chart below.

CR#31: it is used to set RS-485 communication address. Setting range is 01~255 and factory setting is K1.

CR#32 is used to set RS-485 communication baud rate: 4800, 9600, 19200, 38400, 57600, 115200 bps. b0: 4800bps. b1: 9600bps. (factory setting) b2: 19200bps. b3: 38400 bps. b4: 57600 bps. b5: 115200 bps. b6-b13: reserved. b14: exchange low and high byte of CRC check code. (only for RTU mode) b15=0: ASCII mode. b15=1: RTU mode. Communication format: ASCII mode is 7Bit, even bit, 1 stop bit (7 E 1). Communication format of RTU mode is 8Bit, even bit, 1 stop bit (8 E 1).

CR#33 is used to set the internal function priority, such as characteristic register. Output latched function will save output setting in the inner memory before power loss.

CR#34: software version.

CR#35~ CR#48: system used.

The corresponding parameters address H4000~H4030 of CR#0~CR#48 are provided for user to read/write data through RS-485.


A. Communication baud rate: 4800, 9600, 19200, 38400, 57600, 115200 bps.

B. Communication format: ASCII mode is 7Bit, even bit, 1 stop bit (7 E 1). Communication format of RTU mode is 8Bit, even bit, 1 stop bit (8 E 1).

C. Function code: 03H—read data from register. 06H—write one WORD into register. 10H—write multiple WORD into registers.

ADJUST A/D CONVERSION CHARACTERISTIC CURVE

Adjust A/D Conversion Characteristic Curve

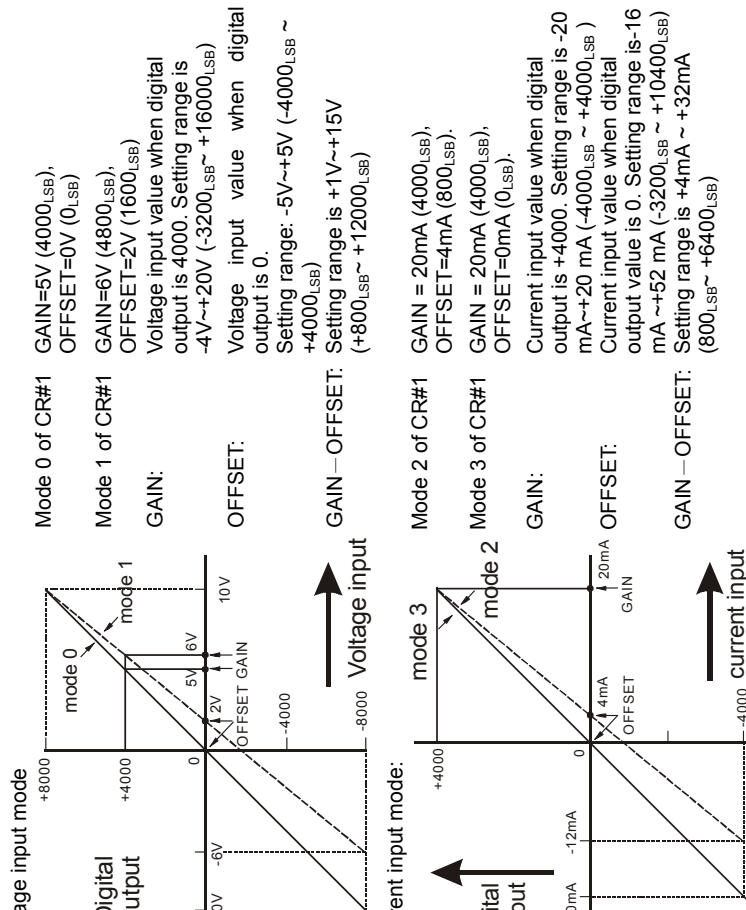

Using charts above to adjust A/D conversion characteristic curve of voltage input mode and current input mode. Users can adjust conversion characteristic curve by changing OFFSET values CR#18~CR#21 and GAIN values (CR#24~CR#27) depend on application.

LSB(Least Significant Bit): 1. voltage input: 1_{LSB}=10V/8000=1.25mV. 2. current input: 1_{LSB}=20mA/4000=5μA.


Program Example for Adjusting A/D Conversion Characteristics Curve

Program Example 1: setting OFFSET value of CH1 to 0V(=K0_{LSB}) and GAIN value of CH1 to 2.5V(=K2000_{LSB}).

Writing H0 to CR#1 of analog input module no. 0 and set CH1 to mode 0 (voltage input -10V~+10V)


Writing H1 to CR#33 and allow to adjust characters of CH1~CH4.

When X0 switches from Off to On, K0_{LSB} of OFFSET value will be written in CR#18 and K2000_{LSB} of GAIN value will be written in CR#24.

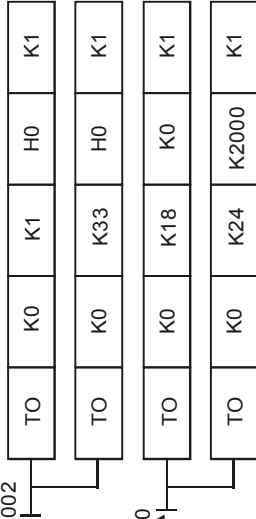

Program Example 2: setting OFFSET value of CH2 to 2mA(=K400_{LSB}) and GAIN value of CH2 to 18 mA


(=K3600_{LSB})

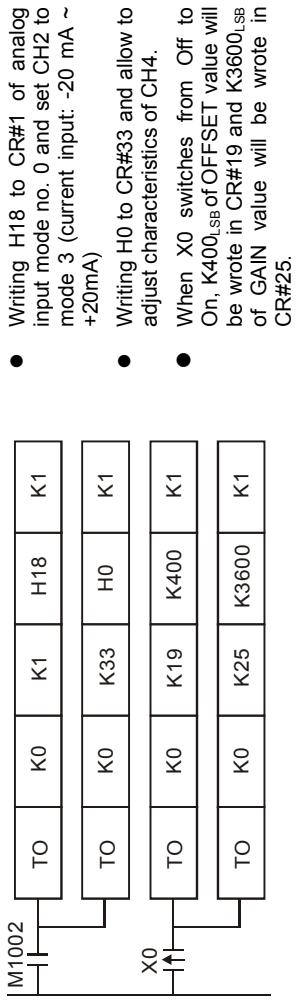

INITIAL PLC START-UP

Lamp display:

- When power is on, POWER LED will be lit and ERROR LED will be lit for 0.5 second.
- Normal run: POWER LED should be lit and ERROR LED should turn off. When power supply is lower than 19.5V, ERROR LED will blink continuously till the power supply goes higher than 19.5V.
- When it connects to PLC MPU in series, RUN LED on MPU will be lit and A/D LED or D/A LED should blink.
- After receiving the first RS-485 instruction during controlling by RS-485, A/D LED or D/A LED should blink.
- After converting, ERROR LED should blink if input or output exceeds upper bound or lower than lower bound.

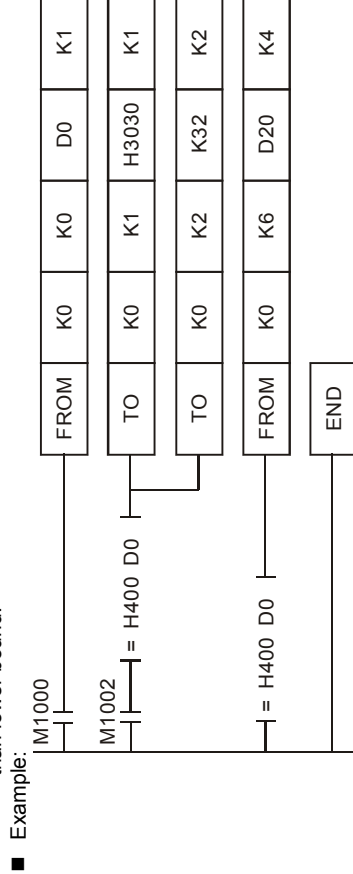

Explanation:

- Read the data of model type from extension module K0 and distinguish if the data is H400 (DVP04AD-H model type).
- If the model type is DVP04AD-H, M11 is on and the setting input mode is (CH1, CH3)= mode 0, (CH2, CH4)= mode 3.
- Set the number of times for average of CH1 and CH2 are K32.
- Read the input signal average value of CH1~CH4 (4 data) and saved into D20~D23.

RELATED INSTRUCTIONS EXPLANATION


API	FROM	D	P	(m1)	(m2)	(n)	Read special module CR data	Applicable model
78								ES EP EH
								✓ ✓ ✓

Bit device		Word device												
X	Y	M	S	K	H	KnX	KnY	KnM	KnS	T	C	D	E	F
m1	*	*	*	*	*	*	*	*	*	*	*	*	*	*
m2	*	*	*	*	*	*	*	*	*	*	*	*	*	*
D	*	*	*	*	*	*	*	*	*	*	*	*	*	*
n	*	*	*	*	*	*	*	*	*	*	*	*	*	*

Note: The usage range of operand m₁ is 0~7.
The usage range of operand m₂: ES/EP: 0~48, EH: 0~254.
The usage range of operand n: ES/EP: n= 1~(49-m₂), EH: 1~(255-m₂).
ES series model doesn't support pulse execution instruction (FROMP, DFROMP).

- (m₁): the number for special module. (m₂): the number of CR (Control Register) of special module that will be read. (D): the location to save reading data. (n): the data number of reading one time.
- DVP-series PLC uses this instruction to read CR data of special module.
- (D): When assigning bit operand, K1~K4 are used for 16-bit and K5~K8 are used for 32-bit.
- Please refer the footnote below for the calculation of special module number.
- To read the content of CR#24 of special module#0 to D0 of PLC and to read the content of CR#25 of special module#0 to D1 of PLC. It can read 2 data in one time (n=2).

- The instruction will be executed when X0=On. The instruction won't be executed when X0=Off and the content of previous reading data won't change.



API	D	P	(m1)	(m2)	(S)	(n)	Special module CR data write in	Applicable model
79								ES EP EH
								✓ ✓ ✓

Bit device		Word device												
X	Y	M	S	K	H	KnX	KnY	KnM	KnS	T	C	D	E	F
m1	*	*	*	*	*	*	*	*	*	*	*	*	*	*
m2	*	*	*	*	*	*	*	*	*	*	*	*	*	*
S	*	*	*	*	*	*	*	*	*	*	*	*	*	*
n	*	*	*	*	*	*	*	*	*	*	*	*	*	*

Note: The usage range of operand m₁ is 0~7.
The usage range of operand m₂: ES/EP: 0~48, EH: 0~254.
The usage range of operand n: ES/EP: n= 1~(49-m₂), EH: 1~(255-m₂).
For ES series, it doesn't support pulse execution instruction (TOP, DTOP)

16-bit instruction (9 STEPS)
TO Continuous execution Pulse execution


32-bit instruction (17 STEPS)
DTP Continuous execution Pulse execution

- Flag: When M1083=On, it allows to insert interrupt during FROM/TO.
Refer to following for detail.

Command Explanation

Program Example


- (m₁): the number of special module. (m₂): the number of CR (Control Register) of special module that will be write in. (S): the data to write in CR. (n): the data number to write in one time.
- DVP-series PLC uses this instruction to write data into CR of special module.
- (S): When assigning bit operand, K1~K4 can be used for 16-bit and K5~K8 can be used for 32-bit.
- Using 32-bit instruction DTP, program will write D11 and D10 into CR#3 and CR#2 of special module#0. It only writes a group of data in one time (n=1).
- The instruction will be executed when X0=On and it won't be executed when X0=Off. The data that wrote in previous won't have any change.



Footnote

- The rule of instruction operand:
- m₁: arrangement number of special module. The number of special module that connects to PLC MPU. The numbering order of special module from the near to the distant of MPU is from 0 to 7. The maximum is 8 special modules and won't occupy I/O point.
- m₂: the number of CR. Built in 16-bit of 49 groups memory of special module is called CR (Control Register). The number of CR uses decimal digital (#0~#48). All running status and setting values of special module has included.
- If using FROM/TO instruction, the unit of read/write of CR is one number for one time. If using DFROM/DTOP instruction, the unit of read/write of CR is two numbers in one time.

Upper 16-bit Lower 16-bit

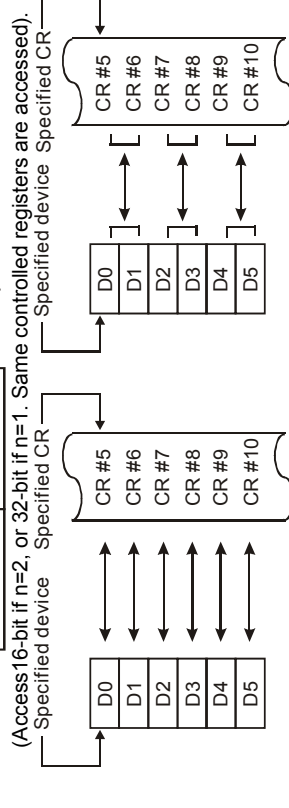

- (Access 16-bit if n=2, or 32-bit if n=1. Same controlled registers are accessed).
Specified device Specified CR Specified device Specified CR
- 32-bit command when n=6
- 16-bit command when n=6
- In ES series models, flag M1083 is not provided. When FROM/TO instruction is executed, all interrupts (including external or internal interrupt subroutines) will be disabled. All interrupts will be executed after completing FROM/TO instruction. Besides, FROM/TO instruction also can be executed in the interrupt subroutine.
- The function of the flag M1083 (FROM/TO mode exchange) provided in EP/EH series models:
 - When M1083=Off, all interrupts (including external or internal interrupt subroutines) will be disabled when FROM/TO instruction is executed. The interrupts will resumed after FROM/TO instruction complete. Please be advised FROM/TO instruction can be executed in the interrupt subroutine.
 - When M1083=On, if an interrupt enable occurs while FROM/TO instruction are executing, the interrupt FROM/TO instruction will be blocked till the requested interrupt finish. Unlike M1080 off situation, FROM/TO instruction cannot be executed in the interrupt subroutine.