



REGULATOR BALANCE CONTROLLER

EZ1900

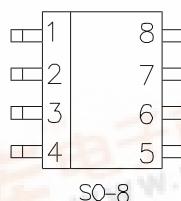
May 27, 1999

TEL:805-498-2111 FAX:805-498-3804 WEB:<http://www.semtech.com>

DESCRIPTION

The EZ1900 is a high performance positive load current balancer designed for use in applications utilizing 2 regulators in parallel to achieve equal current sharing or identical current for each load. The regulator balance controller allows a flexible motherboard design to be made to cope with different processor configurations. The controller reads a logic level upgrade signal (denoted V_{CC2DET} on the Intel P55C; similar on AMD, Cyrix and PowerPC microprocessors) to control the output voltage of two linear low dropout voltage regulators to the CPU core and I/O planes. In single-voltage plane configurations (V_{CC2DET} floating), both regulators are set to the same output voltage (usually 3.3 - 3.5V) and are configured in master-slave mode. For split plane processors (V_{CC2DET} low), the outputs of the two regulators are switched - the core voltage will be set to a nominal 2.5V while the I/O voltage will remain at 3.3V. The actual output voltages can be adjusted by means of resistors. The EZ1900 programmable current balancer is available in the popular SO-8 surface mount package.

PIN CONFIGURATION



| Pin # | Legend | Description |
|-------|-----------|--------------------------------|
| 1 | Sel | Non-slave mode, voltage select |
| 2 | -IN | Negative error amplifier input |
| 3 | +IN | Positive error amplifier input |
| 4 | -V | Power input, common |
| 5 | nc | No Connection |
| 6 | S_{OUT} | Sets V_{OUT} of slave device |
| 7 | +V | Power input, positive |
| 8 | nc | No connection |

Slave Mode Pin: For non "Computer Select Operation", the Select Mode, pin #1, can be left open circuited for continuous slave mode operation or balance current control. Ground the Select Mode, pin #1, for non-slave mode operation.

FEATURES

- Current balance controller for regulators in parallel
- Slave and non-slave voltage modes
- Slave or non-slave mode computer selected
- Compatible with 3 or 5 pin low drop regulators
- Remote sense operation
- SO-8 package

APPLICATIONS

- Flexible upgrade from single voltage plane to split-plane processors
- Intel Pentium® Processor P54CS & P55C upgrades
- PowerPC™ 603 & 604 upgrades
- AMD5_k86™ upgrades

ORDERING INFORMATION

| DEVICE ⁽¹⁾ | PACKAGE |
|-----------------------|---------|
| EZ1900CS | SO-8 |

Note:

(1) Add suffix 'TR' for tape and reel.

ABSOLUTE MAXIMUM RATINGS

| Parameter | Symbol | Maximum | Units |
|--|-------------------------|--------------|-------|
| Input Voltage Supply | V_{IN} | 7 | V |
| Differential Amplifier | $-IN, +IN$ S_{OUT} | 7 0 to +V | V |
| Slave Output Current (sink only) | I_{SLAVE} | 50 | mA |
| Thermal Resistance Junction to Ambient | θ_{JA} | 160 | °C/W |
| Operating Junction Temperature Range | T_J | 0 to 70 | °C |
| Storage Temperature Range | T_{STG} | -65 to 125 | °C |
| Lead Temperature (Soldering) 5 Sec | T_{LEAD} | 260 | °C |



**REGULATOR
BALANCE CONTROLLER**

EZ1900

May 27, 1999

ELECTRICAL CHARACTERISTICS

Unless otherwise specified: $V_{IN} = 5V$; $I_{SLAVE} = 10mA$; $T_J = 25^{\circ}C$.

| | | Test Conditions | | | Test Limits | | | |
|--|------------------------------------|-----------------|------------------|----------------|-------------|------|------|-------|
| Parameter | Symbol | +V | S _{OUT} | T _J | Min | Typ | Max | Units |
| Input | | | | | | | | |
| Input Error Voltage | V _{IO} | | | | | | 5 | mV |
| Common Mode Input Range | V _{CM} | 7V | | | 1 | | 7 | V |
| Average Temperature Coefficient, Input DIFF Voltage | $\frac{\Delta V_{IE}}{\Delta T}$ | | | | | 0.01 | | mV/°C |
| Input Current | I _{IC} | | | | 50 | 200 | | nA |
| Common Mode Rejection Ratio | CMRR | 7V | | | 70 | 80 | | dB |
| Power Supply Rejection Ration | PSRR | | | | 60 | 70 | | dB |
| Sensitivity | $\Delta I_{OUT} / \Delta V_{DIFF}$ | | | | 10 | 50 | | Ω |
| Select Threshold Low High | V _{TH} | | | | 2.4 | | 0.8 | V |
| Select Input Current Low SEL = 0V | I _{SEL} | | | | | -150 | -200 | μA |
| High SEL = 7V | | | | | | | 1 | |
| Output | | | | | | | | |
| Slave Output Leakage | S _{OL} | | 7V | | | | 1 | μA |
| Slave Output Resistance | R _O | | | | 2 | 3 | 4 | Ω |
| Power Supply Current Slave Mode | I _{CC} | | | | | 500 | 700 | μA |
| Non-Slave Mode | | | | | | 3 | 5 | mA |
| Off Mode | | | | | | 700 | | μA |

May 27, 1999

V_{OUT}/RESISTOR SELECTION REFERENCE

(Resistor selection in Ω . See Typical Applications on following pages.)

Slave Mode (Master Regulator) V_M

| V _{OUT} | R3 | R4 | Calc V _{OUT} |
|------------------|-----|-----|-----------------------|
| 3.500 | 130 | 232 | 3.494 |
| 3.300 | 115 | 187 | 3.293 |
| 2.900 | 133 | 174 | 2.895 |
| 2.800 | 137 | 169 | 2.801 |
| 2.700 | 137 | 158 | 2.700 |
| 2.600 | 121 | 130 | 2.600 |
| 2.500 | 115 | 115 | 2.506 |

Non-Slave Mode (Slave Regulator) V_S

| V _{OUT} | R1 | R2 | *Calc V _{OUT} |
|------------------|-----|-----|------------------------|
| 3.500 | 137 | 243 | 3.508 |
| 3.300 | 137 | 221 | 3.306 |
| 2.900 | 137 | 178 | 2.911 |
| 2.800 | 124 | 150 | 2.801 |
| 2.700 | 130 | 147 | 2.701 |
| 2.600 | 121 | 127 | 2.600 |
| 2.500 | 133 | 137 | 2.498 |

Notes:

$$V_M = V_{REF} (1 + R4 / R3) + I_{ADJ} R4.$$

Resistor selection is based upon standard table for 1% resistors.

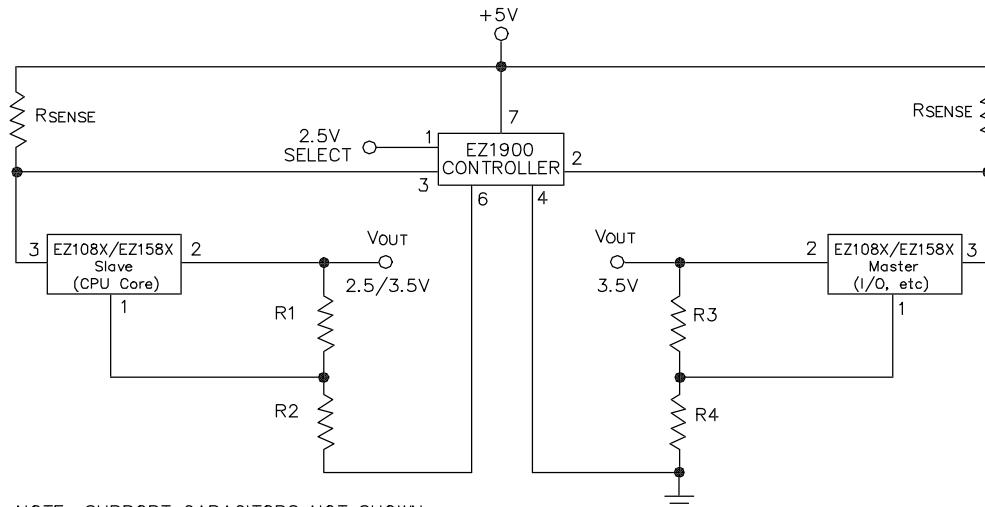
Notes:

$$V_S = V_{REF} (1 + (R2 + 3\Omega) / R1) + I_{ADJ} (R2 + 3\Omega).$$

*The EZ1900 operating in the non-slave mode operation will introduce approximately 3 ohms of resistance in the voltage set path when selected. The calculated values are based upon this addition.

TYPICAL APPLICATIONS

Balanced Current Controller Utilizing EZ108X/EZ158X Series



NOTE: SUPPORT CAPACITORS NOT SHOWN.

Voltage Select

Slave Mode Operation $V_M = V_{OUT}$ of Master

$$V_M = V_{REF} (1 + R4/R3) + I_{ADJ} R4$$

Non-Slave Mode, $V_S = V_{OUT}$ of Slave

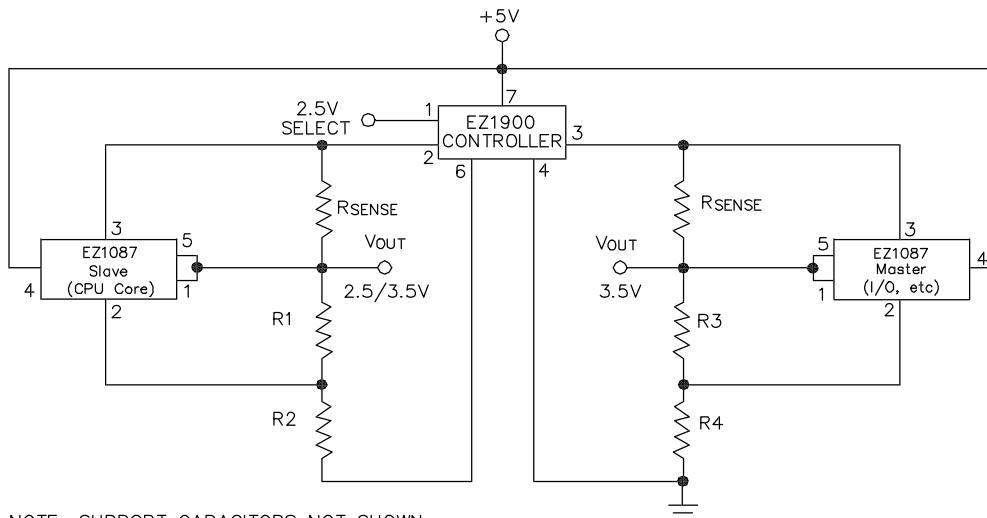
$$V_S = V_{REF} (1 + (R2 + 3\Omega) / R1) + I_{ADJ} (R2 + 3\Omega)$$

R_{SENSE} Select

R_{SENSE} Select; Typical selection can be (50mV to 100mV) / (Total I_{OUT} / 2).

Trace resistance of 10mΩ and above can easily accommodate value required.

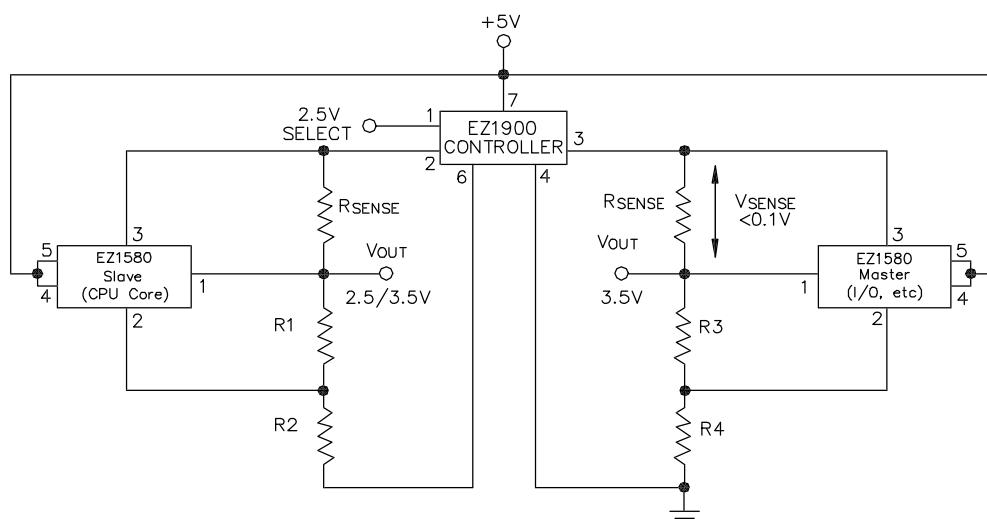
May 27, 1999

TYPICAL APPLICATIONS (cont.)
Balanced Current Controller Utilizing EZ1087 Series

Voltage Select

Slave Mode Operation $V_M = V_{OUT}$ of Master
 $V_M = V_{REF} (1 + R4/R3) + I_{ADJ} R4$
 Non-Slave Mode, $V_S = V_{OUT}$ of Slave
 $V_S = V_{REF} (1 + (R2 + 3\Omega) / R1) + I_{ADJ} (R2 + 3\Omega)$

R_{SENSE} Select

R_{SENSE} Select; Typical selection can be
 $(50mV \text{ to } 100mV) / (\text{Total } I_{OUT} / 2)$.
 Trace resistance of 10mΩ and above can easily accommodate value required.

Balanced Current Controller Utilizing EZ1580 Series


NOTE: SUPPORT CAPACITORS NOT SHOWN.

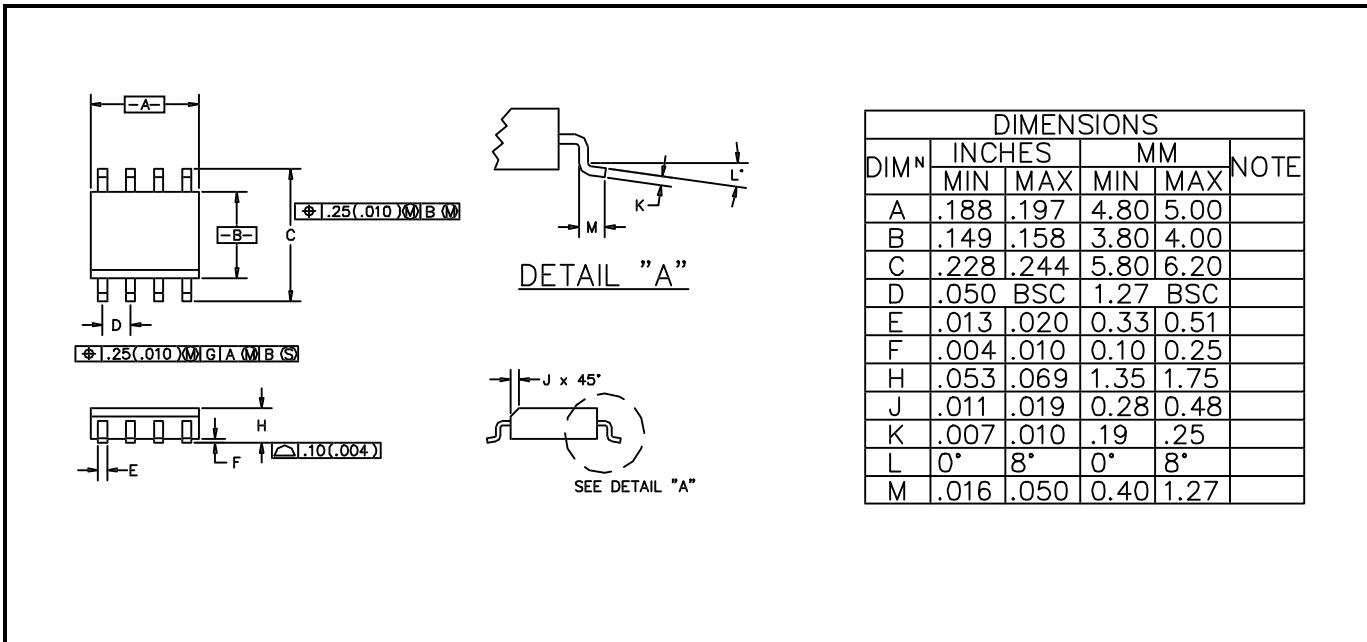
Voltage Select

Slave Mode Operation $V_M = V_{OUT}$ of Master
 $V_M = V_{REF} (1 + R4/R3) + I_{ADJ} R4$
 Non-Slave Mode, $V_S = V_{OUT}$ of Slave
 $V_S = V_{REF} (1 + (R2 + 3\Omega) / R1) + I_{ADJ} (R2 + 3\Omega)$

R_{SENSE} Select

R_{SENSE} Select (100mV Min) / (Total $I_{OUT} / 2$).
 The EZ1580 series requires R_{SENSE} voltage to be less than 100mV.
 Trace resistance can easily accommodate value required.

May 27, 1999

OUTLINE DRAWING SO-8

LAND PATTERN SO-8
