



# SD4001

4BIT MICRO CONTROLLER

## Description

The SD4001 is CMOS LSI chips developed for world-wide FM / MW / LW tuning with PLL frequency synthesizer system. The SD4001 can make a compact and high performance FM / MW / LW tuner with clock function for high-end car stereo, home stereo and so on because these CMOS LSIs are in 64-pin QFP package with built-in PLL frequency synthesizer, controller, 200 MHz prescaler, LCD driver and IF counter.

## Functions

### Radio Functions

- (1) Manual tuning  
Manual tuning up/down ..... Stepped tuning and rapid tuning.
- (2) Auto tuning  
Seek up/down ..... Retaining the frequency of a station received.  
Scan up/down ..... Receiving in intervals of 5 seconds.
- (3) Preset memory scanning ..... Receiving the contents of preset memories on the FM, MW, and LW bands for 5 seconds each.
- (4) VF auto - tuning  
SK seek up/down .... Retaining the frequency of a SK signal received.  
SK scan up/down .... Receiving a station with SK signal in intervals of 5 seconds.
- (5) Preset memories  
FM band .... FM 1:6 stations, RW 2:6 stations, FM 3:6 stations  
MW band ... MW 1:6 stations, MW 2:6 stations  
LW band ... 6 stations  
VF band .... 6 stations  
MW2 cannot be used while the LW band is used.
- (6) Last-preset memories ..... 1 station on the FM1, FM2, FM3, MW1, MW2, LW and VF bands each.
- (7) LOC (local) control signal outputs and indications.
- (8) FM MONO (monaural) control signal output and indication. (For VF bands, same as for FM)
- (9) "ST" (stereo) indicator ..... Enabled on the FM and VF bands.
- (10) Auto-preset memories
- (11) DK stand-by and SK alarm function

### Tape Functions

- (1) Tape transport direction indicators ..... Can flash at 2 HZ during fast forward.
- (2) AMS (auto music search) control signal output and indication.
- (3) MTL (metal) control signal output and indication.
- (4) NR1 (noise reduction) and NR2 control outputs and indications.



**Functions (Continued)****CLOCK Functions**

- (1) Selectable 12-hour(with AM and PM indicators) of 24-hour display.
- (2) Selectable flashing colon(;) (1Hz)
- (3) Low-power (10 $\mu$ A) backup available in the NOCLK(no-clock)mode.

**Others**

- (1) LOUD (loudness) control signal output and indication ..... common to radio, tape and CD modes.
- (2) Key acknowledge(beep) signal outputs (2.25 kHz, 40ms) ..... Enabled by valid momentary keys.
- (3) Display selector and priority display function.
- (4) " [d " (complex disk) indicator.

Table) Receiving frequency, channel spacing, reference frequency, intermediate frequency

Item		Receiving Frequency	Channel Space	Reference Frequency	Intermediate Frequency
Area	Band				
Europe 1	FM	87.5 to 108.0 MHz	50KHz	25KHz	10.7MHz
	MW	522 to 1620 KHz	9KHz	9KHz	450KHz
	LW	144 to 281 KHz	1KHz	1KHz	450KHz
Europe 2	FM	87.5 to 108.0 MHz	50KHz	25KHz	10.7MHz
	MW	522 to 1620 KHz	9KHz	9KHz	459KHz
	LW	144 to 281 KHz	1KHz	1KHz	459KHz
U.S.A 1	FM	87.5 to 108.0 MHz	100KHz	25KHz	10.7MHz
	MW	530 to 1620 KHz	10KHz	10KHz	450KHz
U.S.A 2	FM	87.5 to 107.9 MHz	200KHz	25KHz	10.7MHz
	MW	530 to 1620 KHz	10KHz	10KHz	450KHz
U.S.A 3	FM	87.5 to 107.9 MHz	200KHz	25KHz	10.7MHz
	MW	530 to 1710 KHz	10KHz	10KHz	450KHz
Australia and Middle and Near East	FM	87.5 to 108.0 MHz	100KHz	25KHz	10.7MHz
	MW	531 to 1602 KHz	9KHz	9KHz	450KHz
Japan	FM	76.0 to 90.0 MHz	100KHz	25KHz	-10.7MHz
	MW	522 to 1629 KHz	9KHz	9KHz	450KHz
Latin America	FM	87.5 to 108.0 MHz	100KHz	25KHz	10.7MHz
	MW	520 to 1620 KHz	5KHz	5KHz	450KHz

## **Features**

Single power supply of  $5V \pm 10\%$

Built-in prescaler (200MHz MAX.  $V_{in}=0.3V_{pp}$  ), IF counter and LCD driver (1/2 duty, 1/2 bias, frame frequency:100Hz)

Capable of receiving FM and MW in the whole world and LW in Europe.

Tuning function ..... Manual tuning, auto-tuning (seek and scan) and preset memory scan.

Independent preset memory programming by six buttons for up to 18FM stations (sixFM1, FM2 and FM3 stations each), up to 12 MW stations (six MW1 and MW2 stations each), up to six LW stations and VF broadcasting stations.

Each last channel memory for FM : 3, MW:1 and VF : 1

VF auto-tuning (SK signal search) with DK stand-by function.

Control output of MTL (METAL), NR1 (NOISE REDUCTION), NR2 and AMS (AUTO MUSIC SEARCH) and its display.


Automatic preset station memory function

Compact disc display(Lcd)

Loudness control output and its display

Built-in 12 hour/24 hour clock display function (possible to set no clock)

## Pin Configuration

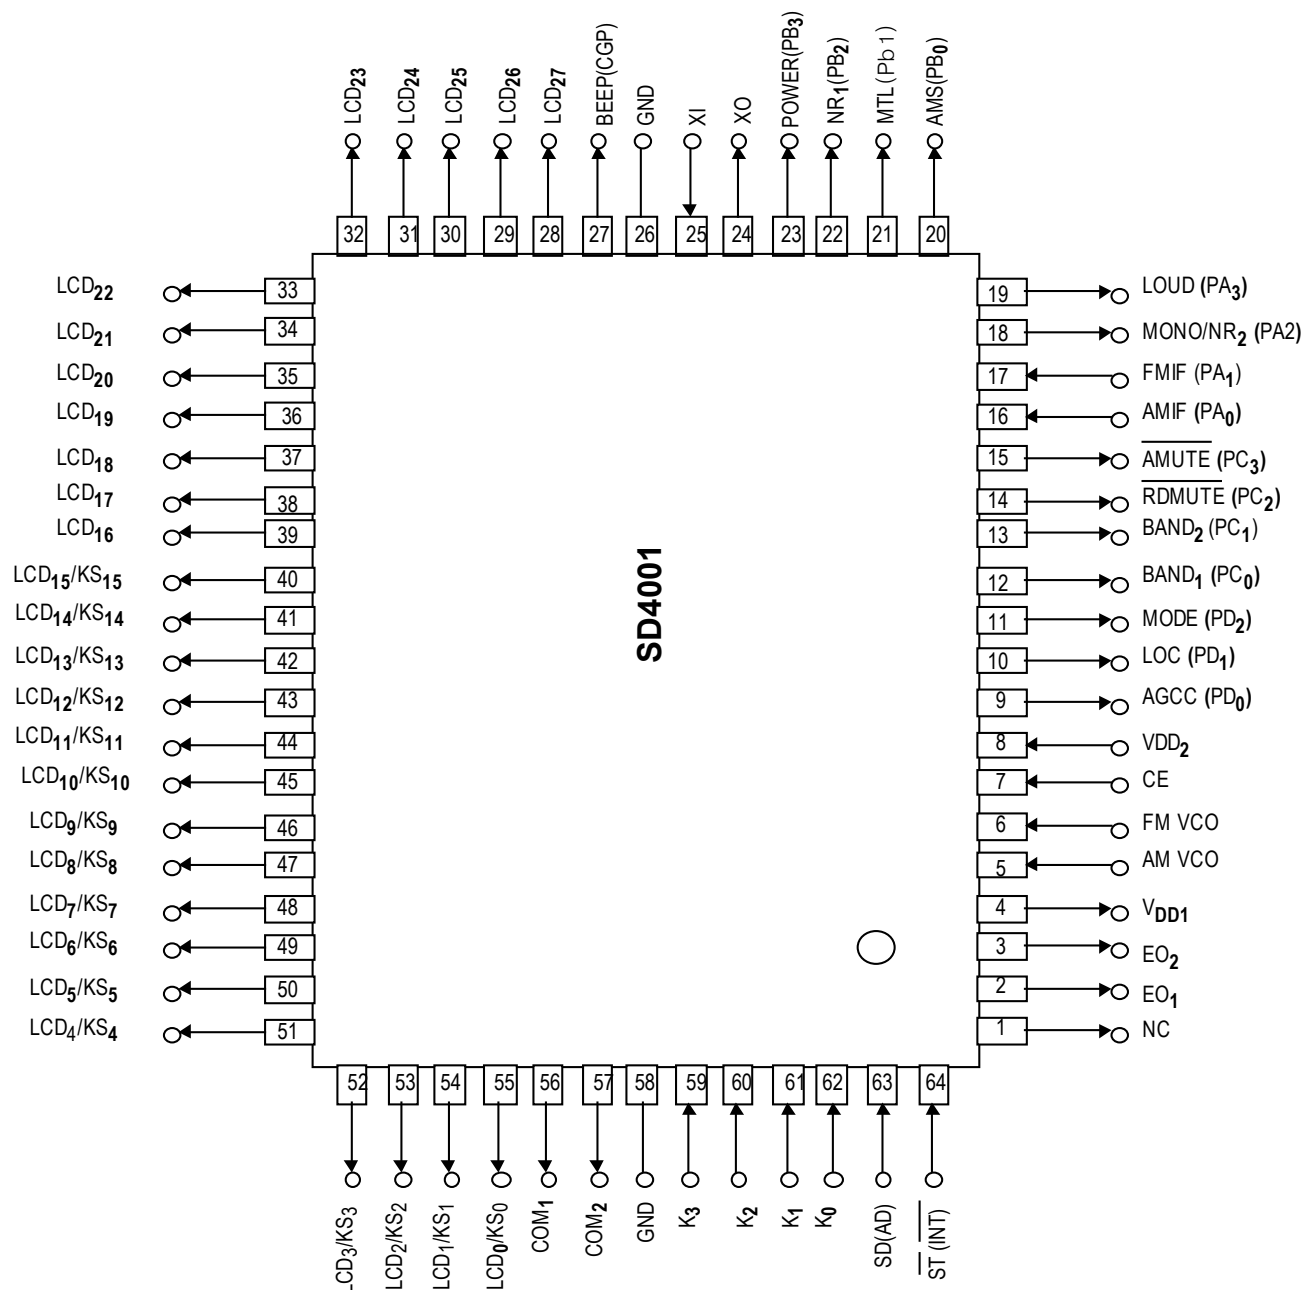


## □ CONTENTS

<b>1. PIN DESCRIPTION</b>	<b>6</b>
<b>2. KEY MATRIX</b>	<b>15</b>
2.1 KEY MATRIX LAYOUT	15
2.2 SWITCH CONNECTION	15
2.3 KEY MATRIX CONNECTION	16
2.4 DESCRIPTION OF KEY MATRIX	17
<b>3. MODE TRANSITION</b>	<b>51</b>
3.1 WHEN THE INITIALIZED DIODE RDON=1(RADIO ON/OFF BY CE PIN)	51
3.2 RADIO ON/OFF BY RDSET SWITCH	53
3.3 DESCRIPTION OF EACH MODE	55
3.4 RADIO ON/OFF BY <span style="border: 1px solid black; padding: 0 2px;">POWER</span> KEY	56
<b>4. DISPLAY</b>	<b>57</b>
4.1 LCD PANEL	57
4.2 DISPLAY TYPE	57
4.3 SEGMENT LINES	57
4.4 COMMON LINES	57
4.5 LCD ASSIGNMENT TABLE	58
4.6 DESCRIPTION OF DISPLAYS	59
<b>5. RADIO MUTE OUTPUT TIMING (RDMUTE)</b>	<b>60</b>
5.1 RADIO MUTE (RDMUTE PIN) OUTPUT TIMING CHARTS	60
5.2 RADIO MUTE (RDMUTE PIN) AND AUDIO MUTE (AMUTE PIN) OUTPUT TIMING CHARTS	65
<b>6. PIN I/O CIRCUITS</b>	<b>66</b>
<b>7. APPLICATION CIRCUITS</b>	<b>67</b>
7.1 POWER ON/OFF (NO CLOCK DISPLAY AT POWER OFF) BY ALTERNATE SWITCH	67
7.2 POWER ON/OFF (CLOCK DISPLAY AT POWER OFF) BY ALTERNATE SWITCH	68
7.3 POWER ON/OFF (CLOCK DISPLAY AT POWER OFF) BY MOMENTARY SWITCH	69

## 1. Pin Description

Pin No.	Symbol	Function	Description	Output Type
1	NC	No connection	This pin is not connected to the internal chip. Therefore, leave it open or connect it to GND, VDD, etc.	
2 3	EO <sub>1</sub> EO <sub>2</sub>	Error out	<p>PLL (Phase Locked Loop) error output pins.</p> <p>When the frequency obtained by dividing the local oscillation frequency. (VCO output) is higher than the reference frequency. High level is output from these pins. When it is lower than the reference frequency.</p> <p>Low level is output from these pins. When the two frequencies are the same, these pins are floated.</p> <p>This output is input to an external LPF (Low Pass Filter) and is applied to a varactor diode through the LPF. EO1 and EO2 output the same waveform so that the pin to be used can be freely selected. When the radio is OFF, these pins are floated.</p>	CMOS 3-state
4 8	V <sub>DD1</sub> V <sub>DD2</sub>	Power supply input	<p>Device power supply input pin.</p> <p>This pin supplies 5V <math>\pm</math> 10% power voltage during device operation (radio, tape, and CD modes). When the diode matrix NOCLK switch is 1 (shorted by diode), when the CE pin (pin 7) is made Low level, this pin drops to 2.5V and data hold is enabled. When is a voltage of 0 <math>\rightarrow</math> 4.5V is supplied to this pin, the data is initialized.</p> <p>Supply 0 <math>\rightarrow</math> 4.5V to this pin within 500 ms.</p> <p>Always connect pins 4 and 8 to the same potential. V<sub>DD1</sub>(pin 4) is the analog system (PLL, A/D converter, INT, CE) power supply and V<sub>DD2</sub>(pin 8) is the digital system (CPU, LCD driver, IF counter) power supply.</p>	
5	AM	AM local Oscillation input	<p>The AM (MW and LW band) local oscillation output (VCO output) is input to this pin. When the radio is turned on and the MW or LW band is received, this pin becomes active. Otherwise, it is pulled down internally.</p> <p>The input amplitude is 0.3 V<sub>p-p</sub> MIN.</p> <p>Since there is an on-chip AC amplifier, block the DC component with a capacitor.</p>	Input
6	FM	FM local oscillation input	<p>The FM local oscillation output (VCO output) is input to this pin.</p> <p>When the radio is turned on and the FM band is received, this pin becomes active. Otherwise, it is pulled down internally.</p> <p>The input amplitude is 0.3 V<sub>p-p</sub> MIN.</p> <p>Since there is an on-chip AC amplifier, block the DC component of the input signal with a capacitor.</p>	Input

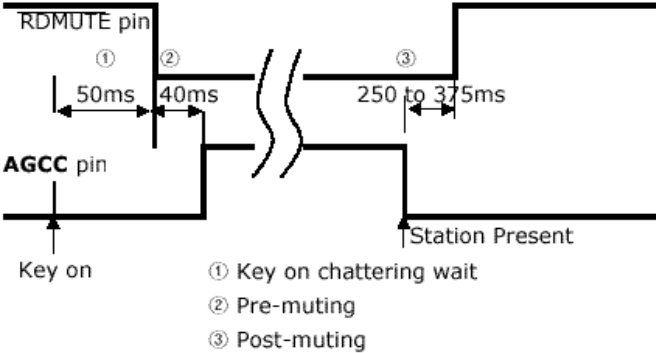Pin No.	Symbol	Function	Description	Output Type
7	CE	Chip enable	<p>Device select signal input pin.</p> <p>When the device is operated normally (radio, tape, CD, clock display, etc.), High level is input and when the device is not used, Low level is input.</p> <p>However, High and Low levels of 134<math>\mu</math>s or less are not accepted.</p> <p>When this pin is Low level, the radio, tape, CD and display are turned off and the device enters the data hold state.</p> <p>At this time, data hold at low consumption current (10uA or less) is possible by setting the NOCLK switch of the diode matrix to be described later to 1 (shorted by diode, no-clock mode.)</p>	Input
9	AGCC	AGC cut output	<p>Radio mode AGC(AUTOMATIC GAIN CONTROL) cut signal output pin.</p> <p>During auto tuning, the High level shown below is output.</p>  <p>① Key on chattering wait ② Pre-muting ③ Post-muting</p>	CMOS pushpull
10	LOC	Local output	<p>This pin works as a LOCAL signal output pin when in the radio.</p> <p>The output is inverted each time <b>LOC</b> key is pressed. When the LOCAL state is enable with <b>LOC</b> key, the "LOC" indicator on the LCD pannel turns on, with an output high on this pin.</p> <p>The local state can be set in common on FM, VF, MW and LW bands.</p> <p>This pin low at power-on time.</p>	CMOS pushpull

Pin No.	Symbol	Function	Description	Output Type																					
11	MODE	Mode signal Output	<p>Mode switching signal output pin. Its output in each mode is shown below.</p> <table><tr><th>MODE</th><th>MODE</th></tr><tr><td>CE=Low</td><td>0</td></tr><tr><td>CE=High; radio, tape and CD OFF</td><td>0</td></tr><tr><td>Radio Mode</td><td>1</td></tr><tr><td>Tape Mode</td><td>0</td></tr><tr><td>CD Mode</td><td>0</td></tr><tr><td>Tape DK standby CD DK standby DK On</td><td>1</td></tr><tr><td>Radio monitor mode</td><td>1</td></tr></table> <p>(0:Low level, 1:High level)</p> <p>That is, when the PLL is operated, High level is output from this pin. Therefore, use it to turn the tuner power on and off, etc.</p>	MODE	MODE	CE=Low	0	CE=High; radio, tape and CD OFF	0	Radio Mode	1	Tape Mode	0	CD Mode	0	Tape DK standby CD DK standby DK On	1	Radio monitor mode	1	CMOS pushpull					
MODE	MODE																								
CE=Low	0																								
CE=High; radio, tape and CD OFF	0																								
Radio Mode	1																								
Tape Mode	0																								
CD Mode	0																								
Tape DK standby CD DK standby DK On	1																								
Radio monitor mode	1																								
12 13	BAND <sub>1</sub> , BAND <sub>2</sub>	Band Switching Signal Output	<p>Radio mode band switching signal output pin. Its operation is described below.</p> <p>- Radio mode When the receiving band is switched by band switching key, the following is output on each band:</p> <p>- DK standby mode</p> <table><tr><th>Pin BAND</th><th>BAND1</th><th>BAND2</th></tr><tr><td>MW</td><td>0</td><td>0</td></tr><tr><td>LW</td><td>0</td><td>1</td></tr><tr><td>FM</td><td>1</td><td>0</td></tr><tr><td>VF</td><td>1</td><td>1</td></tr></table> <p>(0:Low Level, 1:High Level)</p> <p>- DK standby mode - DK ON mode</p> <table><tr><th>Pin BAND</th><th>BAND1</th><th>BAND2 /OPT</th></tr><tr><td>VF</td><td>1</td><td>1</td></tr></table> <p>- Radio monitor mode Same as radio mode. - Tape mode - CD mode Low level output</p>	Pin BAND	BAND1	BAND2	MW	0	0	LW	0	1	FM	1	0	VF	1	1	Pin BAND	BAND1	BAND2 /OPT	VF	1	1	CMOS pushpull
Pin BAND	BAND1	BAND2																							
MW	0	0																							
LW	0	1																							
FM	1	0																							
VF	1	1																							
Pin BAND	BAND1	BAND2 /OPT																							
VF	1	1																							



Pin No.	Symbol	Function	Description	Output Type
14	<u>RDMUTE</u>	Radio mute output	<p>Radio mute signal output pin. This pin operates as follows:</p> <ul style="list-style-type: none"> <li>- Radio mode Low level is output at radio ON/OFF, band switching, and receiving frequency switching.</li> <li>- Tape and CD modes High level or Low level can be selected by MUTESEL switch of the diode matrix to be described later. However, when using the DK standby or radio monitor function, set the MUTESEL switch to 0 and select low level output.</li> </ul> <p>For more information, see "Mute Output Timing Chart".</p>	CMOS pushpull
15	<u>AMUTE</u>	Audio mute output	<p>Tape and CD mute signal output pin at DK ON and radio monitor ON.</p> <p>In the radio mode, Low level is output and in the tape and CD modes, High level is output. When DK is turned on during DK standby and in the radio monitor mode, Low level is output.</p> <p>For more information, see "Mute Output Timing Chart".</p>	CMOS pushpull

Pin No.	Symbol	Function	Description	Output Type																									
16	AM IF	AM intermediate frequency input	<p>AM (MW and LW bands) intermediate frequency (IF) input pin.</p> <p>The input amplitude is 0.1 V<sub>p-p</sub>. Since there is an on-chip AC amplifier, block the DC component of the input signal with a capacitor. This pin is valid when the initialized diode matrix DISAMIF switch is 0.</p> <p>This pin is used for detecting the presence of a broadcast station during MW and LW band autotuning. The input frequency ranges and input conditions for determining the presence of a broadcast station are shown below.</p> <table><tr><th rowspan="2">Area</th><th>Item</th><th>Input Freq. Range①[kHz]</th><th>Input Freq. Range②[kHz]</th></tr><tr><th>Band</th><th></th><th></th></tr><tr><td rowspan="2">Europe1</td><td>MW</td><td>450 ± 5</td><td>450 ± 2</td></tr><tr><td>LW</td><td>450 ± 5</td><td>450 ± 0.5</td></tr><tr><td rowspan="2">Europe2</td><td>MW</td><td>459 ± 5</td><td>459 ± 2</td></tr><tr><td>LW</td><td>459 ± 5</td><td>459 ± 0.5</td></tr><tr><td>Others</td><td>MW</td><td>450 ± 5</td><td>450 ± 0.5</td></tr></table> <p>Input frequency range ① is the frequency that must be input within 20 ms after the PLL is locked.</p> <p>Input frequency range ② is the frequency that must be input within 40 ms after ① was input.</p> <p>When both input frequency ranges ① and ② are satisfied, a broadcast station is judged to be present and autotuning stops.</p>	Area	Item	Input Freq. Range①[kHz]	Input Freq. Range②[kHz]	Band			Europe1	MW	450 ± 5	450 ± 2	LW	450 ± 5	450 ± 0.5	Europe2	MW	459 ± 5	459 ± 2	LW	459 ± 5	459 ± 0.5	Others	MW	450 ± 5	450 ± 0.5	Input
Area	Item	Input Freq. Range①[kHz]	Input Freq. Range②[kHz]																										
	Band																												
Europe1	MW	450 ± 5	450 ± 2																										
	LW	450 ± 5	450 ± 0.5																										
Europe2	MW	459 ± 5	459 ± 2																										
	LW	459 ± 5	459 ± 0.5																										
Others	MW	450 ± 5	450 ± 0.5																										
17	FM IF	FM intermediate frequency input	<p>FM band intermediate frequency (IF) input.</p> <p>The input amplitude is 0.1 V<sub>p-p</sub>. Since there is an AC amplifier on the chip, block the DC component of the input signal with a capacitor. This pin is valid when the initialized diode matrix switch ENFMIF is 1.</p> <p>This pin is used for detecting the presence of a broadcast station during FM band auto tuning. The input frequency ranges and input conditions for determining the presence of a broadcast station are shown below.</p> <table><tr><th>Area</th><th>Item</th><th>Input Frequency Range①</th><th>Input Frequency Range②</th></tr><tr><td>All Area</td><td></td><td>10.7MHz ± 50kHz</td><td>10.7MHz ± 12.5kHz</td></tr></table> <p>Input frequency range ① is the frequency that must be input within 20 ms after the PLL is locked.</p> <p>Input frequency range ② is the frequency that must be input within 40 ms after ① was input.</p> <p>When both input frequency ranges ① and ② are satisfied, a broadcast station is judged to be present and auto tuning stops.</p>	Area	Item	Input Frequency Range①	Input Frequency Range②	All Area		10.7MHz ± 50kHz	10.7MHz ± 12.5kHz	Input																	
Area	Item	Input Frequency Range①	Input Frequency Range②																										
All Area		10.7MHz ± 50kHz	10.7MHz ± 12.5kHz																										

Pin No.	Symbol	Function	Description	Output Type
18	MONO/NR <sub>2</sub>	Monaural and noise reduction output	<p>In the radio mode. this pin operates as the MONO signal output pin and in the tape mode, this pin operates as the NOISE REDUCTION signal output pin.</p> <p>- Radio mode Each time the <input type="button" value="MONO"/> key is pressed on the FM and VF bands, the output is inverted. When the device is set to the MONO state by <input type="button" value="MONO"/> key. the LCD panel "MONO" display lights and high level is output from this pin. On the MW and LW bands, this pin becomes low. When the power is turned on, this pin becomes low.</p> <p>-Tape mode This pin is valid when the diode matrix ENNR<sub>2</sub> switch to be described later is 1. When NOISE REDUCTION NR<sub>2</sub> is selected by pressing the <input type="button" value="NR"/> key or NOISE REDUCTION function key (selected by diode matrix), high level is output. At this time. the LCD panel "NR<sub>2</sub>" display lights. When the power is turned on. this pin becomes low.</p>	CMOS pushpull
19	LOUD	LOUD output	<p>LOUDNESS signal output pin, In the radio, tape and CD modes, the output is inverted each time the <input type="button" value="LOUD"/> key is pressed. When the LOUDNESS state is selected by <input type="button" value="LOUD"/> key, the LCD panel "LOUD" display lights and high level is output from this pin. When the power is turned on, this pin becomes low.</p>	CMOS pushpull
20	AMS	AMS signal output	<p>Tape mode AMS(AUTO MUSIC SEARCH) control signal output pin. Its output is inverted each time the <input type="button" value="AMS"/> key is passed. High level is output while the LCD panel "AMS" display is lit.</p>	CMOS pushpull

Pin No.	Symbol	Funtion	Description	Output Type
21	MTL	Metal output	<p>Tape mode metal signal output pin.</p> <p>Its output is inverted each time the <input type="text" value="MTL"/> key and METAL function key (selected by diode matrix) is pressed.</p> <p>When the METAL state is selected with these keys, the LCD panel" MTL"display lights and high level is output from this pin.</p> <p>When the power is turned on, this pin becomes low.</p>	CMOS Pushpull
22	NR <sub>1</sub>	Noise reduction output	<p>Tape mode noise reduction (NR) signal output pin,</p> <p>When NR<sub>1</sub> is selected by the <input type="text" value="NR"/> key or NOISE REDUCTION function key (selected by diode matrix), the LCD panel "NR<sub>1</sub>" display lights and high level is output from this pin.</p>	CMOS Pushpull
23	POWER	Power output	<p>When the CE pin is high level, the output of this pin is inverted each time the <input type="text" value="POWER"/> key is pressed.</p> <p>When the power is turned on, low level is output.</p> <p>This pin can be used to turn the set power on and off, etc.</p> <p>See "Application Circuits".</p>	CMOS Pushpull
24 25	XO XI	Crystal oscillator	<p>Crystal oscillator connection pin. It connects to a 4.5MHz crystal oscillator.</p> <p>When the clock function is used, the accuracy of the clock is effected by the oscillation frequency accuracy only.</p> <p>Adjust the oscillation frequency while observing the LCD oscillation waveform and PLL local oscillation frequency.</p>	CMOS (XO) Input(XI)
26 58	GND <sub>2</sub> GND <sub>1</sub>	Ground	<p>Device ground pins.</p> <p>These pins connect to the internal chip, Therefore one of these two should be a ground.( Not all these two should not be.)</p>	-

Pin No.	Symbol	Function	Description	Output Type
27	BEEP	Beep output	<p>Beep output pin when momentary key pressed. A 2.25 kHz and 50% duty square wave is output for approximately 40 ms. This time is equal to the premuting time.</p> <p>When a momentary key is pressed and the state of the LCD panel display or output port is changed (valid key) and at the end of 5 seconds hold during preset memory scan and scan operations, a beep is output.</p> <p>To disable the beep. float (leave open) this pin.</p> <p>The beep output is also used at SK alarm at DK standby.</p>	CMOS Pushpull
28 to 39  40 to 55	LCD <sub>27</sub> to LCD <sub>16</sub>  LCD <sub>15</sub> /KS <sub>15</sub> to LCD <sub>0</sub> /KS <sub>0</sub>	LCD segment and key source output	<p>LCD panel segment signal output (pins 28 to 55) and key matrix key source signal output (pins 40 to 55) pins.</p> <p>56-dot display is performed at the LCD panel by matrix with the COM<sub>1</sub> pin(pin 56) and COM<sub>2</sub> pin (pin 57).</p> <p>Since LCD<sub>15</sub> / KS<sub>15</sub>(pin 40) to LCD<sub>0</sub>/ KS<sub>0</sub>(pin 55) share the key source signal and LCD segment signal, to use them as key source signals, a reverse current prevention diode is necessary. For the connection method, see "Key Matrix Connection" and "Application Circuits".</p>	CMOS Pushpull
56 57	COM <sub>1</sub> COM <sub>2</sub>	LCD common Signal output	<p>Common signal output to LCD panel.</p> <p>56-dot display is performed at the LCD panel by matrix with LCD<sub>27</sub>(pin 28) to LCD<sub>0</sub>/KS<sub>0</sub>(pin 55)</p>	CMOS Pushpull
59 to 62	K <sub>3</sub> to K <sub>0</sub>	Key return signal input	<p>Key matrix key return signal input pin.</p> <p>Since the key source signal output is shared with the LCD segment signal, do not connect a pull-down resistor to this pin.</p>	CMOS Pushpull

Pin No.	Symbol	Function	Description	Output Type																									
63	SD	SD input	Autotuning SD (Station Detector) signal input pin. When the voltage shown below is applied to this pin during the seek operation, a broadcast station is judged to be present.	Input																									
			<table><tr><th>BAND</th><th>LOCAL Mode</th><th>SD Voltage</th><th>VDD=5V</th></tr><tr><td rowspan="2">FM</td><td>LOCAL</td><td>28.5/64 X V<sub>DDmin</sub></td><td>2.227V</td></tr><tr><td>DX</td><td>12.5/64 X V<sub>DDmin</sub></td><td>0.977V</td></tr><tr><td>MW</td><td>LOCAL</td><td>15.5/64 X V<sub>DDmin</sub></td><td>1.211V</td></tr><tr><td>LW</td><td>DX</td><td>12.5/64 X V<sub>DDmin</sub></td><td>0.977V</td></tr></table>		BAND	LOCAL Mode	SD Voltage	VDD=5V	FM	LOCAL	28.5/64 X V <sub>DDmin</sub>	2.227V	DX	12.5/64 X V <sub>DDmin</sub>	0.977V	MW	LOCAL	15.5/64 X V <sub>DDmin</sub>	1.211V	LW	DX	12.5/64 X V <sub>DDmin</sub>	0.977V						
			BAND		LOCAL Mode	SD Voltage	VDD=5V																						
			FM		LOCAL	28.5/64 X V <sub>DDmin</sub>	2.227V																						
					DX	12.5/64 X V <sub>DDmin</sub>	0.977V																						
			MW		LOCAL	15.5/64 X V <sub>DDmin</sub>	1.211V																						
			LW		DX	12.5/64 X V <sub>DDmin</sub>	0.977V																						
			In the auto preset memory mode, search is performed twice in the LOCAL mode and once in the DX mode. The voltage to determine the presence of a broadcast station at this time is shown below.																										
			<table><tr><th>BAND</th><th>LOCAL Mode</th><th>SD Voltage</th><th>V<sub>DD</sub>=5V</th></tr><tr><td rowspan="3">FM</td><td>LOCAL (1st time)</td><td>44.5/64 X V<sub>DDmin</sub></td><td>3.447V</td></tr><tr><td>LOCAL (2nd time)</td><td>28.5/64 X V<sub>DDmin</sub></td><td>2.227V</td></tr><tr><td>DX (3rd time)</td><td>12.5/64 X V<sub>DDmin</sub></td><td>0.977V</td></tr><tr><td rowspan="2">MW</td><td>LOCAL (1st time)</td><td>18.5/64 X V<sub>DDmin</sub></td><td>1.445V</td></tr><tr><td rowspan="2">LW</td><td>LOCAL (2nd time)</td><td>15.5/64 X V<sub>DDmin</sub></td><td>1.211V</td></tr><tr><td>DX (3rd time)</td><td>12.5/64 X V<sub>DDmin</sub></td><td>0.977V</td></tr></table>		BAND	LOCAL Mode	SD Voltage	V <sub>DD</sub> =5V	FM	LOCAL (1st time)	44.5/64 X V <sub>DDmin</sub>	3.447V	LOCAL (2nd time)	28.5/64 X V <sub>DDmin</sub>	2.227V	DX (3rd time)	12.5/64 X V <sub>DDmin</sub>	0.977V	MW	LOCAL (1st time)	18.5/64 X V <sub>DDmin</sub>	1.445V	LW	LOCAL (2nd time)	15.5/64 X V <sub>DDmin</sub>	1.211V	DX (3rd time)	12.5/64 X V <sub>DDmin</sub>	0.977V
			BAND		LOCAL Mode	SD Voltage	V <sub>DD</sub> =5V																						
FM	LOCAL (1st time)	44.5/64 X V <sub>DDmin</sub>	3.447V																										
	LOCAL (2nd time)	28.5/64 X V <sub>DDmin</sub>	2.227V																										
	DX (3rd time)	12.5/64 X V <sub>DDmin</sub>	0.977V																										
MW	LOCAL (1st time)	18.5/64 X V <sub>DDmin</sub>	1.445V																										
	LW	LOCAL (2nd time)	15.5/64 X V <sub>DDmin</sub>	1.211V																									
DX (3rd time)		12.5/64 X V <sub>DDmin</sub>	0.977V																										
When using the IF count, a broadcast station is detected when a broadcast station is judged to be present by both IF and SD pins																													
64	— ST	Stereo signal input	Radio mode "ST" (STEREO) display input pin. When low level is input to this pin, the LCD panel "ST" display lights. This pin is valid only on the FM and VF bands, In the MONO mode, "ST" is not displayed.	Input																									


## 2. Key Matrix


### 2.1 Key Matrix Layout

Input Pin \ Output Pin	K <sub>3</sub> (59)	K <sub>2</sub> (60)	K <sub>1</sub> (61)	K <sub>0</sub> (62)
LCD <sub>15</sub> /KS <sub>15</sub> (40)	M1(TP1)	M2(TP2)	M3(TP3)	M4
LCD <sub>14</sub> /KS <sub>14</sub> (41)	M5	M6	VF	VF
LCD <sub>13</sub> /KS <sub>13</sub> (42)	SEEK DWN	SEEK UP	SEEK DWN	SEEK UP
LCD <sub>12</sub> /KS <sub>12</sub> (43)	BAND	-	-	-
LCD <sub>11</sub> /KS <sub>11</sub> (44)	ME(DISP)	MAN DWN	MAN UP	PSCAN AMEMO
LCD <sub>10</sub> /KS <sub>10</sub> (45)	LOUD	LOC(TP4)	MONO(TP5)	-
LCD <sub>9</sub> /KS <sub>9</sub> (46)	AMS	NR	MTL	RDMONI
LCD <sub>8</sub> /KS <sub>8</sub> (47)	-	-	-	DISP
LCD <sub>7</sub> /KS <sub>7</sub> (48)	CD SET	TP SET	RD SET	POWER
LCD <sub>6</sub> /KS <sub>6</sub> (49)	SK	DK	FF	RL
LCD <sub>5</sub> /KS <sub>5</sub> (50)	AUTO500	MUTESEL	AUTOLOC	ENNR2
LCD <sub>4</sub> /KS <sub>4</sub> (51)	KAMS	KNR	KMTL	ENTPK
LCD <sub>3</sub> /KS <sub>3</sub> (52)	NOCLK	CLK DISP	FLASH	NOCLK
LCD <sub>2</sub> /KS <sub>2</sub> (53)	ENFMIF	DISAMIF	PRI02	DISAMEMO
LCD <sub>1</sub> /KS <sub>1</sub> (54)	DISFM3	ENMW2	DISLW	M2S
LCD <sub>0</sub> /KS <sub>0</sub> (55)	AREA3	AREA2	AREA1	RDON


( ) : Pin No.


### 2.2 Switch Connection

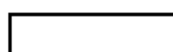 : Momentary switch


 : Alternate or transistor switch

 : Diode matrix

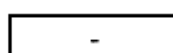 : Open

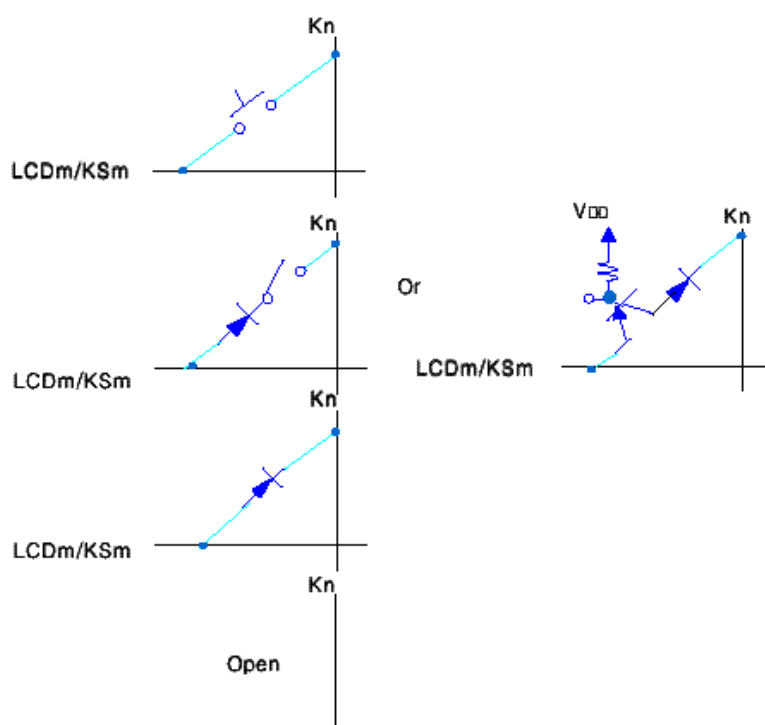

## 2.3 KEY MATRIX CONNECTOR

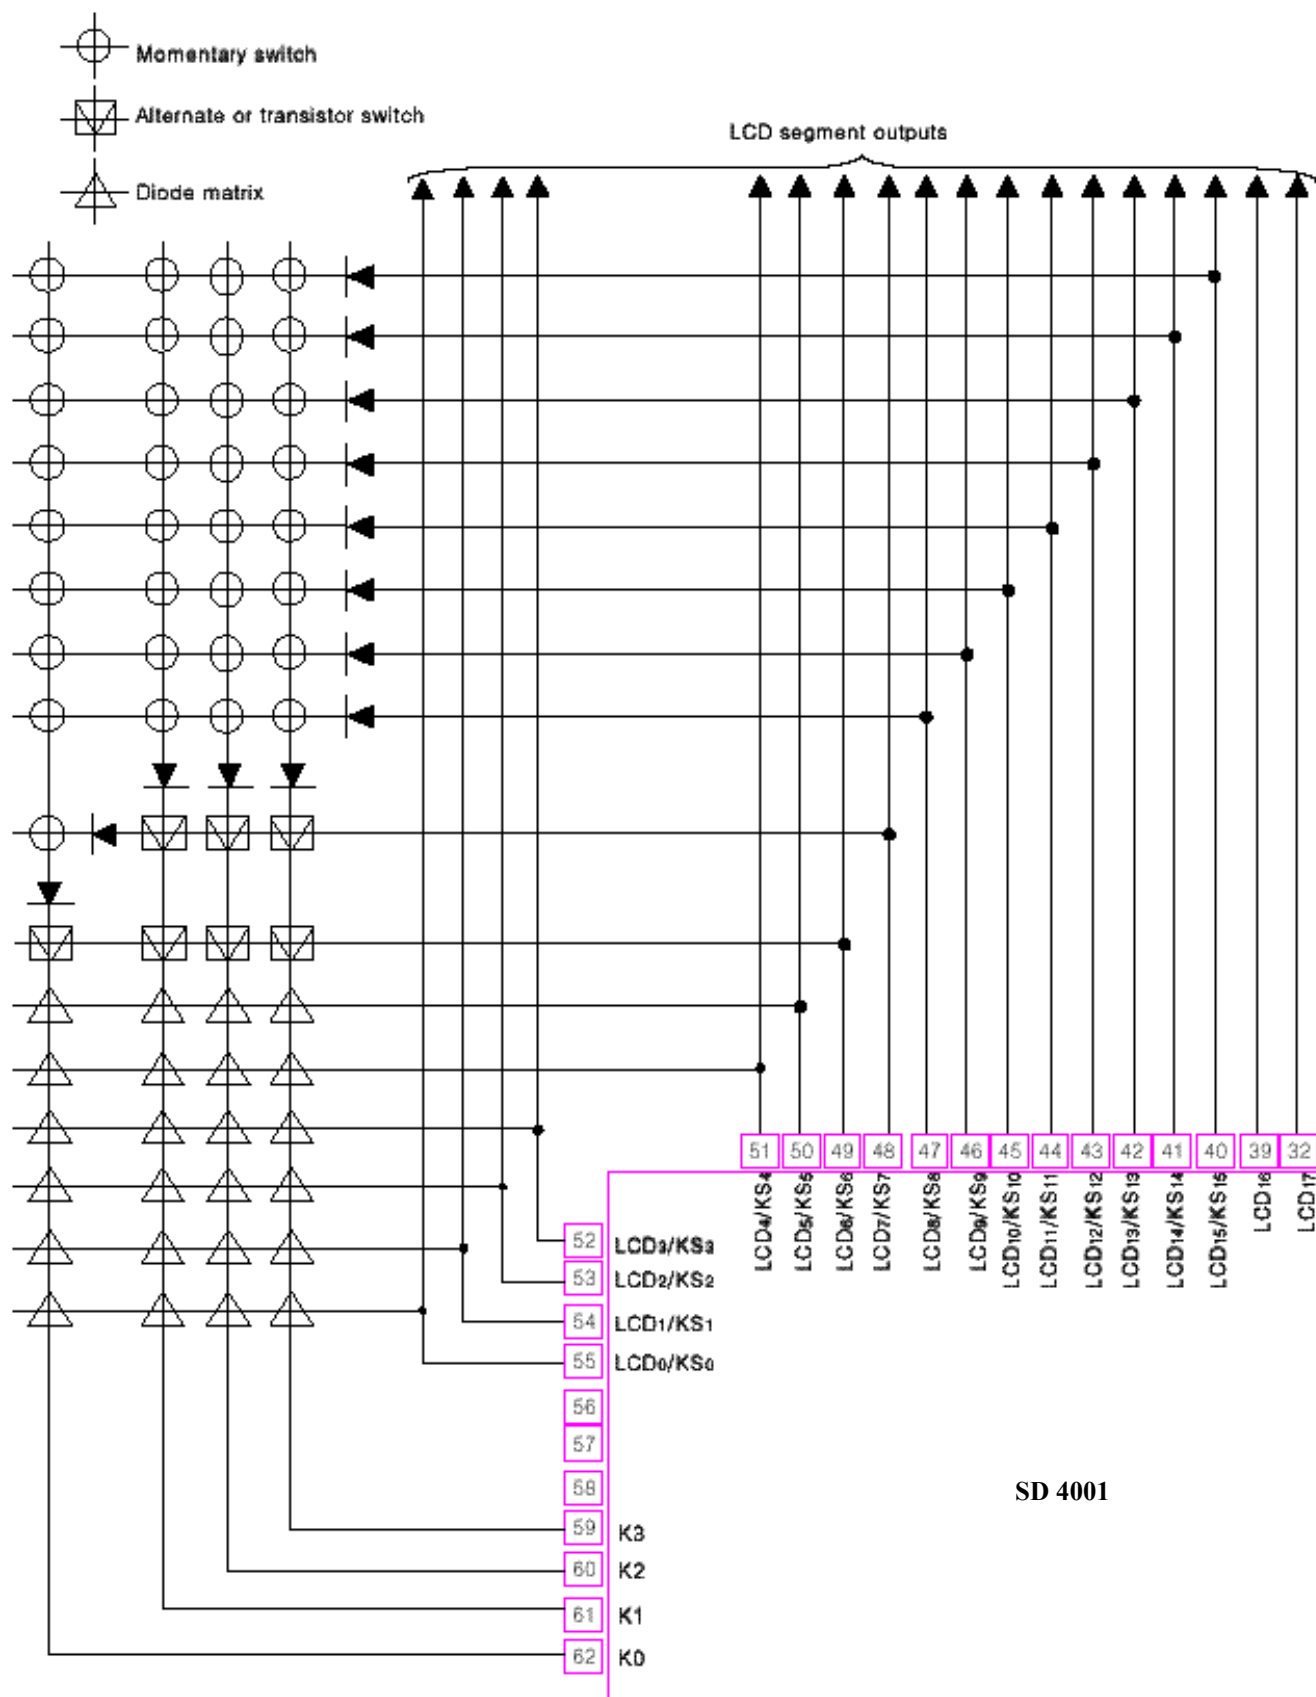



## 2.4 Discription of Key Matrix

## 2.4.1 Momentary Switch

Symbol	Function								
	<p>In the radio mode, these keys are used to call and write preset memory. In the tape mode, these are used as tape function keys by initialized diode (ENTPK, KAMS, KNR, KMTL).</p> <p>- Radio mode</p> <p>Preset memory call and write keys.</p> <p>One key can memorize the FM1, FM2, FM3, VF, MW1, MW2 and LW bands independently (max. 6 bands).</p> <p>The following operations are performed according to the state of M2S of the initialized diodes :</p>								
	<table border="1"> <thead> <tr> <th>M2S</th><th>Description</th></tr> </thead> <tbody> <tr> <td>W</td><td> <p>The device is placed into the 5 seconds preset memory write mode by pressing the <b>ME</b> key during frequency display. When one of the keys <b>M1(TP1)</b> to <b>M6</b> is pressed during this 5 seconds, the current receiving frequency is written to the preset memory corresponding to the pressed key. When the <b>ME</b> key is held down, writing is not performed. During writing, radio muting is not output.</p> <p>Example</p> </td></tr> <tr> <td>0</td><td> <p>When the same preset memory key is pressed while the current preset memory contents are being received, the same operation is performed.</p> </td></tr> <tr> <td>CALL</td><td> <p>In the radio mode, when the device is in the memory unwritable state, when one of the <b>M1(TP1)</b> to <b>M6</b> keys is pressed, the preset memory contents corresponding to the pressed key can be called.</p> <p>Example</p> <p>When the same preset memory key is pressed while the current preset memory contents are being received, no operation is performed. However, if the clock is being displayed. BEEP is output and the display switches to frequency display. Radio muting is not output.</p> </td></tr> </tbody> </table>	M2S	Description	W	<p>The device is placed into the 5 seconds preset memory write mode by pressing the <b>ME</b> key during frequency display. When one of the keys <b>M1(TP1)</b> to <b>M6</b> is pressed during this 5 seconds, the current receiving frequency is written to the preset memory corresponding to the pressed key. When the <b>ME</b> key is held down, writing is not performed. During writing, radio muting is not output.</p> <p>Example</p>	0	<p>When the same preset memory key is pressed while the current preset memory contents are being received, the same operation is performed.</p>	CALL	<p>In the radio mode, when the device is in the memory unwritable state, when one of the <b>M1(TP1)</b> to <b>M6</b> keys is pressed, the preset memory contents corresponding to the pressed key can be called.</p> <p>Example</p> <p>When the same preset memory key is pressed while the current preset memory contents are being received, no operation is performed. However, if the clock is being displayed. BEEP is output and the display switches to frequency display. Radio muting is not output.</p>
M2S	Description								
W	<p>The device is placed into the 5 seconds preset memory write mode by pressing the <b>ME</b> key during frequency display. When one of the keys <b>M1(TP1)</b> to <b>M6</b> is pressed during this 5 seconds, the current receiving frequency is written to the preset memory corresponding to the pressed key. When the <b>ME</b> key is held down, writing is not performed. During writing, radio muting is not output.</p> <p>Example</p>								
0	<p>When the same preset memory key is pressed while the current preset memory contents are being received, the same operation is performed.</p>								
CALL	<p>In the radio mode, when the device is in the memory unwritable state, when one of the <b>M1(TP1)</b> to <b>M6</b> keys is pressed, the preset memory contents corresponding to the pressed key can be called.</p> <p>Example</p> <p>When the same preset memory key is pressed while the current preset memory contents are being received, no operation is performed. However, if the clock is being displayed. BEEP is output and the display switches to frequency display. Radio muting is not output.</p>								




Symbol	Function
<div>M1(TP1)</div> <div>M2(TP2)</div> <div>M3(TP3)</div> <div>M4</div> <div>M5</div> <div>M6</div>	<div> <div>M2S</div> <div>Description</div> </div> <p>When one of the key <b>M1(TP1)</b> to <b>M6</b> is pressed for more than 2 seconds, the preset memory corresponding to the pressed key is written. At the end of writing to the preset memory, radio muting is output as acknowledgment.</p> <p>When the same preset memory key is pressed while the current preset memory contents are being received, nothing is performed. However, if the clock is being displayed, Beep is output when the key is released or after 2 seconds and the display switches to frequency display. At this time radio muting is not output. If a key is pressed during the seek operation, the call operation is immediately performed. (2 second count is ignored).</p>
	<div> <div>1</div> <div>CALL</div> </div> <p>When a <b>M1(TP1)</b> to <b>M6</b> key is pressed and released within 2 seconds, the preset memory contents at the time the key was released are called.</p> <p>When the same preset memory key is pressed while the current preset memory contents are being received, nothing is performed. However, if the clock is being displayed, Beep is output and the display switches to frequency display. Radio muting is not output. If a key is pressed during the seek operation, the call operation is immediately performed.</p>

Symbol	Function							
<div>M1(TP1)</div> <div>M2(TP2)</div> <div>M3(TP3)</div> <div>M4</div> <div>M5</div> <div>M6</div>	When the power is turned on, the frequency shown below are written to M1 to M6 to facilitate set adjustment.							
	<div>Area</div> <div>Memory Band</div>		M1	M2	M3	M4	M5	M6
	Europe 1 Europe 2	FM1	87.5	87.7	92.3	96.3	105.9	87.5
		MW1	522	603	954	1386	522	522
		MW2	522	621	1098	1530	522	522
		LW	144	155	208	256	144	144
	U.S.A 1 U.S.A 2 U.S.A 3	FM1	87.5	87.9	97.1	105.1	87.5	87.5
		MW1	530	620	1010	1490	530	530
	Australia, Middle East	FM1	87.5	87.9	97.1	105.1	87.5	87.5
		MW1	531	612	963	1395	531	531
	Japan	FM1	76	76.4	85.6	76	76	76
		MW1	522	603	954	1386	522	522
	Central and South America	FM1	87.5	87.9	97.1	105.1	87.5	87.5
		MW1	520	565	760	1000	1400	520
	The lowest frequency of each area is M1 to M6 of the FM2, FM3, VF and MW2 bands of other than Europe 1 and 2.							
- Tape mode								
These keys can be used as tape function keys by means of initialized diode matrix switches ENTPK, KAMS and KMTL								
For the keys that can be used, see the diode matrix. For a description of each key operation, see the <div>AMS</div> , <div>NR</div> and <div>MTL</div> key items.								

<div>VF</div>	<p>VF(traffic information) broadcast station search key. Its operation is described below.</p> <p>When this key is pressed in the radio mode (FM, MW or LW band), the LCD panel "VF" display and Band2 pin output are inverted.</p> <p>When this key is pressed, the VF band is selected and 375 to 500 ms later, whether or not there is a broadcast station(IF count and SD check) and SK signal are detected. If no VF broadcast station is judged not to be present (The presence of a VF broadcast station is determined by the an IF count, SD signal and SK signal),autotuning starts from that frequency.</p> <p>When the first broadcast station is detected, that frequency is held until the autotuning key is pressed thereafter, even when there is no SK signal.</p> <p>When the IF count and SD check are judged to be present, the autotuning operation is the same as normal autotuning, except that the SK signal is detected after 375 to 500 ms.</p> <p>Autotuning(seek up) is performed automatically only when VF band is selected by <div>VF</div> key for the first time. Autotuning is not performed automatically even if another tuning key (other than autotuning) is pressed.</p>
---------------	--

Symbol	Function
VF	<p>To reset the VF band, press the <b>VF</b> key or <b>BAND</b> key. The VF band has 6 independent memories. The last channel is also independent. When the device is set to the tape or CD mode by TPSET or CDSET switch while on the VF band, it switches to the DK standby mode. The device also switches to the DK standby mode when the <b>VF</b> key is pressed in the tape or CD mode. In the DK standby mode, all the keys, other than the <b>BAND</b> key, are valid. When the DK switch is set to ON in the DK standby mode, the device switches to the DK ON mode. In the DK ON mode, radio muting (RDMUTE pin) is turned off and audio muting (AMUTE pin) is turned on.</p> <p>When both the SD and SK signals or one of signals are lost during VF band reception(including TAPE or CD DK standby mode), BEEP is output.</p> <p>The SD and SK signals are checked 512 times once every 30 ms and if there are no SD and SK signals for 256 times or more, BEEP is output.</p> <p>For BEEP, 120 ms ON and 120 ms OFF are output 5 times, respectively.</p>
PSCAN AMEMO	<p>Preset memory scan and auto store memory key.</p> <p>The auto store memory function is enabled when initialized diode DISAMEMO is 0.</p> <p>When the auto store memory is used (DISAMEMO = 0), when this key is pressed and released within 2 seconds, preset memory Scanning is performed. When this key is held down for more than 2 seconds, operation switches to auto store memory operation.</p> <p>When the auto store memory is not used (DISAMEMO = 1), the preset memory scanning operation starts the moment the button is pressed.</p> <p>The preset memory scan and auto store memory operations are described below.</p> <p>(1) Preset memory scan operation</p> <p>The preset memory contents are called automatically every 5 seconds.</p> <p>If other than the current preset memory is being received, the preset memories are called from M1, and if a present memory is being received the preset memories are called from the next preset memory (for instance , from M4 if M3 is being received) sequentially every 5 seconds.</p> <p>This operation is shown below.</p> <p>Example When FM1 band being received.</p> <div style="text-align: center;"> <pre> graph LR     FM1[FM1] --&gt; M1[M1]     M1 --&gt; M2[M2]     M2 --&gt; M3[M3]     M3 --&gt; M4[M4]     M4 --&gt; M5[M5]     M5 --&gt; M6[M6]     M6 --&gt; FM1 </pre> <p>Other than preset memory being received on FM1 band</p> <p>M3 being received on FM1 band</p> </div> <p>This operation is the same for the MW bands (MW1,MW2) and LW band.</p>

Symbol	Function					
PSACN AMEMO	When the next preset memory is called at the end of 5 second hold, BEEP is output. During 5 second hold, the preset memory number display flashes at 1 Hz (duty 50%). The "ch" display does not flash. To stop at that preset memory during 5 second hold, press this key again, or press the same preset memory key as the preset memory being received. Writing of preset memory (for example, writing to M5 during M1 hold) is also possible, but the preset memory scan operation ends when the preset memory was written. The preset memory write operation during 5 second hold is described below.					
	M2S	Description	0	When the <span>ME</span> key is pressed, the device enters the 5 second memory write mode. Writing is performed by pressing a <span>M1 (TP1)</span> to <span>M6</span> key in the memory writable mode. At the end of writing, auto preset memory scanning stops. In the memory writable mode, the "ch" display flashes. If no operation is performed within 5 seconds, the next preset memory channel is called and auto preset scanning continues. If the <span>ME</span> key is pressed again in the memory writable mode, the memory writable mode is canceled and the next channel is called 5 seconds after the key was pressed.	1	When a <span>M1 (TP1)</span> to <span>M6</span> key is pressed for more than 2 seconds, the frequency currently being received is written to the preset memory corresponding to the pressed key. Auto preset scanning ends when the frequency was written to the preset memory (2 seconds after the key was pressed).
	M2S	Description				
	0	When the <span>ME</span> key is pressed, the device enters the 5 second memory write mode. Writing is performed by pressing a <span>M1 (TP1)</span> to <span>M6</span> key in the memory writable mode. At the end of writing, auto preset memory scanning stops. In the memory writable mode, the "ch" display flashes. If no operation is performed within 5 seconds, the next preset memory channel is called and auto preset scanning continues. If the <span>ME</span> key is pressed again in the memory writable mode, the memory writable mode is canceled and the next channel is called 5 seconds after the key was pressed.				
	1	When a <span>M1 (TP1)</span> to <span>M6</span> key is pressed for more than 2 seconds, the frequency currently being received is written to the preset memory corresponding to the pressed key. Auto preset scanning ends when the frequency was written to the preset memory (2 seconds after the key was pressed).				
	When one of the following keys is pressed during preset memory scanning, preset memory scanning stops and the operation of the pressed key is performed.					
	<div><span>MAN UP</span><span>MAN DWN</span><span>SEEK UP</span><span>SEEK DWN</span></div>					
	<div><span>SEEK UP</span><span>SEEK DWN</span><span>VF</span></div>					
	Memory call key other than memory being received (held) Band switching key					
	When one of the following keys is pressed during preset memory scanning, after the operation of the pressed key is performed, preset memory scanning is continued.					
<div><span>LOUD</span><span>LOC(TP4)</span><span>MONO(TP5)</span></div>						

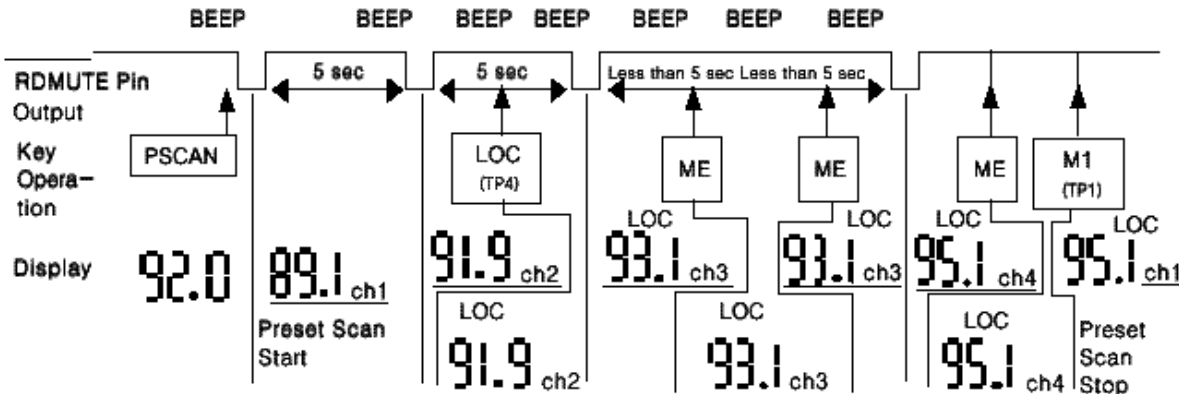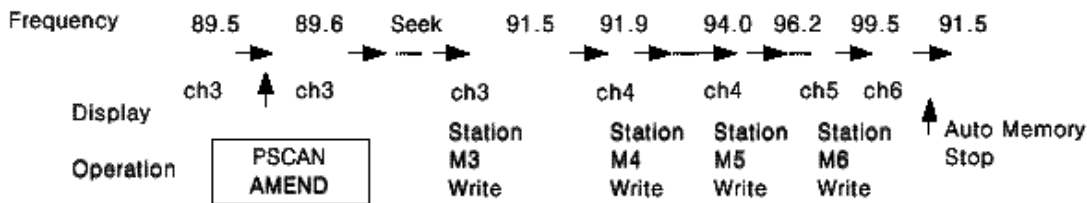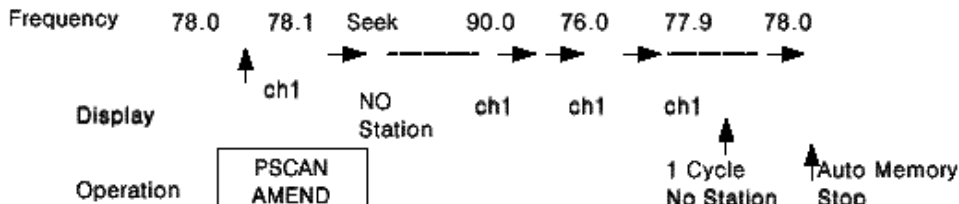Symbol	Function
<div data-bbox="124 842 253 925" style="border: 1px solid black; padding: 2px; width: fit-content;">PSCAN AMEMO</div>	<p>Example) FM band (FM1, M1 = 89.1MHz, M2 = 91.9MHz, M3 = 93.1MHz, M4 = 95.1MHz) M2S=0</p>  <p>(2) Auto store memory</p> <p>This operation searches for a broadcast station and writes it to preset memory automatically. Broadcast station search is performed in the up direction, starting from the frequency currently being received.</p> <p>If the preset memory channel which is written is receiving the current preset memory, it is incremented from the preset memory channel being received (from M3 if M3 is being received). If a channel other than a preset memory channel is being received, the preset memory channel which is written is incremented from M1. When broadcast stations are stored up to M6, the auto store memory operation ends. The auto store memory operation broadcast station search method, in the LOCAL mode and DX mode differs as shown below.</p> <p>- DX mode</p> <p>The frequencies are searched in the up direction, starting from the frequency currently received, and ends when the preset memories are written up to M6 or all the search frequencies were searched once.</p> <p>Example 1) USA1, FM band 89.5MHz (M3) reception</p>  <p>Example 2) Japan, FM band 78.0 MHz reception</p>  <p>For auto store memory in the DX mode. the SD pin broadcast station detection level is :</p>

Symbol	Function																															
	<table> <tr> <th>Band</th><th>Lowest voltage to Determine the Presence of Station</th></tr> <tr> <td>FM</td><td rowspan="4"> <math>12.5 / 64 \times V_{DD}</math>      0.977 V at <math>V_{DD} = 5V</math> </td></tr> <tr><td>MW</td></tr> <tr><td>LW</td></tr> <tr><td>VF</td></tr> </table> <p>- LOCAL mode</p> <p>The frequencies are searched in the up direction, starting from the frequency currently being received. In the LOCAL mode, the SD detection level is changed and the frequencies are searched twice. In the DX mode, the frequencies are searched once.</p> <p>When the preset memories are written up to M6 during this time or at the end of 3 searches, the auto store memory operation ends.</p> <p>Example) Europe, AM band 1422 kHz reception</p> <div> <div>PSCAN AMEMO</div> </div> <p>The SD detection level for LOCAL mode auto store memory is :</p> <table> <tr> <th>Band</th><th>Mode</th><th colspan="2">Lowest voltage judged a broadcast station</th></tr> <tr> <td rowspan="3">FM VF</td><td>LOCAL 1st time</td><td><math>44.5 / 64 \times V_{DD}</math></td><td>3.447V at <math>V_{DD}=5V</math></td></tr> <tr> <td>LOCAL 2nd time</td><td><math>28.5 / 64 \times V_{DD}</math></td><td>2.227V at <math>V_{DD}=5V</math></td></tr> <tr> <td>DX 1st time</td><td><math>12.5 / 64 \times V_{DD}</math></td><td>0.977V at <math>V_{DD}=5V</math></td></tr> <tr> <td rowspan="3">MW LW</td><td>LOCAL 1st time</td><td><math>18.5 / 64 \times V_{DD}</math></td><td>1.445V at <math>V_{DD}=5V</math></td></tr> <tr> <td>LOCAL 2nd time</td><td><math>15.5 / 64 \times V_{DD}</math></td><td>1.211V at <math>V_{DD}=5V</math></td></tr> <tr> <td>DX 1st time</td><td><math>12.5 / 64 \times V_{DD}</math></td><td>0.997V at <math>V_{DD}=5V</math></td></tr> </table>	Band	Lowest voltage to Determine the Presence of Station	FM	$12.5 / 64 \times V_{DD}$ 0.977 V at $V_{DD} = 5V$	MW	LW	VF	Band	Mode	Lowest voltage judged a broadcast station		FM VF	LOCAL 1st time	$44.5 / 64 \times V_{DD}$	3.447V at $V_{DD}=5V$	LOCAL 2nd time	$28.5 / 64 \times V_{DD}$	2.227V at $V_{DD}=5V$	DX 1st time	$12.5 / 64 \times V_{DD}$	0.977V at $V_{DD}=5V$	MW LW	LOCAL 1st time	$18.5 / 64 \times V_{DD}$	1.445V at $V_{DD}=5V$	LOCAL 2nd time	$15.5 / 64 \times V_{DD}$	1.211V at $V_{DD}=5V$	DX 1st time	$12.5 / 64 \times V_{DD}$	0.997V at $V_{DD}=5V$
Band	Lowest voltage to Determine the Presence of Station																															
FM	$12.5 / 64 \times V_{DD}$ 0.977 V at $V_{DD} = 5V$																															
MW																																
LW																																
VF																																
Band	Mode	Lowest voltage judged a broadcast station																														
FM VF	LOCAL 1st time	$44.5 / 64 \times V_{DD}$	3.447V at $V_{DD}=5V$																													
	LOCAL 2nd time	$28.5 / 64 \times V_{DD}$	2.227V at $V_{DD}=5V$																													
	DX 1st time	$12.5 / 64 \times V_{DD}$	0.977V at $V_{DD}=5V$																													
MW LW	LOCAL 1st time	$18.5 / 64 \times V_{DD}$	1.445V at $V_{DD}=5V$																													
	LOCAL 2nd time	$15.5 / 64 \times V_{DD}$	1.211V at $V_{DD}=5V$																													
	DX 1st time	$12.5 / 64 \times V_{DD}$	0.997V at $V_{DD}=5V$																													

Symbol	Function
PSCAN AMEMO	<p>When the auto local function is used, each time the <span>PSCAN</span> key is pressed, the local mode is switched as shown below.</p> <p>LOCAL1 --&gt; LOCAL2 --&gt; DX --&gt; auto memory stop</p> <p>When the local mode is switched, the auto memory operation is repeated from the frequency at which is started. When the auto memory operation was stopped, if even one broadcast station was written, operation shifts automatically from the preset memory when the auto memory operation started to preset scan operation.</p>
SEEK UP  SEEK DWN	<p>Autotuning (seek operation) key.</p> <p>The frequencies are incremented (<span>SEEK UP</span> key) or decremented (<span>SEEK DOWN</span> key) in 1 channel space and whether or not there is a broadcast station (IF count and SD signal) is detected at each receiving frequency and when there is a broadcast station, that frequency is held. On the VF band, when there is judged to be a broadcast station by IF count and SD signal the SK switch is checked 250 to 375 ms later and if there is an SK signal, that frequency is held. When seek up (seek down) reaches the highest (lowest) frequency, it, returns to the lowest (highest) frequency and, that is, sawtooth wave mode tuning is performed. The channel seek up (seek down) operation is shown below:</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Seek Up</p> </div> <div style="text-align: center;"> <p>Seek Down</p> </div> </div> <p>For the S(slow) and F(fast) IF count conditions, see the FMIF pin and AMIF pin above. For the 1 channel space frequency width, see the receiving frequencies above.</p>



Symbol	Function																								
	<table> <tr> <th>Key</th><th>Operation</th></tr> <tr> <td>1</td><td> <p>Even if the presence of a station is determined, tuning does not stop at its frequency when the keys are held down. Example : FM band</p> <p>RDMUTE pin</p> <p>Auto-tuning does not stop even when a station is detected.</p> <p>Auto-tuning stops when a station is detected.</p> </td></tr> </table> <p>When the band selection is switched, then returned to the original band and when the radio is turned off (including a mode transition), then on, auto-tuning locks in <u>the frequency with which the seek started</u>. All keys other than those shown in the table above are invalid(except for <b>POWER</b> key). The AUTO 500 switch(diode matrix) must be set to '0' when <b>SEEK UP</b> and <b>SEEK DWN</b> key are used.</p> <table> <tr> <th>Key</th><th>Operation</th></tr> <tr> <td><b>SEEK UP</b></td><td>- <b>SEEK UP</b> Key during Seek-up and <b>SEEK DWN</b> Key during seek-down The seek stops and auto-tuning returns <u>to the frequency with which the seek started</u>.</td></tr> <tr> <td><b>SEEK DWN</b></td><td>- <b>SEEK DWN</b> key during seek-up and <b>SEEK UP</b> key during seek-down The operation of the key pressed(seek-down if pressed during seek-up) is initiated, starting <u>with the frequency tuned in when the key is pressed</u>. The between-key operation is also enabled.</td></tr> <tr> <td><b>SEEK UP</b> <b>SEEK DWN</b></td><td>Scan-up(Scan-down) <u>with the frequency tuned in when the key is pressed</u>.</td></tr> <tr> <td><b>SEEK UP</b> <b>SEEK DWN</b></td><td>The seek stops and auto-tuning returns to the frequency with which the seek started.</td></tr> <tr> <td><b>BAND</b></td><td> <p>The seek stops and the new band is selected in the following sequence.</p> <p>The bands inhibited in the particular reception area and by DISFM3, ENMW2, DISLW switches are skipped. Tuning returns to the frequency with which the seek started when the original band is selected.</p> </td></tr> <tr> <td><b>M1(TP1)</b> to <b>M6</b></td><td>Regardless of the setting of the M2S switch, the contents are called for the preset memory associated with any key pressed.</td></tr> <tr> <td><b>VF</b></td><td>The seek stops and the key operation starts.</td></tr> <tr> <td><b>PSCAN</b> <b>AMEMO</b></td><td>The seek stops and the preset-scan starts.</td></tr> <tr> <td><b>LOUD</b> <b>LOC(TP4)</b> <b>MONO(TP5)</b></td><td>The operations of the keys pressed are initiated. The seek continues.</td></tr> </table>	Key	Operation	1	<p>Even if the presence of a station is determined, tuning does not stop at its frequency when the keys are held down. Example : FM band</p> <p>RDMUTE pin</p> <p>Auto-tuning does not stop even when a station is detected.</p> <p>Auto-tuning stops when a station is detected.</p>	Key	Operation	<b>SEEK UP</b>	- <b>SEEK UP</b> Key during Seek-up and <b>SEEK DWN</b> Key during seek-down The seek stops and auto-tuning returns <u>to the frequency with which the seek started</u> .	<b>SEEK DWN</b>	- <b>SEEK DWN</b> key during seek-up and <b>SEEK UP</b> key during seek-down The operation of the key pressed(seek-down if pressed during seek-up) is initiated, starting <u>with the frequency tuned in when the key is pressed</u> . The between-key operation is also enabled.	<b>SEEK UP</b> <b>SEEK DWN</b>	Scan-up(Scan-down) <u>with the frequency tuned in when the key is pressed</u> .	<b>SEEK UP</b> <b>SEEK DWN</b>	The seek stops and auto-tuning returns to the frequency with which the seek started.	<b>BAND</b>	<p>The seek stops and the new band is selected in the following sequence.</p> <p>The bands inhibited in the particular reception area and by DISFM3, ENMW2, DISLW switches are skipped. Tuning returns to the frequency with which the seek started when the original band is selected.</p>	<b>M1(TP1)</b> to <b>M6</b>	Regardless of the setting of the M2S switch, the contents are called for the preset memory associated with any key pressed.	<b>VF</b>	The seek stops and the key operation starts.	<b>PSCAN</b> <b>AMEMO</b>	The seek stops and the preset-scan starts.	<b>LOUD</b> <b>LOC(TP4)</b> <b>MONO(TP5)</b>	The operations of the keys pressed are initiated. The seek continues.
Key	Operation																								
1	<p>Even if the presence of a station is determined, tuning does not stop at its frequency when the keys are held down. Example : FM band</p> <p>RDMUTE pin</p> <p>Auto-tuning does not stop even when a station is detected.</p> <p>Auto-tuning stops when a station is detected.</p>																								
Key	Operation																								
<b>SEEK UP</b>	- <b>SEEK UP</b> Key during Seek-up and <b>SEEK DWN</b> Key during seek-down The seek stops and auto-tuning returns <u>to the frequency with which the seek started</u> .																								
<b>SEEK DWN</b>	- <b>SEEK DWN</b> key during seek-up and <b>SEEK UP</b> key during seek-down The operation of the key pressed(seek-down if pressed during seek-up) is initiated, starting <u>with the frequency tuned in when the key is pressed</u> . The between-key operation is also enabled.																								
<b>SEEK UP</b> <b>SEEK DWN</b>	Scan-up(Scan-down) <u>with the frequency tuned in when the key is pressed</u> .																								
<b>SEEK UP</b> <b>SEEK DWN</b>	The seek stops and auto-tuning returns to the frequency with which the seek started.																								
<b>BAND</b>	<p>The seek stops and the new band is selected in the following sequence.</p> <p>The bands inhibited in the particular reception area and by DISFM3, ENMW2, DISLW switches are skipped. Tuning returns to the frequency with which the seek started when the original band is selected.</p>																								
<b>M1(TP1)</b> to <b>M6</b>	Regardless of the setting of the M2S switch, the contents are called for the preset memory associated with any key pressed.																								
<b>VF</b>	The seek stops and the key operation starts.																								
<b>PSCAN</b> <b>AMEMO</b>	The seek stops and the preset-scan starts.																								
<b>LOUD</b> <b>LOC(TP4)</b> <b>MONO(TP5)</b>	The operations of the keys pressed are initiated. The seek continues.																								

Symbol	Function										
	<p>Auto tuning (scan operation) key.</p> <p>The frequencies are searched up (SCAN UP key) or down (SCAN DWN key) in 1 channel steps and whether or not there is a broadcast station (IF count and SD signal) is detected at each receiving frequency and when a broadcast station is judged to be present, that frequency is held for 5 seconds. On the VF band, whether or not there is an SK signal is detected as well as seek operation. If no operation is performed during this 5 seconds, the seek operation is repeated and the next broadcast station is received sequentially every 5 seconds (scan operation). During this 5 seconds hold, the frequency display flashes at 1 Hz (duty 50%). At the end of the 5 seconds hold, BEEP is output.</p> <p>Seek operations (channel up/down method, AUTOSTP switch and IF count, SD detection, SK signal detection) are the same as the SEEK UP and SEEK DWN keys. When the radio is turned off (including mode switching) and then turned on, the frequency held last (when there is not even 1 broadcast station, the frequency when the scan operation started) is received.</p> <p>The operation of each key during seek operation (other than at 5 seconds hold) is shown below.</p> <table border="1"> <thead> <tr> <th>Key</th><th>Operation</th></tr> </thead> <tbody> <tr> <td> <div>SCAN UP</div> <div>SCAN UP</div> <div>SCAN DWN</div> <div>SCAN DWN</div> </td><td> <p>- SCAN UP key during scan up and SCAN DWN key during scan down</p> <p>Scanning stops and returns to the frequency held last.</p> <p>However, when the auto local function is used, the local mode is switched</p> <p>- SCAN DWN key during scan up and SCAN UP key during scan down</p> <p>Operation shifts to operation of the pressed key from the frequency when the key was pressed.</p> </td></tr> <tr> <td> <div>SEEK UP</div> <div>SEEK DWN</div> </td><td>Scanning stops and seek operation starts from the frequency when the key was pressed.</td></tr> <tr> <td> <div>MAN UP</div> <div>MAN DWN</div> </td><td> <p>Scanning stops and returns to the frequency held last (when a frequency was not held, returns to the frequency when scanning started).</p> <p>Scanning stops whenever any of these keys is pressed even though the AUTO500 switch is 1 (when the MAN UP or MAN DWN key is pressed for more than 0.5 seconds, seek is performed).</p> </td></tr> <tr> <td> <div>BAND</div> </td><td> <p>Scanning stops and the band is switched sequentially as shown below.</p> <div style="text-align: center;"> <pre> graph LR     FM1 --&gt; FM2     FM2 --&gt; FM3     FM3 --&gt; MW1     MW1 --&gt; MW2     MW2 --&gt; LW     LW --&gt; FM1 </pre> </div> <p>However, bands disabled by receiving area and DISFM3, ENMW2 and DISLW switches are skipped.</p> <p>When switching returns to the same band, the frequency held last is received.</p> <p>When a frequency was not held, the frequency when scanning started is received.</p> </td></tr> </tbody> </table>	Key	Operation	<div>SCAN UP</div> <div>SCAN UP</div> <div>SCAN DWN</div> <div>SCAN DWN</div>	<p>- SCAN UP key during scan up and SCAN DWN key during scan down</p> <p>Scanning stops and returns to the frequency held last.</p> <p>However, when the auto local function is used, the local mode is switched</p> <p>- SCAN DWN key during scan up and SCAN UP key during scan down</p> <p>Operation shifts to operation of the pressed key from the frequency when the key was pressed.</p>	<div>SEEK UP</div> <div>SEEK DWN</div>	Scanning stops and seek operation starts from the frequency when the key was pressed.	<div>MAN UP</div> <div>MAN DWN</div>	<p>Scanning stops and returns to the frequency held last (when a frequency was not held, returns to the frequency when scanning started).</p> <p>Scanning stops whenever any of these keys is pressed even though the AUTO500 switch is 1 (when the MAN UP or MAN DWN key is pressed for more than 0.5 seconds, seek is performed).</p>	<div>BAND</div>	<p>Scanning stops and the band is switched sequentially as shown below.</p> <div style="text-align: center;"> <pre> graph LR     FM1 --&gt; FM2     FM2 --&gt; FM3     FM3 --&gt; MW1     MW1 --&gt; MW2     MW2 --&gt; LW     LW --&gt; FM1 </pre> </div> <p>However, bands disabled by receiving area and DISFM3, ENMW2 and DISLW switches are skipped.</p> <p>When switching returns to the same band, the frequency held last is received.</p> <p>When a frequency was not held, the frequency when scanning started is received.</p>
Key	Operation										
<div>SCAN UP</div> <div>SCAN UP</div> <div>SCAN DWN</div> <div>SCAN DWN</div>	<p>- SCAN UP key during scan up and SCAN DWN key during scan down</p> <p>Scanning stops and returns to the frequency held last.</p> <p>However, when the auto local function is used, the local mode is switched</p> <p>- SCAN DWN key during scan up and SCAN UP key during scan down</p> <p>Operation shifts to operation of the pressed key from the frequency when the key was pressed.</p>										
<div>SEEK UP</div> <div>SEEK DWN</div>	Scanning stops and seek operation starts from the frequency when the key was pressed.										
<div>MAN UP</div> <div>MAN DWN</div>	<p>Scanning stops and returns to the frequency held last (when a frequency was not held, returns to the frequency when scanning started).</p> <p>Scanning stops whenever any of these keys is pressed even though the AUTO500 switch is 1 (when the MAN UP or MAN DWN key is pressed for more than 0.5 seconds, seek is performed).</p>										
<div>BAND</div>	<p>Scanning stops and the band is switched sequentially as shown below.</p> <div style="text-align: center;"> <pre> graph LR     FM1 --&gt; FM2     FM2 --&gt; FM3     FM3 --&gt; MW1     MW1 --&gt; MW2     MW2 --&gt; LW     LW --&gt; FM1 </pre> </div> <p>However, bands disabled by receiving area and DISFM3, ENMW2 and DISLW switches are skipped.</p> <p>When switching returns to the same band, the frequency held last is received.</p> <p>When a frequency was not held, the frequency when scanning started is received.</p>										

Symbol	Function																								
	<table> <tr> <th>Key</th><th>Operation</th></tr> <tr> <td>M1(TP1) to M6</td><td>When a key is pressed, scanning stops and the preset memory contents of the pressed key are called without regard to the state of the M2S switch.</td></tr> <tr> <td>VF</td><td>Scanning stops and operation of the key is performed.</td></tr> <tr> <td>PSCAN AMEMO</td><td>Scanning stops and preset scan is performed from M 1.</td></tr> <tr> <td>LOUD</td><td>The operation of the pressed key is performed.</td></tr> <tr> <td>LOC(TP4)</td><td>Seek (scan operation) continues.</td></tr> <tr> <td>MONO(TP5)</td><td></td></tr> </table> <p>Momentary keys other than those described above are invalid. (However, the <b>POWER</b> key is valid.)</p> <p>Operation of each key during 5 second hold is shown below.</p> <table> <tr> <th>Key</th><th>Operation</th></tr> <tr> <td>SCAN UP SCAN DWN</td><td> <p>- <b>SCAN UP</b> key during scan up and <b>SCAN DWN</b> key during scan down. Scanning stops and the frequency being held is locked in.</p> <p>- <b>SCAN DWN</b> key during scan up and <b>SCAN UP</b> key during scan down</p> <p>And then the operation of the pressed key is performed.</p> </td></tr> <tr> <td>SEEK UP SEEK DWN</td><td>Scanning stops and a seek starts from the frequency being held.</td></tr> <tr> <td>MAN UP MAN DWN</td><td>Scanning stops and operation of the <b>MAN UP</b> or <b>MAN DWN</b> key is performed from the frequency being held.</td></tr> <tr> <td>BAND</td><td> <p>Scanning stops and the band is switched sequentially as shown below.</p> <pre> graph LR     FM1 --&gt; FM2 --&gt; FM3 --&gt; MW1 --&gt; MW2 --&gt; LW           </pre> <p>However, bands disabled by receiving area and DISFM3, ENMW2 and DISLW switches are skipped. When switching returns to the same band, it returns to the held frequency.</p> </td></tr> </table>	Key	Operation	M1(TP1) to M6	When a key is pressed, scanning stops and the preset memory contents of the pressed key are called without regard to the state of the M2S switch.	VF	Scanning stops and operation of the key is performed.	PSCAN AMEMO	Scanning stops and preset scan is performed from M 1.	LOUD	The operation of the pressed key is performed.	LOC(TP4)	Seek (scan operation) continues.	MONO(TP5)		Key	Operation	SCAN UP SCAN DWN	<p>- <b>SCAN UP</b> key during scan up and <b>SCAN DWN</b> key during scan down. Scanning stops and the frequency being held is locked in.</p> <p>- <b>SCAN DWN</b> key during scan up and <b>SCAN UP</b> key during scan down</p> <p>And then the operation of the pressed key is performed.</p>	SEEK UP SEEK DWN	Scanning stops and a seek starts from the frequency being held.	MAN UP MAN DWN	Scanning stops and operation of the <b>MAN UP</b> or <b>MAN DWN</b> key is performed from the frequency being held.	BAND	<p>Scanning stops and the band is switched sequentially as shown below.</p> <pre> graph LR     FM1 --&gt; FM2 --&gt; FM3 --&gt; MW1 --&gt; MW2 --&gt; LW           </pre> <p>However, bands disabled by receiving area and DISFM3, ENMW2 and DISLW switches are skipped. When switching returns to the same band, it returns to the held frequency.</p>
Key	Operation																								
M1(TP1) to M6	When a key is pressed, scanning stops and the preset memory contents of the pressed key are called without regard to the state of the M2S switch.																								
VF	Scanning stops and operation of the key is performed.																								
PSCAN AMEMO	Scanning stops and preset scan is performed from M 1.																								
LOUD	The operation of the pressed key is performed.																								
LOC(TP4)	Seek (scan operation) continues.																								
MONO(TP5)																									
Key	Operation																								
SCAN UP SCAN DWN	<p>- <b>SCAN UP</b> key during scan up and <b>SCAN DWN</b> key during scan down. Scanning stops and the frequency being held is locked in.</p> <p>- <b>SCAN DWN</b> key during scan up and <b>SCAN UP</b> key during scan down</p> <p>And then the operation of the pressed key is performed.</p>																								
SEEK UP SEEK DWN	Scanning stops and a seek starts from the frequency being held.																								
MAN UP MAN DWN	Scanning stops and operation of the <b>MAN UP</b> or <b>MAN DWN</b> key is performed from the frequency being held.																								
BAND	<p>Scanning stops and the band is switched sequentially as shown below.</p> <pre> graph LR     FM1 --&gt; FM2 --&gt; FM3 --&gt; MW1 --&gt; MW2 --&gt; LW           </pre> <p>However, bands disabled by receiving area and DISFM3, ENMW2 and DISLW switches are skipped. When switching returns to the same band, it returns to the held frequency.</p>																								

Symbol	Function														
	<table> <tr> <th>Key</th><th>Operation</th></tr> <tr> <td></td><td> <p>- When the M2S switch is 1, this key is invalid.</p> <p>- When M2S switch = 0</p> <p>Each time the key is pressed, the memory write state is inverted as shown below.</p> <p>(i)</p> <p>Key operation</p> <p>Display</p> <p>90.0 90.1 90.1 ch 90.2</p> </td></tr> <tr> <td></td><td> <p>(ii)</p> <p>Key operation</p> <p>Display</p> <p>90.0 90.1 90.1 ch 90.1 90.2</p> </td></tr> <tr> <td></td><td> <p>When a <span>M1(TP1)</span> to <span>M6</span> key is pressed in the memory writable state, data is written to the present memory corresponding to the pressed key.</p> </td></tr> <tr> <td><span>VF</span></td><td>Scanning is canceled and the key operation is performed.</td></tr> <tr> <td><span>PSCAN</span> <span>AMEMO</span></td><td>Scanning is canceled and the key operation is performed.</td></tr> <tr> <td><span>LOUD</span> <span>LOC(TP4)</span> <span>MONO(TP5)</span></td><td>The operation of the pressed key is performed. Scanning continues.</td></tr> </table>	Key	Operation		<p>- When the M2S switch is 1, this key is invalid.</p> <p>- When M2S switch = 0</p> <p>Each time the key is pressed, the memory write state is inverted as shown below.</p> <p>(i)</p> <p>Key operation</p> <p>Display</p> <p>90.0 90.1 90.1 ch 90.2</p>		<p>(ii)</p> <p>Key operation</p> <p>Display</p> <p>90.0 90.1 90.1 ch 90.1 90.2</p>		<p>When a <span>M1(TP1)</span> to <span>M6</span> key is pressed in the memory writable state, data is written to the present memory corresponding to the pressed key.</p>	<span>VF</span>	Scanning is canceled and the key operation is performed.	<span>PSCAN</span> <span>AMEMO</span>	Scanning is canceled and the key operation is performed.	<span>LOUD</span> <span>LOC(TP4)</span> <span>MONO(TP5)</span>	The operation of the pressed key is performed. Scanning continues.
Key	Operation														
	<p>- When the M2S switch is 1, this key is invalid.</p> <p>- When M2S switch = 0</p> <p>Each time the key is pressed, the memory write state is inverted as shown below.</p> <p>(i)</p> <p>Key operation</p> <p>Display</p> <p>90.0 90.1 90.1 ch 90.2</p>														
	<p>(ii)</p> <p>Key operation</p> <p>Display</p> <p>90.0 90.1 90.1 ch 90.1 90.2</p>														
	<p>When a <span>M1(TP1)</span> to <span>M6</span> key is pressed in the memory writable state, data is written to the present memory corresponding to the pressed key.</p>														
<span>VF</span>	Scanning is canceled and the key operation is performed.														
<span>PSCAN</span> <span>AMEMO</span>	Scanning is canceled and the key operation is performed.														
<span>LOUD</span> <span>LOC(TP4)</span> <span>MONO(TP5)</span>	The operation of the pressed key is performed. Scanning continues.														

Symbol	Function				
<div>SCAN UP</div> <div>SCAN DWN</div>	<table> <tr> <th>Key</th><th>Operation</th></tr> <tr> <td> <div>M1 (TP1)</div> <div>M2 (TP2)</div> <div>M3 (TP3)</div> <div>M4</div> <div>M5</div> <div>M6</div> </td><td> <ul style="list-style-type: none"> <li>When M2S switch = 0               <ul style="list-style-type: none"> <li>Memory unwritable state. The scanning operation is canceled and the preset memory contents corresponding to the pressed key is called.</li> <li>Memory writable state (See the <div>ME</div> Key below.) The held frequency is written to the preset memory corresponding to the pressed key and the memory writable state is canceled. Then, the hold state is held for 2 seconds. If an operation is not performed during this time, the next station is searched.</li> </ul> </li> </ul> <p>(Example)</p> <p>Key operation: Seek, Station, ME, M1 (TP1), Hold, Seek</p> <p>Display: 90.0, 90.1, 90.1 ch, 90.1 ch, 90.2</p> <ul style="list-style-type: none"> <li>When M2S switch = 1               <ul style="list-style-type: none"> <li>When key released within 2 seconds The preset memory contents corresponding to the pressed key are called and the scan operation is reset the moment the key is released.</li> </ul> </li> </ul> <p>(Example)</p> <p>RDMUTE Pin: Seek, Station, Hold, M1 (TP1) Key, M1 (TP1) Key, M1 Call, Seek</p> <p>Display: 90.0, 90.1, 90.1 ch, 92.0 ch</p> <ul style="list-style-type: none"> <li>When key pressed for more than 2 seconds The held frequency is written to the preset memory corresponding to the pressed key 2 seconds after the key has been passed for 2 seconds. 2 seconds after the end of writing, hold ends and the next station is searched (seek operation).</li> </ul> <p>(Example)</p> <p>RDMUTE Pin: Seek, Station, Hold, 2 sec, Key Pressed Continuously, 2 sec, Seek</p> <p>Display: 90.0, 90.1, 90.1 ch, 90.1 ch, 90.2</p> </td></tr> </table>	Key	Operation	<div>M1 (TP1)</div> <div>M2 (TP2)</div> <div>M3 (TP3)</div> <div>M4</div> <div>M5</div> <div>M6</div>	<ul style="list-style-type: none"> <li>When M2S switch = 0               <ul style="list-style-type: none"> <li>Memory unwritable state. The scanning operation is canceled and the preset memory contents corresponding to the pressed key is called.</li> <li>Memory writable state (See the <div>ME</div> Key below.) The held frequency is written to the preset memory corresponding to the pressed key and the memory writable state is canceled. Then, the hold state is held for 2 seconds. If an operation is not performed during this time, the next station is searched.</li> </ul> </li> </ul> <p>(Example)</p> <p>Key operation: Seek, Station, ME, M1 (TP1), Hold, Seek</p> <p>Display: 90.0, 90.1, 90.1 ch, 90.1 ch, 90.2</p> <ul style="list-style-type: none"> <li>When M2S switch = 1               <ul style="list-style-type: none"> <li>When key released within 2 seconds The preset memory contents corresponding to the pressed key are called and the scan operation is reset the moment the key is released.</li> </ul> </li> </ul> <p>(Example)</p> <p>RDMUTE Pin: Seek, Station, Hold, M1 (TP1) Key, M1 (TP1) Key, M1 Call, Seek</p> <p>Display: 90.0, 90.1, 90.1 ch, 92.0 ch</p> <ul style="list-style-type: none"> <li>When key pressed for more than 2 seconds The held frequency is written to the preset memory corresponding to the pressed key 2 seconds after the key has been passed for 2 seconds. 2 seconds after the end of writing, hold ends and the next station is searched (seek operation).</li> </ul> <p>(Example)</p> <p>RDMUTE Pin: Seek, Station, Hold, 2 sec, Key Pressed Continuously, 2 sec, Seek</p> <p>Display: 90.0, 90.1, 90.1 ch, 90.1 ch, 90.2</p>
Key	Operation				
<div>M1 (TP1)</div> <div>M2 (TP2)</div> <div>M3 (TP3)</div> <div>M4</div> <div>M5</div> <div>M6</div>	<ul style="list-style-type: none"> <li>When M2S switch = 0               <ul style="list-style-type: none"> <li>Memory unwritable state. The scanning operation is canceled and the preset memory contents corresponding to the pressed key is called.</li> <li>Memory writable state (See the <div>ME</div> Key below.) The held frequency is written to the preset memory corresponding to the pressed key and the memory writable state is canceled. Then, the hold state is held for 2 seconds. If an operation is not performed during this time, the next station is searched.</li> </ul> </li> </ul> <p>(Example)</p> <p>Key operation: Seek, Station, ME, M1 (TP1), Hold, Seek</p> <p>Display: 90.0, 90.1, 90.1 ch, 90.1 ch, 90.2</p> <ul style="list-style-type: none"> <li>When M2S switch = 1               <ul style="list-style-type: none"> <li>When key released within 2 seconds The preset memory contents corresponding to the pressed key are called and the scan operation is reset the moment the key is released.</li> </ul> </li> </ul> <p>(Example)</p> <p>RDMUTE Pin: Seek, Station, Hold, M1 (TP1) Key, M1 (TP1) Key, M1 Call, Seek</p> <p>Display: 90.0, 90.1, 90.1 ch, 92.0 ch</p> <ul style="list-style-type: none"> <li>When key pressed for more than 2 seconds The held frequency is written to the preset memory corresponding to the pressed key 2 seconds after the key has been passed for 2 seconds. 2 seconds after the end of writing, hold ends and the next station is searched (seek operation).</li> </ul> <p>(Example)</p> <p>RDMUTE Pin: Seek, Station, Hold, 2 sec, Key Pressed Continuously, 2 sec, Seek</p> <p>Display: 90.0, 90.1, 90.1 ch, 90.1 ch, 90.2</p>				

Symbol	Function				
BAND	<p>Receiving band selection switch It is valid only in the radio mode. Each time this switch is pressed, the band is switched sequentially as shown below.</p> <pre> graph LR     FM1 --&gt; FM2 --&gt; FM3 --&gt; MW1 --&gt; MW2 --&gt; LW   </pre> <p>However, bands disabled by receiving area and DISFM3, ENMW2, and DISLW switches are skipped. When the band is switched (FM1 , FM2 , FM3 , MW1 , MW2) in the same band (FM, MW), the band display and last channel change.</p> <p>When the <b>BAND</b> key is pressed during VF band reception, the VF band is reset and the device returns to the band received last.</p>				
ME	<p>In the radio mode, during frequency display, this key is used as the preset memory writable state setting key and during clock display (CE = High), this key is used with the <b>MAN UP</b> and <b>MAN DWN</b> keys as the clock adjustment key.</p> <p>When the M2S = 0, this key operates as the preset memory writable state and clock adjustment key.</p> <p>When M2S = 1, this key operates as the preset memory writable state and clock adjustment key.</p> <p>When M2S = 0, use the <b>DISP</b> key to switch the display.</p> <ul style="list-style-type: none"> <li>• Radio mode frequency display       <p>This key is used as the preset memory writable state setting key. It is valid only when the initialized diode M2S switch is 0.</p> <p>When this key is pressed, the device enters the preset memory writable state for 5 seconds and the current receiving frequency is written to the preset memory corresponding to the pressed key by pressing the <b>M1(TP1)</b> to <b>M6</b> key. If the <b>ME</b> key is pressed continuously at this time, the write operation is not performed.</p> <p>During the preset memory writable state, the "ch" display flashes at 1 Hz (duty 50%). If preset memory is being received, the preset memory number flashes also.</p> <p>This key is invalid during the seek operation (including seek operation at scanning). However, it is valid at 5 seconds hold during the preset memory scan and scan operations.</p> <p>Each key operation in the preset memory writable state is shown below.</p> <table border="1"> <thead> <tr> <th>Key</th><th>Operation</th></tr> </thead> <tbody> <tr> <td><b>M1(TP1)</b> to <b>M6</b></td><td>The frequency being received when a key is pressed is written to the preset memory corresponding to the pressed key. Muting is not output.</td></tr> </tbody> </table> </li> </ul>	Key	Operation	<b>M1(TP1)</b> to <b>M6</b>	The frequency being received when a key is pressed is written to the preset memory corresponding to the pressed key. Muting is not output.
Key	Operation				
<b>M1(TP1)</b> to <b>M6</b>	The frequency being received when a key is pressed is written to the preset memory corresponding to the pressed key. Muting is not output.				

Symbol	Function													
	<table><tr><th>Key</th><th>Operation</th></tr><tr><td>VF</td><td rowspan="9">Preset memory write mode is reset and each key operation is performed.</td></tr><tr><td>PSCAN AMEMO</td></tr><tr><td>SEEK UP</td></tr><tr><td>SEEK DWN</td></tr><tr><td>SCAN UP</td></tr><tr><td>SCAN</td></tr><tr><td>MAN UP</td></tr><tr><td>MAN DWN</td></tr><tr><td>DISP</td></tr></table>	Key	Operation	VF	Preset memory write mode is reset and each key operation is performed.	PSCAN AMEMO	SEEK UP	SEEK DWN	SCAN UP	SCAN	MAN UP	MAN DWN	DISP	
	Key	Operation												
	VF	Preset memory write mode is reset and each key operation is performed.												
	PSCAN AMEMO													
	SEEK UP													
	SEEK DWN													
	SCAN UP													
	SCAN													
	MAN UP													
	MAN DWN													
DISP														
<table><tr><td>BAND</td><td>The preset memory writable state is reset and the band is switched sequentially as shown below.<div><div>▶ FM1 —▶ FM2 —▶ FM3 —▶ MW1 —▶ MW2 —▶ LW</div></div></td></tr><tr><td></td><td>However, bands disabled by receiving area and DISFM3, ENMW2 and DISLW switches are skipped.</td></tr></table>	BAND	The preset memory writable state is reset and the band is switched sequentially as shown below. <div><div>▶ FM1 —▶ FM2 —▶ FM3 —▶ MW1 —▶ MW2 —▶ LW</div></div>		However, bands disabled by receiving area and DISFM3, ENMW2 and DISLW switches are skipped.										
BAND	The preset memory writable state is reset and the band is switched sequentially as shown below. <div><div>▶ FM1 —▶ FM2 —▶ FM3 —▶ MW1 —▶ MW2 —▶ LW</div></div>													
	However, bands disabled by receiving area and DISFM3, ENMW2 and DISLW switches are skipped.													
ME	ME	The preset memory writable state is reset.												
<table><tr><td>LOUD</td><td rowspan="3">The preset memory writable state is held and each key operation is performed.</td></tr><tr><td>LOC(TP4)</td></tr><tr><td>MONO(TP</td></tr></table>	LOUD	The preset memory writable state is held and each key operation is performed.	LOC(TP4)	MONO(TP										
LOUD	The preset memory writable state is held and each key operation is performed.													
LOC(TP4)														
MONO(TP														

Keys other than those described above (except the **POWER** key) are invalid.

When the radio is turned off and then turned back on (including tape and CD mode switching) in the preset memory writable state, the writable state is released.

- Clock display

This key is used as the time adjustment key.

The minute and hour digits are adjusted as shown below by pressing the **MAN UP** and **MAN DWN** keys while pressing the **ME** key

- Hour adjustment

The hour is advanced one hour each time the **MAN DWN** key is pressed. When the key is held down for more than 0.5 seconds, the hour changes continuously at a speed of 4 hours/sec (1 hour in 250 ms) until the key is released.



The minute digit and seconds count are not affected.

- Minute digit adjustment

The minute digit is advanced one minute each time the **MAN UP** key is pressed. When the key held down for more than 0.5 seconds, the minute digit changes at a speed of 8 minutes/sec (1 minute in 125 ms) until the key is released. Carry to the hour digit is not performed. Each time the minute digit is adjusted, the seconds count is reset.

Symbol	Function				
<div>MAN UP</div> <div>MAN DWN</div>	<p>In the radio mode, these keys are used as the receiving frequency up/down keys. During clock display, these keys are used with the <div>ME</div> key as the clock adjustment keys. Their operation is shown below.</p> <ul style="list-style-type: none"> <li>Radio mode           <p>These keys operate as shown below, depending on the setting of the initialized diode matrix AUTO 500 switch.</p> <p>- Operation by AUTO 500 switch</p> <table border="1"> <thead> <tr> <th>AUTO500</th><th>Description</th></tr> </thead> <tbody> <tr> <td>0</td><td> <p>Each time a key is pressed, the frequency is incremented ( <div>MAN UP</div> key) or decremented ( <div>MAN DWN</div> key) one step (1 channel space). When the key is held down for approx. 0.5 seconds, the frequency changes continuously at a speed of approx. 50 ms per step until the key is released.</p> <p>Example 1) When key released within 0.5 seconds</p> <p>Example 2) When key held down for more than 0.5 seconds</p> </td></tr> </tbody> </table> </li></ul>	AUTO500	Description	0	<p>Each time a key is pressed, the frequency is incremented ( <div>MAN UP</div> key) or decremented ( <div>MAN DWN</div> key) one step (1 channel space). When the key is held down for approx. 0.5 seconds, the frequency changes continuously at a speed of approx. 50 ms per step until the key is released.</p> <p>Example 1) When key released within 0.5 seconds</p> <p>Example 2) When key held down for more than 0.5 seconds</p>
AUTO500	Description				
0	<p>Each time a key is pressed, the frequency is incremented ( <div>MAN UP</div> key) or decremented ( <div>MAN DWN</div> key) one step (1 channel space). When the key is held down for approx. 0.5 seconds, the frequency changes continuously at a speed of approx. 50 ms per step until the key is released.</p> <p>Example 1) When key released within 0.5 seconds</p> <p>Example 2) When key held down for more than 0.5 seconds</p>				

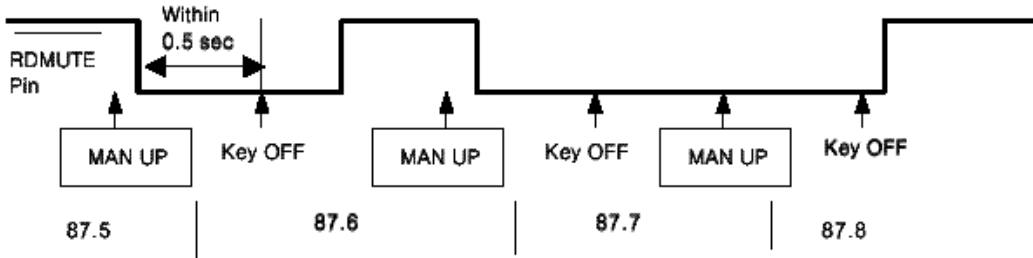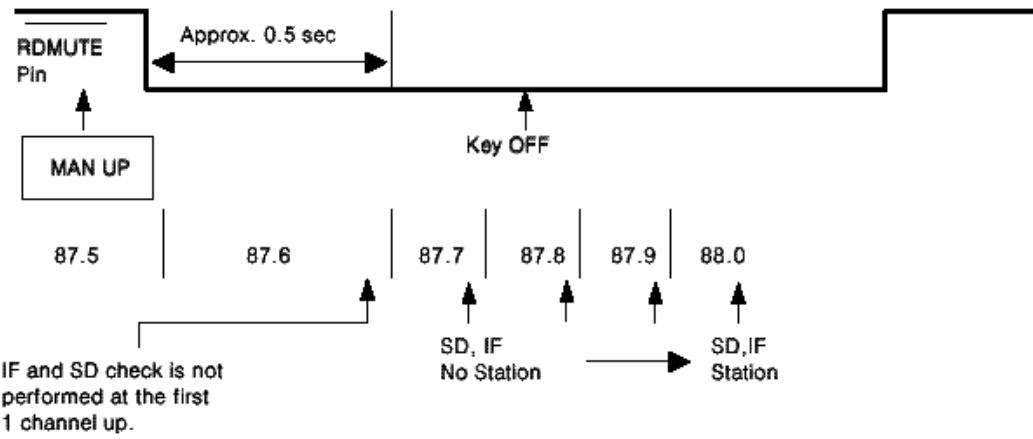

Symbol	Function
	<p><b>AUTO500</b></p> <p><b>Description</b></p> <p>Each time a key is pressed, the frequency is incremented ( <b>MAN UP</b> Key) or decremented ( <b>MAN DWN</b> key ) one step. When the key is held down for more than 0.5 seconds, the seek operation (seek up for <b>MAN UP</b> and seek down for <b>MAN DWN</b> ) starts at the point after 0.5 seconds. This seek operation is the same as that of the <b>SEEK UP</b> and <b>SEEK DWN</b> keys. After the key was held down for more than 0.5 seconds, the seek operation continues even if the key is released.</p> <p>Example 1) When key released within 0.5 seconds</p>  <p>Example 2) When key held down for more than 0.5 seconds</p>  <p>When the AUTO 500 switch was set to 1, do not use the <b>SEEK UP</b> and <b>SEEK DWN</b> keys.</p> <p>. During clock display  When the clock is displayed and the <b>ME</b> key was pressed and held, the minute and hour digits are adjusted by pressing the <b>MAN UP</b> and <b>MAN DWN</b> keys.  For a description of the minute and hour digits adjustment method, see the <b>ME</b> key above.</p>
<b>LOUD</b>	<p><b>LOUD (LOUDNESS) control key.</b></p> <p>It is valid in the radio, tape and CD modes.</p> <p>Each time this key is pressed, the LCD panel "LOUD" display and the LOUD pin (pin 19) output are inverted.</p> <p>The LOUD state is held even when radio, tape and CD mode switching is performed. When the power is turned on, the OFF state is set ("LOUD" display OFF, LOUD pin Low level).</p>

Symbol	Function
LOC(TP4)	<p>The LOC(TP4) key is used as a LOCAL(LOCAL/DX) control key when in the radio mode and as a tape function key when in the tape mode in conjunction with initialization diode switches.</p> <ul style="list-style-type: none"> <li>- In the radio mode</li> </ul> <p>The LCD Panel "LOC" indicator and the output on the LOC pin(pin 10) are inverted each time the key is pressed.</p> <p>A high is output on the LOC pin while the "LOC" indicator is on.</p> <ul style="list-style-type: none"> <li>- In the tape mode</li> </ul> <p>The LOC(TP4) key can be used as an AMS, NR(NOISE REDUCTION) or MTL(METAL) function key when the initialization diode switch ENTPK is "I". For the choice between AMS,NR and MTL functions, see the description of the initialization diode switches KAMS, KNR and KMTL.</p> <p>When the AMS, MTL or NR function is selected, the LOC(TP4) key operates the same way as</p> <p style="text-align: center;"> <span style="border: 1px solid black; padding: 2px 10px;">AMS</span> , <span style="border: 1px solid black; padding: 2px 10px;">MTL</span> , <span style="border: 1px solid black; padding: 2px 10px;">NR</span> key </p> <p>See the description of these keys.</p>
MONO(TP5)	<p>In the radio mode, this key is used as the MONO control key. In the tape mode, this key is used as the tape function key by the initialized diode.</p> <ul style="list-style-type: none"> <li>- Radio mode</li> </ul> <p>This key is valid only in FM and VF bands.</p> <p>Each time this key is pressed, the LCD panel "MONO" display and the MONO/NR<sub>2</sub> pin (pin 18) output the inverted. High level is output from the MONO/NR<sub>2</sub> pin while "MONO" is displayed. When the power is turned on, the OFF state is set ("MONO" display OFF, MONO/NR<sub>2</sub> pin Low level).</p> <ul style="list-style-type: none"> <li>- Tape mode</li> </ul> <p>This key can be used as the AMS , MTL or NR function key by the initialized diode ENTPK, KAMS, KNR, and KMTL switches.</p> <p>See the ENTPK, KAMS and KMTL switches items.</p> <p>When the AMS or MTL function is selected, this key operates the same as the <span style="border: 1px solid black; padding: 2px 10px;">MTL</span> <span style="border: 1px solid black; padding: 2px 10px;">AMS</span> or <span style="border: 1px solid black; padding: 2px 10px;">NR</span> key. See the description of each key.</p> <p>In the radio monitor and DK ON modes, this key operates as the MONO control key.</p>
MTL	<p>MTL (METAL) control key.</p> <p>This key is valid in the tape mode.</p> <p>Each time this key is pressed, the LCD panel "MTL" display and the MTL pin (pin 21) output are inverted. High level is output from the LOC/MTL pin while "MTL" is displayed.</p> <p>When the power is turned on, the OFF state is set ( " MTL" display OFF, MTL pin Low level).</p>

Symbol	Function						
MR	<p>NR<sub>1</sub> (NOISE REDUCTION) and NR<sub>2</sub> control key.  This key is valid in the tape mode.  Its operation depends on the setting of the initialized diode ENNR<sub>2</sub> switch as shown below.</p> <table border="1"> <thead> <tr> <th>ENNR2</th><th>Key Operation</th></tr> </thead> <tbody> <tr> <td>0</td><td> <p>Each time this key is pressed, the LCD panel "NR<sub>1</sub>" display and the NR<sub>1</sub> pin (pin 22) output are inverted.  High level is output from the NR1 pin while "NR<sub>1</sub>" is displayed. When the power is turned on, the OFF state is set ( "NR<sub>1</sub>" display OFF, NR<sub>1</sub> pin Low level).</p> </td></tr> <tr> <td>1</td><td> <p>Each time this key is pressed, the display and output are switched as shown below.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>*NR<sub>1</sub>" display OFF  NR<sub>1</sub> pin Low  *NR<sub>2</sub>" display OFF  MONO/NR<sub>2</sub> pin LOW</p> </div> <div style="text-align: center;"> <p>*NR<sub>1</sub>" display ON  NR<sub>1</sub> pin High  *NR<sub>2</sub>" display OFF  MONO/NR<sub>2</sub> pin LOW</p> </div> </div> <div style="text-align: center; margin-top: 20px;"> <p>"NR<sub>1</sub>" display ON  NR<sub>1</sub> pin LOW  *NR<sub>2</sub>" display ON  MONO/NR<sub>2</sub> pin HIGH</p> </div> <p>When the power is turned on, NR<sub>1</sub> and NR<sub>2</sub> are both turned off.</p> </td></tr> </tbody> </table>	ENNR2	Key Operation	0	<p>Each time this key is pressed, the LCD panel "NR<sub>1</sub>" display and the NR<sub>1</sub> pin (pin 22) output are inverted.  High level is output from the NR1 pin while "NR<sub>1</sub>" is displayed. When the power is turned on, the OFF state is set ( "NR<sub>1</sub>" display OFF, NR<sub>1</sub> pin Low level).</p>	1	<p>Each time this key is pressed, the display and output are switched as shown below.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>*NR<sub>1</sub>" display OFF  NR<sub>1</sub> pin Low  *NR<sub>2</sub>" display OFF  MONO/NR<sub>2</sub> pin LOW</p> </div> <div style="text-align: center;"> <p>*NR<sub>1</sub>" display ON  NR<sub>1</sub> pin High  *NR<sub>2</sub>" display OFF  MONO/NR<sub>2</sub> pin LOW</p> </div> </div> <div style="text-align: center; margin-top: 20px;"> <p>"NR<sub>1</sub>" display ON  NR<sub>1</sub> pin LOW  *NR<sub>2</sub>" display ON  MONO/NR<sub>2</sub> pin HIGH</p> </div> <p>When the power is turned on, NR<sub>1</sub> and NR<sub>2</sub> are both turned off.</p>
ENNR2	Key Operation						
0	<p>Each time this key is pressed, the LCD panel "NR<sub>1</sub>" display and the NR<sub>1</sub> pin (pin 22) output are inverted.  High level is output from the NR1 pin while "NR<sub>1</sub>" is displayed. When the power is turned on, the OFF state is set ( "NR<sub>1</sub>" display OFF, NR<sub>1</sub> pin Low level).</p>						
1	<p>Each time this key is pressed, the display and output are switched as shown below.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>*NR<sub>1</sub>" display OFF  NR<sub>1</sub> pin Low  *NR<sub>2</sub>" display OFF  MONO/NR<sub>2</sub> pin LOW</p> </div> <div style="text-align: center;"> <p>*NR<sub>1</sub>" display ON  NR<sub>1</sub> pin High  *NR<sub>2</sub>" display OFF  MONO/NR<sub>2</sub> pin LOW</p> </div> </div> <div style="text-align: center; margin-top: 20px;"> <p>"NR<sub>1</sub>" display ON  NR<sub>1</sub> pin LOW  *NR<sub>2</sub>" display ON  MONO/NR<sub>2</sub> pin HIGH</p> </div> <p>When the power is turned on, NR<sub>1</sub> and NR<sub>2</sub> are both turned off.</p>						
AMS	<p>AMS (AUTO MUSIC SEARCH) control key.  This key is valid in the tape mode.  Each time this key is pressed, the LCD panel "AMS" display and the AMS pin (pin 20) output are inverted. High level is output from the AMS pin while "AMS" is displayed.  When the AMS pin is high level (AMS mode), if the TPSET switch is ON, the AMS pin holds the high level output even if the mode is switched to the CD or radio mode.  When the power is turned on, AMS is turned off ( "AMS" display OFF, AMS pin Low level).</p>						
RDMONI	<p>Radio monitor key.  This key is valid in the tape and CD modes.  Each time this key is pressed, the radio monitor mode is inverted. In the radio monitor mode, the LCD panel "RDMONI" display lights.  In the radio monitor mode, all <u>band tuning</u> operations are possible and radio muting (RDMUTE pin) is turned off and audio muting (AMUTE pin) is turned on.</p>						



Symbol	Function
<div>POWER</div>	<p>This key is used when turning the radio ON and OFF momentary key, controlling the illumination, etc.</p> <p>This key is valid only when the CE pin is High.</p> <p>The POWER pin (pin 23) output is inverted by pressing this key.</p> <p>When using this key, set the RDON switch (diode matrix) to 0.</p> <p>The radio is turned on and off by turning the transistor switch RDON ON and OFF with the output of the POWER pin.</p> <p>For details, see "Mode Transition" and "Application Circuits".</p>

## 2.4.2 Alternate or transistor Switch

Symbol	Function													
CDSET	CD mode setting switch. This switch is valid only when the CE pin is high level. The CD mode can be set by setting this switch to ON. For details, see "Mode Transition".													
TPSET	Tape mode setting switch. This switch is valid only when the CE pin is high level. When this switch is set to ON when the CDSET is OFF, the device is set to the tape mode. For details, see "Mode Transition".													
RDSET	Radio mode setting switch. This switch is valid only when the CE pin is high level. When this switch is set to ON when the CDSET and TPSET switches are OFF, the device is set to the radio mode. For details, see "Mode Transition". When using this switch, set the RDON switch (diode matrix) to 0.													
FF	<p>Tape mode fast forward signal input switch. The tape fast forward display (◀ ▶) lights as shown below according to the state of the RL switch.</p> <table><tr><th>FF</th><th>RL</th><th>Display</th></tr><tr><td rowspan="2">0</td><td>0</td><td>◀</td></tr><tr><td>1</td><td>▶</td></tr><tr><td rowspan="2">1</td><td>0</td><td>◁</td></tr><tr><td>1</td><td>▷</td></tr></table> <p>◀: Light ON, ◁:Flash(2Hz) 0:OFF, 1:ON</p>	FF	RL	Display	0	0	◀	1	▶	1	0	◁	1	▷
FF	RL	Display												
0	0	◀												
	1	▶												
1	0	◁												
	1	▷												
SK	VF broadcast station SK signal input switch. When this switch is set to ON on the FM and VF bands, the LCD panel "SK" display lights. On the FM and VF bands this signal is also used as the auto tuning stop signal. At this time, 250 to 375 ms after the broadcast station is judged to be present by IF and SD pin, this switch is checked and if it is ON, a traffic information station is judged to be present and autotuning stops.													
RL	Tape mode travel direction signal input switch. The tape display (◁ ▷) lights according to the state of the FF switch. For the lighting contents, see the FF switch above.													
DK	VF broadcast station DK signal input switch. When this switch is set to ON in the tape DK standby and CD DK standby models, the device enters the tape DK ON and CD DK ON mode.													
ST	Switch used to enable "ST" display in the radio mode. "ST" display on the LCD panel lights by turning on the switch													

## 2.4.3 Diode Matrix

Symbol	Function																																															
AREA1 AREA2 AREA3	<p>Receiving area setting switch.</p> <p>Its setting is shown below.</p> <p>For the receiving frequencies, etc, at each area, see page 2.</p> <table><tr><th>AREA3</th><th>AREA3</th><th>AREA3</th><th>MODE</th></tr><tr><td>0</td><td>0</td><td>0</td><td>Europe1</td></tr><tr><td>0</td><td>0</td><td>1</td><td>Europe2</td></tr><tr><td>0</td><td>1</td><td>0</td><td>U.S.A 1</td></tr><tr><td>0</td><td>1</td><td>1</td><td>U.S.A 2</td></tr><tr><td>1</td><td>0</td><td>0</td><td>U.S.A 3</td></tr><tr><td>1</td><td>0</td><td>1</td><td>Australia, Middle East</td></tr><tr><td>1</td><td>1</td><td>0</td><td>Japan</td></tr><tr><td>1</td><td>1</td><td>1</td><td>Central and South America</td></tr></table>	AREA3	AREA3	AREA3	MODE	0	0	0	Europe1	0	0	1	Europe2	0	1	0	U.S.A 1	0	1	1	U.S.A 2	1	0	0	U.S.A 3	1	0	1	Australia, Middle East	1	1	0	Japan	1	1	1	Central and South America											
AREA3	AREA3	AREA3	MODE																																													
0	0	0	Europe1																																													
0	0	1	Europe2																																													
0	1	0	U.S.A 1																																													
0	1	1	U.S.A 2																																													
1	0	0	U.S.A 3																																													
1	0	1	Australia, Middle East																																													
1	1	0	Japan																																													
1	1	1	Central and South America																																													
DISFM3 ENMW2 DISLW	<p>Receiving band setting switch.</p> <p>Its setting is shown below</p> <p>. DISFM3 ..... FM3 band is disabled by setting to 1.</p> <p>. ENMW2..... MW2 band is enabled by setting to 1.</p> <p>. DISLW..... In Europe, the LW band is disabled by setting to 1.</p> <p>The DISLW switch is invalid in areas outside of Europe.</p> <p>The receiving bands for each area are set with these switches as shown below.</p> <table><tr><th>AREA</th><th>DISFM3</th><th>ENMW2</th><th>DISLW</th><th>Receiving Bands</th></tr><tr><td rowspan="6">Europe1 Europe2</td><td>0</td><td>0</td><td>0</td><td>FM1,FM2,FM3,MW1,LW</td></tr><tr><td>0</td><td>0</td><td>1</td><td>FM1,FM2,FM3,MW1</td></tr><tr><td>0</td><td>1</td><td>-</td><td>FM1,FM2,FM3,MW1,MW2</td></tr><tr><td>1</td><td>0</td><td>0</td><td>FM1,FM2,MW1,LW</td></tr><tr><td>1</td><td>0</td><td>1</td><td>FM1,FM2,,MW1</td></tr><tr><td>1</td><td>1</td><td>-</td><td>FM1,FM2,MW1,MW2</td></tr><tr><td rowspan="4">Other areas</td><td>0</td><td>0</td><td>-</td><td>FM1,FM2,FM3,MW1</td></tr><tr><td>0</td><td>1</td><td>-</td><td>FM1,FM2,FM3,MW1,MW2</td></tr><tr><td>1</td><td>0</td><td>-</td><td>FM1,FM2,MW1</td></tr><tr><td>1</td><td>1</td><td>-</td><td>FM1,FM2,MW1,MW2</td></tr></table>	AREA	DISFM3	ENMW2	DISLW	Receiving Bands	Europe1 Europe2	0	0	0	FM1,FM2,FM3,MW1,LW	0	0	1	FM1,FM2,FM3,MW1	0	1	-	FM1,FM2,FM3,MW1,MW2	1	0	0	FM1,FM2,MW1,LW	1	0	1	FM1,FM2,,MW1	1	1	-	FM1,FM2,MW1,MW2	Other areas	0	0	-	FM1,FM2,FM3,MW1	0	1	-	FM1,FM2,FM3,MW1,MW2	1	0	-	FM1,FM2,MW1	1	1	-	FM1,FM2,MW1,MW2
AREA	DISFM3	ENMW2	DISLW	Receiving Bands																																												
Europe1 Europe2	0	0	0	FM1,FM2,FM3,MW1,LW																																												
	0	0	1	FM1,FM2,FM3,MW1																																												
	0	1	-	FM1,FM2,FM3,MW1,MW2																																												
	1	0	0	FM1,FM2,MW1,LW																																												
	1	0	1	FM1,FM2,,MW1																																												
	1	1	-	FM1,FM2,MW1,MW2																																												
Other areas	0	0	-	FM1,FM2,FM3,MW1																																												
	0	1	-	FM1,FM2,FM3,MW1,MW2																																												
	1	0	-	FM1,FM2,MW1																																												
	1	1	-	FM1,FM2,MW1,MW2																																												

--:Don't care

Symbol	Function						
M2S	<p>Preset memory write method setting switch. Its setting is shown below.</p> <table border="1"> <thead> <tr> <th>M2S</th><th>Write Method</th></tr> </thead> <tbody> <tr> <td>0</td><td>Preset memory is written by pressing a <b>M1(TP1)</b> to <b>M6</b> key in the 5 seconds memory write state by <b>ME</b> key</td></tr> <tr> <td>1</td><td>Preset memory is written by holding down a <b>M1(TP1)</b> to <b>M6</b> key for more than 2 seconds. The <b>ME</b> key is invalid.</td></tr> </tbody> </table> <p>For more information, see the <b>ME</b> and <b>M1(TP1)</b> to <b>M6</b> items.</p>	M2S	Write Method	0	Preset memory is written by pressing a <b>M1(TP1)</b> to <b>M6</b> key in the 5 seconds memory write state by <b>ME</b> key	1	Preset memory is written by holding down a <b>M1(TP1)</b> to <b>M6</b> key for more than 2 seconds. The <b>ME</b> key is invalid.
M2S	Write Method						
0	Preset memory is written by pressing a <b>M1(TP1)</b> to <b>M6</b> key in the 5 seconds memory write state by <b>ME</b> key						
1	Preset memory is written by holding down a <b>M1(TP1)</b> to <b>M6</b> key for more than 2 seconds. The <b>ME</b> key is invalid.						
AUTO 500	<p><b>MAN UP</b> and <b>MAN DWN</b> keys function setting switch. The <b>MAN UP</b> and <b>MAN DWN</b> keys can also be used as autotuning (seek operation) keys by means of this switch. The settings of this switch are shown below.</p> <table border="1"> <thead> <tr> <th>AUTO 500</th><th><b>MAN UP</b> , <b>MAN DWN</b> Key Function</th></tr> </thead> <tbody> <tr> <td>0</td><td>Manual tuning only. Each time the key is pressed, the channel is incremented or decremented by one. When the key is held down for more than 0.5 seconds, the channel is changed continuously and rapidly.</td></tr> <tr> <td>1</td><td>Manual tuning and autotuning. Each time the key is pressed, the channel is incremented or decremented by one. When the key is held down for more than 0.5 seconds, autotuning (seek operation) is performed from the next channel.</td></tr> </tbody> </table>	AUTO 500	<b>MAN UP</b> , <b>MAN DWN</b> Key Function	0	Manual tuning only. Each time the key is pressed, the channel is incremented or decremented by one. When the key is held down for more than 0.5 seconds, the channel is changed continuously and rapidly.	1	Manual tuning and autotuning. Each time the key is pressed, the channel is incremented or decremented by one. When the key is held down for more than 0.5 seconds, autotuning (seek operation) is performed from the next channel.
AUTO 500	<b>MAN UP</b> , <b>MAN DWN</b> Key Function						
0	Manual tuning only. Each time the key is pressed, the channel is incremented or decremented by one. When the key is held down for more than 0.5 seconds, the channel is changed continuously and rapidly.						
1	Manual tuning and autotuning. Each time the key is pressed, the channel is incremented or decremented by one. When the key is held down for more than 0.5 seconds, autotuning (seek operation) is performed from the next channel.						









Symbol	Function					
AUTOSTP	Switch used to set the condition to stop auto-tuning. The switch also allows auto-tuning to continue further when the presence of a station is determined during auto-tuning. The switch sets the auto-tuning stop conditions as follows;					
	<table> <tr> <th>AUTOLOC</th><th>Local Function</th></tr> <tr> <td>0</td><td>Whenever the presence of a station is determined from the IF counter(along with an SK signal from the station when in the VF mode), tuning locks in that station even if auto-tuning keys are held down.</td></tr> <tr> <td>1</td><td> <p>Auto-tuning stops when the presence of a station is determined from the IF counter (along with an SK signal from the station when in the VF mode.) and when auto-tuning keys are released ; that is, auto-tuning won't stop as long as an auto-tuning key is pressed even when the presence of a station is detected.</p> <p>This switch is operative with all the auto-tuning keys. During the first auto-tuning with <input type="checkbox"/> VF <input type="checkbox"/> key, however, tuning stops on detection of the presence of a station (along with an SK signal from the station) even while <input type="checkbox"/> VF <input type="checkbox"/> key is pressed.</p> </td></tr> </table>	AUTOLOC	Local Function	0	Whenever the presence of a station is determined from the IF counter(along with an SK signal from the station when in the VF mode), tuning locks in that station even if auto-tuning keys are held down.	1
AUTOLOC	Local Function					
0	Whenever the presence of a station is determined from the IF counter(along with an SK signal from the station when in the VF mode), tuning locks in that station even if auto-tuning keys are held down.					
1	<p>Auto-tuning stops when the presence of a station is determined from the IF counter (along with an SK signal from the station when in the VF mode.) and when auto-tuning keys are released ; that is, auto-tuning won't stop as long as an auto-tuning key is pressed even when the presence of a station is detected.</p> <p>This switch is operative with all the auto-tuning keys. During the first auto-tuning with <input type="checkbox"/> VF <input type="checkbox"/> key, however, tuning stops on detection of the presence of a station (along with an SK signal from the station) even while <input type="checkbox"/> VF <input type="checkbox"/> key is pressed.</p>					

Symbol	Function			
PRIO1 PRIO2	<p>Priority display setting switch.</p> <p>"Priority display" is display that returns to the previous display if no operation is performed within 5 seconds after the display was switched.</p> <p>These switches are valid only when the NOCLK switch is set to 0 (clock mode) when the device is not in the DK standby mode and radio monitor is not used. Their settings are shown below.</p>			
	PRIO1	PRIO2	Priority Display	Description
	0	0	None	<p>Display switching is performed when the <b>[DISP]</b> key and melody selection key (during clock display) was operated.</p> <ul style="list-style-type: none"> <li>- Radio mode</li> </ul> <p>The display switches between frequency display and clock display each time the <b>[DISP]</b> key is pressed. When the melody selection key is pressed during clock display, the display switches to frequency display.</p> <ul style="list-style-type: none"> <li>- Time mode</li> </ul> <p>The <b>[DISP]</b> key is disabled.</p> <ul style="list-style-type: none"> <li>- CD mode</li> </ul> <p>The display is switched between " <b>[Cd]</b> " display and clock display each time the <b>[DISP]</b> key is pressed.</p>
	1	0	Frequency CD	<p>When the display switched from frequency or " <b>[Cd]</b> " display to clock display by <b>[DISP]</b> key, if no operation is performed within 5 seconds, the display returns to the original display</p> <ul style="list-style-type: none"> <li>- Radio mode</li> </ul> <p>Normally the frequency is displayed, The display is switched to 5 seconds clock display by pressing the <b>[DISP]</b> key. When the <b>[DISP]</b> key is pressed again, or the melody selection key is pressed., during 5 seconds clock display, the display returns to frequency display.</p> <ul style="list-style-type: none"> <li>- Tape mode</li> </ul> <p>Clock display. The <b>[DISP]</b> key is invalid.</p> <ul style="list-style-type: none"> <li>- CD mode</li> </ul> <p>Normally " <b>[Cd]</b> " is displayed. The display is switched to 5 seconds clock display by pressing the <b>[DISP]</b> key. When the <b>[DISP]</b> key is pressed again during 5 seconds clock display, the display returns to CD display.</p>

Symbol	Function			
PRIO1 PRIO2	PRI01	PRI02	Priority Display	Description
	0	1	Clock	<p>In the radio and CE modes, clock display has priority.</p> <p>- Radio mode</p> <p>Normally the clock is displayed.</p> <p>The display is switched to 5 seconds frequency display by pressing the <b>DISP</b> key or melody selection key.</p> <p>When the <b>DISP</b> key is pressed again during 5 seconds frequency display, the display returns to clock display.</p> <p>- Tape mode</p> <p>The <b>DISP</b> key is invalid.</p> <p>-CD mode</p> <p>Normally the clock is displayed.</p> <p>The display is switched to 5 seconds "<b>CD</b>" display by pressing the <b>DISP</b> key.</p> <p>When the <b>DISP</b> key is pressed again during 5 seconds "<b>CD</b>" display, the display returns to clock display.</p>
	1	1	—	Do not set to this mode.
<p>"Frequency display" in the above means receiving frequency, receiving band, and preset memory display. Therefore, during radio reception, the "PSCAN", "SK", "VF", "ST", "MONO", "LOCAL" and "LOUD" displays light even at clock display.</p> <p>In the tape mode, the "LOUD", "MTL", "NR1", "NR2", "AMS" and "&gt;", "&lt;" displays also light at clock display.</p>				

Symbol	Function			
	PRIO1	PRIO2	Priority Display	Description
PRIO1 PRIO2	0	0	None	<ul style="list-style-type: none"> <li>- Type DK standby</li> <li>- Radio monitor</li> </ul> <p>The display switches between frequency display and clock display each time the <b>[DISP]</b> key is pressed.</p> <p>When the melody selection key is pressed during clock display, the display switches to frequency display</p> <p>When the device entered the tape DK standby and radio monitor standby mode, frequency is displayed first.</p> <ul style="list-style-type: none"> <li>- CD DK standby</li> <li>- Radio monitor</li> </ul> <p>The display switches between frequency display, "<b>[d]</b>" display and clock display each time the <b>[DISP]</b> key is pressed.</p> <p>When the melody selection key is pressed during "<b>[d]</b>" display and clock display, the display switches to frequency display.</p> <p>When the device entered the CD DK standby and radio monitor mode, frequency is displayed first.</p> <ul style="list-style-type: none"> <li>- DK ON</li> </ul> <p>Frequency displayed.</p> <p>The <b>[DISP]</b> key is invalid.</p>
	1	0	Frequency CD	<ul style="list-style-type: none"> <li>- Tape DK standby</li> <li>- Radio monitor</li> </ul> <p>Normally the frequency is displayed. The display is switched to 5 seconds clock display by pressing the <b>[DISP]</b> key.</p> <p>When the <b>[DISP]</b> key or the melody selection key is pressed during 5 seconds clock display, the display returns to frequency display.</p> <ul style="list-style-type: none"> <li>- CD DK standby</li> <li>- Radio Monitor</li> </ul> <p>Normally "<b>[d]</b>" is displayed. When the <b>[DISP]</b> key is pressed, the display switches to 5 seconds frequency display</p> <p>When the <b>[DISP]</b> key is pressed during frequency display, the display switches to 5 seconds clock display</p> <p>When the <b>[DISP]</b> key is pressed during clock display, the display returns to "<b>[d]</b>" display</p> <p>When the melody selection key is pressed during "<b>[d]</b>" and clock display, the display switches to 5 seconds frequency display</p> <ul style="list-style-type: none"> <li>- DK ON</li> </ul> <p>Frequency display</p> <p>The <b>[DISP]</b> key is invalid.</p>

Symbol	Function			
PRI01 PRI02	PRI01	PRI02	Priority Display	Description
	0	1	Clock	- Tape DK standby Radio monitor Normally the clock is displayed. When the <b>[DISP]</b> key or melody selection key is pressed, the display switches to 5 seconds frequency display. When the <b>[DISP]</b> key is pressed during 5 seconds frequency display the display returns to clock display. - CD DK standby - Radio monitor Normally the clock is displayed. When the <b>[DISP]</b> key is pressed, the display switches 5 seconds " <b>[d]</b> " display. When the <b>[DISP]</b> key is pressed during this " <b>[d]</b> " display, the display switches to 5 seconds frequency display. When the <b>[DISP]</b> key is pressed during frequency display, the display returns to clock display. When the melody selection key is pressed during clock display or " <b>[d]</b> " display, the display switches to 5 seconds frequency display. - DK ON Frequency display. The <b>[DISP]</b> key is invalid.
	1	1	—	Do not set to this mode.
	At no clock (NOCLK = 1), the following is displayed and the <b>[DISP]</b> key becomes invalid without regard to the setting of the PRI01 and PRI02 switches. And the <b>[DISP]</b> key is invalid.			
	Mode		Display	
	Radio		Frequency	
	Tape		None	
	CD		<b>[d]</b>	
	Tape DK standby CD DK standby DK ON Radio monitor		Frequency	
	RDON	Radio ON/OFF method setting switch. Its setting is shown below.		
	RDON	Radio ON/OFF Method		
	0	Radio is turned on and off by RDSET switch		
	1	Radio is turned on by making the CE pin High.		
When this switch was set to 1, do not use the RDSET switch.				

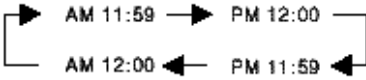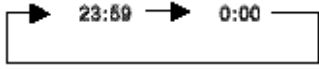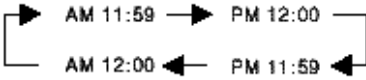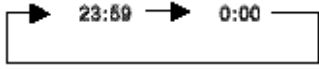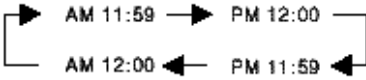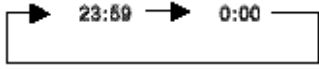Symbol	Function						
NOCLK	<p>Clock specified setting switch. Its setting is shown below.</p> <table border="1"> <tr> <th>NOCLK</th><th>Clock</th></tr> <tr> <td>0</td><td>Yes</td></tr> <tr> <td>1</td><td>No</td></tr> </table> <p>In the no clock mode, low consumption current (10 uA max) backup is possible by making the CE pin Low.</p>	NOCLK	Clock	0	Yes	1	No
NOCLK	Clock						
0	Yes						
1	No						
CLKDISP	<p>Clock time system setting switch. Its setting is shown below.</p> <table border="1"> <tr> <th>CLKDISP</th><th>Time System</th></tr> <tr> <td>0</td><td> <p>12-hour clock</p>  </td></tr> <tr> <td>1</td><td> <p>24-hour clock</p>  </td></tr> </table>	CLKDISP	Time System	0	<p>12-hour clock</p> 	1	<p>24-hour clock</p> 
CLKDISP	Time System						
0	<p>12-hour clock</p> 						
1	<p>24-hour clock</p> 						
FLASH	<p>Clock colon(:) display setting switch. Its setting is shown below.</p> <table border="1"> <tr> <th>FLASH</th><th>Colon (:) Display</th></tr> <tr> <td>0</td><td>Steady light</td></tr> <tr> <td>1</td><td> <p>Flashing Frequency : 1Hz Duty → 6(ON): 4 (OFF)</p> </td></tr> </table>	FLASH	Colon (:) Display	0	Steady light	1	<p>Flashing Frequency : 1Hz Duty → 6(ON): 4 (OFF)</p>
FLASH	Colon (:) Display						
0	Steady light						
1	<p>Flashing Frequency : 1Hz Duty → 6(ON): 4 (OFF)</p>						



Symbol

Function

ENTPK

KAMS

KNR

KMTL

The operation of each key is the same as that of the momentary keys **AMS**, **NR**, and **MTL**. Summarizing the above, the five keys **M1(TP1)** to **M3(TP3)**, **LOC(TP4)** and scan be used as **MONO(TP5)** tape function keys. Which functions used in common are determined by the ENTPK, KAMS, KNR and KMTL switches. This summarized below.



ENTPK	KAMS	KNR	KMTL	M1 (TP1)	M2 (TP2)	M3 (TP3)	LOC (TP4)	MONO (TP5)
0	1	1	1	AMS	NR	MTL		
	1	1	0	AMS	NR			
	1	0	1	AMS	MTL			
	1	0	0	AMS				
	0	1	1	NR	MTL			
	0	1	0	NR				
	0	0	1	MTL				
	0	0	0					
1	1	1	1	Do not set.				
	1	1	0				AMS	NR
	1	0	1				AMS	MTL
	1	0	0				AMS	
	0	1	1				NR	MTL
	0	1	0				NR	
	0	0	1				MTL	
	0	0	0					

When these functions are used. tuning operations in the tape DK standby, CD DK standby and radio monitor and DK ON modes are restricted as follows :

ENTPK	KAMS	KNR	KMTL	
0	0	0	0	Normal tuning possible
0	When even switch is 1			Tuning by <b>M1(TP1)</b> to <b>M6</b> key is possible.
1	—	—	—	The <b>LOC(TP4)</b> and <b>MONO(TP5)</b> keys cannot be used as local and monaural keys.



Symbol	Function						
ENNR2	<p>Switch that enables the NR<sub>2</sub> (Noise Reduction) function in the tape mode. Its setting is shown below.</p> <table border="1"> <thead> <tr> <th>ENNR2</th><th>Description</th></tr> </thead> <tbody> <tr> <td>0</td><td> <p>NR<sub>2</sub> function cannot be used.</p> <p>When the <span style="border: 1px solid black; padding: 0 2px;">NR</span> key or NR function key (selected by KNR switch) is pressed, the LCD panel "NR<sub>1</sub>" display and NR<sub>1</sub> pin output changes as follows :</p> <div style="text-align: center;"> <pre> graph LR     A["'NR1' display OFF 'NR1' pin Low output"] --&gt; B["'NR1' display ON 'NR1' pin High output"] </pre> </div> </td></tr> <tr> <td>1</td><td> <p>Both the NR<sub>1</sub> and NR<sub>2</sub> functions can be used.</p> <p>When the <span style="border: 1px solid black; padding: 0 2px;">NR</span> key or NR function key (selected by KNR switch) is pressed, the LCD panel "NR<sub>1</sub>" and "NR<sub>2</sub>" displays and NR<sub>1</sub> and MONO/NR<sub>2</sub> pins output change as follows:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>"NR<sub>1</sub>" display OFF NR<sub>1</sub> pin Low output → NR<sub>2</sub>" display OFF MONO/NR<sub>2</sub> pin Low output</p> </div> <div style="text-align: center;"> <p>"NR<sub>1</sub>" display ON NR<sub>1</sub> pin High output → NR<sub>2</sub>" display OFF MONO/NR<sub>2</sub> pin Low output</p> </div> <div style="text-align: center;"> <p>"NR<sub>1</sub>" display OFF NR<sub>1</sub> pin Low output → NR<sub>2</sub>" display ON MONO/NR<sub>2</sub> pin High output</p> </div> </div> </td></tr> </tbody> </table>	ENNR2	Description	0	<p>NR<sub>2</sub> function cannot be used.</p> <p>When the <span style="border: 1px solid black; padding: 0 2px;">NR</span> key or NR function key (selected by KNR switch) is pressed, the LCD panel "NR<sub>1</sub>" display and NR<sub>1</sub> pin output changes as follows :</p> <div style="text-align: center;"> <pre> graph LR     A["'NR1' display OFF 'NR1' pin Low output"] --&gt; B["'NR1' display ON 'NR1' pin High output"] </pre> </div>	1	<p>Both the NR<sub>1</sub> and NR<sub>2</sub> functions can be used.</p> <p>When the <span style="border: 1px solid black; padding: 0 2px;">NR</span> key or NR function key (selected by KNR switch) is pressed, the LCD panel "NR<sub>1</sub>" and "NR<sub>2</sub>" displays and NR<sub>1</sub> and MONO/NR<sub>2</sub> pins output change as follows:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>"NR<sub>1</sub>" display OFF NR<sub>1</sub> pin Low output → NR<sub>2</sub>" display OFF MONO/NR<sub>2</sub> pin Low output</p> </div> <div style="text-align: center;"> <p>"NR<sub>1</sub>" display ON NR<sub>1</sub> pin High output → NR<sub>2</sub>" display OFF MONO/NR<sub>2</sub> pin Low output</p> </div> <div style="text-align: center;"> <p>"NR<sub>1</sub>" display OFF NR<sub>1</sub> pin Low output → NR<sub>2</sub>" display ON MONO/NR<sub>2</sub> pin High output</p> </div> </div>
ENNR2	Description						
0	<p>NR<sub>2</sub> function cannot be used.</p> <p>When the <span style="border: 1px solid black; padding: 0 2px;">NR</span> key or NR function key (selected by KNR switch) is pressed, the LCD panel "NR<sub>1</sub>" display and NR<sub>1</sub> pin output changes as follows :</p> <div style="text-align: center;"> <pre> graph LR     A["'NR1' display OFF 'NR1' pin Low output"] --&gt; B["'NR1' display ON 'NR1' pin High output"] </pre> </div>						
1	<p>Both the NR<sub>1</sub> and NR<sub>2</sub> functions can be used.</p> <p>When the <span style="border: 1px solid black; padding: 0 2px;">NR</span> key or NR function key (selected by KNR switch) is pressed, the LCD panel "NR<sub>1</sub>" and "NR<sub>2</sub>" displays and NR<sub>1</sub> and MONO/NR<sub>2</sub> pins output change as follows:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>"NR<sub>1</sub>" display OFF NR<sub>1</sub> pin Low output → NR<sub>2</sub>" display OFF MONO/NR<sub>2</sub> pin Low output</p> </div> <div style="text-align: center;"> <p>"NR<sub>1</sub>" display ON NR<sub>1</sub> pin High output → NR<sub>2</sub>" display OFF MONO/NR<sub>2</sub> pin Low output</p> </div> <div style="text-align: center;"> <p>"NR<sub>1</sub>" display OFF NR<sub>1</sub> pin Low output → NR<sub>2</sub>" display ON MONO/NR<sub>2</sub> pin High output</p> </div> </div>						
MUTESEL	<p>Sets the <u>RDMUTE</u> pin output method in the tape and CD modes. Its setting is shown below.</p> <table border="1"> <thead> <tr> <th>MUTESEL</th><th>RDMUTE Pin Output</th></tr> </thead> <tbody> <tr> <td>1</td><td> <p>In the tape and CD modes, muting is turned off.</p> <div style="text-align: center;"> <p>MODE Pin LOW</p> <p>Mode switching by TPSET, CDSET switch</p> </div> <p>When MUTESEL = 1 is set, do not use the DK standby and radio monitor functions.</p> </td></tr> <tr> <td>0</td><td> <p>In the tape and CD modes, muting remains ON.</p> <div style="text-align: center;"> <p>MODE Pin LOW</p> <p>Mode switching by TPSET, CDSET switch</p> </div> <p>When MUTESEL = 1 is set, do not use the DK standby and monitor functions.</p> </td></tr> </tbody> </table> <p>For details, see "Radio Mute Output Timing"</p>	MUTESEL	RDMUTE Pin Output	1	<p>In the tape and CD modes, muting is turned off.</p> <div style="text-align: center;"> <p>MODE Pin LOW</p> <p>Mode switching by TPSET, CDSET switch</p> </div> <p>When MUTESEL = 1 is set, do not use the DK standby and radio monitor functions.</p>	0	<p>In the tape and CD modes, muting remains ON.</p> <div style="text-align: center;"> <p>MODE Pin LOW</p> <p>Mode switching by TPSET, CDSET switch</p> </div> <p>When MUTESEL = 1 is set, do not use the DK standby and monitor functions.</p>
MUTESEL	RDMUTE Pin Output						
1	<p>In the tape and CD modes, muting is turned off.</p> <div style="text-align: center;"> <p>MODE Pin LOW</p> <p>Mode switching by TPSET, CDSET switch</p> </div> <p>When MUTESEL = 1 is set, do not use the DK standby and radio monitor functions.</p>						
0	<p>In the tape and CD modes, muting remains ON.</p> <div style="text-align: center;"> <p>MODE Pin LOW</p> <p>Mode switching by TPSET, CDSET switch</p> </div> <p>When MUTESEL = 1 is set, do not use the DK standby and monitor functions.</p>						

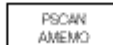Symbol	Function			
ENFMIF DISAMIF	IF counter use setting switch. Its setting is shown below.			
	ENFMIF	DISAMIF	BAND	Broadcast Station Detection Method
			FM	IF counter and 3D system
	1	0	MW,LW	IF counter and 3D system
			FM	IF counter and 3D system
	1	1	MW,LW	SD system
			FM	SD system
	0	0	MW,LW	IF counter and 3D system
			FM	SD system
	0	1	MW,LW	SD system
FM			SD system	
DISAMEMO	Auto preset memory function disable switch. Its setting is shown below.			
	DISAMEMO	Description		
	0	Enables the auto preset memory function.		
		When the  key is pressed for more than 2 seconds, auto preset memory operation begins.		
	1	Disables the auto preset memory function		
The  key performs the preset scan function only.				

### 3. Mode Transition

With the SD4002, the radio can be turned on and off by the following two methods

- (1) By CE pin when the initialized diode switch RDON = 1
- (2) By turning the transistor or alternate switch RDSET on and off

The mode transition at each operation is described in 3.1, 3.2 and 3.3

#### 3.1 When the Initialized Diode RDON = 1 (Radio ON/OFF by CE Pin)


The radio mode is turned on and off by CE pin.

Switching to the tape and CD modes is performed by TPSET and CDSET switches, respectively


When RDON = 1, do not use the RDSET switch.

When the CE pin is made Low level, clock display is not performed.

- (1) CE : Low to High

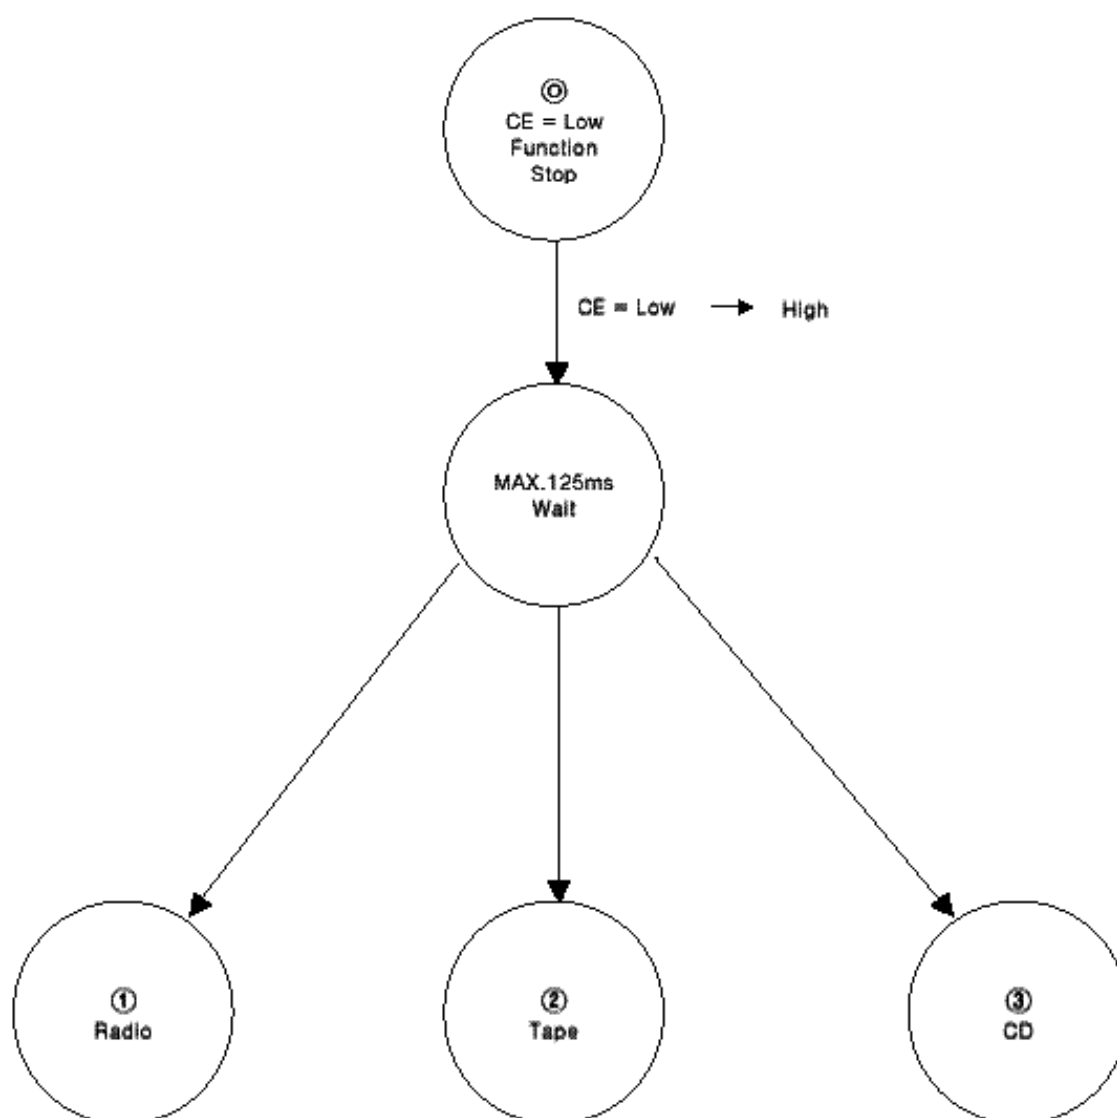

(2) CE : High Level

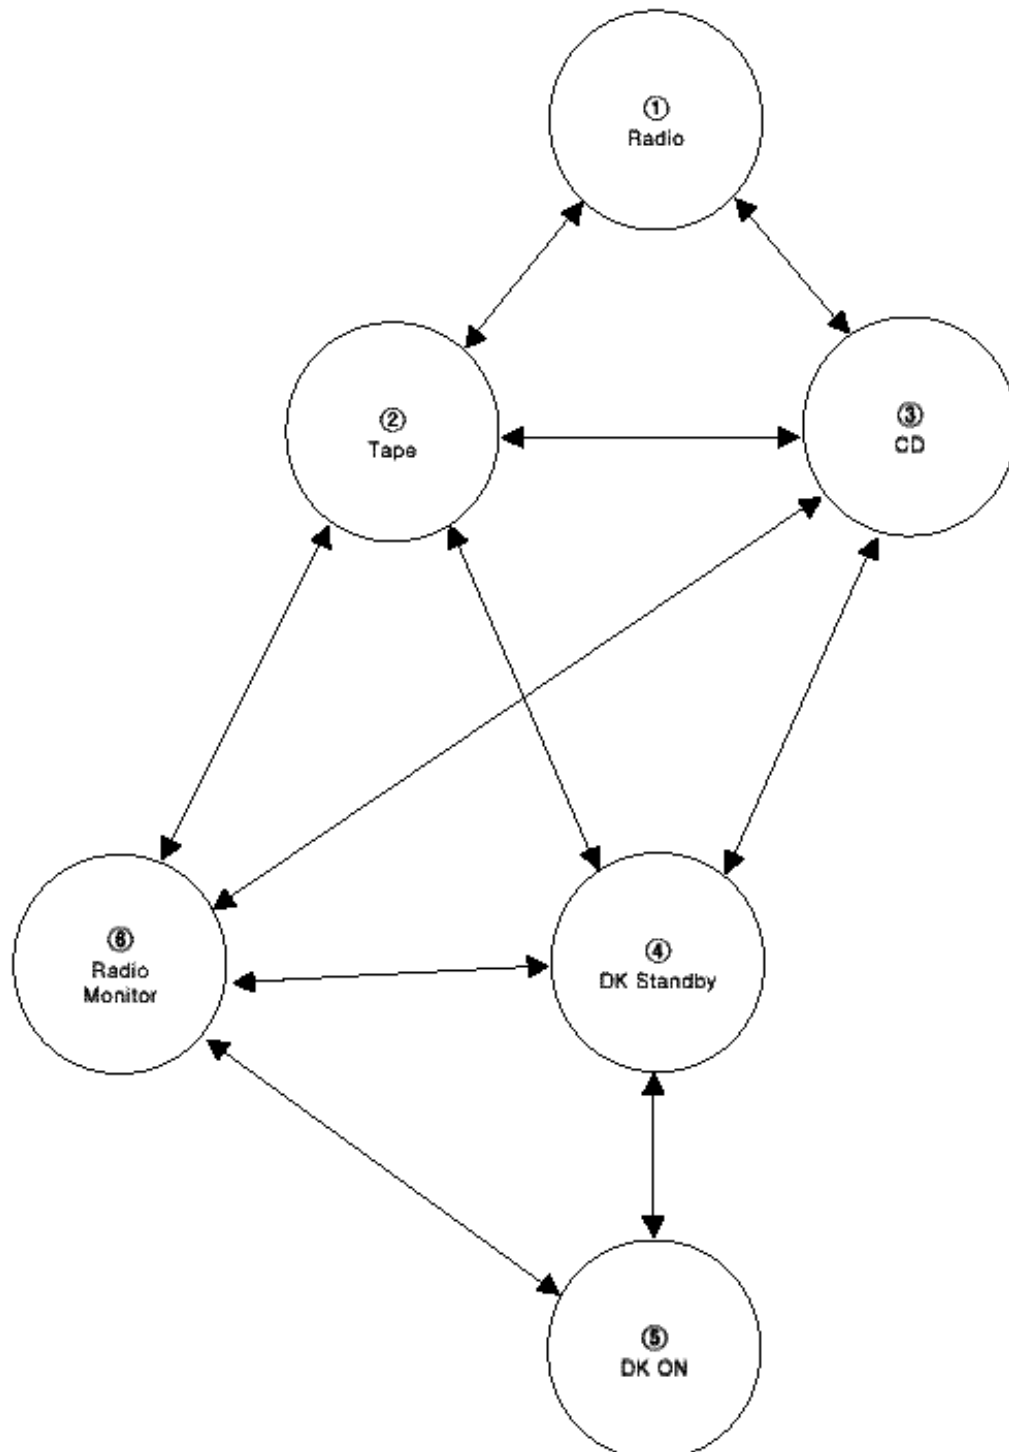


### 3.1 Radio ON/OFF by RDSET Switch

The radio is turned on and off by RDSET switch.


Switching to the tape and mode is performed by TPSET and CDSET switch, respectively.

The difference from RDON=1 of 3.1 is that the clock is displayed even when the radio, tape and CD modes are OFF.

(1) CE : Low To high

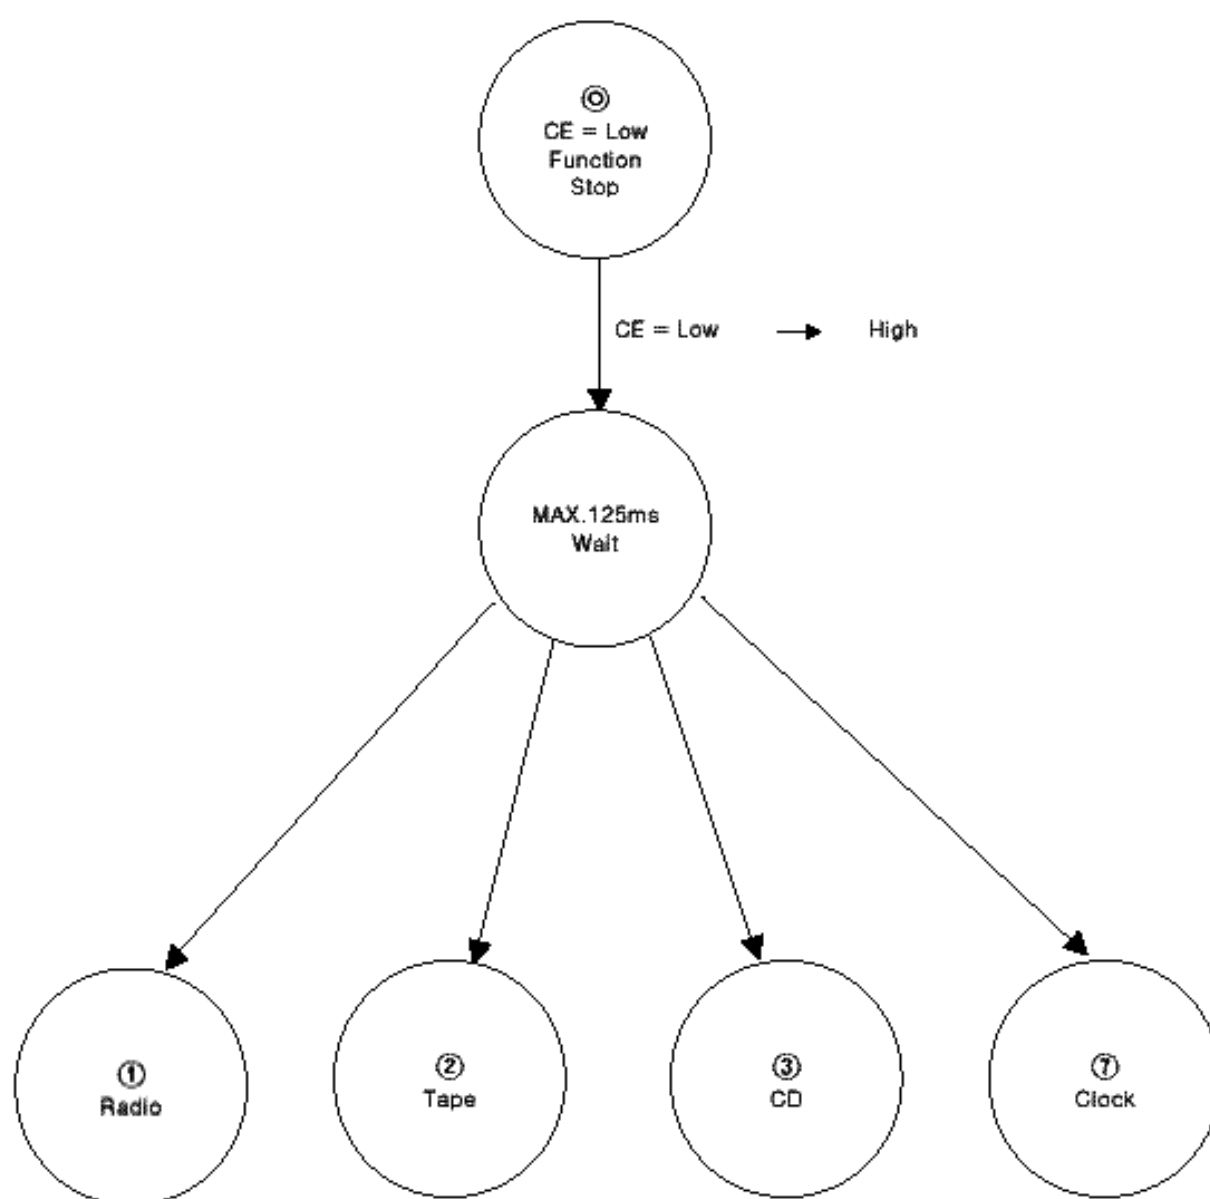

(2) CE : High Level

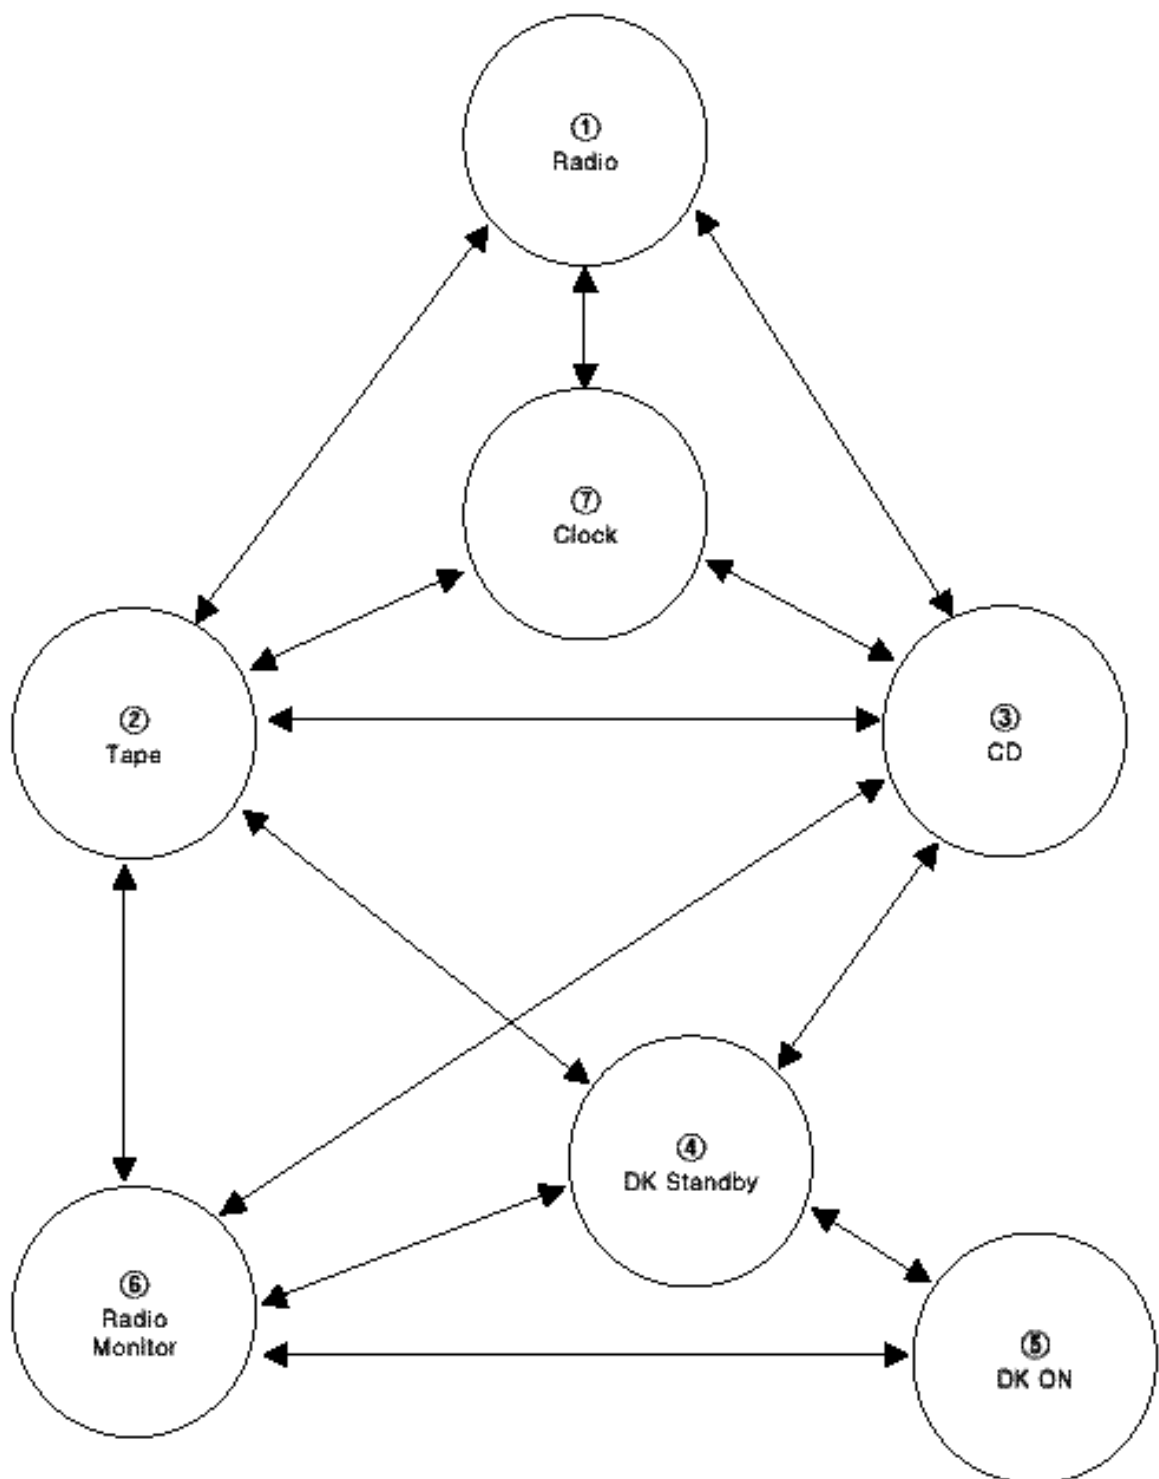

## 3.3 Description of Each Mode

Display	Description
① CE=Low	Backup mode. When the NOCLK switch is set to no clock, low consumption current(10 uA Max.) backup is possible. When clock is selected, the device is set to the clock count mode. In the mode, the maximum consumption current is 500 uA.
② Radio	When the CE pin is high level and the TPSET and CDSET switches are OFF, the device is set to the radio mode.
③ Tape	When the CE pin is high level and the TPSET switch is ON and the CDSET switch is OFF, the device is set to the tape mode.
④ CD	When the CE pin is high level and the CDSET switch is ON, the device is set to the CD mode.
⑤ DK Standby	When the VF band is received in the radio mode and the mode is switched to the tape or CD mode by TPSET or CDSET switch, the device is set to the DK standby mode. The device is also set to the DK standby mode by pressing the <span style="border: 1px solid black; padding: 0 5px;">VF</span> key in the tape or CD modes. In the DK standby mode, VF band tuning operation is enabled.
⑥ D.K	When the DK switch is set to ON in the DK standby mode, the device enters the DK ON mode. In the DK ON mode, radio muting (RDMUTE pin) is turned off and audio muting (AMUTE pin) is turned on.
⑦ Radio monitor	When the tape mode is set by TPSET switch when the radio monitor mode is ON by <span style="border: 1px solid black; padding: 0 5px;">RDMONI</span> in the radio mode, the device enters the radio monitor mode. The radio monitor mode is also set by pressing the <span style="border: 1px solid black; padding: 0 5px;">RDMONI</span> key in the tape and CD modes. In the radio monitor mode, normal tuning operation is possible. In the radio monitor mode, radio muting (RDMUTE pin) is turned off and audio muting (AMUTE pin) is turned on.
⑧ Clock	NOCLK = 0 Only clock display is performed. Clock adjustment is also possible. NOCLK = 1 Function is disabled. However, since the CE is high level, the consumption current is 500 uA Typ.

### **3.4 Radio ON/OFF by POWER Key**

The POWER Key valid when CE pin is high level.

Each time the key is pressed, the POWER pin(pin 23) output is inverted.


Therefore, a circuit is configured so that the radio is turned on and off by setting RDON = 0 and turning the RDSET switch on and off by POWER pin.

For details, see "Application Circuit"



## 4. Display


### 4.1 LCD Pannel

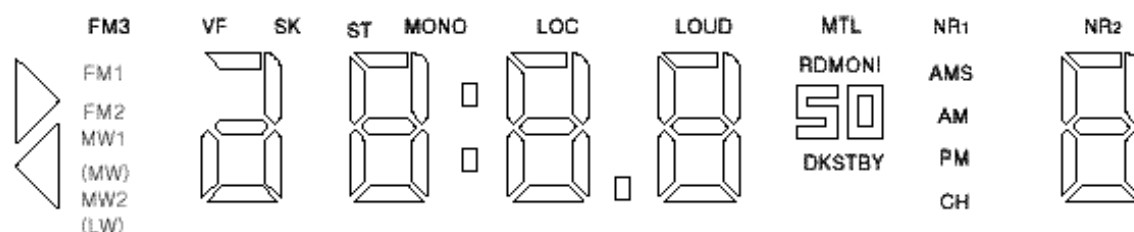


### 4.2 Display Type

1 2 3 4 5 6 7 8 9 0 Cd

### 4.3 Segment Lines

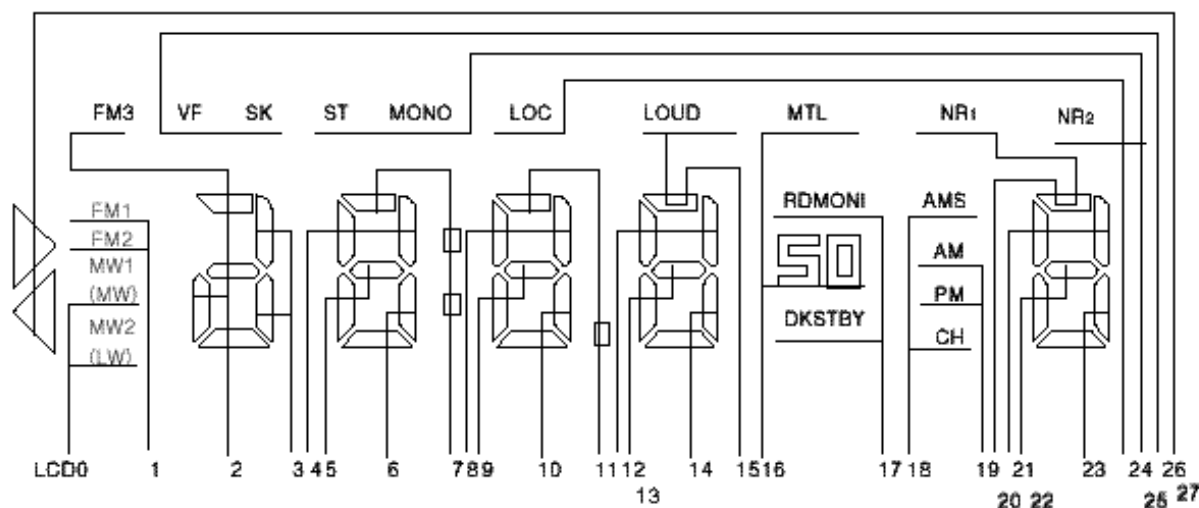

### 4.4 Common Lines

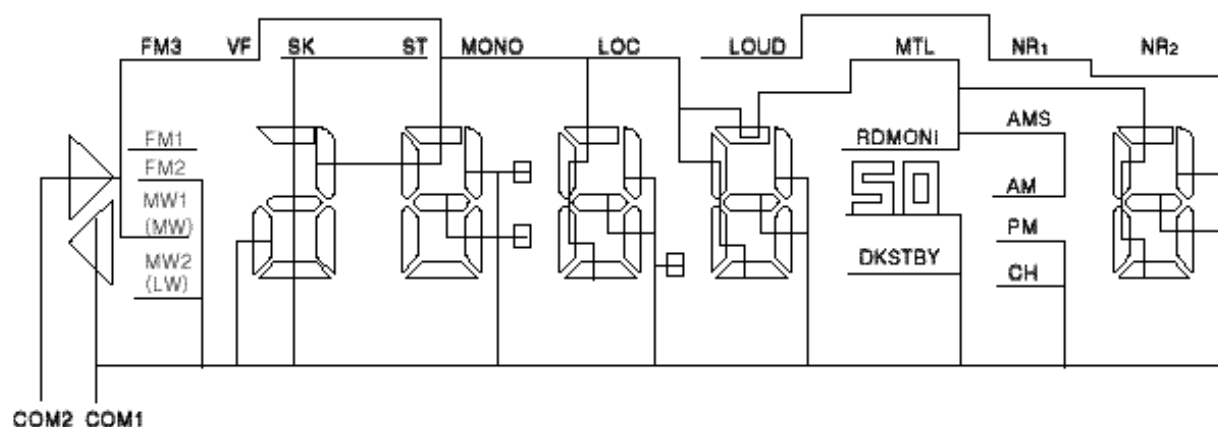

## 4.5 LCD Assignment Table

LCD	COM1	COM2
0	MW2(LW)	MW1(MW)
1	FM2	FM1
2	4a,4d,4e,4g	FM3
3	4c	4b
4	3b	3f
5	3g	3e
6	3c	3d
7	COLON(:)	3a
8	2b	2f
9	2g	2e
10	2c	2d
11	POINT(.)	2a
12	1b	1f
13	1g	1e
14	1c	1d
15	LOUD	1a
16	50	MTL
17	DKSTY	RDMONI
18	CH	AMS
19	PM	AM
20	NR1	Ca
21	Cb	Cf
22	Cg	Ce
23	Cc	Cd
24	NR2	LOC
25	ST	MONO
26	SK	VF
27	◁	▷

FM3

VF

SK

ST

MONO


LOC

LOUD

MTL

NR1

NR2

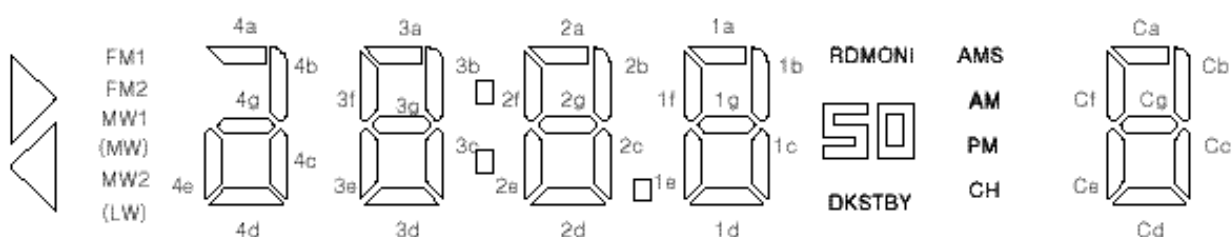

## 4.6 Description of Display

Display	Description
VF	Indicates that the device is on the VF band.
SK	Indicates that the SK signal is input. It lights when the SK switch is turned on at the FM and VF bands.
ST	Indicates that a STEREO signal is input. It lights when the $\overline{ST}$ pin (pin 64) becomes Low on the FM and VF bands. However, it does not light in the MONO mode.
MONO	Indicates that the device is in the monaural mode. When the <b>MONO</b> key is pressed on the FM and VF bands, the display is inverted. High level is output from the MONO/NR <sub>2</sub> pin(pin 18) while this display is lit. it is invalid on the MW and LW bands.
LOC	Indicates that the device is in the LOCAL mode. When AUTOLOC = 0, when the <b>LOC</b> key is pressed in a radio mode(FM, MW, LW bands). the display is inverted. When AUTOCLOC = 1, this display lights during autotuning local search. High level is output from the LOC pin (pin 10) during autotuning while this display is lit.
LOUD	Indicates that the device is in the LOUDNESS state. When the <b>LOU</b> key is pressed in the radio, tape or CD mode, this display is inverted. High level is output from the LOUD pin (pin 19) while this display is lit.
MTL	Indicates that the device is in the METAL state. When the <b>METAL</b> function key is pressed in the tape mode, this display is inverted. High level is output from the MTL pin (pin 21) while this display is lit.
NR <sub>1</sub>	Indicates that the device is in the NR <sub>1</sub> (Noise Reduction) state. When the device is placed into the NR <sub>1</sub> state by <b>NR</b> function key in the tape mode. this display lights. High level is output from the NR <sub>1</sub> pin (pin 22) while this display is lit.
NR <sub>2</sub>	Indicates that the device is in the NR <sub>2</sub> (Noise Reduction) state. The NR <sub>2</sub> function can be used with the initialized diode ENNR <sub>2</sub> switch. When the device was placed into the NR <sub>2</sub> state by <b>NR</b> function key in the tape mode, this display lights. High level is output from the MONO / NR <sub>2</sub> pin (pin 18) while this display is lit.
DKSTBY	Lights in the DK standby and DK ON modes in the tape/CD mode.
◀ ▶	Indicates the direction of tape travel. In the tape mode, this display indicates the tape direction according to the state of the RL switch. If the FF switch is ON, this display flashes. For more information, see the description of each pin.

Display	Description
<b>FM1</b> <b>FM2</b> <b>FM3</b> <b>MW1(MW)</b> <b>MW2(LW)</b>	<p>Indicates the receiving band in the radio mode.</p> <p>In Europe, when the device is switched to LW band, "MW2(LW)" lights.</p>
	<p>Displays the receiving frequency CD and clock.</p> <ul style="list-style-type: none"> <li>- Receiving frequency display Displayed in the radio mode.</li> <li>"50" is displayed only on the Europe and South Africa FM bands.</li> <li>"."(D.P) is displayed as the decimal point on the FM bands.</li> <li>- CD display When the device enters the CD mode, the following is displayed.</li> <li>- Clock display 12 hour clock or 24 hour clock can be selected by the initialized diode CLKDSP switch. Flashing of the ":"(colon) display is possible by the initialized diode FLASH switch.</li> </ul>
<b>AMS</b>	<p>12 hour clock AM and PM display.</p> <p>When the <input type="button" value="AMS"/> function key is pressed in the tape mode, this display is inverted.</p> <p>High level is output from the AMS pin (pin 20) while this display is it.</p>
<b>AM</b> <b>PM</b>	12 hour clock AM and PM display.
	<p>Indicates the preset memory number ab AMS selection number.</p> <ul style="list-style-type: none"> <li>- Preset memory number display. In the radio mode, when preset memory write and call are performed, the corresponding preset number and "ch" are displayed.</li> <li>In the memory write mode set by <input type="button" value="ME"/> key, the "ch" display flashes at 1HZ.</li> <li>During preset memory scanning by <input type="button" value="PSCAN"/> key, the preset memory number display (Ca to Cg) flashes at 1 Hz.</li> </ul>
<b>RDMINI</b>	Lights in the radio monitor mode.

## 5. Radio MUTE Output Timing (RDMUTE)


- 1) Key ON chattering prevention
- 2) Premuting and BEEP output
- 3) Division ratio setting and display contents updating
- 4) Postmuting
- 5) Scan time
- 6) PLL lock wait time

### 5.1 Radio MUTE (RDMUTE PIN) Output Timing Charts


#### 1) Manual Up/Down

##### (1) 1 channel up/down

(a) AUTO 500 switch = 0

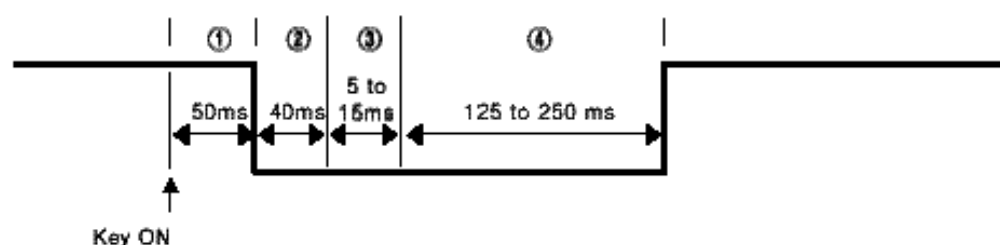


(b) AUTO 500 switch = 1

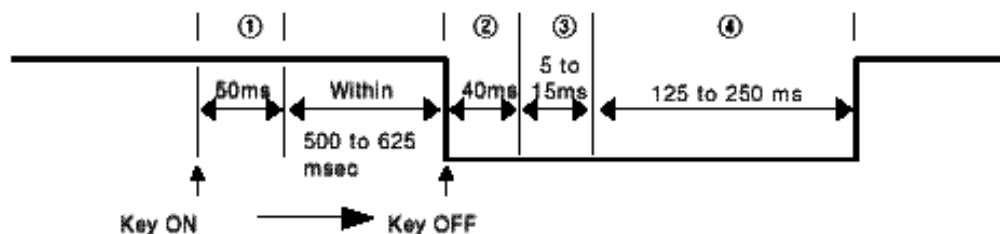

At the band edge (between lowest frequency and highest frequency) of both (a) and (b), time ④ is 625 to 750 ms.

#### (2) Continuous up/down

(a) AUTO 500 switch = 0

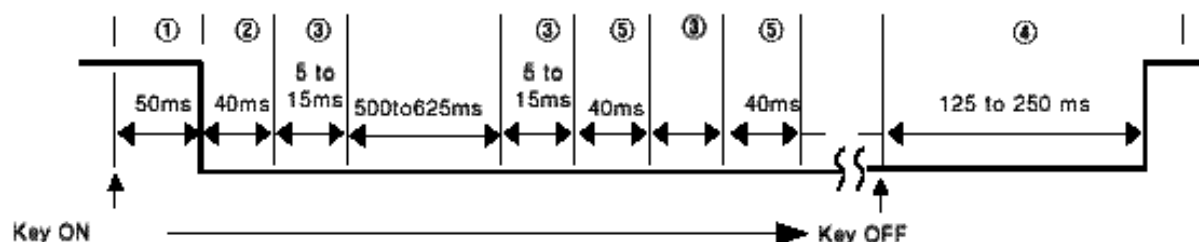

At the band edge, time ⑤ becomes 540 to 665ms and time ① becomes 625 to 750ms

(a) When AUTO 500 switch = 1, continuous up/down is not performed because holding down the key for more than 0.5 seconds sets autotuning.

## 2) Auto Up/Down

(1) 



 , 




 , 




 , 



 keys

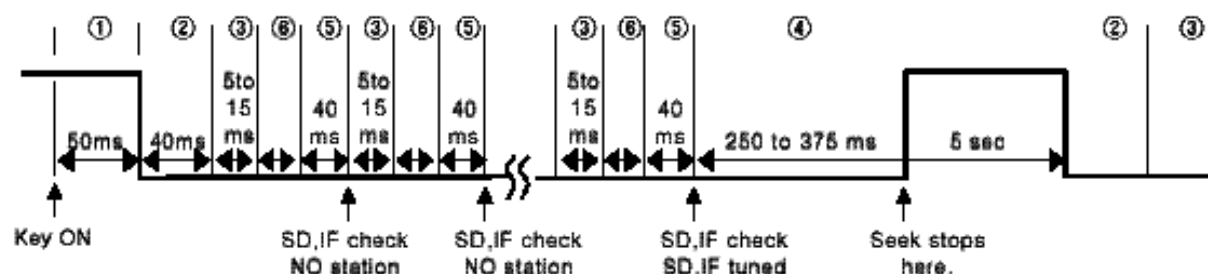

(2) **MAN** , **MAN DWN** key held down for more than 0.5 seconds when  
AUTO 500 switch = 1

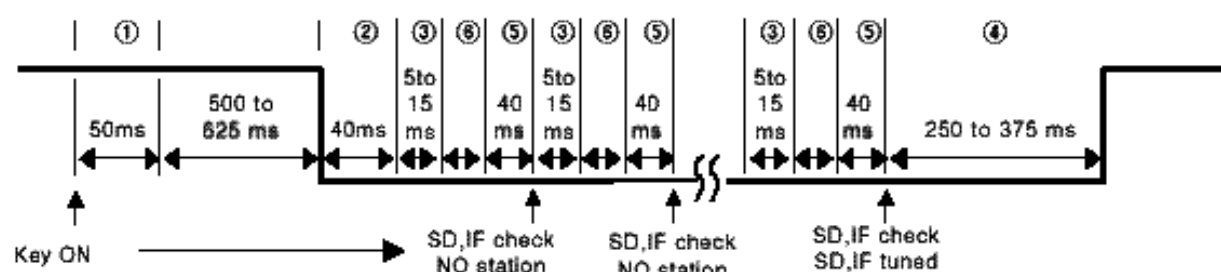


At both (1) and (2), at the band edge time ③ becomes 520 to 695ms

IF check is performed twice, once in the FAST mode and once in the SLOW mode.


FAST mode IF check takes approx. 6ms on the FM, MW and LW bands and SLOW mode IF check takes approx. 15ms on the FM band and approx. 25ms on the MW and LW bands.

3) Preset memory call

(1) M2S switch = 0

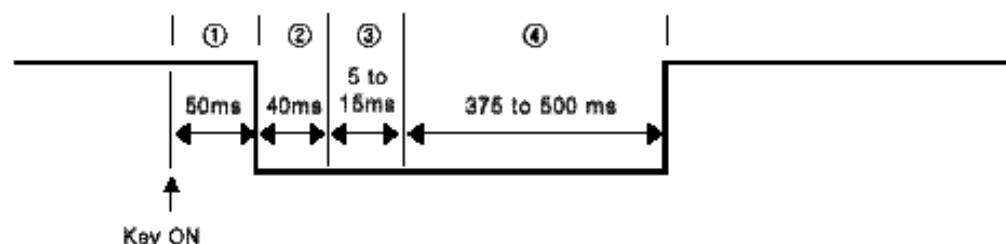


(2) M2S switch = 1

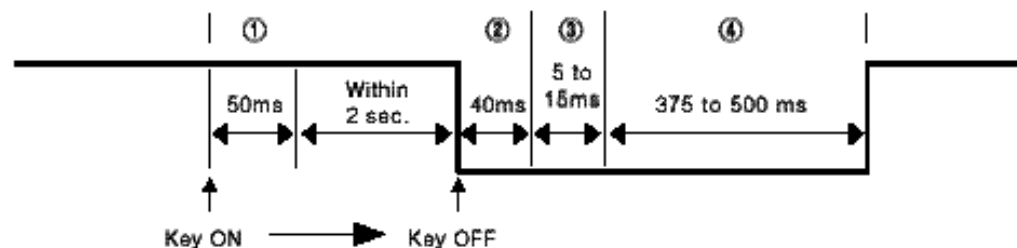


4) Preset memory write

(1) M2S switch = 0

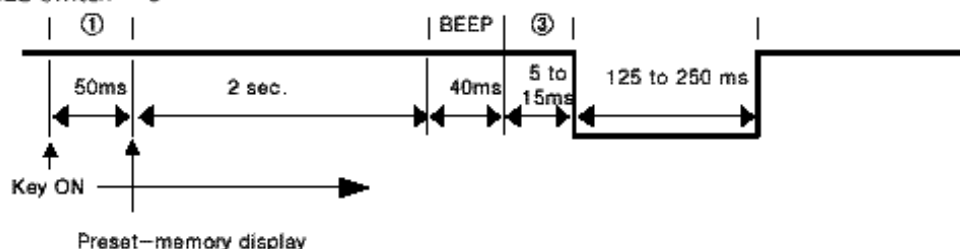


(2) When M2S switch = 1, muting is not output.

5) Preset memory scan

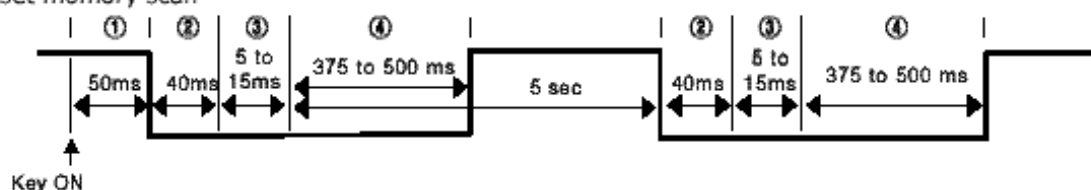


6) VF mode


(1) When VF mode selected with VF key ON

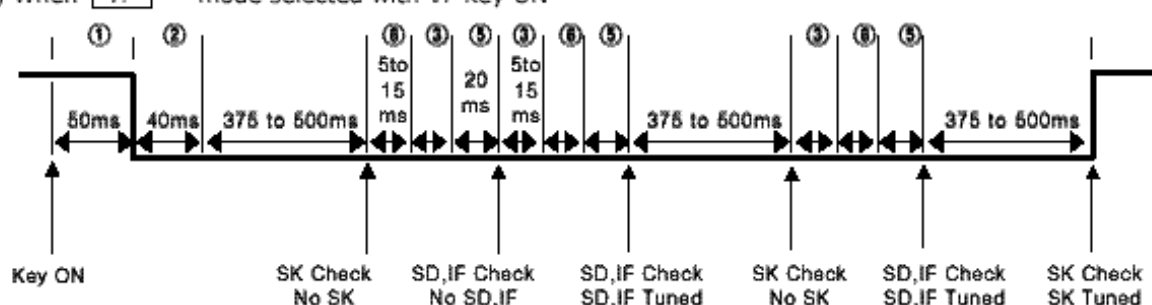

(2) Seek and scan operatingg in VF mode.

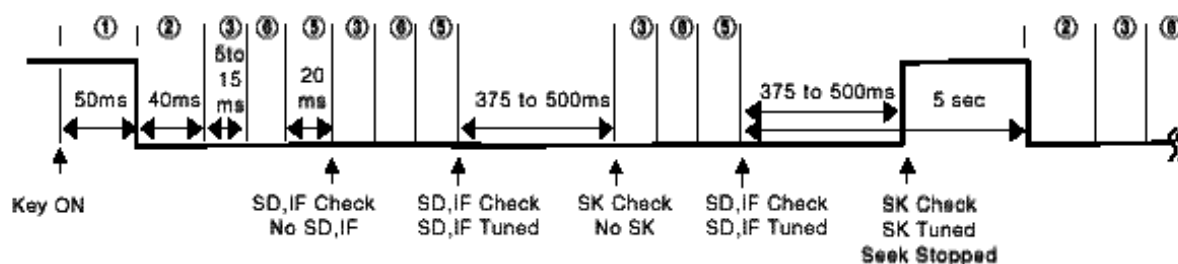


7) Band switching

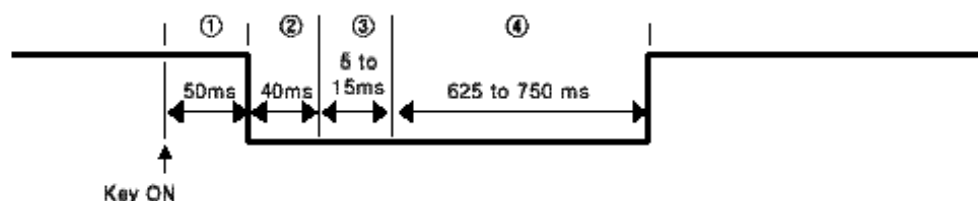


## 8) Radio OFF to ON


## (1) RDSET switch

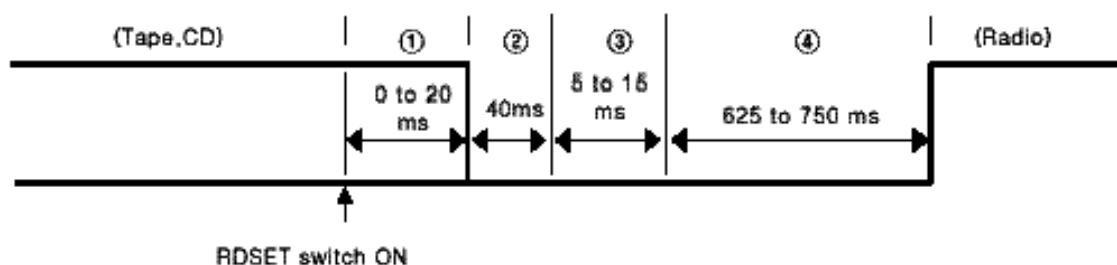


## (2) CE : Low to High by RDON switch = 1

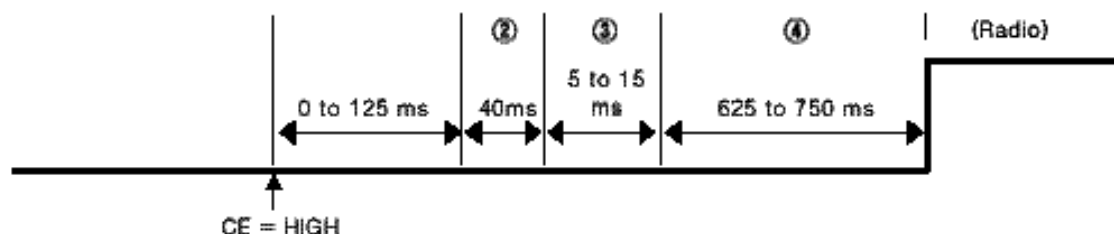

## 9) TAPE or CD OFF to ON

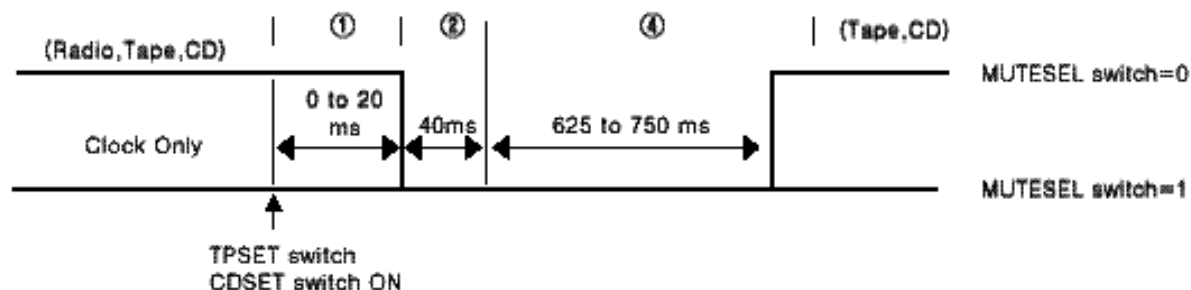

## 10) CE pin High to Low

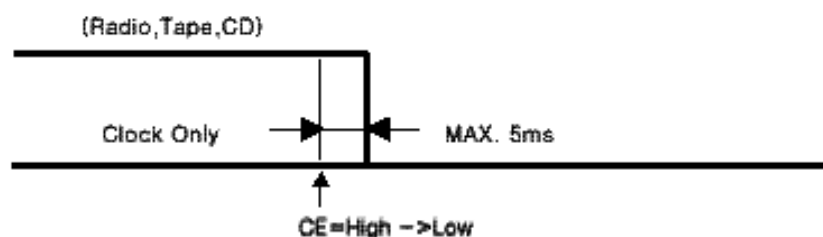




## 5.2 Radio MUTE(RDMUTE PIN) and Audio MUTE(AMUTE PIN) Output Timing Charge


1) When switched from radio to tape or CD mode.

(Other than VF band, other than radio monitor mode)

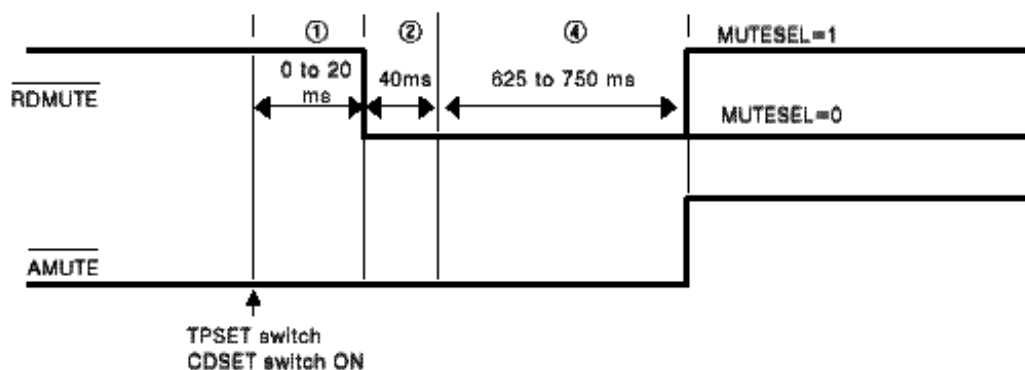


2) When switched from VF band to tape or CD mode(Set MUTESEL to 0)

(1) DK = OFF

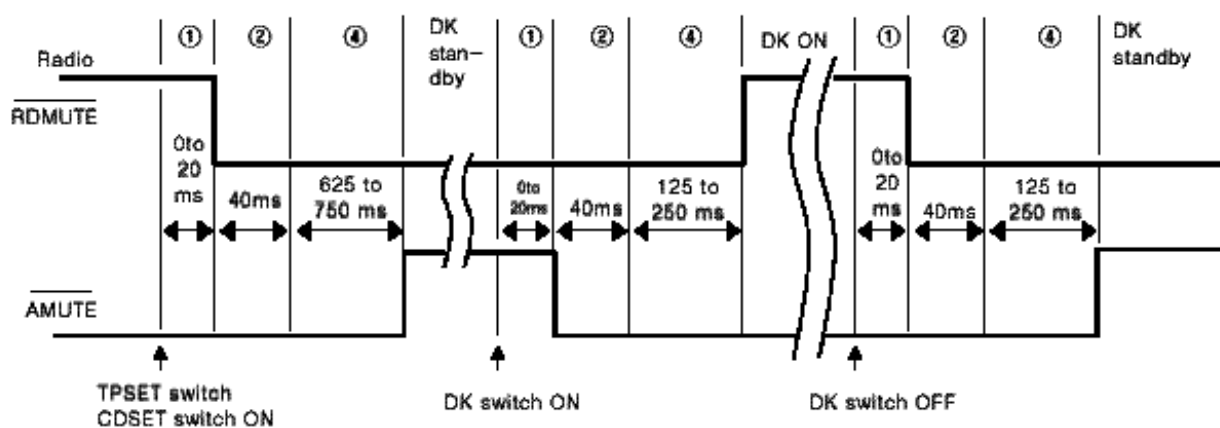


(2) DK = ON

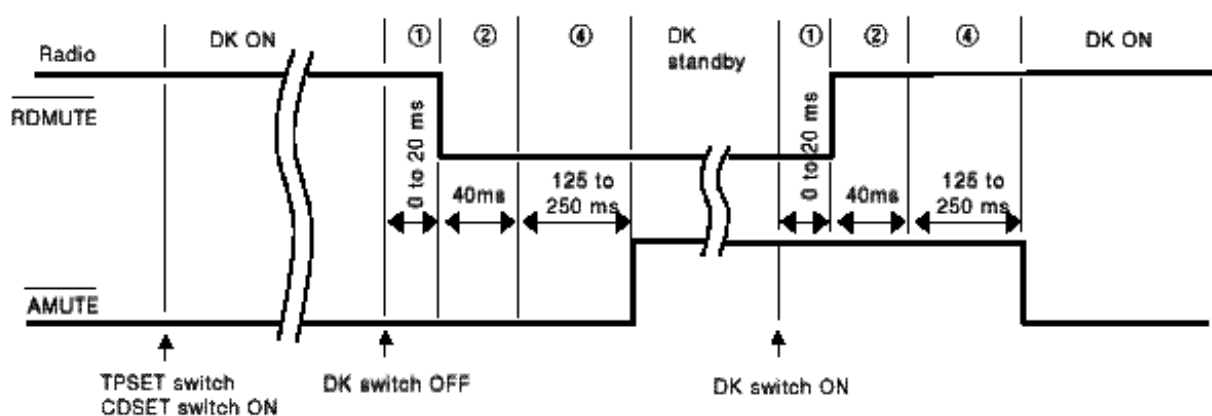


## 3) Radio monitor mode(Set MUTESEL to 0)

1) When switched from radio monitor OFF in the radio mode.

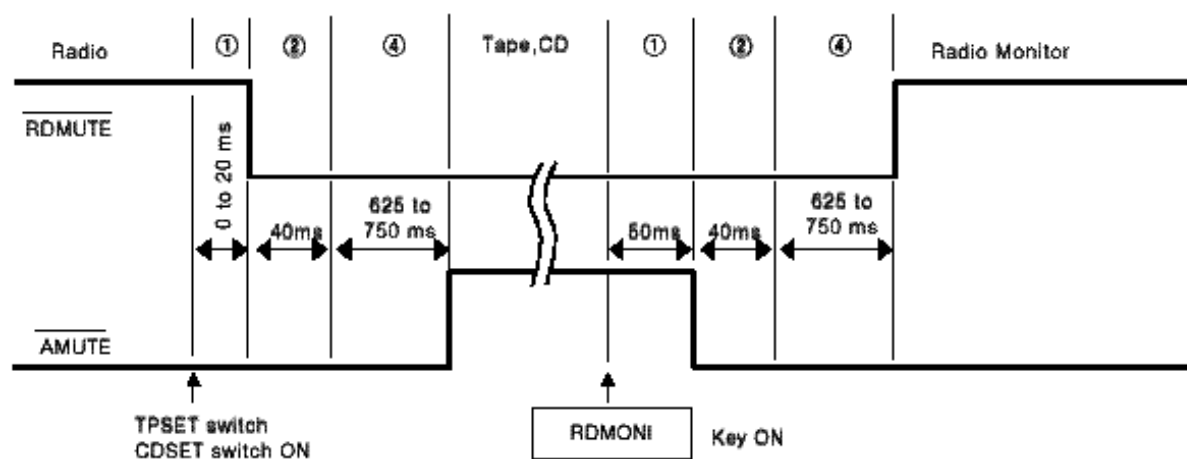


2) When switched from radio monitor ON in the radio mode.

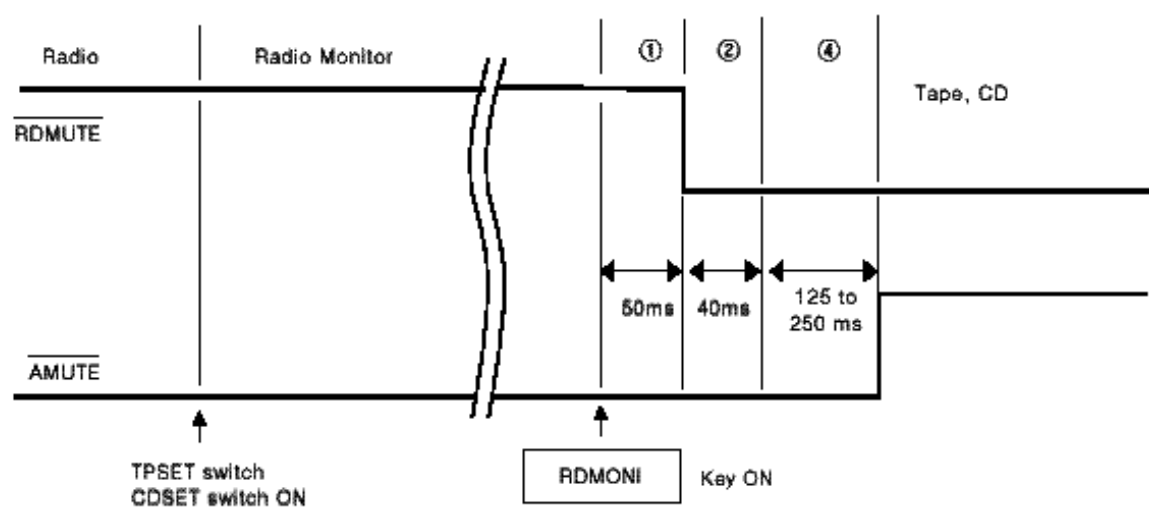


## 6. Pin I/O Circuits

The I/O circuit of each pin of the SD4002 is shown below in abbreviated form.


(1) LCD0 / KS0 to LCD27, CGP, PB0 to PB3, PD0 to PD2, EO1, EO2

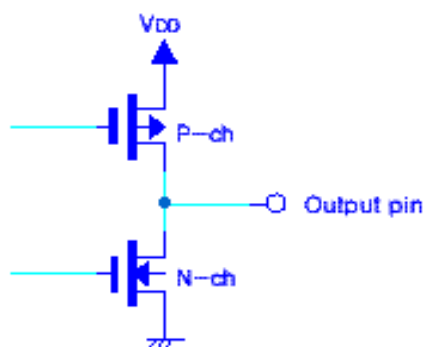


(2)  $\overline{\text{INT}}$ , AD

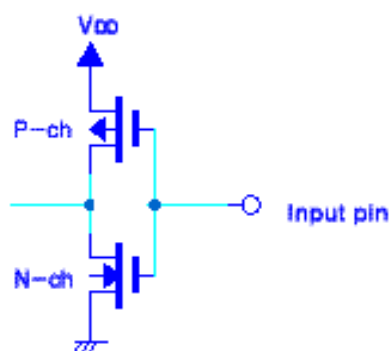


(3) PA<sub>0</sub> / AMIF, PA<sub>1</sub>/FMIF, PA<sub>2</sub>, PA<sub>3</sub>, PC<sub>0</sub> to PC<sub>3</sub>

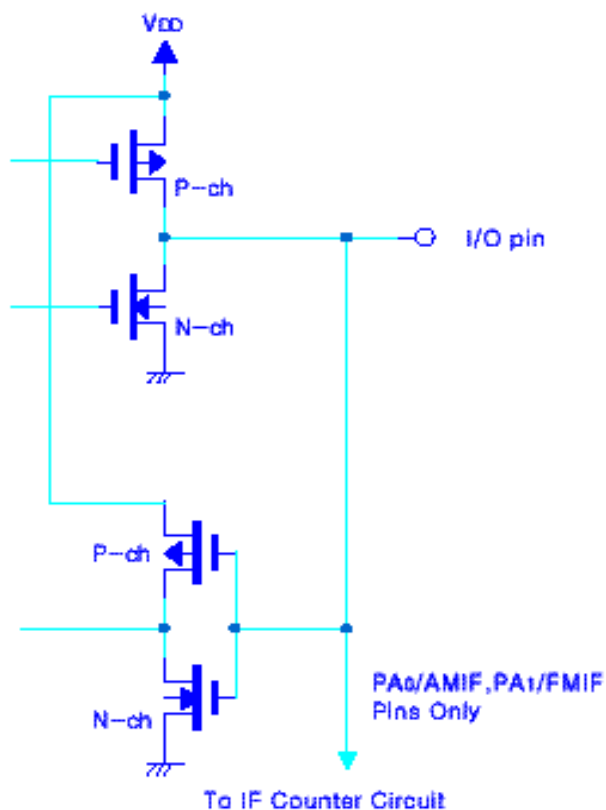


(4)  $COM_1, COM_2$

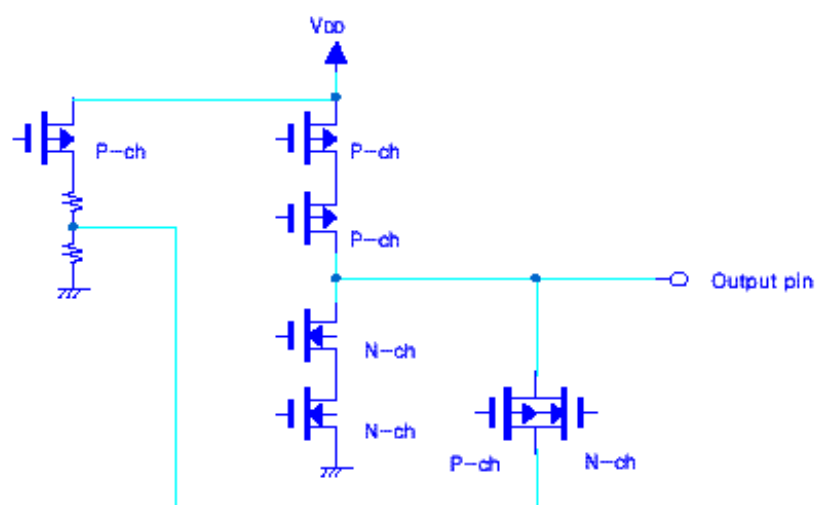


(5) K0 to K3

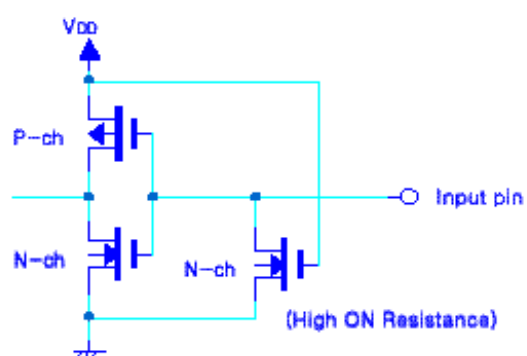

(6) FM VCO, AM VCO

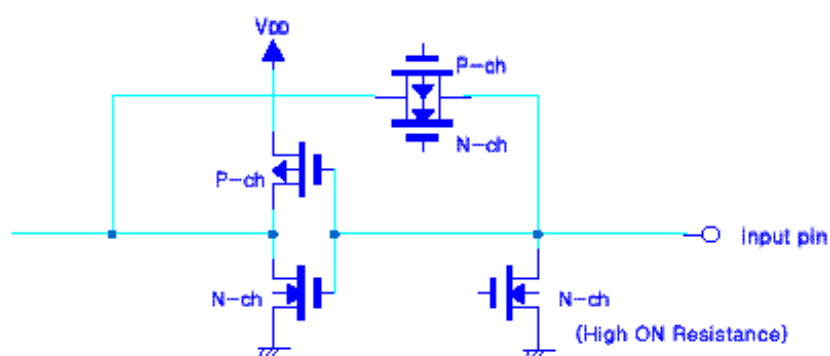

(7) CE

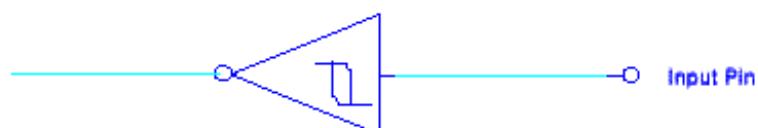


### Schmitt Triggered Input with Hysteresis Characteristics

## 7. Application Circuits

### 7.1 Power ON/OFF by alternate switch (No clock display in power OFF time)


RDON SWITCH = 1

RADIO ON(CE : Low to High)

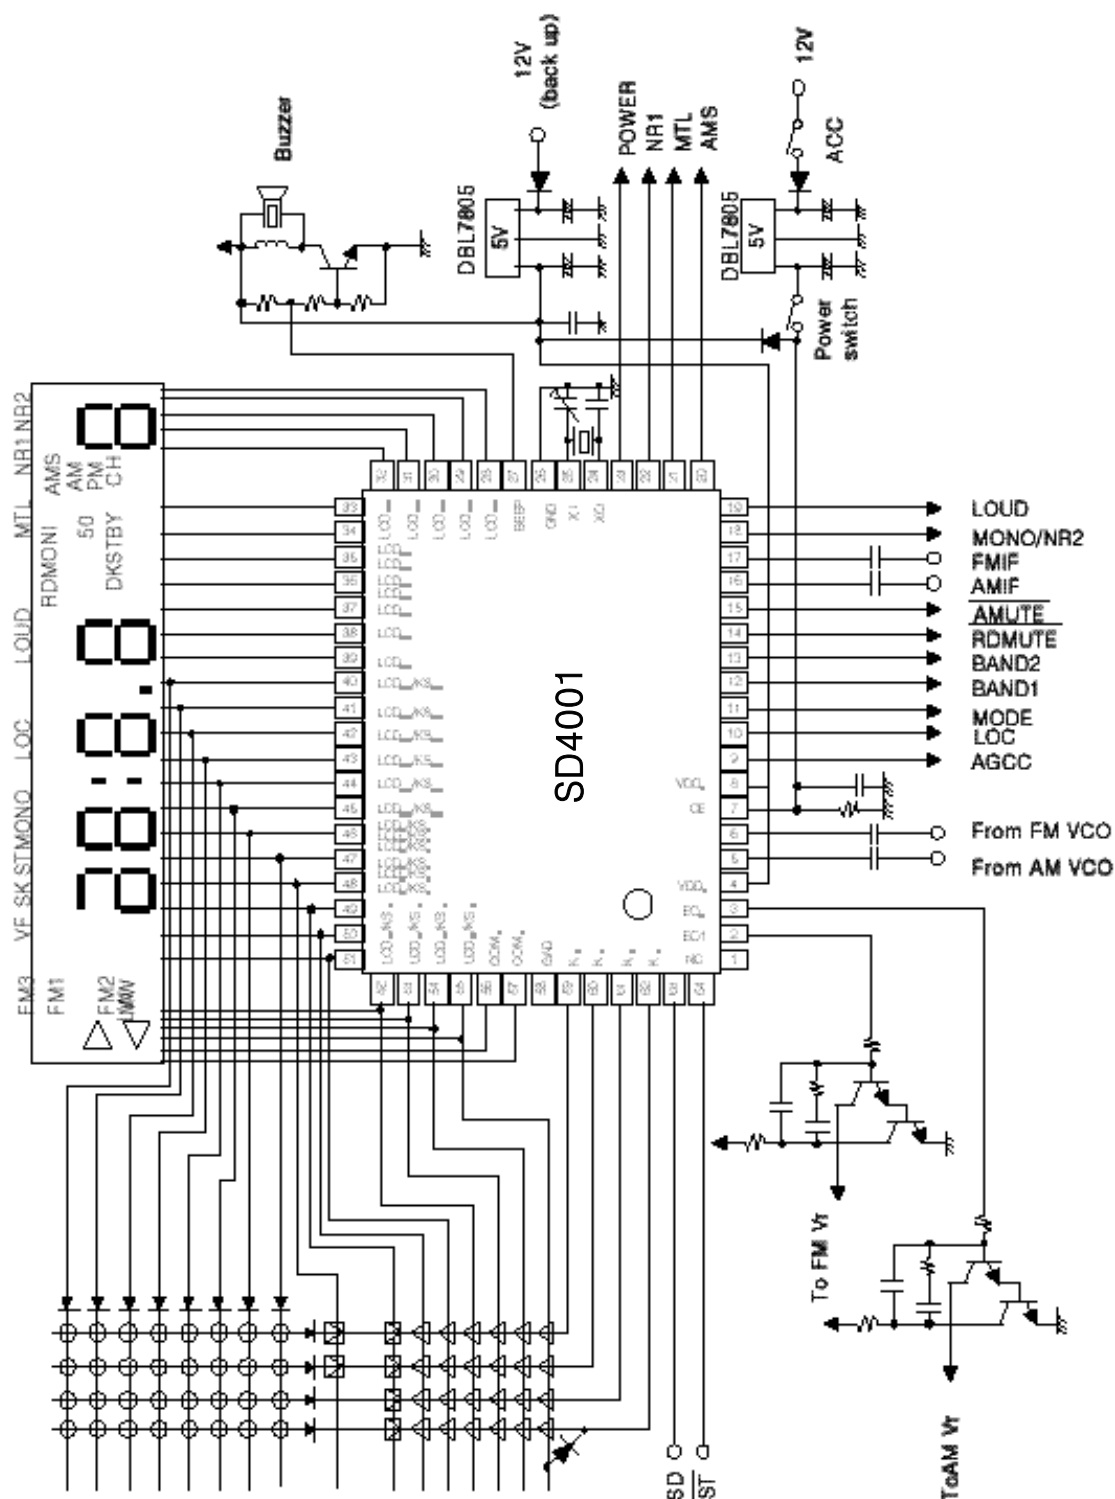


**7.2 Power ON/OFF by alternate switch**  (Clock display in power on time)

RDSET switch is used.

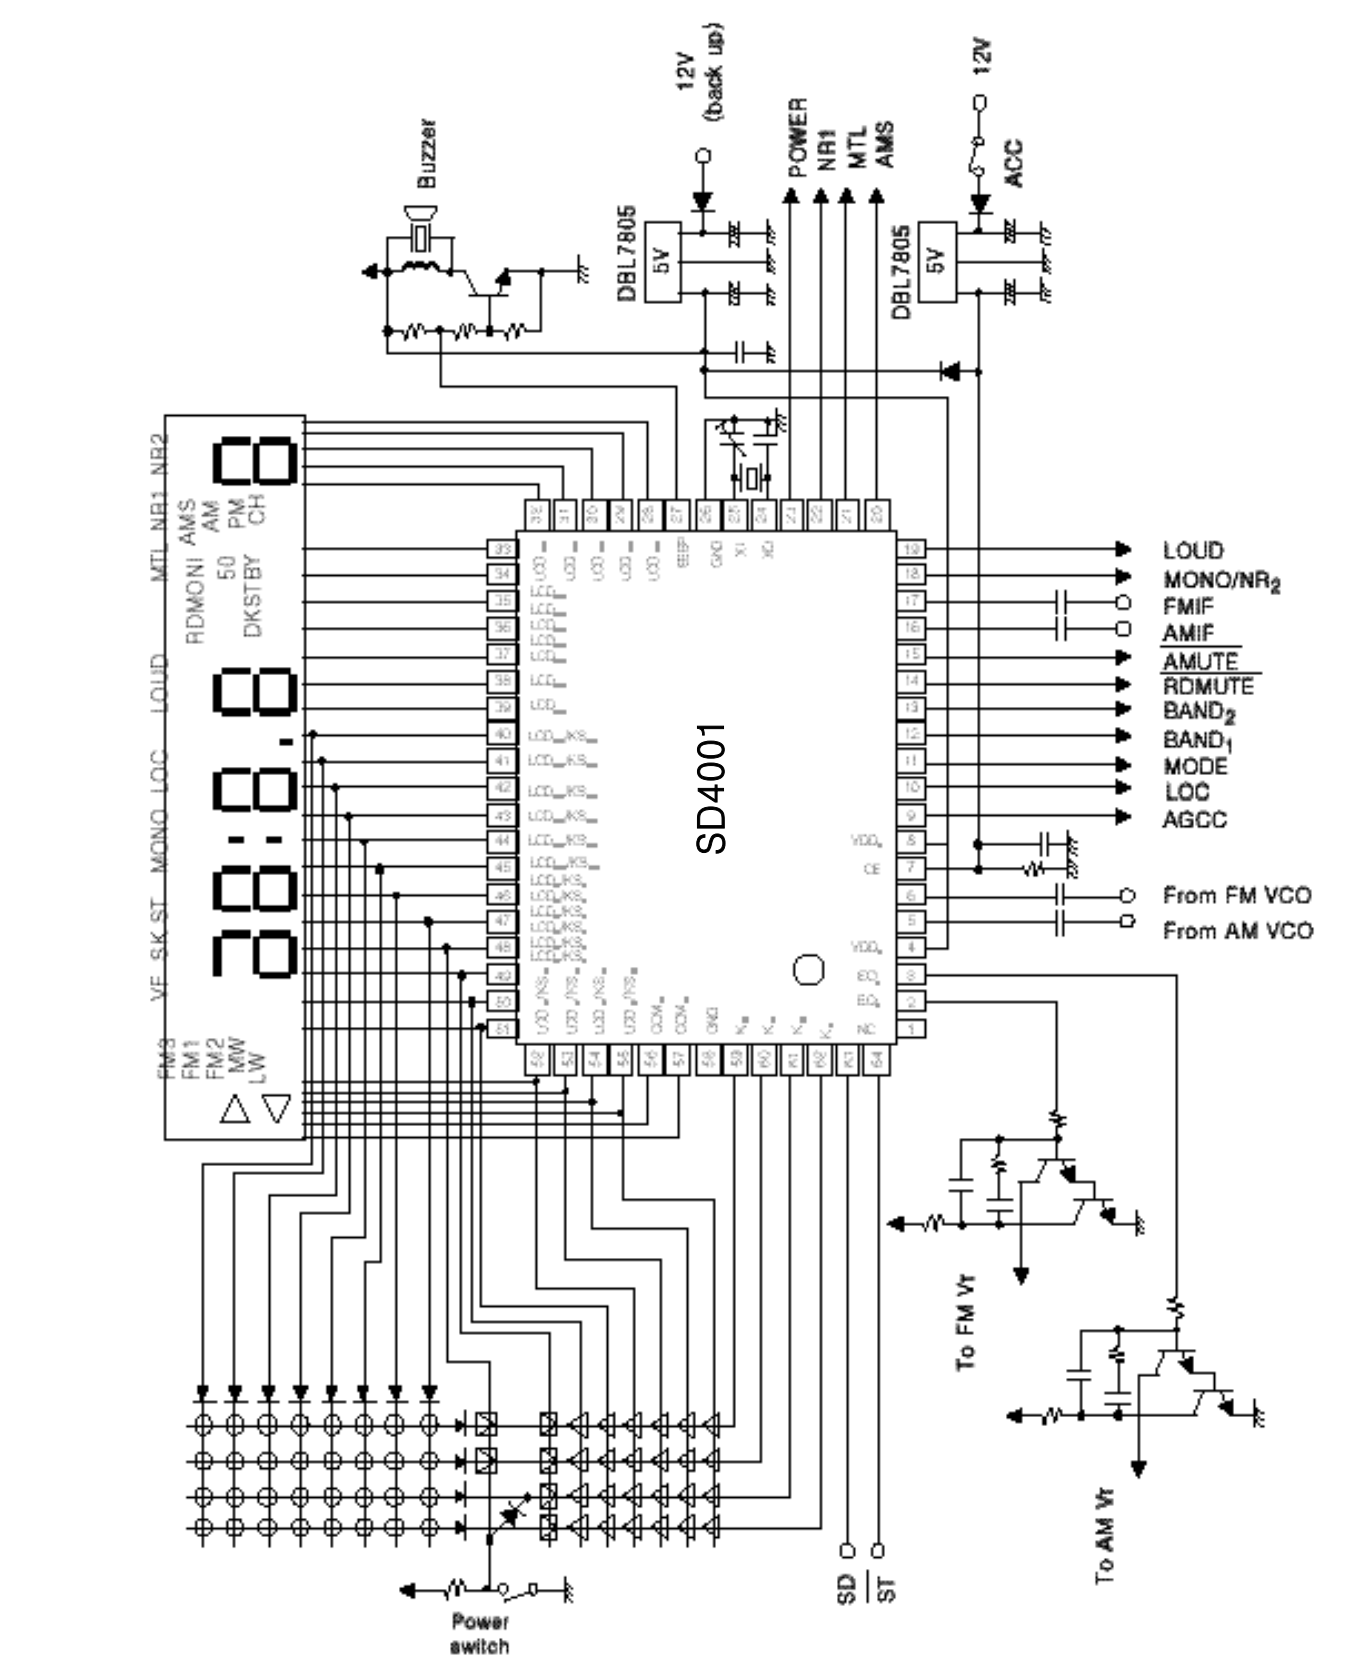

## 7.3 Power ON/OFF by momentary switch (Clock display in power off time)

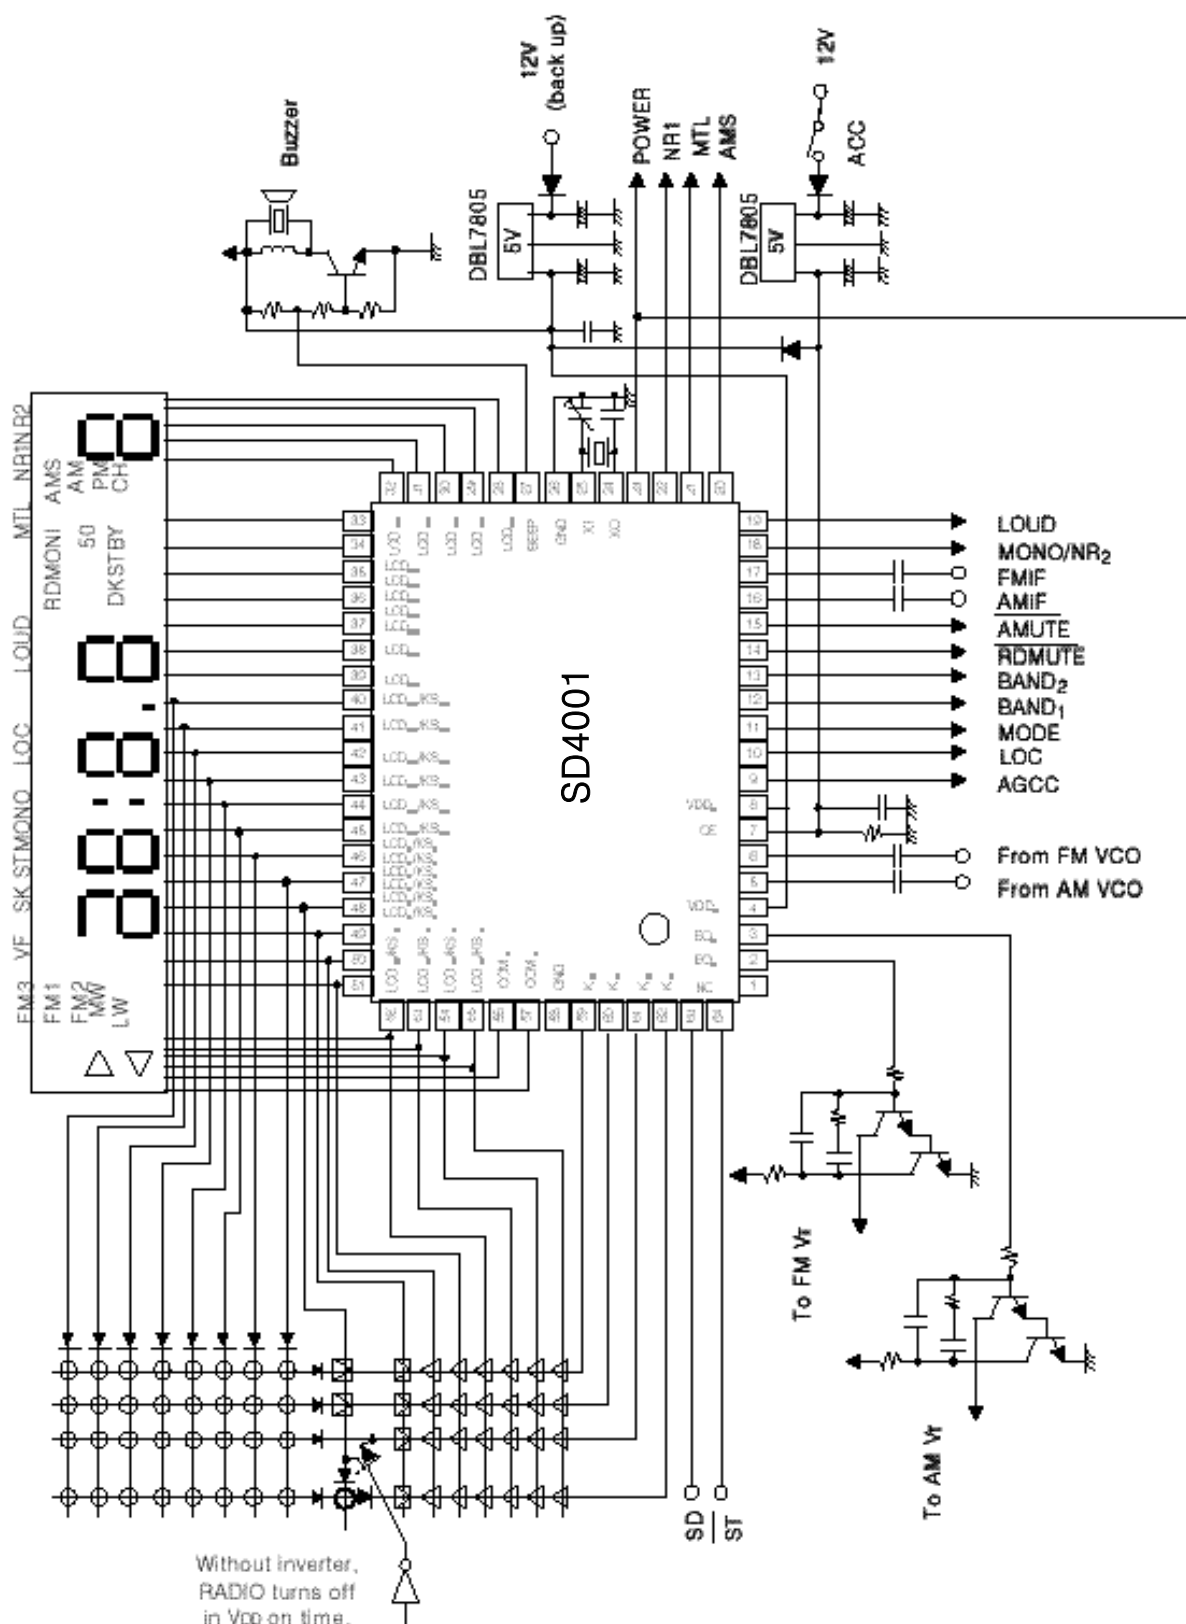

## 8. Electrical Specifications

### □ Maximum Ratings

Characteristic	Symbol	Rating	Unit
Supply Voltage	$V_{DD}$	-0.3~0.6	V
Input Voltage	$V_{IN}$	-0.3~ $V_{DD}^{+0.3}$	V
Output Voltage	$V_O$	-0.3~ $V_{DD}^{+0.3}$	V
Output Sink Current	$I_{SINK}$	10	mA
Operating Temperature	$T_a$	-40~85	°C
Storage Temperature	$T_{stg}$	-55~125	°C

### □ Recommended Operating Range

Characteristics	Symbol	Test Condition	Min.	Typ.	Max.	Unit.
Supply Voltage	$V_{DD1}$	CPU, PLL operating	4.5	5	5.5	V
	$V_{DD2}$	PLL stoped	3.5	5	5.5	V
Date Hold Voltage	$V_{DR}$	X'tal oscillation stoped	2.5		5.5	V
Supply Voltage Rise Time	$T_{rise}$	$V_{DD}$ =Low to High			500	ms
Input Amplitude	$V_{IN1}$	FM VCO, AM VCO PIN	0.3		$V_{DD}$	Vp-p
Output Amplitude	$V_{IN2}$	AMIF, FMIF pin	0.1		$V_{DD}$	Vp-p

### □ AC Characteristics

(Unless otherwise specified  $T_a=25^{\circ}\text{C}$ ,  $V_{DD}=4.5$  to  $5.5\text{V}$ )

Characteristics	Symbol	Test Condition	Min.	Typ.	Max.	Unit.
Operating Frequency	$f_{in1}$	FM VCO pin(position sine wave input) $V_{in}=0.3\text{Vp-p}$	10		200	MHz
	$f_{in2}$	AM VCO pin(position sine wave input) $V_{in}=0.3\text{Vp-p}$	0.5		30	MHz
	$f_{in3}$	FMIF VCO pin(position sine wave input) $V_{in}=0.1\text{Vp-p}$	1		20	MHz
	$f_{in4}$	AMIF VCO pin(position sine wave input) $V_{in}=0.1\text{Vp-p}$	0.3		5	MHz




# □ DC Characteristics

(Unless otherwise specified Ta=25 °C, V<sub>DD</sub>=4.5 to 5.5V)

Characteristics	Symbol	Test Condition	Min.	Typ.	Max.	Unit.
Input Voltage High	V <sub>IH1</sub>	PORT A/C	0.7 V <sub>DD</sub>			V
	V <sub>IH2</sub>	CE, $\overline{\text{INT}}$	0.8 V <sub>DD</sub>			V
	V <sub>IH3</sub>	K <sub>3</sub> to K <sub>0</sub>	0.6 V <sub>DD</sub>			V
Input Voltage Low	V <sub>IL1</sub>	PORT A/C, CE, INT			0.2V <sub>DD</sub>	V
	V <sub>IL2</sub>	K <sub>3</sub> to K <sub>0</sub>			0.15V <sub>DD</sub>	V
Output Current High	I <sub>CH1</sub>	PORT A/B/C/D V <sub>OH</sub> =V <sub>DD</sub> -0.4V	-0.4			mA
	I <sub>CH2</sub>	EO <sub>1</sub> , EO <sub>2</sub> , CGP, LCD <sub>27</sub> to LCD <sub>24</sub> V <sub>OH</sub> =V <sub>DD</sub> -1V	-0.5			mA
	I <sub>CH3</sub>	LCD <sub>0</sub> to LCD <sub>23</sub> V <sub>OL</sub> =V <sub>DD</sub> -1V	-200	-280		μA
Output Current Low	I <sub>OL1</sub>	PORT A/B/C/D, CGP, LCD <sub>27</sub> to LCD <sub>24</sub> V <sub>OH</sub> =0.4V	0.6			mA
	I <sub>OL2</sub>	EO <sub>1</sub> , EO <sub>2</sub> V <sub>OL</sub> =1V	0.5			mA
	I <sub>OL3</sub>	LCD <sub>0</sub> to LCD <sub>23</sub> V <sub>OL</sub> =1V	200	300		μA
Input Current High	I <sub>IH1</sub>	K <sub>3</sub> to K <sub>0</sub> V <sub>1</sub> =V <sub>DD</sub> =4.5V	15	120	200	μA
	I <sub>IH2</sub>	FM/AM VCO, XI V <sub>1</sub> =V <sub>DD</sub> =4.5V	100			μA
Output Voltage	V <sub>COM1</sub>	COM1, COM2 V <sub>DD</sub> =5V, output open	4.8	5.0		V
	V <sub>COM2</sub>	COM1, COM2 V <sub>DD</sub> =5V, output open	2.3	2.5	2.7	V
	V <sub>COM3</sub>	COM1, COM2 V <sub>DD</sub> =5V, output open	0	0.2		V
Output off Leakage Current	I <sub>LEAK</sub>	EO <sub>1</sub> , EO <sub>2</sub> V <sub>0</sub> =V <sub>DD</sub> , Ta=25°C		10 <sup>-3</sup>	1	μA
A/D Converter Resolution					6	bit
A/D Converter Absolute Accuracy		Ta = -10 to + 50 °C		1	1.5	LSB
Supply current	I <sub>DD1</sub>	CPU and PLL operating(fin=150MHz) V <sub>DD</sub> =5V, Ta=25 °C		20		mA
	I <sub>DD2</sub>	PLL stoped, CPU operating V <sub>DD</sub> =5V, Ta=25 °C		0.5		mA
Data Hold Current	I <sub>DR</sub>	X'tal oscillation stoped, Ta=25 °C V <sub>DD</sub> =5V		3	10	μA
AD Input Resistance	R <sub>1</sub>		1			MΩ

## 9. Package Dimension

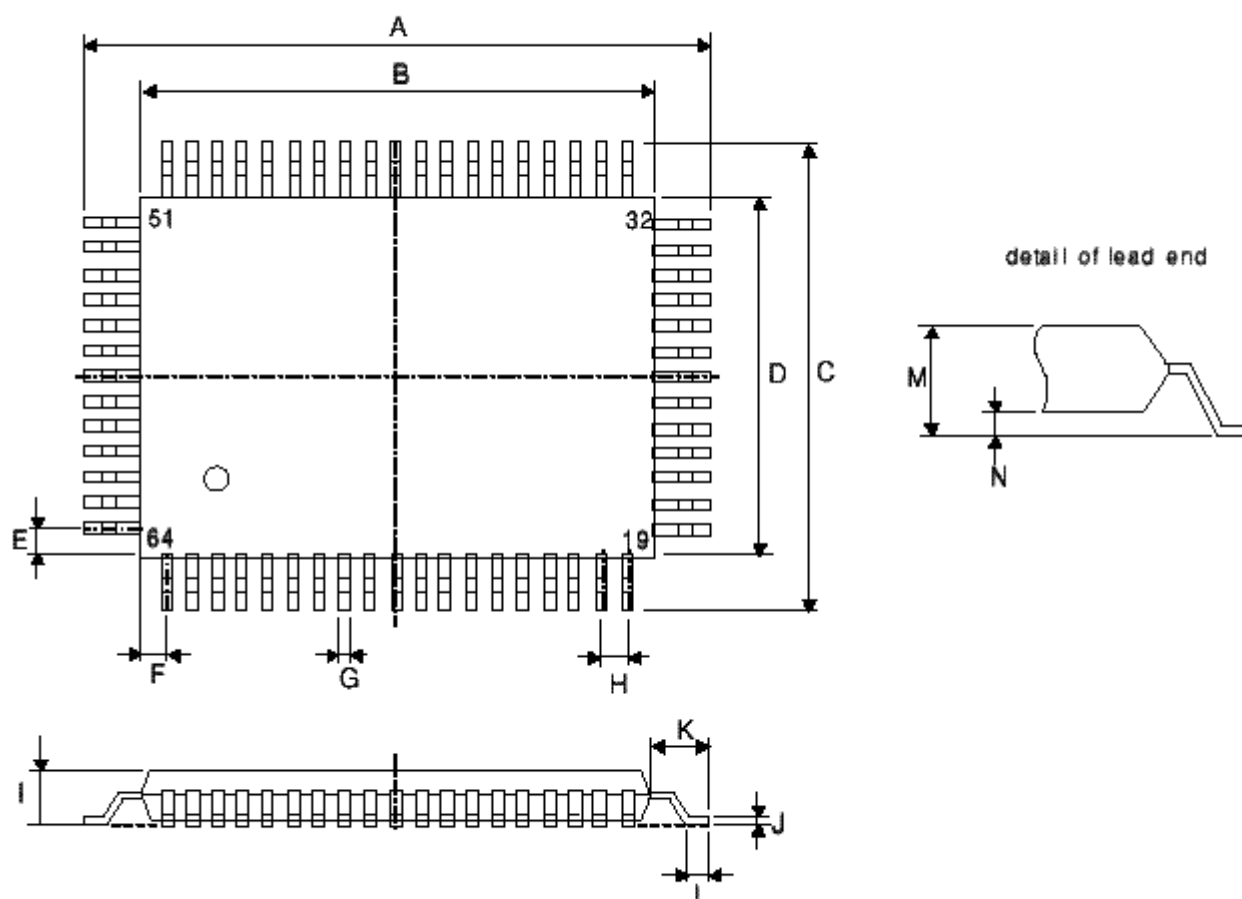

	Millimeter			Inche		Millimeter			Inche
	Min.	Typ.	Max.	Typ.		Min.	Typ.	Max.	Typ.
A	23.4	23.86	24.2	.939	H	-	1.0	-	.039
B	19.85	20.0	20.15	.787	I	2.6	2.71	2.8	.107
C	17.4	17.86	18.2	.703	J	0.13	0.15	0.2	.006
D	13.85	14.0	14.15	.551	K	1.7	1.93	2.1	.076
E	-	1.0	-	.039	L	0.4	0.51	0.7	.02
F	-	1.0	-	.039	M	-	2.91	3.15	.115
G	0.3	0.4	0.5	.016	N	0	0.2	0.35	.008