

# MEMORY HiCORDER 8807-51, 8808-51


Recorders 

## Instantaneous Analysis and Long-term Recording of Harmonic Waves for Maintenance of Commercial Power Systems



### Instantaneous harmonic analysis

- Can measure harmonics up to 40 orders from the fundamental wave
- Analysis display includes RMS value, content factor, phase angle, active power, and power phase angle for each order of harmonics (numeric and graphic display)
- Analysis display of total RMS value, total distortion, active/reactive/apparent power, and power factor (numeric display)
- Bar graph and numeric data display
- Power phase angle can be displayed as a vector

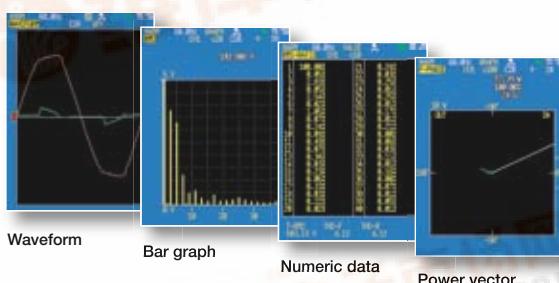

Are the harmonics in your company's power lines in order?

The new 8807-51/8808-51 is an economical tool that will clearly identify and analyze the current harmonic state of your power system.

To the 8807-01/8808-01 MEMORY HiCORDERs with their popular detachable printers, HIOKI has added the 8807-51/8808-51 MEMORY HiCORDERs with harmonic analysis function. Capable of both instantaneous analysis and time series analysis of harmonics, these units can measure and analyze harmonic current flowing into and out of a commercial power system, as well as harmonic components piggybacking on power line voltage.

### Time series recording

- Harmonic analysis of up to 20 items
- Data recorded in time series
- When analyzing four items simultaneously, data can be recorded for up to 150 days



### Flexible connection options

- Supports independent channels, single-phase two-wire, single-phase three-wire, and three-phase three-wire
- Full isolation of all analog channels



### Useful measurement functions

- Connection check
- Level check
- Over-range function

### Direct read-out of current through general-purpose clamps

- Compatible with HIOKI's 9018-10 and 9132-10 CLAMP-ON PROBE

This catalog is dedicated to featuring the harmonic wave analysis functions of Models 8807-51 and 8808-51, functions that are not included in the standard Models 8807-01 and 8808-01. As the waveform recording functions of Models 8807-51 and 8808-51 are identical to those of Models 8807-01 and 8808-01, please refer to the catalog for the latter models for detailed descriptions.



[www.hioki.com](http://www.hioki.com)


HIOKI company overview, new products, environmental considerations and other information are available on our website.

# Use the 8807-51, 8808-51 to determine the current

查询"8807-51"供应商

## - Harmonic Wave Functions -

### Harmonic wave instantaneous analysis mode

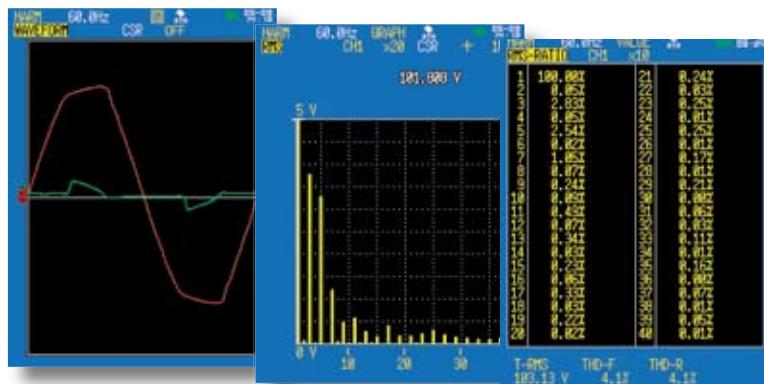


▲Captured waveform (waveform display screen)

▲RMS value of harmonic wave (bar graph)

▲Content factor of harmonic wave (numeric data)

The **8807-51** and **8808-51** can analyze harmonic components (up to 40 orders from the fundamental wave) that are included in voltage and current in a power line with a base frequency of 45 to 65Hz. Based on the waveform that was captured, the **8807-51** and **8808-51** can analyze the RMS value, content factor, phase angle, active power, and power phase angle for each order of harmonics. The measurement results can be displayed and recorded as a bar graph, numeric data, or power vector diagram. The **8807-51** and **8808-51** can also display numerically the total RMS value, the total distortion, the active/reactive/apparent power, and power factor.

### Time series analysis mode for continuous measurement of changes in harmonics

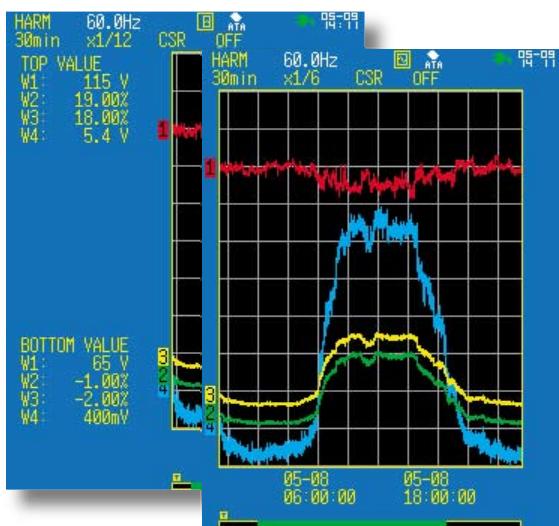


This mode is used to continuously measure changes in the RMS value, content factor, phase angle, active power, and total distortion for each order of harmonics. Measurements are made at specific intervals and are displayed and recorded as a graph. Through long-term monitoring of the correlation between the timing of harmonic waves and their relationship to phenomena, the **8807-51** and **8808-51** become useful tools for finding the causes of harmonic interference and taking appropriate action.

◀ Time series graph display screen

In time series recording mode, the **8807-51** and **8808-51** are capable of recording up to 20 harmonic wave analysis items simultaneously. The recording time can be set over a range of 30 minutes to 150 days and the data is stored in internal memory. If "continuous" is set as the recording time, the **8807-51** and **8808-51** are able to draw a continuous graph on recording paper. Only the measurements for the last 60 divisions are stored in internal memory.

Harmonic analysis item settings ►

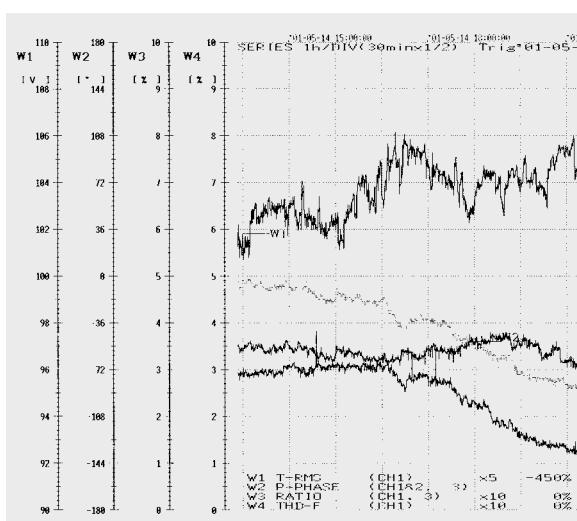


▲Time series analysis printout example

This time series graph shows four of the analysis items that were recorded.

# state of harmonic waves

查询"8807-51"供应商

## Harmonic wave power measurement on single-phase two-wire, single-phase three-wire\*, and three-phase three-wire\* lines

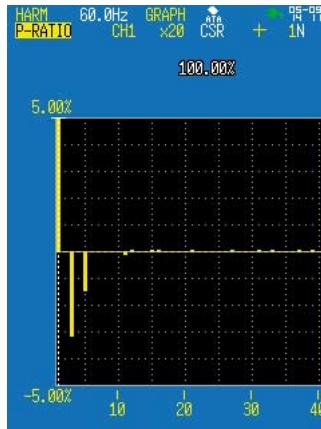


### Power content factor (bar graph)

The 8807-51 and 8808-51 are both capable of measurement of single-phase two-wire lines, while the 8808-51 is also capable of measurement of single-phase three-wire\*, dual single-phase two-wire\*, and three-phase three-wire\* lines. Both units can display numeric data or a graphs for the active power, active power content factor, and power phase angle for each order of harmonics. Because all analog input channels are isolated, no problems are encountered when measuring two different single-phase two-wire systems simultaneously, or if connections are made incorrectly.

\*8808-51 only

## Determine the direction of flow of harmonic waves

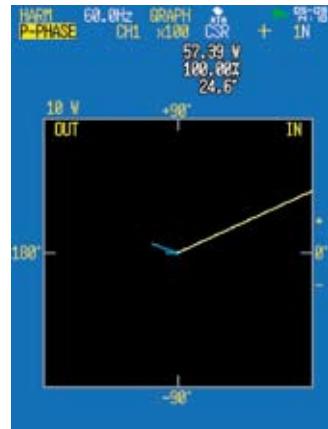

### Power vector diagram

The 8807-51 and 8808-51 both allow you to input voltage on channels 1 and 3 and current on channels 2 and 4 (through the clamp-on probe) and then display a power vector diagram for each harmonic wave. This diagram can then be used to determine whether the harmonic waves are flowing from the power supply system or from the load.

## - Product Specifications -



Note: The waveform recording functions of the 8807-51 and 8808-51 MEMORY HICORDERS are identical to those of the 8807-01 and 8808-01 MEMORY HICORDERS.  
For details on specifications other than those concerning the harmonic wave analysis functions, refer to the catalog for the 8807-01 and 8808-01 MEMORY HICORDER.

| General specifications for the harmonic wave analysis section |   | Instantaneous analysis mode   |
|---|---|---|
| Connection types  | Independent channels, single-phase two-wire <sup>*1</sup> , single-phase three-wire <sup>*2</sup> , and three-phase three-wire <sup>*2</sup><br>*1 8808-51 permits simultaneous analysis of two systems *2 8808-51 only   | Numeric data + graph: harmonic wave RMS value, harmonic wave content factor, harmonic wave phase angle, harmonic wave active power <sup>*3</sup> , harmonic wave active power content factor <sup>*4</sup> , harmonic wave power phase angle <sup>*4</sup><br>Numeric data only: Total RMS value, total distortion-F <sup>*5</sup> , total distortion-R <sup>*6</sup> , active power <sup>*4</sup> , apparent power <sup>*4</sup> , reactive power <sup>*4</sup> , power factor <sup>*4</sup><br>*4 Only when single-phase two-wire, single-phase three-wire, or three-phase three-wire is selected.<br>*5 Ratio of all harmonic waves to fundamental wave<br>*6 Ratio of all harmonic waves to total RMS value |
| Input settings  | <b>Independent channels:</b><br>Voltage, 9018, 9132, 3283, 3284, 3285, 9322<br><b>Other connections:</b><br>Possible with even channels set to voltage and odd channels set to current.<br>When measuring power, the following conditions must be met:<br>(1) The input type on the channel used for measuring current must be set to 9018 or 9132.<br>(2) The input type on the channel used for measuring current must be set to voltage with current scaling.<br>(The clamp probe that is used must have good phase accuracy.)   | Analysis types<br>Vertical axis enlargement/compression<br>Six levels of enlargement, from $\times 2$ to $\times 100$ ; one level of compression, to 1/2; logarithmic scale   |
| Fundamental frequency range                                   | 45Hz to 65Hz<br>Automatic setting or manual setting (0.1Hz resolution)  | Supplemental functions<br>Scaling<br>When using a HIOKI Clamp-on probe, the current value can be read directly, and can be set as desired.  |
| Number of orders for analysis                                 | Fundamental wave to 40th order  | Wiring and level check functions<br>Measurement target auto range function, checking for reversed wiring, determination of phase sequence for three-phase, three-wire connection  |
| Analysis frequency band                                       | 45Hz to 2.6kHz  | Over-range function<br>Automatically lowers the range sensitivity if the input range is exceeded while taking measurements.   |
| Amplitude accuracy <sup>*3</sup> (on "x1" display)            | Fundamental wave to 20th order: $\pm 3.5^\circ$<br>21st order to 40th order: $\pm 7.5^\circ$ (with content factor of 10%)<br>*3 When using a clamp-on probe, add the accuracy of the probe.   | Tabulated results output<br>Can output a list of maximum and minimum values for the results of each analysis across all recording times.<br>(Time series analysis mode only)  |
| Phase accuracy <sup>*3</sup>                                  | Fundamental wave to 20th order: $\pm 3.5^\circ$<br>21st order to 40th order: $\pm 7.5^\circ$ (with content factor of 10%)<br>*3 When using a clamp-on probe, add the accuracy of the probe.   | Miscellaneous<br>Cursor measurement, screen scrolling   |
| Sampling frequency  | 400kS/S fixed   | Harmonic wave trigger function<br>Trigger mode<br>Single, repeat  |
| Number of FFT operations                                      | 512 points (sampled during one cycle of the fundamental wave)   | Sources<br>Permits selection of up to four types of harmonic wave triggers; trigger conditions can be set for each type of trigger. (Harmonic wave trigger sources are ORed together, while harmonic wave triggers are ANDed with external triggers and timer triggers.) Free-run operation when all triggers are OFF.  |
| Waveform memory capacity                                      | Analog 12 bits $\times$ 16 kwords/channel   | Trigger types<br>RMS value/content factor/active power value/power phase angle/total RMS value/total distortion-R/total distortion-F of any harmonic wave   |
| Harmonic waveform operation memory capacity                   | 32 bits $\times$ 96 kwords  | Miscellaneous<br>Pre-trigger: 0, 5, 10 DIV. (time series analysis mode)<br>Trigger timing: start only   |
| Function  | Scaling, cursor measurement, wiring and level check function  | Harmonic wave analysis function recording time <sup>*1</sup>  |
| Time series analysis mode                                     |   | Time axis<br>Storage in internal memory<br>(Number of analysis items is reduced depending on recording length)<br>Printing on paper without recording in memory <sup>*2</sup><br>(Final 60 DIV are recorded in internal memory.)  |
| Analysis types  | For any harmonic wave order number: RMS value/content factor/phase angle/active power <sup>*4</sup> /active power content factor <sup>*4</sup> /power phase angle <sup>*4</sup><br>Total RMS value, total distortion-F <sup>*5</sup> , total distortion-R <sup>*6</sup> , active power <sup>*4</sup> , apparent power <sup>*4</sup> , reactive power <sup>*4</sup> , power factor <sup>*4</sup><br>*4 Only when single-phase two-wire, single-phase three-wire, or three-phase three-wire is selected.<br>*5 Ratio of all harmonic waves to fundamental wave<br>*6 Ratio of all harmonic waves to total RMS value | 5 min./DIV 5 hours (20 items) to 1 day (4 items) 6 days + 3.5 hours (4 items)<br>10 min./DIV 10 hours (20 items) to 2 days (4 items) 12 days + 7 hours (4 items)<br>30 min./DIV 1 day (20 items) to 6 days (4 items) 36 days + 21 hours (4 items)<br>1 hour./DIV 2 days (20 items) to 12 days (4 items) 73 days + 18 hours (4 items)<br>3 hour./DIV 7 days (20 items) to 37 days (4 items) 221 days + 6 hours (4 items)<br>6 hour./DIV 14 days (20 items) to 75 days (4 items) 1 year + 77 days (4 items) *3, *4<br>12 hour./DIV 30 days (20 items) to 150 days (4 items) 2 years + 155 days (4 items) *3, *4   |
| Number of simultaneous analyses                               | Up to 20 analyses (any combination); only four can be simultaneously displayed or printed   | *1 For the paper length, it is assumed that 1770 DIV will not use more than 30cm of paper.<br>*2 Only a maximum of four items can be printed on paper.<br>*3 One year is assumed to be 365 days.<br>*4 The recording times shown in the table are simply the calculated values. If measurements are taken over several years, wear on the equipment will begin to have an effect. Therefore, operation cannot be guaranteed.  |
| Time axis   | 5 minutes/12 hours/DIV, 7 ranges (80 samples/DIV)   |   |
| Recording time  | Depends on time axis and number of simultaneous analyses  |   |
| Printing types  | Dotted line graph or numerical data for each analysis value (time display)  |   |
| Enlargement/compression                                       | Vertical axis: Six levels of enlargement, from $\times 2$ to $\times 100$ ; one level of compression, to 1/2; logarithmic scale<br>Time axis: Two levels of enlargement, $\times 2$ or $\times 4$ ; six levels of compression, from 1/2 to 1/48   |   |

Analyzing fluctuations in values during a certain operation cycle, such as one day, one week, or one month makes it possible to determine the causes of voltage distortion, etc. The **MEMORY HICORDERS 8807-51 and 8808-51** can continuously measure and record 20 items, including the RMS value, content factor, phase angle, active power, and total distortion for each order of harmonics. It is also possible to analyze instantaneous values during one waveform cycle.

### 查詢"8807-51"供應商

The **MEMORY HICORDERS 8807-51 and 8808-51** can also be used as general-purpose testers. Because each unit is equipped with powerful trigger functions, such as a waveform discrimination trigger and a voltage drop trigger, they are able to capture power line abnormalities, and permit on-screen analysis of waveform levels. In addition to 100V and 240V lines, these units can also directly accept and measure input of supply voltage from a 400V line. The 8807-51 and 8808-51 can measure leak current when used in combination with the CLAMP-ON LEAK HITESTER 3283, and can test 600V lines when used in combination with the DIFFERENTIAL PROBE 9322. In addition, because both units are equipped with a PC card slot, it is possible to store measurement data in the unit and then transfer the data to a PC.

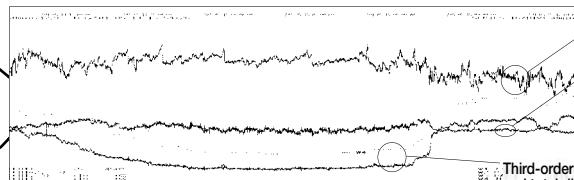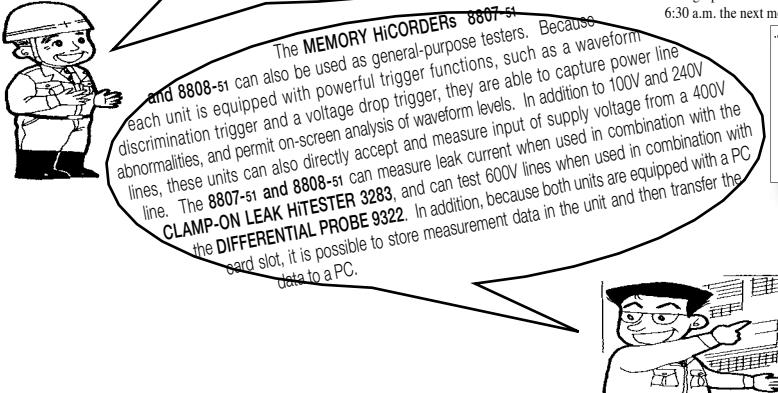


RMS voltage

Power phase  
Center is 0°, within ±90° indicates harmonic waves flowing in; outside of ±90° indicates harmonic waves flowing out.

### ■ Harmonic wave time series recording example

This graph shows that harmonic waves begin to decrease at 4:00 p.m., and then begin to increase at 6:30 a.m. the next morning.

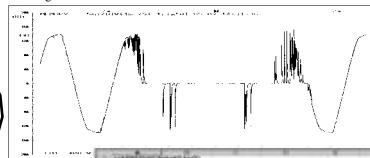

Third-order harmonic wave content factor and total distortion of voltage  
Each order can be graphed.

### ■ Abnormal waveform recording example

This waveform was recorded in response to the voltage drop trigger. Transient drops in voltage on a power line can be monitored through the waveform.



### ■ Example of data analysis on a personal computer

Data stored in text format in a PC card can be loaded directly into spreadsheet software on a PC. If the data is in binary format, it must first be converted into text format.

## Composition of options

Note: Product names appearing herein are trademarks or registered trademarks of various companies.



**CARRYING CASE 9648**  
Hard case type, for storing options



**CARRYING CASE 9391**  
Soft case type, for storing options  
Holds more options than the 9648 hard case



**LOGIC PROBE 9320-01**  
4-channel type, for voltage/contact signal ON/OFF detection  
(miniature terminal for use with the 8861/8860, 8855, 8807-01/8808-01, 8807-51/8808-51)



**LOGIC PROBE 9321-01**  
4 isolated channels, ON/OFF detection of AC/DC voltage  
(miniature terminal for use with the 8861/8860, 8855, 8807-01/8808-01, 8807-51/8808-51)



**CONVERSION CABLE 9323**  
Used for connecting the 9320/9321 and 8807 series MEMORY HICORDERS, because the terminal shapes are different.  
\* This cable is not required for the small-terminal types 9320-01 and 9321-01.



**PC CARD 128M 9726**  
(128 MB capacity)


**PC CARD 256M 9727**  
(256 MB capacity)

**PC CARD 512M 9728**  
(512 MB capacity)

**PC CARD 1G 9729**  
(1 GB capacity)



**RS-232C CABLE 9612**  
Mini DIN 9-pin - Dsub 9-pin, Cable length 1.5 m




**WAVE PROCESSOR 9335**  
Data conversion, print functions, waveform display, compatible with Windows 95/98/Me, Windows NT 4.0/2000/XP, and Windows Vista 32-bit type.



**MEMROY HiCORDER 8807-50** (2ch model)

**MEMROY HiCORDER 8808-50** (4ch model)

Included accessories: LR6/AA Alkaline batteries x6, Alkaline battery box x1, Shoulder belt x1, Application disk x1

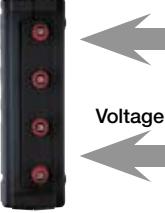


**CONNECTION CORD 9197**  
For up to 500 V, 1.5 m length

**CONNECTION CORD 9198**  
For up to 300 V, 1.5 m length

**DIFFERENTIAL PROBE 9322**  
For inputs up to 2 kV DC or 1 kV AC, the 9322 requires the AC ADAPTER 9418-15

**CONNECTION CORD 9217**  
Insulation BNC-to-insulation BNC, use to connect to insulation-BNC terminal on Input Module

### Current Measurement



**CLAMP ON PROBE 9018-10**  
Input from 10 to 500 A, 40 Hz to 3 kHz for 0.2 V AC output. BNC terminal



**CLAMP ON PROBE 9132-10**  
Input from 20 to 1000 A, 40 Hz to 1 kHz for 0.2 V AC output. BNC terminal



**OUTPUT CORD 9094**  
Required along with the 9199 adapter to connect Model 3283 to the 8807-01 or 8808-01  
**CLAMP ON LEAK HITESTER 3283**  
For leakage current measurement, includes 10 mA to 200 A ranges, with analog output of 1 V f.s. DC, and waveform monitor output of 1 V f.s. AC at 40 Hz to 2 kHz. Requires the AC ADAPTER 9445-02-03

The units can be operated using the supplied LR6/AA alkaline batteries but use of the optional AC ADAPTER 9418-15 or BATTERY PACK 9447 (the AC ADAPTER 9418-15 is necessary for recharging) is recommended. Manganese batteries cannot be used. Use of commercially available rechargeable batteries instead of the original battery pack may result in damage to the unit.

**PRINTER UNIT 8992**

Printing width 100 mm, used together with the 8807-51, 8808-51 main body



Not CE certified

**LINE SPLITTER CT101A**  
For 100 V/ 15 A, convenient for measuring 100 VAC line current with clamp-on probe



**CONVERSION ADAPTER 9199**  
Banana-to-BNC, use to connect to insulation-BNC terminal on Input section

**PAPER WINDER 220H**

Paper width: 70 to 220 mm, using special-purpose AC adapter



**RECORDING PAPER 9234**  
18 m/ 59.06 feet length, 10 rolls/ 1 set

**BATTERY PACK 9447**

7.2 V, 2400 mAh  
Used with the AC ADAPTER 9418-15 to charge one Model BATTERY PACK 9447.



**CHARGE STAND 9643**  
Used with the AC ADAPTER 9418-15 to charge one Model BATTERY PACK 9447.  
**AC ADAPTER 9418-15**  
Universal 100 to 240 V AC, 12 V DC/ 2.5 A output

**HIOKI**  
HIOKI E. E. CORPORATION

#### HEAD OFFICE :

81 Koizumi, Ueda, Nagano, 386-1192, Japan  
TEL +81-268-28-0562 / FAX +81-268-28-0568  
E-mail: os-com@hioki.co.jp

#### HIOKI USA CORPORATION :

6 Corporate Drive, Cranbury, NJ 08512 USA  
TEL +1-609-409-9109 / FAX +1-609-409-9108  
E-mail: hioki@hiokiusa.com

**HIOKI (Shanghai) Sales & Trading Co., Ltd.:**  
1904 Shanghai Times Square Office, 93 Huai Hai Zhong Road  
Shanghai, P.R.China POSTCODE: 200021  
TEL +86-21-6391-0090/0092 FAX +86-21-6391-0360  
E-mail: info-sh@hioki.cn

#### Beijing Office :

A-2602 Freetown, 58 Dong San Huan Nan Road  
Beijing, P.R.China POSTCODE: 100022  
TEL +86-10-5867-4080/4081 FAX +86-10-5867-4090

E-mail: info-bj@hioki.cn

#### Guangzhou Office :

Room 303, Profit Plaza, No.76, West Huangpu Road  
Guangzhou, P.R.China POSTCODE: 510623  
TEL +86-20-38392673/2676 FAX +86-20-38392679  
E-mail: info-gz@hioki.cn

#### DISTRIBUTED BY